


 


 





Assembly instructions


A		Leg	6pcs
D		WASHER	6pcs
G		SCREW M8x16	4pcs

B		Leg	6pcs
E		WASHER	6pcs
H		mattress stopper with nuts	1pc

C		Leg	6pcs
F		ACCESSORIES	2pcs
I		ALLEN KEY 5mm	1pc

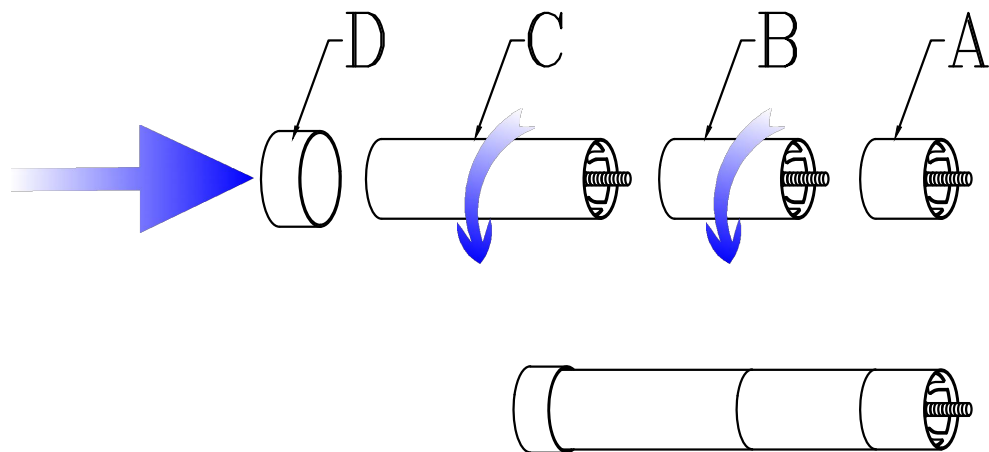



1

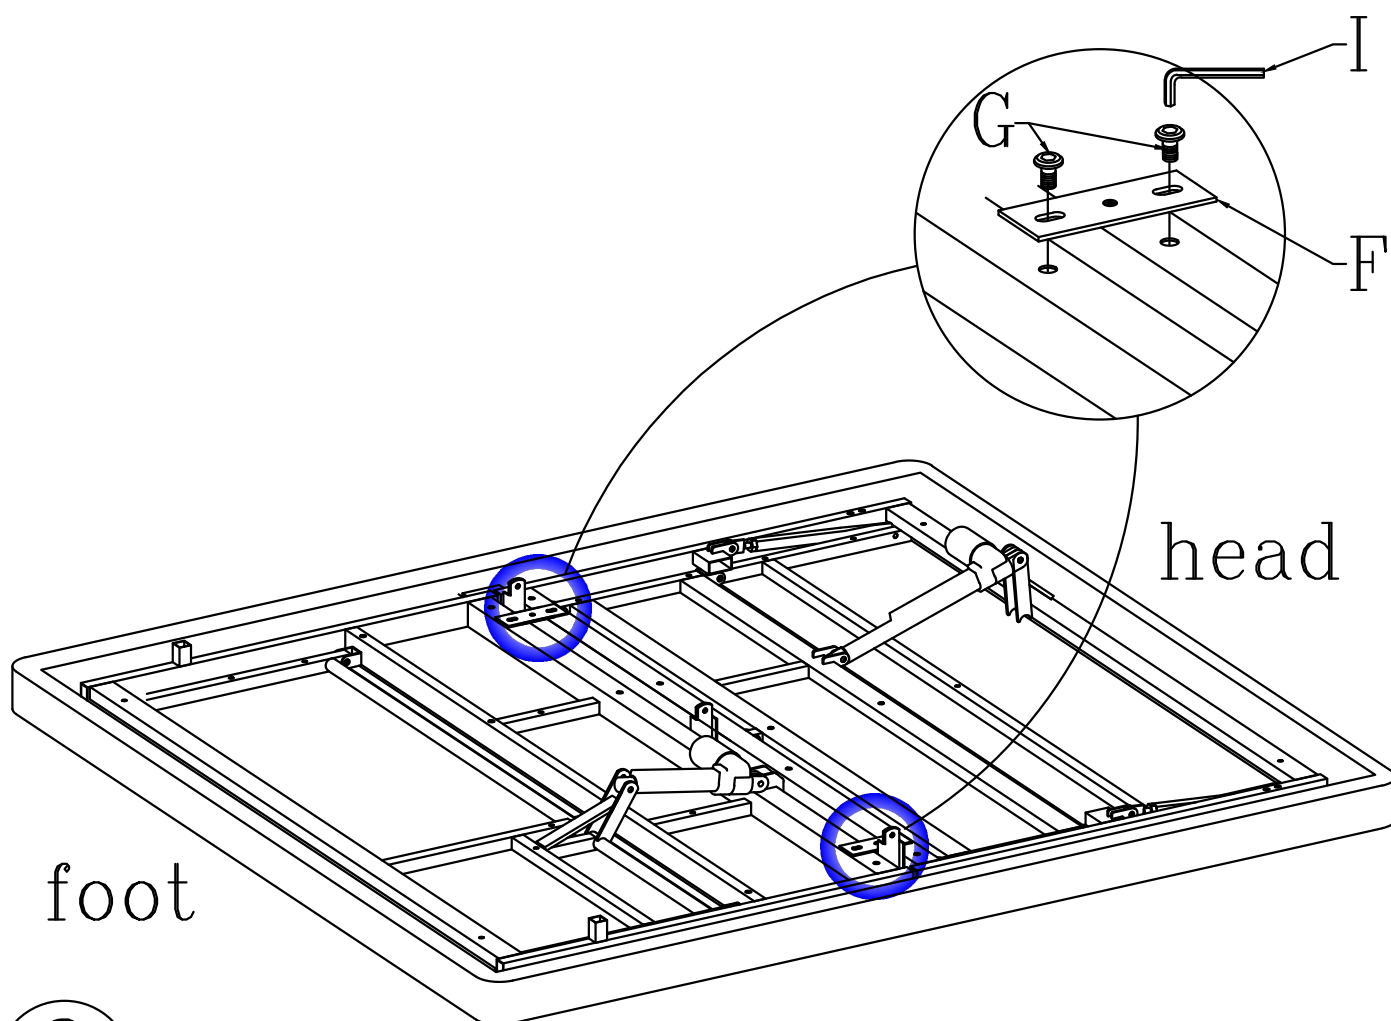

foot

head

2

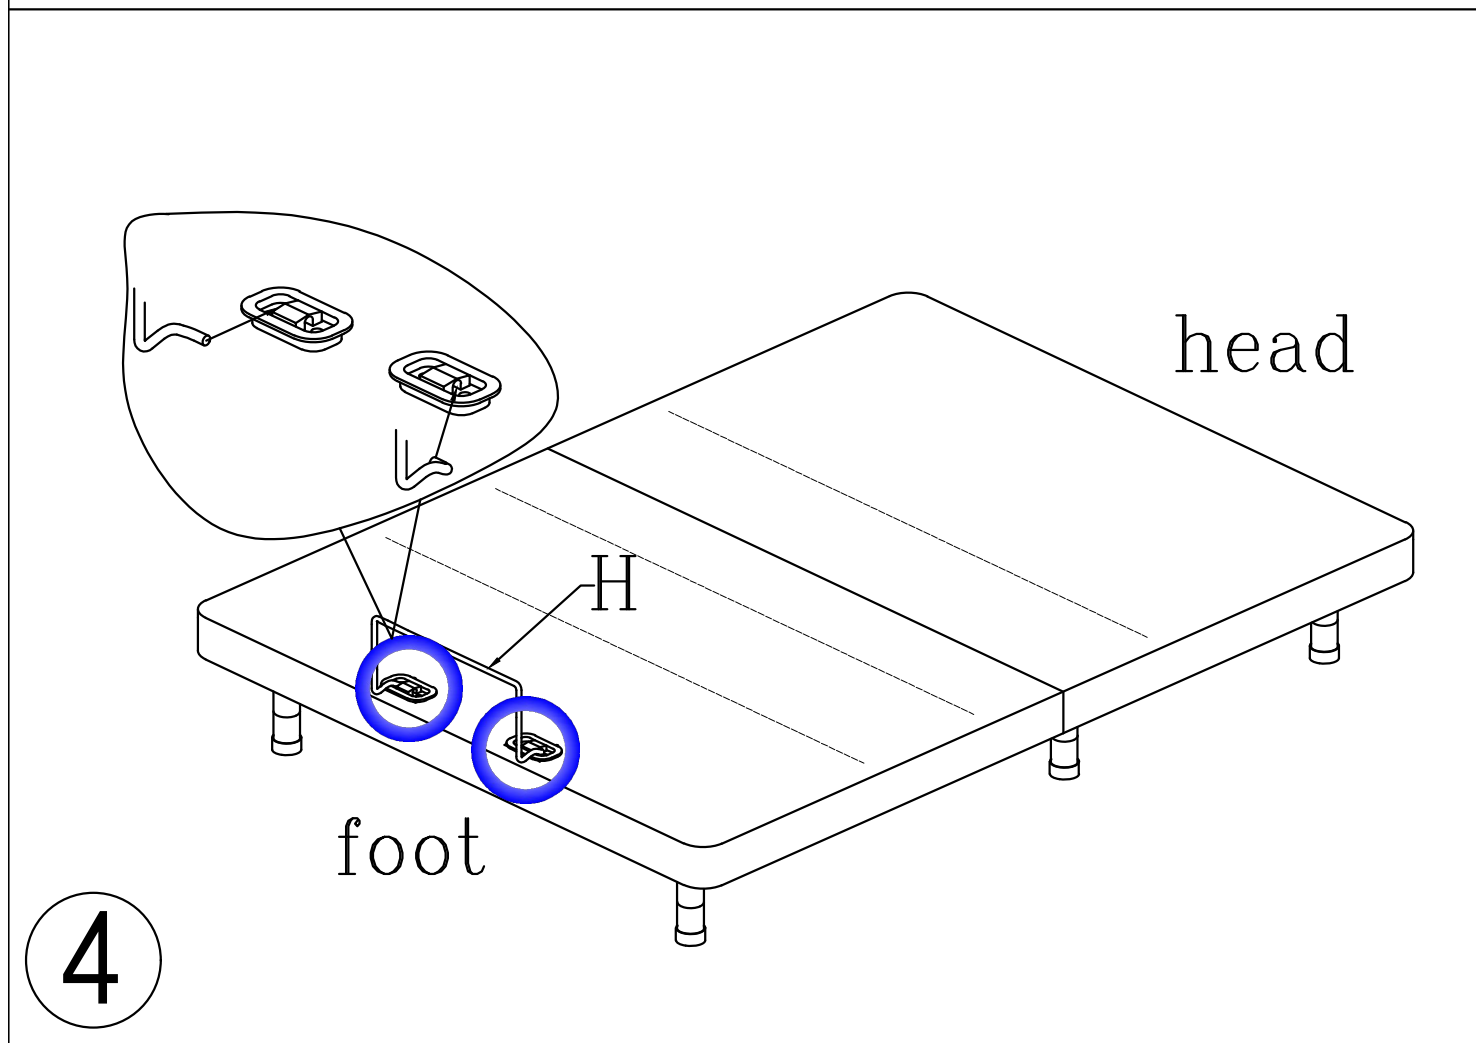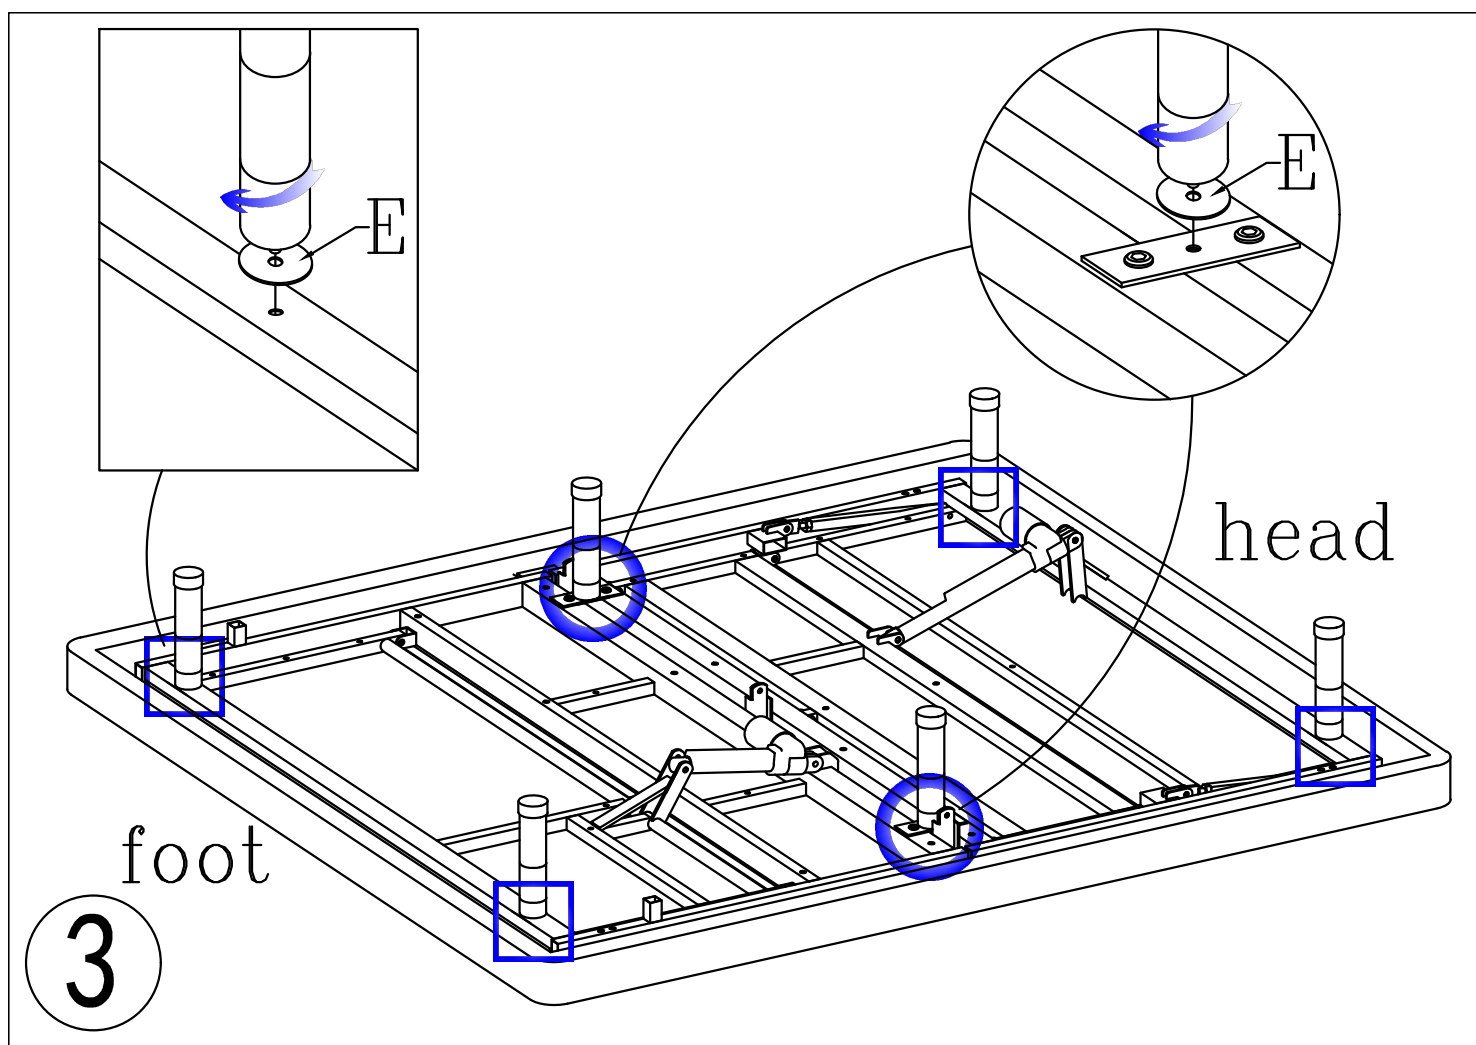

RF.27.19.xx & CB.13.22.xx


Appearance and function of product:

Appearance:





Pairing Method 1	<p>Step 1.Unplug the power cord ,power on after 5s ,control box indicator light turns blue, under bed light flashes (If the under bed light is installed), control box enters into pairing mode.</p> <p>Step 2.Press and hold the remote PAIR button, remote backlight flashes, the remote enters into pairing mode,until remote backlight stops flashing and stays on, and control box indicator light turns green (or under bed light stops flashing and goes out), pairing is done.</p> <p>Note:When you power on again ,the control box will be in pairing mode in the first 10 seconds ,if you have already paired successfully before,then you don't need to pair again.After 10 seconds, control box indicator light turns green (or under bed light stops flashing and goes out) ,you can use remote to operate the bed directly .</p>
Pairing Method 2	<p>Step 1.Double click the control box Pairing button ,control box indicator light turns blue, under bed light flashes (If the under bed light is installed), control box enters into pairing mode.</p> <p>Step 2.Press and hold the remote PAIR button, remote backlight flashes, the remote enters into pairing mode,until remote backlight stops flashing and stays on, and control box indicator light turns green (or under bed light stops flashing and goes out), pairing is done.</p>
If the pairing time out,please repeat the above actions until the pairing is successful	

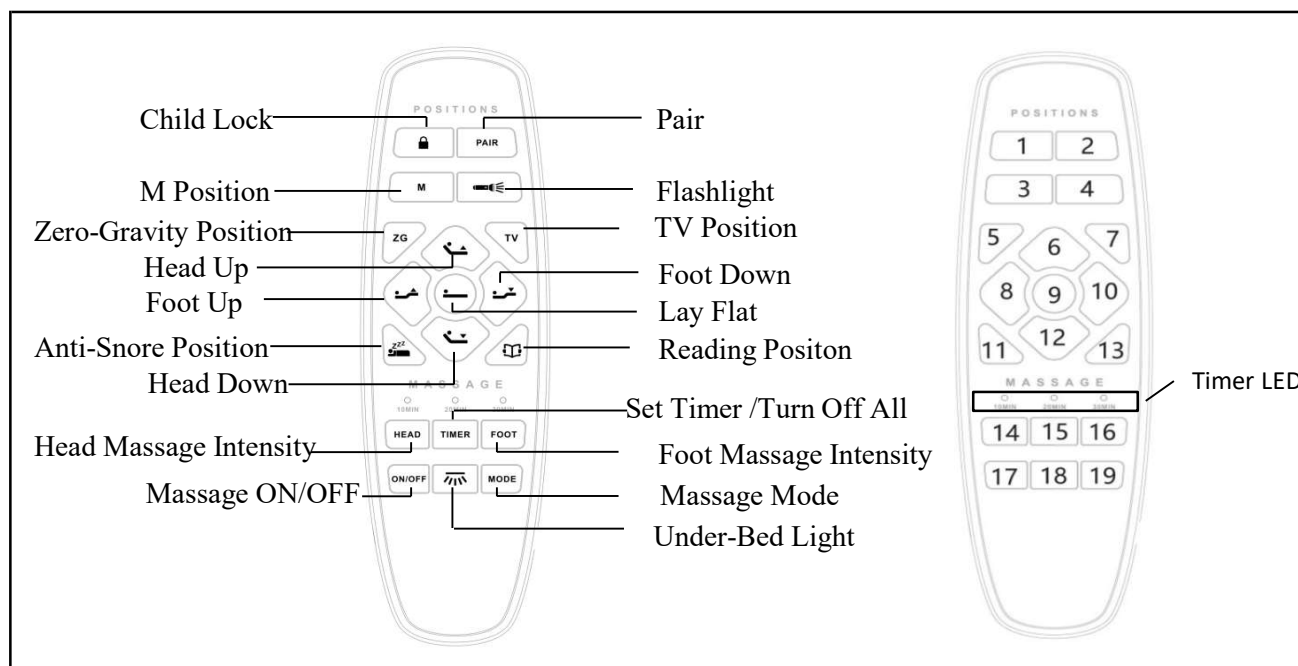Function:



Buttons and LEDs	Key Value	Specification
B1:	CHILD LOCK	Press and hold B1, after press for 3-5s, backlight flashes, remote enters locking mode. When in locking mode, press B1 for 3-5s, backlight flashes, exit locking mode.
B2:	PAIR	Press and hold B2, backlight flashes, the remote enters pairing mode, after pairing successfully, backlight stops flashing.
B3:	M	Click B3, the bed moves to M position.
B4:	FLASHLIGHT	Press and hold B4, flashlight on, off when released.
B5:	ZG	Click B5, the bed moves to zeroG position.
B6:	HEAD UP	Press and hold B6, backrest goes up, stop when released.
B7:	TV	Click B7, the bed moves to TV position.
B8:	FOOT UP	Press and hold B8, footrest goes up, stop when released.
B9:	FLAT	Click B9, the bed goes flat.
B10:	FOOT DOWN	Press and hold B10, footrest goes down, stop when released.
B11:	ANTISNORE	Click B11, the bed moves to ANTISNORE position.
B12:	HEAD DOWN	Press and hold B12, backrest goes down, stop when released.
B13:	READING	Click B13, the bed moves to READING position.
B14:	HEAD MASSAGE	Click B14 to turn on/off head massage, and to switch massage intensity of massage motors, 0(off) → 1 → 2 → 3 → 0(off).
B15:	TIMER	Click B15 to switch massage time [10min → 20min → 30min → 0(All massage motors stop)].
B16:	FOOT MASSAGE	Click B16 to turn on/off foot massage, and to switch massage intensity of massage motors, 0(off) → 1 → 2 → 3 → 0(off).
B17:	MASSAGE ON/OFF	Click B17 to turn on/off head & foot massage.
B18:	UNDER BED LIGHT	Click B18 to turn on/off the under bed light.
B19:	MODE	Click B19 to switch massage mode, 4 modes.
10 MIN:	LED 1	Massage time: 10 minutes
20 MIN:	LED 2	Massage time: 20 minutes
30 MIN:	LED 3	Massage time: 30 minutes

Factory Reset:	ZG + FLAT	Press and hold ZG + FLAT button for 5s until the backlight flashes , memory positions of control box will be reset to default settings
Set New Memory Position (except Flat)	Press and hold the corresponding memory button for 5s	Move bed to your favourite position, press and hold the corresponding memory button for 5s, until the backlight flashes , the remote sets the current position as a new memory position.
Other function 1:	Other buttons except child lock button and pair button	During the automatic movement of bed (Click memory position buttons or flat button, bed moves to memory position or flat position), press any button except child lock button and pair button, the bed movement will stop
Other function 2:	FOOT UP +FOOT DOWN	Press and hold these two buttons for 5s ,and wifi box enters into WiFi AP mode, the WiFi hotspot of the WiFi box can be searched through WiFi app. (Some remotes or control boxes don't support this function)
	CONTROL BOX PAIRING BUTTON	1.Paring 2.Press and hold this button, the bed will be flat. 3.When control box is in pairing mode, click this button ,control box exits pairing mode.
	Sync Cable(optional)	Used when synchronization is needed,wired synchronization.

Notes:

1. Please flat the bed after the first installation or replacing a new motor,so that the motors positions can be calibrated.


2. If you want to sync two beds ,please connect the sync cable (eg: R5.408.00.002)to the SYNC ports of the two control boxes(the two control boxes must have the same article number) after the pairing of one bed is successful ,then the two beds are connected and synchronized, and you can use the paired remote to control the two beds.

If you find the actual angles of the same memory position of the two beds are different,please flat the bed and do Factory Reset or set a new memory position.


3.Any mistakes,please try it again according to the corresponding steps.


RF.34.09.xx & CB.12.20.xx


Apperance:

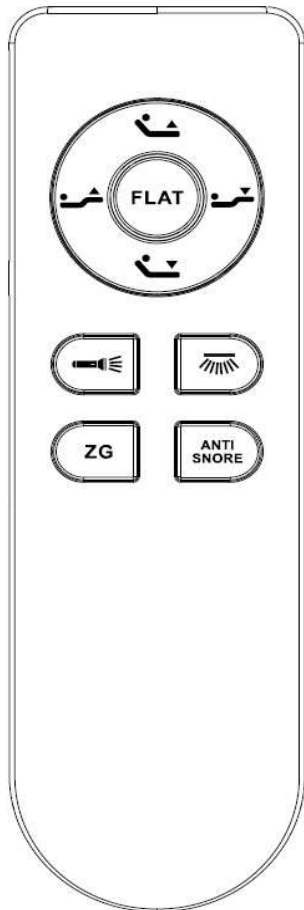

Pairing Method 1	<p>Step 1.Unplug the power cord ,power on after 5s ,control box indicator light turns blue, under bed light flashes (If the under bed light is installed), control box enters into pairing mode.</p> <p>Step 2.Press and hold the remote HEAD UP+HEAD DOWN button, remote backlight flashes, the remote enters into pairing mode,until remote backlight stops flashing and stays on, and control box indicator light turns green (or under bed light stops flashing and goes out), pairing is done.</p> <p>Note:When you power on again ,the control box will be in pairing mode in the first 10 seconds ,if you have already paired successfully before,then you don't need to pair again.After 10 seconds, control box indicator light turns green (or under bed light stops flashing and goes out) ,you can use remote to operate the bed directly .</p>
Pairing Method 2	<p>Step 1.Double click the control box Pairing button ,control box indicator light turns blue, under bed light flashes (If the under bed light is installed), control box enters into pairing mode.</p> <p>Step 2.Press and hold the remote HEAD UP+HEAD DOWN button, remote backlight flashes, the remote enters into pairing mode,until remote backlight stops flashing and stays on, and control box indicator light turns green (or under bed light stops flashing and goes out), pairing is done.</p>
If the pairing time out,please repeat the above actions until the pairing is successful	

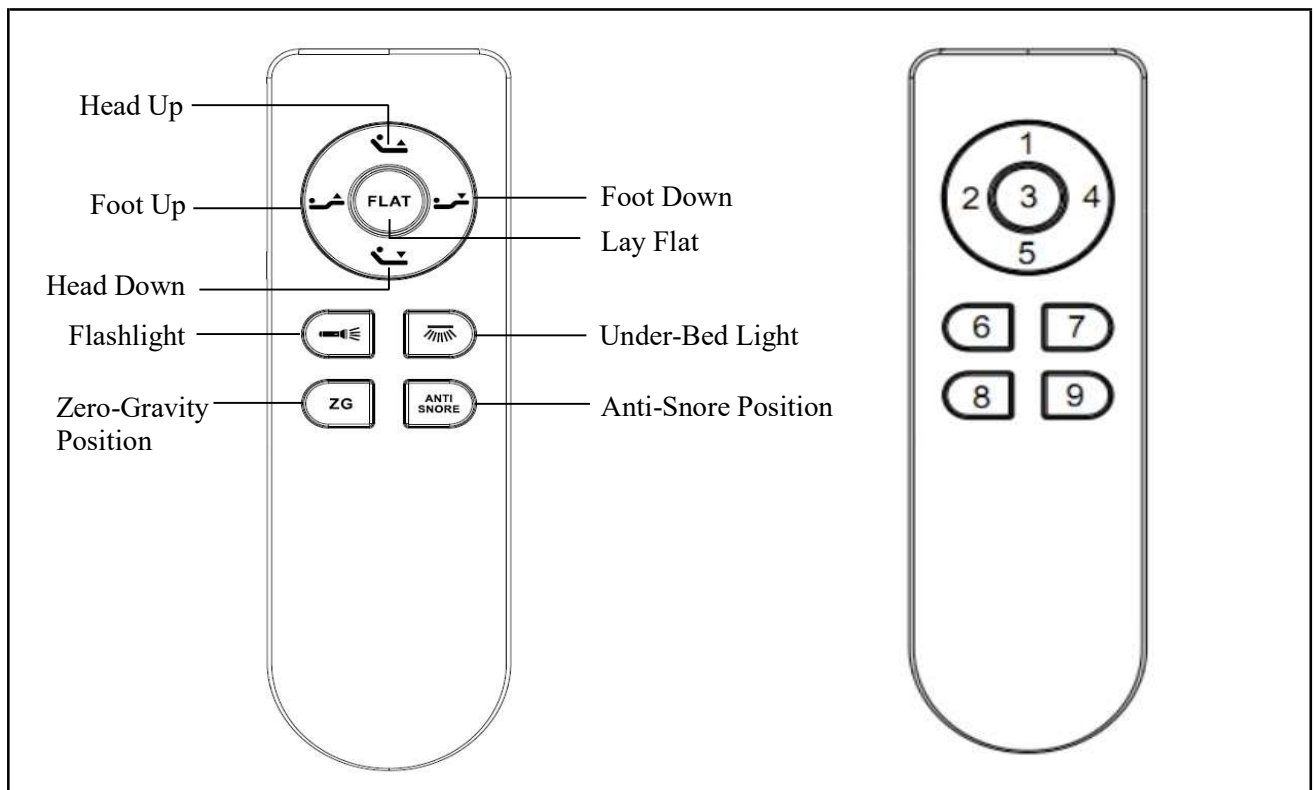Function:


Buttons	Key value	Specification
B1:	HEAD UP	Press and hold B1, backrest goes up,stop when released.
B2:	FOOT UP	Press and hold B2, footrest goes up,stop when released.
B3:	FLAT	Click B3, the bed will be flat.
B4:	FOOT DOWN	Press and hold B4, footrest goes down,stop when released.
B5:	HEAD DOWN	Press and hold B5, backrest goes down,stop when released.
B6:	FLASHLIGHT	Press and hold B6,flashlight on,off when released.
B7:	UNDER BED LIGHT	Click B7,turn on/off the under bed light
B8:	ZG	Click B8,the bed moves to ZeroG position .
B9:	ANTI SNORE	Click B9,the bed moves to ANTI SNORE position
Factory Reset	ZG+FLAT	Press and hold ZG+FLAT for 5s,until the backlight flashes , memory positions of control box will be reset to default settings.
Set New Memory Position (except Flat)	Press and hold the corresponding momory button for 5s	Move bed to your favourite position, press and hold the corresponding momory button for 5s, until the backlight flashes , the remote sets the current position as a new momery position.
Other functions :	Any Button	During the automatic movement of bed (Click memory position buttons or flat button, bed moves to memory position or flat position), press any button , the bed movement will stop.
	CONTROL BOX PAIRING BUTTON	1.Paring. 2.Press and hold this button, the bed wil be flat. 3.When the contol box is in pairing mode ,click this button,the control box exits the pairing mode.

	Sync Cable(optional)	Used when synchronization is needed, wired synchronization.
Wireless Sync Function-Master Control Box(Bed A) Pairing:	HEAD UP+HEAD DOWN	<p>Step 1: Double click the control box pairing button or repower (on the control box after powering off it for 5s) ,under bed light flashes (If the under bed light is installed), control box enters into pairing mode.</p> <p>Step 2: Press and hold B1+B5, the backlight flashes, the remote enters into pairing mode,until remote backlight stops flashing and stays on, and control box indicator light turns green (or under bed light stops flashing and goes out), pairing is done.</p>
Wireless Sync Function-Slave Control Box(Bed B) Pairing:	FOOT UP+FOOT DOWN (The same remote)	<p>Step 1: Double click the control box pairing button (on the control box after powering off it for 5s) ,under bed light flashes (If the under bed light is installed), control box enters into pairing mode.</p> <p>Step 2: Press and hold B2+B4, the backlight flashes, the remote enters into pairing mode,until remote backlight stops flashing and stays on, and control box indicator light turns green (or under bed light stops flashing and goes out), pairing is done.</p>
<p>Notes:</p> <ol style="list-style-type: none"> 1. Please flat the bed after the first installation or replacing a new motor,so that the motors positions can be calibrated. 2. If you want to sync two beds ,you can choose one of follwing two ways. <p>*Wireless synchronization (Some of remotes may not support this function, if needed ,please contact our service personnel)</p> <p>First, refer to "Master control box (Bed A) pairing",and pair either of two control boxes.</p> <p>Second, refer to "Slave control box (Bed B) pairing",and pair the other one,then you can use the paired remote to control the two beds .</p> <p>*Wired synchronization</p> <p>Please connect the sync cable (eg: R5.408.00.002)to the SYNC ports of the two control boxes(the two control boxes must have the same article number) after the pairing of one bed is successful ,then the two beds are connected and synchronized, and you can use the paired remote to control the two beds.</p> <p>If you find the actual angles of the same memory position of the two beds are different,please flat the bed and do Factory Reset or set a new memory positon.</p> <ol style="list-style-type: none"> 3.Any mistakes,please try it again according to the corresponding steps. 		