

# Use & Care Guide

English

Model 95163#

# Kenmore®

# Electric Range

Transform SR Brands Management LLC

Hoffman Estates, IL 60179 U.S.A.

[www.kenmore.com](http://www.kenmore.com)



# TABLE OF CONTENTS

## Contents

IMPORTANT SAFETY PRECAUTIONS.....	3
Anti-tip device.....	3
IMPORTANT SAFETY INSTRUCTIONS.....	4
Features.....	9
Package contents.....	9
Main components.....	10
Oven control panel.....	11
Range dimensions.....	12
<b>Installing.....</b>	<b>13</b>
Selecting a location.....	14
Clearances and dimensions.....	14
Electrical requirements.....	15
Installing your range.....	16
Tools you need (not included).....	16
Items not included.....	16
Notes to the installer.....	16
Before installing your range.....	16
Connecting the power cord.....	17
Installing the anti-tip device.....	20
Placing your range and connecting to power.....	20
Leveling your range.....	21
Finishing the installation.....	21
Installing the oven door handle.....	21
Installing the plastic pads.....	22
<b>Operating instructions.....</b>	<b>23</b>
Before you begin using your range.....	24
Tips for saving energy.....	24
Using the surface burners.....	24
Identifying the burners.....	25
Cooking areas.....	25
Using a surface element control knob.....	26
Using the warming center.....	26
Using the correct cookware.....	26
Protecting the ceramic cooktop.....	27
Using the oven.....	28
Minimum and maximum settings.....	28
Positioning the oven racks.....	28
Using the oven vent.....	29
Using the oven light.....	30
Using the oven vent.....	29
Tips for baking.....	30
Setting the clock.....	30

Selecting the 12-hour or 24-hour display setting .....	30
Using the timer .....	30
Baking.....	31
Adjusting the thermostat .....	31
Convection baking and roasting.....	31
Air Frying.....	32
Programming the cook time .....	32
Programming a delayed start time .....	33
Broiling.....	33
Keeping food warm.....	34
Switching between Fahrenheit or Celsius.....	34
Turning sound on or off.....	34
Locking oven controls .....	34
<b>Maintenance .....</b>	<b>35</b>
Cleaning and maintenance.....	36
Cleaning the control panel.....	36
Cleaning painted parts and decorative trim.....	36
Cleaning stainless steel surfaces.....	36
Cleaning the oven racks.....	36
Cleaning the oven door.....	37
Cleaning the surface element control knobs .....	37
Cleaning the cooktop.....	37
Removing and replacing the oven door .....	39
Removing and replacing the storage drawer.....	43
Self-cleaning the oven .....	44
Steam cleaning the oven.....	44
Troubleshooting.....	45
Control panel display .....	45
Cooktop.....	46
Oven .....	47
Drawer .....	48
Error codes .....	49
Specifications.....	50

## IMPORTANT SAFETY PRECAUTIONS

Read and follow all instructions before using your oven to prevent the risk of fire, electric shock, personal injury, or damage when using the range. This guide does not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.

### WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS


#### Anti-tip device



#### WARNING

To reduce the risk of tipping the range, the range must be secured by a properly installed Anti-Tip device. AFTER THE RANGE HAS BEEN INSTALLED, CONFIRM THAT THE ANTI-TIP DEVICE HAS BEEN PROPERLY INSTALLED AND VERIFY THAT THE ANTI-TIP DEVICE IS PROPERLY ENGAGED.

- If the anti-tip device is not installed, a child or adult can tip the range and be killed.
- Verify that the anti-tip device has been properly installed and engaged at the rear right (or rear left) of the range bottom.
- If you move the range and then move it back into place, ensure the anti tip-device is re-engaged at the right or left rear of the range bottom.
- Do not operate the range without the anti-tip device in place and engaged.
- Failure to do so can result in death or serious burns to children or adults.

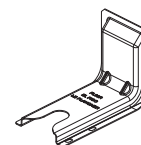



#### WARNING

- Do not step, lean, or sit on the doors of the range. You can cause the range to tip, resulting in burns or serious injuries.
- Confirm that the Anti-Tip device is installed properly. Then, to verify that the Anti-Tip device is engaged, grasp the top rear edge of the range and carefully attempt to tilt it forward. The Anti-Tip device should prevent the range from tilting forward more than a few inches.
- If you pull the range out from the wall for any reason, make sure the anti tip device is properly engaged when you push the range back against the wall. If it is not, there is a risk of the range tipping over and causing injury if you or a child stand, sit, or lean on the open door.
- Never completely remove the leveling legs. If you remove the leveling legs, the range will not be secured to the anti-tip device properly.

## IMPORTANT SAFETY INSTRUCTIONS

Read and follow all instructions before using your oven to prevent the risk of fire, electric shock, personal injury, or damage when using the range. This guide does not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.

### What you need to know about safety instructions

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your oven.

### What the icons and signs in this user manual mean:

	<b>CAUTION</b> To reduce the risk of fire, explosion, electric shock, or personal injury when using you oven, follow these basic safety precautions.
	<b>WARNING</b> Hazards or unsafe practices that may result in severe personal injury or death.
	<b>CAUTION</b> Hazards or unsafe practices that may result in minor personal injury or property damage.

## CALIFORNIA PROPOSITION 65 WARNING



#### WARNING

Cancer and Reproductive Harm-[www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

## FOR YOUR SAFETY

When using electrical appliances, you should follow basic safety precautions, including the following:



#### CAUTION

- Use this appliance only for its intended purpose as described in this *User Guide*.
- Potentially hot surfaces include the cooktop, areas facing the cooktop, oven vent opening, surfaces near the opening, and crevices around the oven door.
- Be sure your appliance is properly installed and grounded by a qualified technician.
- User servicing - Do not repair or replace any part of the appliance unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- Always disconnect the power to the appliance before servicing by removing the fuse or switching off the circuit breaker.
- Do not store items of interest to children in cabinets above a range or on the back guard of a range. Children climbing on the range to reach items could be seriously injured.
- Do not leave children alone. Never leave children alone or unattended in an area where this appliance is in use. They should never be allowed to sit or stand on any part of the appliance.
- Never use your appliance for warming or heating the room.
- Do not use water on grease fires. Turn off the oven to avoid spreading the flames. Smother the fire or flames by closing the door or use a dry chemical, baking soda, or foam-type extinguisher.
- Avoid scratching or impacting glass doors, cooktops, or control panels. Doing so may lead to glass breakage. Do not cook on a product with broken glass. Shock, fire, or cuts may occur.



## Additional safety instructions

- Do not store items in or on the appliance. Do not store flammable materials in the oven or near the surface elements. Be sure all packing materials are removed from the appliance before operating it. Keep plastics, clothes, and paper away from parts of the appliance that may become hot.
- Wear proper apparel. Never wear loose-fitting or hanging garments while using the appliance.
- Use only dry potholders. Placing moist or damp potholders on hot surfaces may result in burns from steam. Do not let the potholder touch hot heating elements. Do not use a towel or other bulky cloth.
- Teach children not to play with the controls or any other part of the range.
- For your safety, do not use high-pressure water cleaners or steam jet cleaners.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid creating a hazard.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

### Surface cooking elements

- Never leave surface elements unattended at high heat settings. Boilovers cause smoking and greasy spillovers that may ignite.
- Protective Liners – Do not use aluminum foil to line surface element drip bowls or oven bottoms, except as suggested in the manual. Improper installation of these liners may result in a risk of electric shock or fire.
- To avoid oil spillover and fire, use a minimum amount of oil when shallow pan-frying and avoid cooking frozen foods with excessive amounts of ice.
- Do not lift the cooktop. Lifting the cooktop can damage the range and cause the range to malfunction.
- Do not operate the cooktop without cookware. If the cooktop operates without cookware, the control knobs will become hot.
- Never use the glass cooktop surface as a cutting board.
- Use care when touching the cooktop. The glass surface of the cooktop will retain heat after the controls have been turned off.
- Be careful when placing spoons or other stirring utensils on the glass cooktop surface when it is in use. They may become hot and could cause burns.
- Use proper pan sizes. This appliance is equipped with surface elements of different size. Select pots and pans that have flat bottoms large enough to cover the surface area of the heating element. Using undersized cookware will expose a portion of the heating element to direct contact and may result in the ignition of clothing. Matching the size of the pot or pan to the element will also improve efficiency.
- Utensil handles should be turned inward and not extended over adjacent surface elements – To reduce the risk of burns, ignition of flammable materials, or spillage due to unintentional contact with utensils, position utensil handles so that they are turned inward and do not extend over adjacent surface elements.
- Glazed cooking utensils – Only certain types of glass, glass/ceramic, ceramic, earthenware, or other glazed cookware can be used on range top service without breaking due to sudden changes in temperature.
- Cleaning – Read and follow all instructions and warnings on the cleaning product labels.
- Be sure you know which control knob operates each surface element. Make sure you turned on the correct surface element.
- Always turn the surface elements off before removing cookware.
- When preparing flaming foods under the hood, turn the fan on.
- Keep an eye on foods being fried at high or medium high heat settings.
- Do not store heavy items above the cooktop surface that could fall and damage it.
- Do not Use Decorative Surface Element Covers – If an element is accidentally turned on, the decorative cover will become hot and possibly melt. Burns will occur if the hot covers are touched. Damage may also be done to the cooktop.

### Electrical safety

- Proper Installation - Be sure your appliance is properly installed and grounded by a qualified technician.
- Flush-mounted appliances may be operated only after they have been installed in cabinets and workplaces that conform to the relevant standards. This ensures that the appliances are installed in compliance with the appropriate safety standards.
- If your appliance malfunctions or if fractures, cracks, or splits appear:
  - Switch off all cooking zones
  - Unplug the range from the AC wall outlet
  - Contact your local service center.



#### WARNING

If the surface is cracked, switch off and unplug the appliance to avoid the possibility of electrical shock. Do not use your cooktop until the glass surface has been replaced.



#### WARNING

- Disconnect the range from AC power or turn off its breaker circuit before replacing the lamp to avoid the possibility of electric shock.
- The range should not be placed on a base.

### Child safety



#### WARNING

- This appliance is not intended for use by young children without the adequate supervision of a responsible adult.
- Young children should be supervised to ensure that they do not play with the appliance.
- Keep children away from the door when opening or closing it as they may bump themselves on the door or catch their fingers in the door.
- The cooking zones will become hot when you cook. To keep small children from being burned, always keep them away from the appliance while you are cooking.



#### WARNING

- Accessible parts may become hot during use. To avoid burns, young children should be kept away.

### Oven

- **DO NOT TOUCH THE HEATING ELEMENTS OR INTERIOR SURFACES OF THE OVEN.** Heating elements may be hot even though they are dark in color. Interior surfaces of an oven become hot enough to cause burns. During and after use, do not touch or let clothing or other flammable materials contact the heating elements or interior surfaces of the oven until they have had sufficient time to cool. Other surfaces of the appliance may become hot enough to cause burns. Among these surfaces are oven vent openings and surfaces near these openings, the oven door, and the window of the oven door.
- **Do not heat unopened food containers.** The build-up of pressure may cause the container to burst and result in injury.
- **Do not use the oven for a storage area.** Items stored in an oven can ignite.
- **Use care when opening the door.** Let hot air or steam escape before you remove food from or put food into the oven.
- **Protective liners.** Do not use aluminum foil to line the oven bottoms. Improper installation of these liners may result in a risk of electric shock or fire.
- **Keep oven vent ducts unobstructed.** The oven vent is located above the right rear surface element. This area could become hot during oven use. Never block this vent or place plastic or heat-sensitive items on it.
- **Placement of oven racks.** Always place oven racks in the desired location while the oven is cool. If the rack must be moved while the oven is hot, use potholders. Do not let the potholders come in contact with the hot heating element in the oven.
- Do not allow aluminum foil or a meat probe to contact the heating elements.
- **During use, the appliance becomes hot.** Care should be taken to avoid touching heating elements inside the oven.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass. They can scratch the surface which may result in the glass shattering.

### Ventilating hood

- Clean ventilating hoods frequently. Do not let grease accumulate on the hood or filter.

## Glass/ceramic cooking surfaces

- DO NOT TOUCH SURFACE ELEMENTS OR AREAS NEAR ELEMENTS. Surface elements may be hot even though they are dark in color. Areas near surface elements may become hot enough to cause burns. During and after use, do not touch, or let clothing or other flammable materials contact the surface elements or areas near the elements until they have had sufficient time to cool. Among these areas are the cook-top and the facing of the cooktop.
- Do not cook on a broken cooktop. If the cooktop should break, cleaning solutions and spillovers may penetrate the broken cook-top and create a risk of electric shock. Contact a qualified technician immediately.
- Clean the cooktop with caution. If a wet sponge or cloth is used to wipe spills on a hot cooking area, be careful to avoid steam burns. Some cleaners can produce noxious fumes if applied to a hot surface.

## Critical installation warnings



### WARNING

- This appliance must be installed by a qualified technician or service company.
  - Failing to have a qualified technician install the range may result in electric shock, fire, an explosion, problems with the product, or injury.
- Unpack the oven, remove all packaging material and examine the oven for any damage such as dents on the interior or exterior of the oven, broken door latches, cracks in the door, or a door that is not lined up correctly. If there is any damage, do not operate the oven and notify your dealer immediately.
- This appliance must be properly grounded.
- Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.
  - This may result in electric shock, in an explosion, or problems with the product.
- Do not cut or remove the ground prong from the power cord under any circumstances.
- Connect the range to a circuit that provides the correct amperage.
- Plug the power cord into a properly grounded outlet with the proper configuration. Your oven should be the only item connected to this circuit.
- Do not use a damaged power cord or loose wall socket.
  - This may result in electric shock or fire.
- Do not pull or excessively bend the power cord.
- Do not twist or tie the power cord.
- Do not hook the power cord over a metal object or insert the power cord between [objects](#).
  - This may result in electric shock or fire.
- If the power cord is damaged, contact your nearest service center.
- Keep all packaging materials out of the reach of children. Children may use them for play and injure themselves.
- Install your appliance on a level and hard floor that can support its weight.
  - Failing to do so may result in abnormal vibrations, noise, or problems with the product.
- Do not install this appliance in a humid, oily, or dusty location, or in a location exposed to direct sunlight or water (rain drops).
  - This may result in electric shock or fire.

## Critical installation warnings



### CAUTION

- If the appliance is flooded by any liquid, disconnect the appliance from power by turning off the circuit breaker that is powering it. Please contact your nearest service center. Failing to do so may result in electric shock or fire.
- If the appliance produces a strange noise, a burning smell, or smoke, unplug the power plug immediately and contact your nearest service center.
  - Failing to do so may result in electric shock or fire.
- Do not touch the power cord. Do not touch the appliance.
  - A spark may result in an explosion or fire.
- Take care not to contact the oven door, heating elements, or any of the other hot parts with your body while cooking or just after cooking.
  - Failing to do so may result in burns.
- If materials inside the oven should ignite, keep the oven door closed, turn the oven off and disconnect the power cord, or shut off power at the fuse or circuit breaker panel. If the door is opened, the fire may spread.
- Always observe safety precautions when using your oven. Never try to repair the oven yourself because there is dangerous voltage inside. When a repair is needed, contact your nearest authorized service center.
- If you use the appliance when it is contaminated by foreign substances such as food waste, it may result in a problem with the appliance.
- Take care when removing the wrapping from food taken out of the appliance.
  - If the food is hot, hot steam may be emitted abruptly when you remove the wrapping and this may result in burns.

- If any foreign substance such as water has entered the appliance, contact your nearest service center.
  - Failing to do so may result in electric shock or fire.
- Do not touch the power cord with wet hands.
  - This may result in electric shock.
- Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.
  - If a child places a plastic bag over the head, the child can suffocate.
- Do not let children or any person with reduced physical, sensory, or mental capabilities use this appliance unsupervised.
- Make sure that the appliance's controls and cooking areas are out of the reach of children.
  - Failing to do so may result in electric shock, burns, or injury.
- Do not touch the inside of the appliance immediately after cooking. The inside of the appliance will be hot.
  - Failing to do so may result in burns.
- Do not use or place flammable sprays or objects near the oven.
  - Flammable items or sprays can cause fires or an explosion.
- Do not insert fingers, foreign substances, or metal objects such as pins or needles into inlets, outlets, or holes. If foreign substances are inserted into any of these holes, contact your product provider or nearest service center.
- Any adjustments or repairs to the oven door must be done by licensed professional.
- Do not tamper with or make any adjustments or repairs to the door. Under no circumstances should you remove the door or outer shell of the oven.
- Do not store or use the oven outdoors.
- Never use this appliance for purposes other than cooking.
  - Using the appliance for any purpose other than cooking may result in fire.
- Never heat plastic or paper containers and do not use them for cooking.
  - Failing to do so may result in fire.
- Do not heat food wrapped in paper from magazines, newspapers, etc.
  - This may result in fire.
- Do not open the door when the food in the oven is burning.
  - If you open the door, it causes an inflow of oxygen and may cause the food to ignite.
- Do not apply excessive pressure to the door or the inside of the appliance. Do not strike the door or the inside or the appliance.
  - Hanging on to the door may result in the product falling and cause serious injury.
  - If the door is damaged, do not use the appliance. Contact a service center.
- Do not hold food in your bare hands during or immediately after cooking.
  - Use cooking gloves. The food may be very hot and you could burn yourself.
  - Handle and oven surfaces may be hot enough to cause burns after cooking.

## Usage cautions



### CAUTION

- If the surface is cracked, turn the appliance off.
  - Failing to do so may result in electric shock.
- Dishes and containers can become hot. Handle with care.
- Hot foods and steam can cause burns. Carefully remove container coverings, directing the steam away from your hands and face.
- Take care as beverages or food may be very hot after heating, especially when feeding a child. Check that it has cooled sufficiently.
- Take care when heating liquids such as water or other beverages.
  - Make sure to stir during or after cooking.
  - Avoid using a slippery container with a narrow neck.
  - Wait at least 30 seconds after heating before removing the heated liquid.
  - Failing to do so may result in an abrupt overflow of the contents and cause burns.
- Do not stand on top of the appliance or place objects (such as laundry, oven cover, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.
  - Items, such as a cloth, may get caught in the door.
  - This may result in electric shock, fire, problems with the product, or injury.
- Do not operate the appliance with wet hands.
  - This may result in electric shock.
- Do not spray volatile substances such as insecticide onto the surface of the appliance.
  - As well as being harmful to humans, it may also result in electric shock, fire, or problems with the product.
- Do not put your face or body close to the appliance while cooking or when opening the door just after cooking.

- Take care that children do not come too close to the appliance.
  - Failing to do so may result in children burning themselves.
- Do not place food or heavy objects over the edge of the oven door.
  - If you open the door, the food or object may fall and this may result in burns or injury.
- Do not abruptly cool the door, the inside of the appliance, or a dish by pouring water over it during or just after cooking.
  - This may result in damage to the appliance. The steam or water spray may result in burns or injury.
- Do not operate while empty except for self-cleaning.
- Do not scratch the glass of the oven door with a sharp object.
  - This may result in the glass being damaged or broken.
- Do not store anything directly on top of the appliance when it is in operation.
- Do not use sealed containers. Remove seals and lids before cooking. Sealed containers can explode due to the build up of pressure even after the oven has been turned off.
- Take care that food you are cooking in the oven does not come into contact with the heating element.
  - This may result in fire.
- Do not overheat food.
  - Overheating food may result in fire.

### Critical cleaning warnings



#### CAUTION

- Do not clean the appliance by spraying water directly on to it.
- Do not use benzene, thinner, or alcohol to clean the appliance.
  - This may result in discoloration, deformation, damage, electric shock, or fire.
- Take care not to hurt yourself when cleaning the appliance (externally or internally).
  - You may hurt yourself on the sharp edges of the appliance.
- Do not clean the oven with a steam cleaner. Instead use the appliance's built-in steam cleaning function.
  - This may result in corrosion.
- Keep the inside of the oven clean. Food particles or spattered oils stuck to the oven walls or floor can cause paint damage and reduce the efficiency of the oven.


## SAVE THESE INSTRUCTIONS

## Features


### Package contents

- 4.8 Cu. Ft. Electric Convection Range with Self Clean and Air Fry
- Anti-tip device (1) and ST5\*40 mm screws (4)
- Oven handle (1) with hex wrench (1)
- Oven racks (2)
- Air fryer basket (1)
- Knobs (4)
- Back plastic pads (2) with ST5\*20 mm screws (2)
- *User Guide*

**Main components**

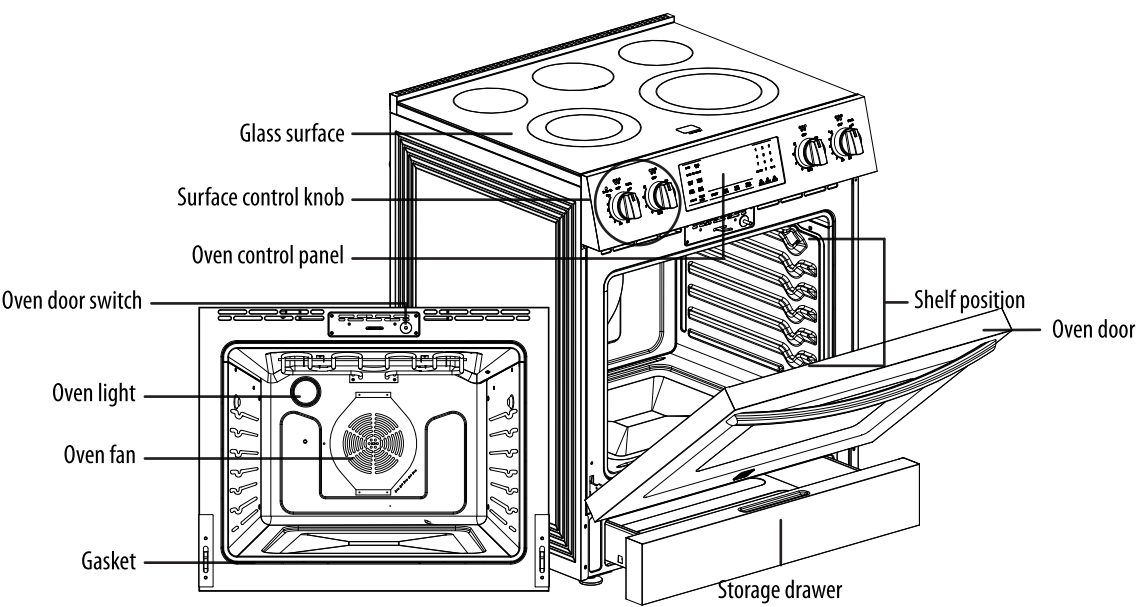

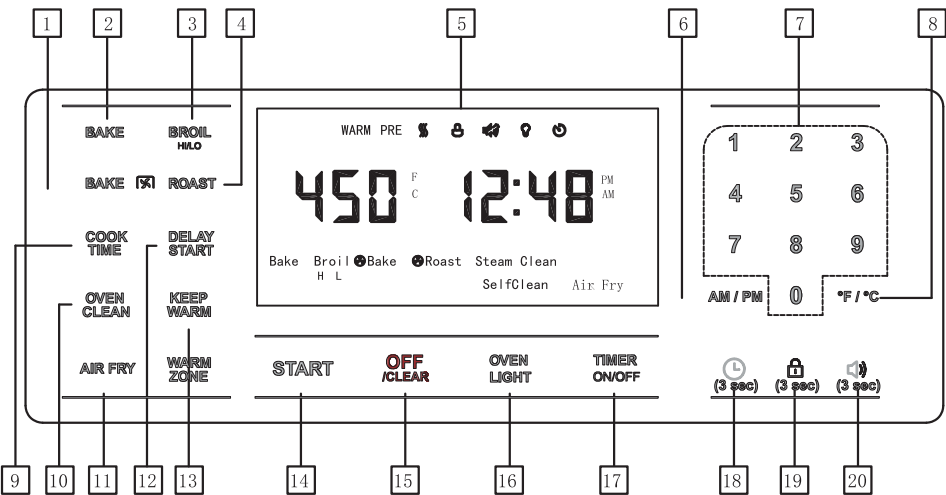


Oven control panel




#	TOUCHPAD	DESCRIPTION
1	Bake  (Convection Bake)	Turns on the fan while baking. Provides more consistent heat by circulating the air inside the oven while baking. Cooks large amounts of baked goods on multiple shelves at the same time.
2	Bake	Turns on the Bake function. Evenly cooks food using the bottom oven element.
3	Broil	Turns on the Broil function. Cooks foods using the top oven element only. You can select <b>Broil Hi</b> or <b>Broil Low</b> . Press once to cook using the High heat mode. Press twice to cook using the Low heat mode.
4	Roast (Convection Roast)	Turns on the fan while roasting. Provides more consistent heat by circulating the air inside the oven while baking. Cooks large cuts of meat.
5	Display	Shows the time of day, oven temperature, whether the oven is in the bake, broil, or oven clean mode, and the time set for the timer or automatic oven operations. When the oven is heating, shows the  (heating) icon.
6	AM/PM	Press and hold for three seconds to switch between the 12-hour and 24-hour time format. When setting the current time, press to select the AM or PM time format.
7	Numbers	Sets times, temperatures, and preset oven functions.
8	°F /°C	Press and hold for one second to switch between Fahrenheit and Celsius.
9	Cook Time	Turns on the Cook Time function. Use the number pads to set the amount of time you want your food to cook. The oven automatically shuts off when the time has elapsed.
10	Oven Clean	Turns on the Oven Clean feature. Steam clean and self-clean are options.
11	Air Fry	Turn the Air Fry mode on and off.
12	Delay Start	Sets the oven to start and stop automatically. Use with the Bake, Convection Bake, Convection Roast, or Cook Time functions.
13	Keep Warm	Keeps the oven warm after cooking. This lowers the oven temperature and maintains it at 150° F (65° C) up to three hours.
14	Start	Starts the oven cooking, cleaning, or timing functions.
15	Off / Clear	Cancels all oven operations except the clock and timer.
16	Oven Light	Turns the oven light on or off.



#	TOUCHPAD	DESCRIPTION
17	Timer On / Off	Turns on the kitchen timer for the amount of time you want.
18	 (clock set)	Press and hold for three seconds to turn on the clock set feature, then set the current time.
19	 (lock)	Press and hold for three seconds to turn off the control panel touch pads to prevent the oven from accidentally being turned on. Touch pads stay locked until you turn this function off.
20	 (sound)	Press and hold for three seconds to turn sound on or off.

Range dimensions

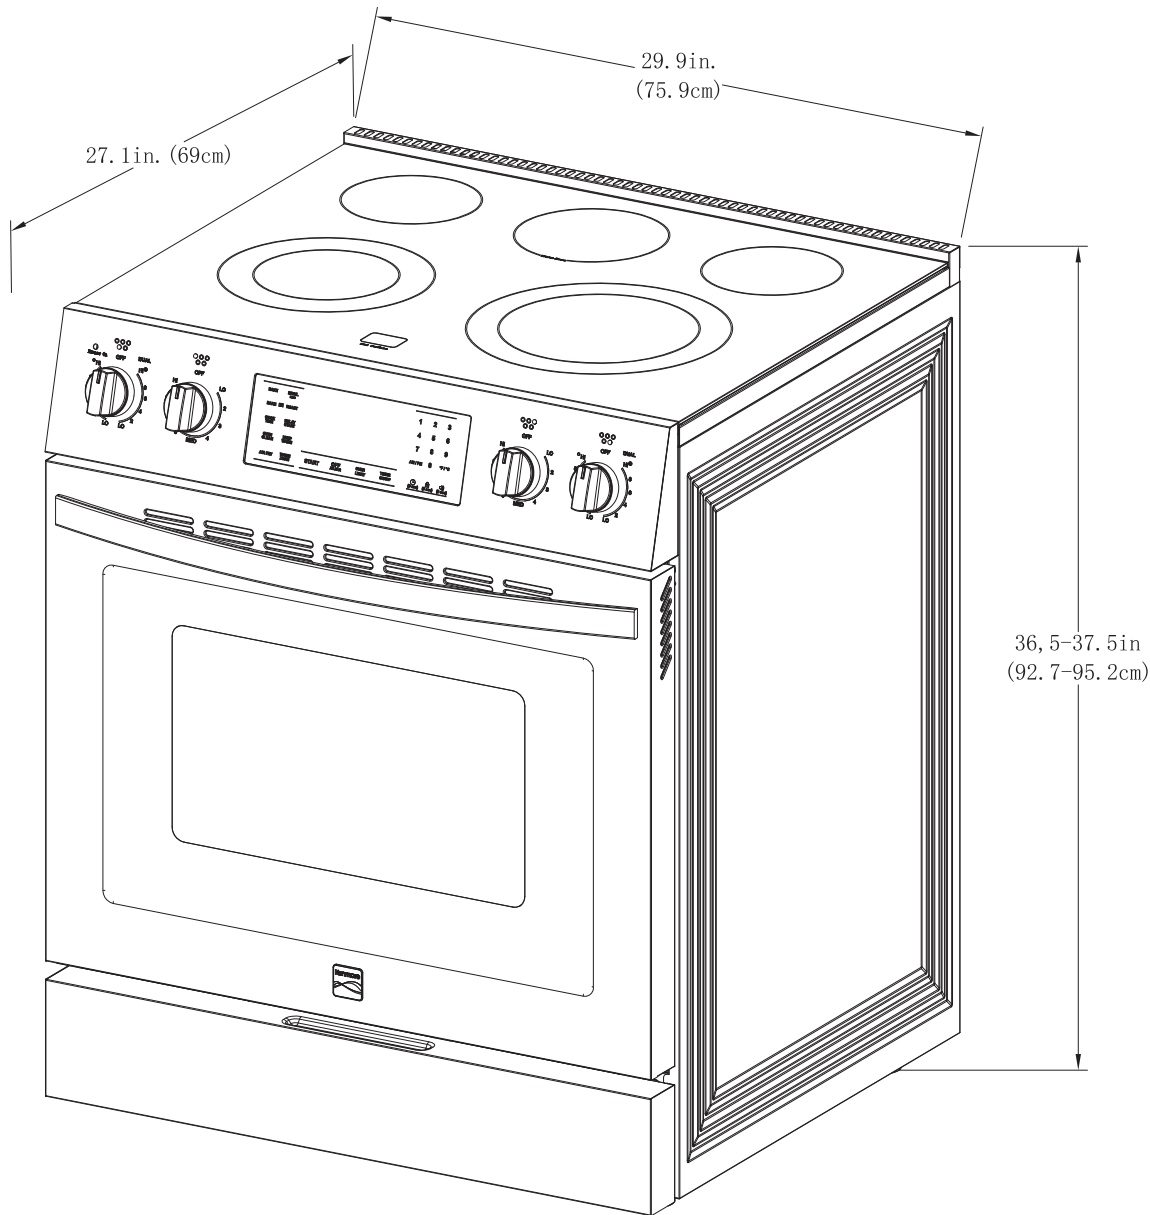



# Installing

## 4.8 Cu. Ft. Electric Convection Range with Self Clean and Air Fry

Selecting a location .....	14
Clearances and dimensions .....	14
Electrical requirements .....	15
Installing your range .....	16
Tools you need (not included) .....	16
Items not included .....	16
Notes to the installer .....	16
Connecting the power cord .....	17
Connecting the power cord .....	17
Installing the anti-tip device .....	20
Placing your range and connecting to power .....	20
Leveling your range .....	21
Finishing the installation .....	21
Installing the oven door handle .....	21
Installing the plastic pads .....	22


# Selecting a location

## Clearances and dimensions

BEFORE YOU BEGIN to install your range, refer to the following information, dimensions, and clearances. Do not install your range where it may be subject to strong drafts. Provide adequate clearances between your range and adjacent combustible surfaces. These dimensions must be met for safe use of your range. The location of the electrical outlet may be adjusted to meet the following dimensions and clearances.

For installation in Canada, a free-standing range is not to be installed closer than 4.7 in. (12 cm) from any adjacent surface.

**CAUTION:**  
Your range has been designed to comply with the maximum allowable wood cabinet temperature of 194° F (90 °C). Make sure that the wall covering, counter tops, and cabinets around your range can withstand the heat (up to 194° F (90° C)) generated by your range. If not, discoloration, de-lamination, or melting may occur.

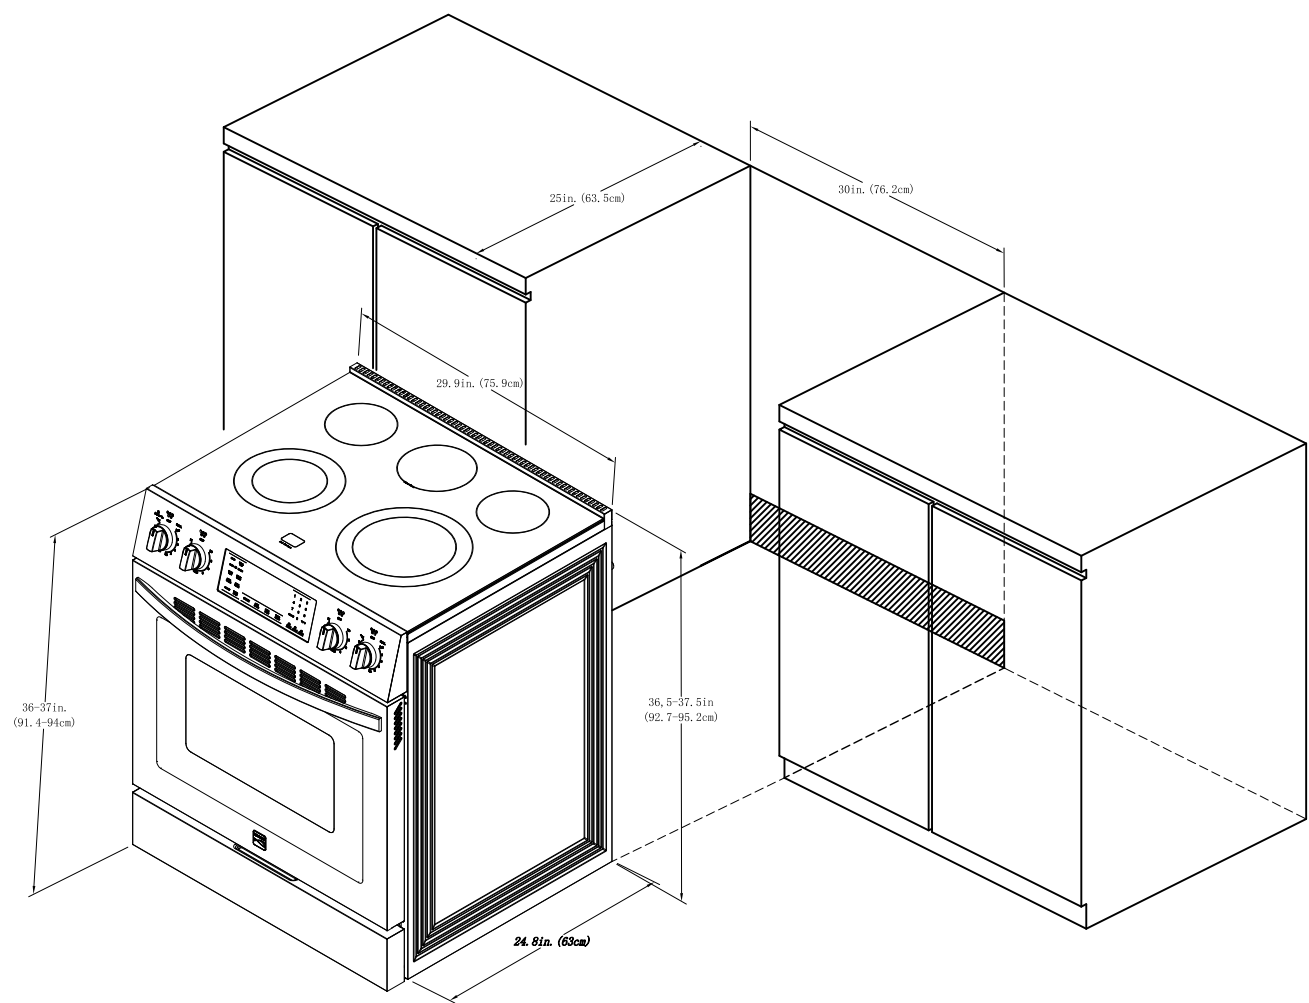


### Minimum dimensions

Make sure that the wall covering, countertop, flooring, and cabinets around your range can withstand the heat up to 194° F (90° C) that your range generates.

Allow a 30 in. (76.2 cm) minimum clearance between the surface elements and the bottom of unprotected wood or metal cabinet, or allow a 24 in. (61 cm) minimum when the bottom of wood or metal cabinet is protected by no less than .25 in. (.6 cm) thick flame retardant mill board covered with not less than No. 28 MSG sheet steel, .015 in. (.038 cm) stainless steel, .024 in. (.061 cm) aluminum, or .020 in. (.051 cm) copper.

Your range has been approved for 0 in. (0 cm) spacing to adjacent surfaces above the cooktop. However, we recommend a 6 in. (15.2 cm) minimum spacing to surfaces less than 15 in. (38.1 cm) above the cooktop and adjacent cabinet to reduce exposure to steam, grease splatter, and heat.

To reduce the risk of burns or fire when reaching over hot surface elements, cabinet storage space above the cooktop should be avoided. If cabinet storage space is above the cooktop, the risk can be reduced by installing a range hood that projects at least 5 in. (12.7 cm) beyond the front of the cabinets. Cabinets installed above the cooktop must be no deeper than 16 in. (40.6 cm).

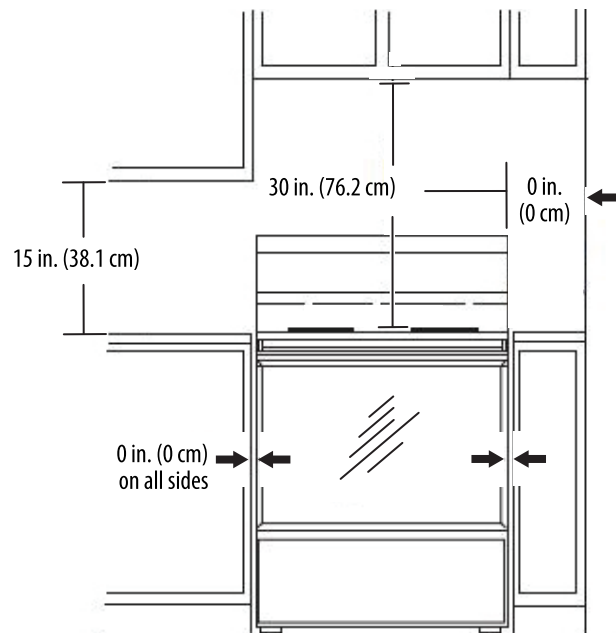

## Electrical requirements

**WARNING:** To reduce the risk of fire, electric shock, or personal injury:

- Remove the house fuse or open the circuit breaker before beginning installation.
- Your range must be supplied with the correct voltage and frequency, and must be connected to an individual, correctly grounded branch circuit, protected by a circuit breaker or fuse having the amperage as specified on the rating plate located above the top panel of the bottom drawer.
- We recommend you have the electrical wiring and hookup of your range connected by a qualified electrician. After installation, have the electrician show you where your main range disconnect is located.
- Check with your local utilities for electrical codes which apply in your area. Failure to wire your oven according to governing codes could result in a hazardous condition. If there are no local codes, your range must be wired and fused to meet the requirements of the National Electrical Code, ANSI/NFPA No. 70–Latest Edition.


Effective January 1, 1996, the National Electrical Code requires that new construction (non-existing) utilize a 4-conductor connection to an electric range.

- When installing an electric range in new construction, follow the instructions in [Connect a 4-wire power cord](#) on page 18.
- You must use a 3-wire or 4-wire, single-phase A.C. 208Y/120 volt or 240/120 volt, 60 hertz electrical system.
- If the electrical service provided does not meet the above specifications, have a licensed electrician install an approved outlet.
- Use only a 3-conductor or 4-conductor UL-listed range cord. These cords may be provided with ring terminals on the wires and a strain relief device.
- A range cord rated at 40 amps with a 125/250 minimum volt range is required. We do not recommend a 50 amp range cord, but if used, it should be marked for use with nominal 13.8 in. (35 cm) diameter connection openings. Make sure that you center the cable and strain relief within the knockout hole to keep the edge from damaging the cable.
- Because range terminals are not accessible after the range is in position, a flexible service conduit or cord must be used.

# Installing your range

**WARNING: We recommend that a professional installer install your range.**  
If your range is not installed correctly, incorrect electrical grounding can cause a fire or explosion which can lead to injury or death.

## Tools you need (not included)

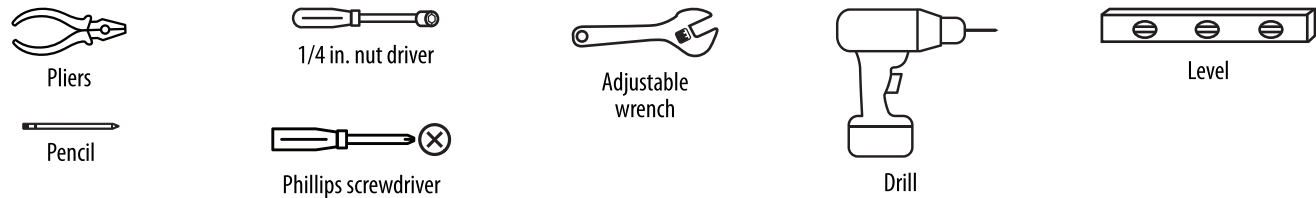

## Items not included

- 4-wire or 3-wire power cord
- Strain relief

## Notes to the installer

- 1 Read this manual before installing your range.
- 2 Observe all governing codes and ordinances.
- 3 Make sure that you keep these instructions with your range.
- 4 Before installing your range in an area covered with linoleum or any synthetic floor covering, make sure that the floor covering can withstand temperatures of at least 180° F (82° C) without shrinking, warping, or discoloring.
- 5 Do not install your range over carpeting unless you place an insulating pad or sheet of .25 in. (.6 cm) thick plywood between your range and carpeting.

## Before installing your range

- 1 Remove the exterior and interior packing.
- 2 Wipe the surfaces of your range with a damp cloth or sponge, then wipe them dry with a clean, dry cloth.

Range rating		Specified rating of power supply cord kit and circuit protection
120/240 Volts	120/208 Volts	Amps
8.8 – 16.5 kW	7.8 – 12.5 kW	40 or 50
16.6 – 22.5 kW	12.6 – 18.5 kW	50

This range can be connected directly to the circuit breaker box (or fused disconnect) through flexible or nonmetallic sheathed, copper cable.

Allow 2 to 3 ft. (61 cm to 91.4 cm) of slack in the line so that the range can be moved if servicing is ever necessary.

A UL listed conduit connector must be provided at each end of the power supply cable (at the range and at the junction box).

Wire sizes and connections must conform with the rating of the range.

The wiring diagram is located on the rear panel.


## Connecting the power cord

### **WARNING:**

- Electrical ground is required on your range.
  - Do not connect to the electrical supply until your range is permanently grounded.
  - Your range must be connected to a grounded, metallic, permanent wiring system, or a grounding connector should be connected to the grounding terminal or wire lead on your range.
- Failure to do any of the above could result in a fire, personal injury, or electrical shock.


### **Remove the terminal block cover**

- 1 Remove the screw that secures the terminal block cover to the back of your range. Don't discard the screws. You need them to reinstall the cover.

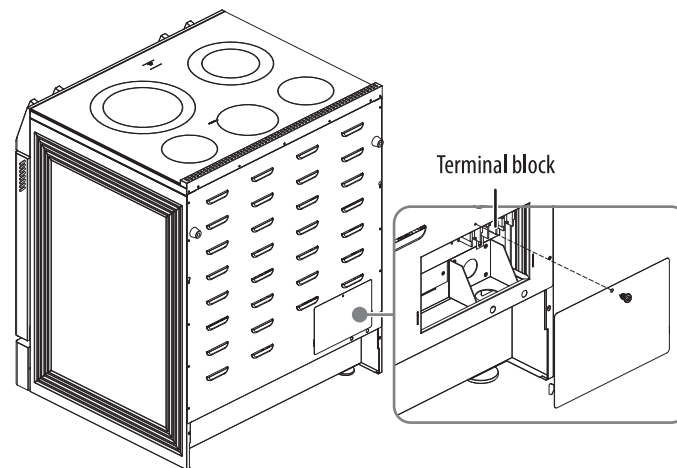


- 2 For the power cord installation, hook the strain relief over the 1 3/8 in. (3.5 cm) power cord hole located below the rear of the oven. Insert the power cord through the strain relief, then tighten the relief.

**Note:** You must install the power cord with a strain relief. Attach the strain relief to the opening in the conduit connection plate.

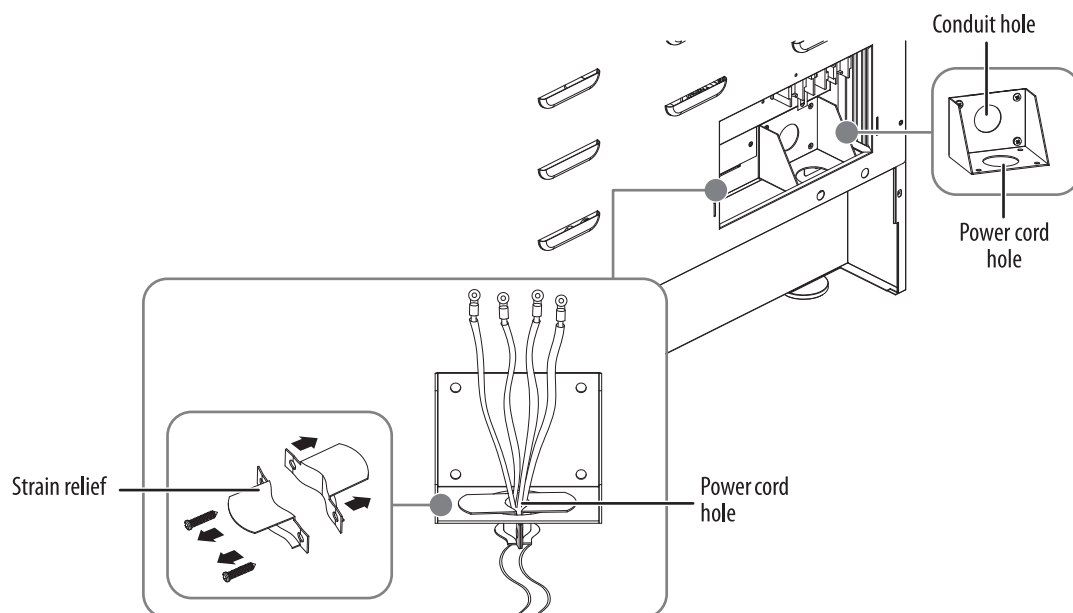


- 3 For the conduit installation, insert the conduit strain relief in the 1 1/8 in. (2.8 cm) conduit hole, then install the conduit through the body of the strain relief and fasten the strain relief with its ring.

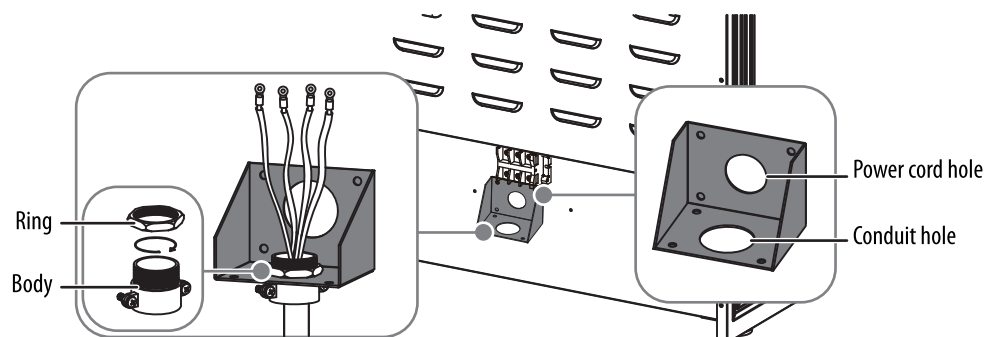

If you are connecting a 4-wire power cord, go to [Connect a 4-wire power cord](#) on page 18.

If you are connecting a 3-wire power cord, go to [Connect a 3-wire power cord](#) on page 19.

### **Connect a 4-wire power cord**

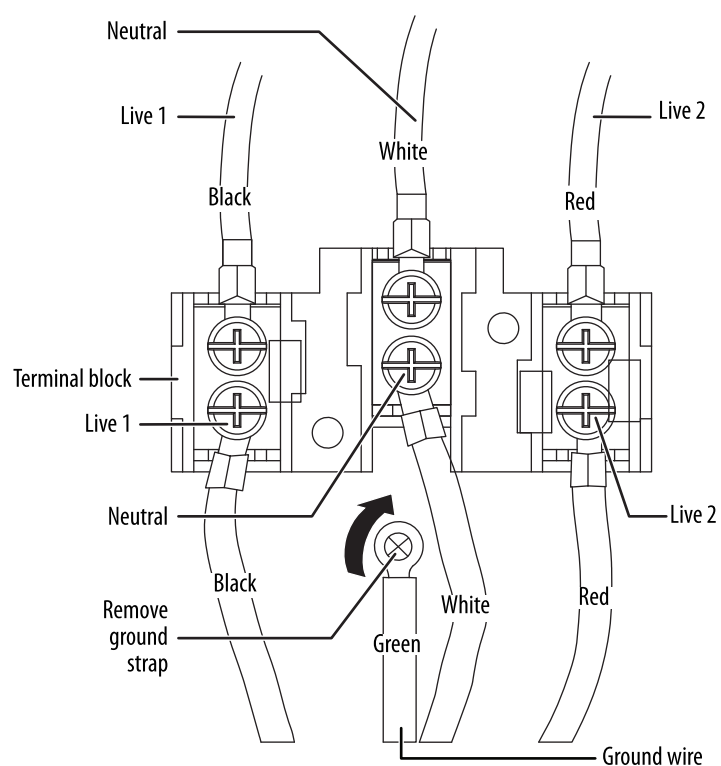


- 1 Disconnect power to the circuit breaker or fuse box before making the electrical connection.
- 2 Remove the three lower terminal screws from the terminal block and remove the ground screw.
- 3 Remove and discard the ground strap located between the middle terminal screw and the ground screw. Do not discard any screws.
- 4 Insert the ground screw into the power cord ground wire terminal ring and into the frame of the range.
- 5 Insert the three terminal screws (removed earlier) through each power cord terminal ring and into the lower terminals of the terminal block. Be certain that the center wire (white/neutral) is connected to the center position of the terminal block.
- 6 Reinstall and tighten screws securely to the terminal block.

7 **CAUTION:** Check the voltage after connecting the power cord.

Live 1 - Neutral	120V
Live 2 - Neutral	120V
Live 1 - Live 2	208V / 240V

8 Go to [Replace the terminal block cover](#) on page 20.

**Connect a 3-wire power cord**

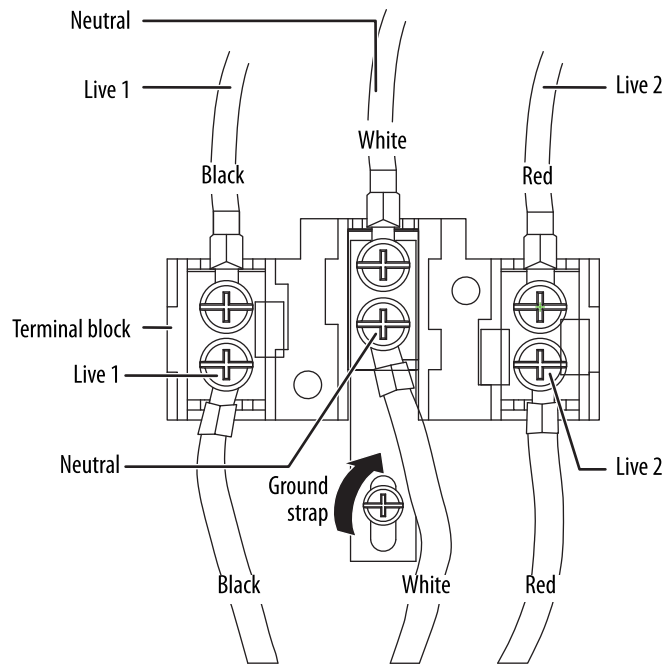


- 1 Remove the three lower terminal screws from the terminal block.
- 2 Insert the three terminal screws through each power cord terminal ring and into the lower terminals of the terminal block. Be certain that the center wire (white/neutral) is connected to the center lower position of the terminal block.
- 3 Tighten screws securely to the terminal block. **DO NOT remove the ground strap connection.**
- 4 **CAUTION:** Check the voltage after connecting the power cord.

Live 1 - Neutral	120V
Live 2 - Neutral	120V
Live 1 - Live 2	208V / 240V

5 Go to [Replace the terminal block cover](#) on page 20.

### Replace the terminal block cover

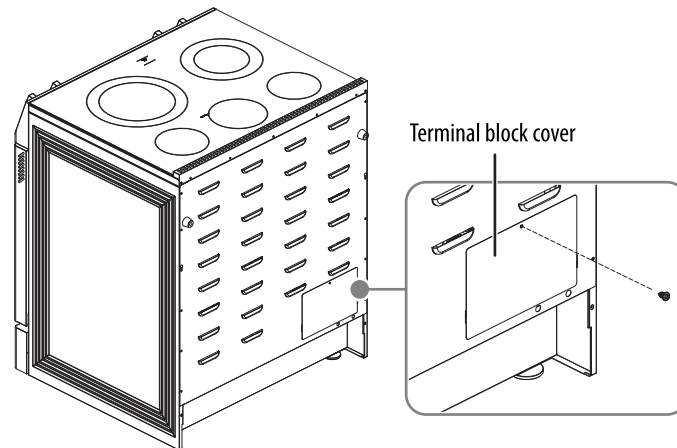

- 1 Make sure that the cable is tightened in place using the strain relief. See step 2 in [Remove the terminal block cover](#) on page 17.
- 2 Align the terminal block cover with the screw holes on the back of your range.
- 3 Insert the screw you removed earlier through the holes in the cover and into the holes on the back of your range.
- 4 Tighten the screws.

### Installing the anti-tip device


**WARNING: To reduce the risk of tipping, your range must be secured by the provided anti-tip device.**

- All ranges can tip and cause personal injury.
- A child or adult can tip your range and be killed.
- Install the anti-tip device to your range and structure by following the installation instructions.
- Make sure that your range is connected to the anti-tip device installed to the structure.
- If you pull your range away from the wall for cleaning, service, or any other reason, make sure that the anti-tip device is correctly reengaged when you push your range back against the wall. In the event of abnormal usage (such as a person standing, sitting, or leaning on an open door), failure to take this precaution can result in tipping of your range. Personal injury might result from spilled hot liquids or from the range itself.

Failure to follow these instructions can result in death or serious burns to children or adults.

An anti-tip bracket and screws with installation instructions came with your range. If the bracket is not installed correctly, your range could be tipped by you or a child standing, sitting, or leaning on an open oven door.

- 1 Release and extend the leveling leg to a minimum clearance of .7 in. (1.8 cm) between the range bottom and the floor.
- 2 Follow the instructions that came with the anti-tip device.

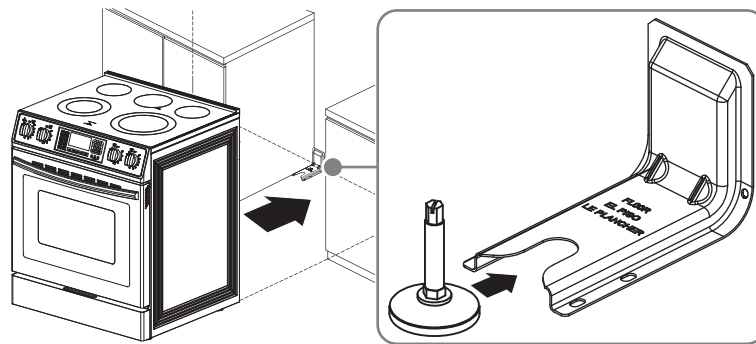

- 3 Remove the storage drawer and look underneath your range to make sure that the leveling leg is engaged in the bracket. See [Removing and replacing the storage drawer](#) on page 43.
- 4 Carefully tip your range forward. The bracket will stop the tipping range no more than 4 in. (10.2 cm) from the wall. If it does not, you need to re-install the bracket.

### Placing your range and connecting to power

- 1 Plug in the power cord. Make sure that the outlet meets local or national electrical codes.
- 2 Slide your range into place.
- 3 Make sure that the back leg of your range slid into the anti-tip bracket. Carefully tip your range forward to make sure that the anti-tip bracket prevents a tip-over.



## Leveling your range


Your range should be level. If your range is not level, the door may not close or seal correctly which can cause uneven heating and electric wastage problems.

**Note:**

- To make it easier to adjust the feet, have someone push against the top of your range to tilt it slightly.
- Adjusting the two front legs is usually sufficient, but all four legs adjust if necessary.

- 1 Make sure that your range is positioned where you want it.
- 2 Using a wrench, level your range by turning the front leveling legs if necessary. Counterclockwise shortens the leg and lowers your range. Clockwise lengthens the leg and raises your range.

Adjust the leveling legs only as far as necessary to level your range. Extending the leveling legs more than necessary or removing the legs can make your range unstable.

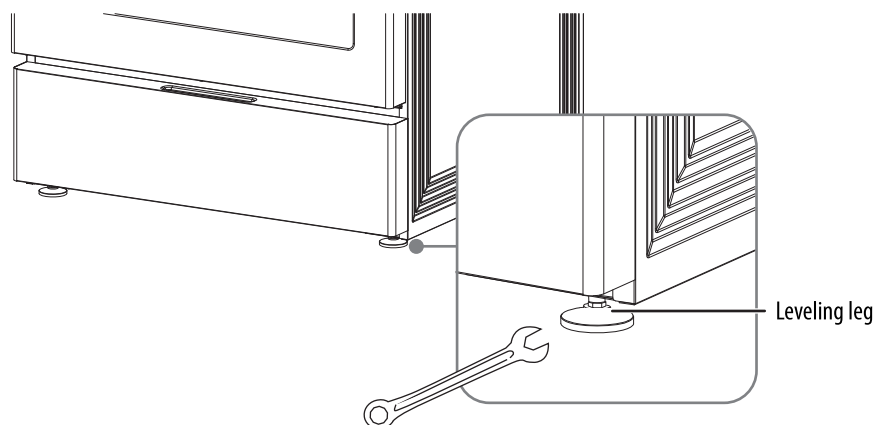

- 3 If your range is next to or between cabinets, make sure that the cooktop is level with the counter tops.


## Finishing the installation

- 1 Move your range close enough to the power outlet you plan to use, then plug in the power cord.
- 2 Slide your range into position. Make sure that the rear left (or rear right) leg slides under the anti-tip bracket. Your range should sit .8 in. (2 cm) away from the back wall when correctly installed.
- 3 Carefully tip your range forward to make sure that the anti-tip bracket is installed correctly and prevents a tip-over.
- 4 Turn on the electrical power. Make sure that your range is working correctly. For more information, see [Operating instructions](#) on page 23.

## Installing the oven door handle


You range may have a "KD handle" that you need to install.

- 1 Check your installation kits for the handle and hex wrench.

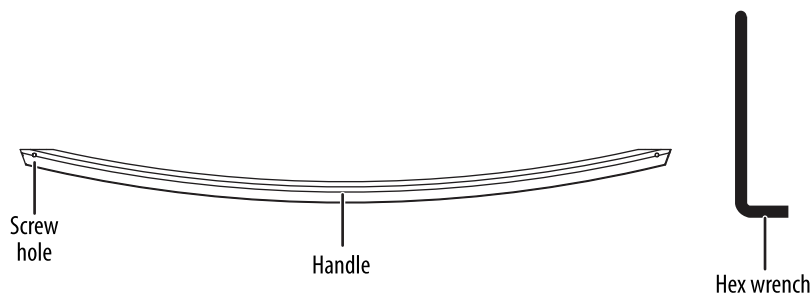

- 2 Make sure that the side with screw holes faces towards the oven door.

- 3 Place the door handle against the oven door and fit it on the connection part.

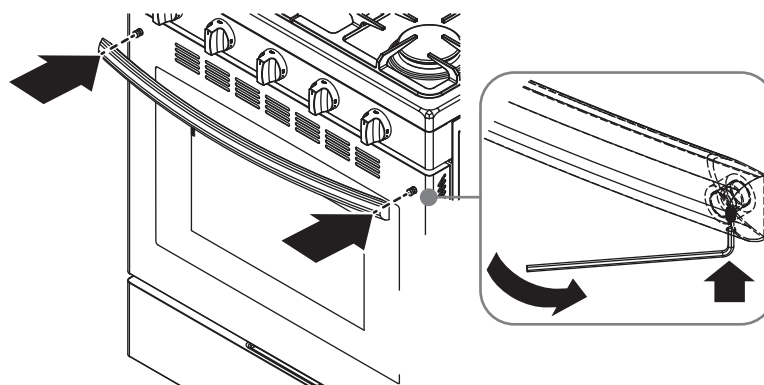


- 4 Use the Hex wrench to tighten both sides of the door handle.

### Installing the plastic pads

 To prevent your range from getting too close to the wall behind the range, install the included plastic pads.

- 1 Locate the plastic pad kit. It includes:




Screws (2)



Plastic pads

- 2 Align the holes in the plastic pads with the holes on the top, back of your range, then secure the pads to your range with the provided screws.

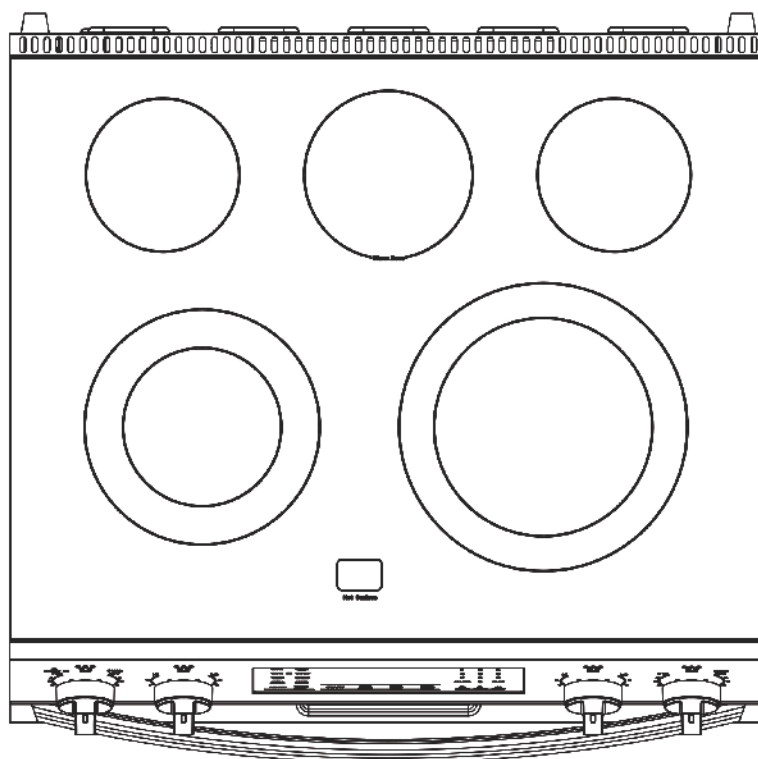

# Operating instructions

## 4.8 Cu. Ft. Electric Convection Range with Self Clean and Air Fry

Before you begin using your range.....	24
Tips for saving energy .....	24
Using the surface burners .....	24
Identifying the burners.....	25
Cooking areas.....	25
Using a surface element control knob.....	26
Using the warming center .....	26
Using the correct cookware.....	26
Protecting the ceramic cooktop .....	27
Using the oven.....	28
Minimum and maximum settings.....	28
Positioning the oven racks.....	28
Using the oven vent.....	29
Using the oven light.....	30
Tips for baking .....	30
Setting the clock .....	30
Selecting the 12-hour or 24-hour display setting .....	30
Using the timer .....	30
Baking.....	31
Adjusting the thermostat.....	31
Convection baking and roasting .....	31
Air Frying .....	32
Programming the cook time.....	32
Programming a delayed start time .....	33
Broiling .....	33
Keeping food warm .....	34
Switching between Fahrenheit or Celsius .....	34
Turning sound on or off .....	34
Locking oven controls.....	34

## Before you begin using your range

**WARNING:** All electrical equipment with moving parts can be dangerous. Make sure that you read and understand all safety information. See [IMPORTANT SAFETY PRECAUTIONS](#) on page 3.

Before turning on the burners or oven:

- Remove all packaging materials.
- Wipe the surfaces of your range with a damp cloth or sponge, then dry with a clean, dry cloth.

**CAUTION:** Do not use harsh detergents, scouring powder, or any sharp objects to clean your range. These items can damage the surfaces of your range.

When you turn on an element or the oven for the first time, smoke and odors may be emitted. This is normal. Make sure that the room is well ventilated.

**WARNING:**

- Do not touch any hot surface on your range. Use oven gloves or potholders.
- Do not let children near your range.

### Tips for saving energy

- During cooking, keep the oven door closed except when you turn food over.
- To maintain the oven temperature, do not open the door frequently during cooking.
- If cooking time is more than 30 minutes, switch the oven off 5 to 10 minutes before the end of the cooking time. The residual heat completes the cooking process.
- To reduce the time needed for re-heating the oven, plan oven use to avoid turning the oven off between cooking one item and the next.
- Whenever possible, cook more than one item at a time.

## Using the surface burners

**WARNING:**

- Before using the surface burners, make sure that you follow all the safety warnings and precautions as listed. Failure to do so could result in product damage, personal injury, or death.
- When you want to move a pot or pan onto another element, lift it up and place it on the other element. Do not slide a pot or pan from one element to another. Sliding can scratch surfaces.

**CAUTION: Before cooking**

- Do not use the glass cooktop surface as a cutting board.
- Do not place or store items that can melt or catch fire on the glass cooktop, even when it is not being used.
- Turn the surface burners on only after placing cookware on them.
- Do not store heavy items above the cooktop surface. They could fall and damage it.

**CAUTION: While cooking**

- Do not place aluminum foil or plastic items such as salt and pepper shakers, spoon holders, or plastic wrappings on your range when it is in use. The hot air from the vent could melt plastics or ignite flammable items.
- Make sure that you turn on the correct element.
- Never cook directly on the glass. Always use cookware.
- Always place a pan in the center of the surface element you are cooking on.
- Never leave surface burners unattended while using a high heat setting. Boilovers cause smoking and greasy spillovers that may catch on fire.
- Turn the surface burners off before removing cookware.
- Do not use plastic wrap to cover food. Plastic may melt onto the surface and be difficult to remove.

**CAUTION: After cooking**

- Do not touch the surface burners until they cool down.
- The surface may still be hot and burns may occur if you touch the glass surface before it has cooled down sufficiently.
- Immediately clean spills on the cooking area to prevent tough cleanup after the surface cools.
- If cabinet storage is directly above the cooking surface, make sure that the items in the cabinet are used infrequently, and that they can be safely stored in an area subjected to heat. Temperatures may be unsafe for items such as volatile liquids, cleaners, or aerosol sprays.


The cooktop burners are radiant surface elements. When you turn on an element, the temperature rises gradually and evenly. As the temperature rises, the radiant element glows red.

To maintain the selected setting, the element cycles on and off. The heating element retains enough heat to help provide a more uniform and consistent heat during the off cycle. For efficient cooking, turn off the element several minutes before cooking is complete. This lets residual heat complete the cooking process.

**Note:** A radiant element has a limiter that lets the element cycle on and off, even at the **HI** setting. This is normal and helps prevent damage to the ceramic cooktop. Excessive cycling at the **HI** setting can occur if the cookware is too small for the radiant element or if the cookware bottom is not flat.

**Identifying the burners**

Your range cooktop has four surface burners and a warming center. The different element sizes make sure that you have the correct heat source for each cooking job.

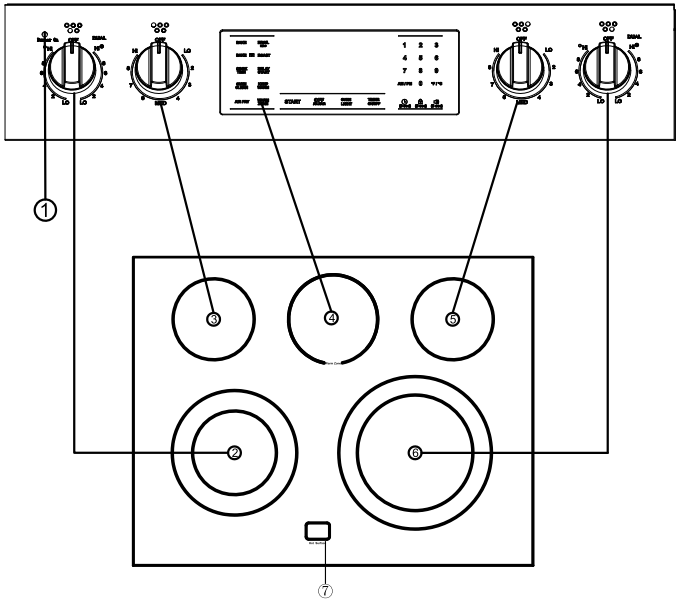

No.	Item	Description
1	Cooktop indicator	Lights when an element is on.
2	Left Front	6 to 9 in. (15.2 to 22.9 cm), 3,000W
3	Left Rear	6 in. (15.2 cm), 1,200W
4	Warming center	100W. Press the <b>Warm Zone</b> and <b>Start</b> pads to turn on the warming center.
5	Right Rear	6 in. (15.2 cm), 1,200W
6	Right Front	9 in. to 12 in. (22.9 to 30.5 cm), 3,000W
7	Hot Surface indicator	Lights when the cooktop is turned on or is hot to the touch. This indicator stays on even after you turn off the burners. It turns off when the cooktop has cooled to approximately 150° F (66° C).

**Cooking areas**

The cooking areas on your range are identified by permanent circles on the glass cooking surface. For the most efficient cooking, fit the pan size to the element size.

Pans should not extend more than .5 to 1 in. (1.3 to 2.5 cm) beyond the cooking area.


When a control is turned on, you can see a glow through the glass cooking surface. The element cycles on and off to maintain the preset heat setting, even at high settings.

For more information about the correct types of cookware, see [Using the correct cookware](#) on page 26.

## Using a surface element control knob

SETTING	TYPE OF COOKING
HIGH	Starting most foods, bringing water to a boil, or pan broiling
MEDIUM HIGH	Continuing a rapid boil, frying, deep fat frying, or steaming vegetables
MEDIUM	Maintaining a slow boil or thickening sauces and gravies,
MEDIUM LOW	Keeping foods cooking, poaching, or stewing
LOW	Keeping food warming or melting

- 1 Push the knob in.
- 2 For the left and right rear burners, turn knob in either direction to the setting you want.
- 3 For the left and right front dual burners, turn the knob to the **A** side to use the element as single element. Turn the knob to the **B** side to use both elements. When you use the **B** side, the element heat increases.

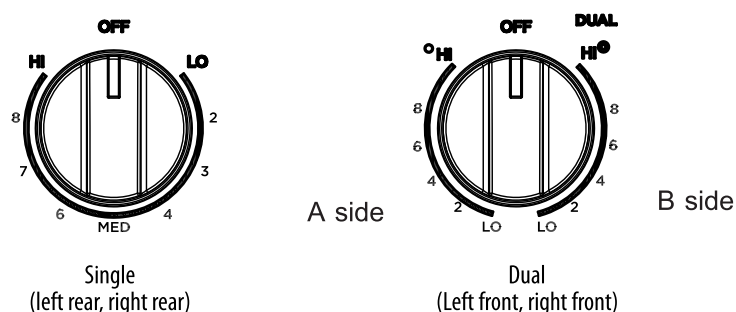

## Using the warming center

The warming center, located in the back center of the glass surface, keeps hot, cooked food at serving temperature.

### CAUTION:

- Do not warm food on the warming center for more than three hours.
- Use only cookware and dishes recommended as safe for oven and cooktop use.
- Always use potholders or oven mitts when removing food from the warming center because the cookware and plates will be hot.
- Always start with hot food. Eating uncooked or cold food placed on the warming center could result in illness.

### Note:

- The warming center does not glow red like the cooking elements.
- Pressing the **Off/Clear** pad does not turn the warming center off.
- For best results, all foods on the warming center should be covered with a lid or aluminum foil. When warming pastries or breads, the cover should be vented to let moisture escape.

- 1 Press the **Warm Zone** pad, then press the **Start** pad to turn on the warming center.
- 2 Press the **Warm Zone** pad again or press **Off/Clear** pad for one second to turn off the warming center.

## Using the correct cookware

Using the correct cookware can prevent many problems, such as uneven cooking or extended cooking times. Look for the following pan characteristics:

- Flat bottom and straight sides
- Tight-fitting lid
- Weight of handle does not tilt pan
- Pan is well-balanced
- Pan size matches the amount of food being prepared and the size of the surface element.
- Made of material that conducts heat well. See [Types of cookware](#) on page 27.

### **Types of cookware**

What your cookware is made of determines how evenly and quickly heat is transferred from the surface element to the pan bottom.

MATERIAL	DESCRIPTION
Aluminum	Excellent heat conductor. Some types of food cause aluminum to darken. (Anodized aluminum cookware resists staining and pitting.) If you slide aluminum pans across the ceramic cooktop, they may leave metal marks that resemble scratches. Remove these marks as soon as the cooktop cools down.
Copper	Excellent heat conductor, but discolors easily. If you slide copper pans across the ceramic cooktop, they may leave metal marks that resemble scratches. Remove these marks as soon as the cooktop cools down.
Stainless Steel	Slow heat conductor with uneven cooking results. It is durable, easy to clean, and resists staining.
Cast-iron	A poor conductor, but retains heat well. Cooks evenly once cooking temperature is reached. Not recommended for use on ceramic cooktops.
Enamelware	Heating characteristics vary depending on base material. Porcelain enamel coating must be smooth to avoid scratching ceramic cooktops.
Glass	Slow heat conductor. Not recommended for ceramic cooktops because it may scratch the glass.

### **Protecting the ceramic cooktop**

#### **Cleaning**

- Clean the cooktop before using it for the first time.
- Clean your cooktop daily or after each use. This helps keep your cooktop looking good and can prevent damage.
- If a spillover occurs while you are cooking, turn off the burner elements and immediately clean the spill from the cooking area while it is hot to prevent a tough cleaning chore later. Using extreme care, wipe the spill with a clean dry towel. Wear protective gloves or mitts to avoid burning yourself.
- Do not let spills remain on the cooking area or the cooktop trim for a long period of time.
- Do not use abrasive cleansing powders or scouring pads because they can scratch the cooktop.
- Do not use chlorine bleach, ammonia, or other cleansers not specifically recommended for use on a glass ceramic surface.

#### **Preventing marks and scratches**

- Do not use glass cookware. It may scratch the cooktop.
- Do not place a trivet or wok ring between the cooktop and the pan. These items can mark or scratch the cooktop.
- Make sure that the cooktop and the pan bottoms are clean.
- Do not slide metal pans across the cooktop.

#### **Preventing stains**

- Do not use a soiled dish cloth or sponge to clean the cooktop surface. They may leave a film, which may cause stains on the cooking surface after the area is heated.
- Continuously cooking on a soiled surface can result in a permanent stain.

#### **Preventing other damage**

- Do not let plastic, sugar, or foods with high sugar content melt onto the hot cooktop. Should this happen, clean immediately.
- Do not let a pan boil dry. This may damage the cooktop and the pan.
- Do not use the cooktop as a work surface or cutting board.

# Using the oven

## Minimum and maximum settings

**WARNING:** Stand away from the oven when opening the oven door. Escaping hot air or steam can burn your hands, face, or eyes. Let hot air or steam escape before removing or replacing food.

FUNCTION	MINIMUM SETTING	MAXIMUM SETTINGS
Bake	150° F (66° C)	550° F (288° C)
Broil	Lo	Hi
Convection Bake ( Bake)	150° F (66° C)	550° F (288° C)
Convection Roast ( Roast)	150° F (66° C)	550° F (288° C)
Air Fry	350° F (176° C)	550° F (288° C)
Self-Clean	2 hours	5 hours
Steam Clean	—	25 minutes
Keep Warm	—	3 hours


**Note:** Always bake or broil with the oven door closed. If you open the oven door while the oven is operating and leave it open, the oven element stops in one minute. This is not a product failure. The oven automatically starts again when you close the door.

## Positioning the oven racks

You can remove and reposition the oven racks in any of the six rack positions. Each oven rack has a built-in stop to prevent it from accidentally being pulled completely out. Correct positioning of the oven racks provides the best cooking results.


**WARNING:** Stand away from the oven when opening the oven door. Escaping hot air or steam can burn your hands, face, or eyes. Let hot air or steam escape before removing or replacing food.

**Note:** The rack position above 6 is not usable.

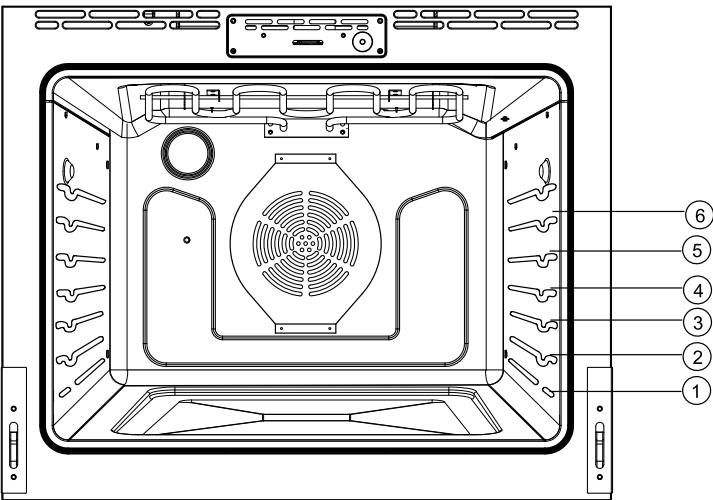




- Centering the baking pans in the oven produces better cooking results.
- When baking multiple items, make sure that you leave a 1 to 1.5 in. (2.5 to 3.8 cm) space around each item.
- When baking or convection baking on a single rack, place the oven rack in position 3 or 4.

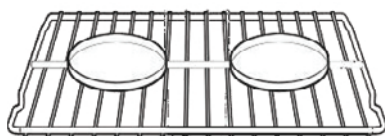

Single rack pan placement

- When baking or convection baking on multiple racks, place the oven racks in positions 3 and 5. Place two pans in the rear of the top rack and the other two pans in the front of the bottom rack.

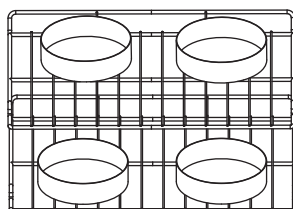

Multi rack pan placement

**CAUTION:**

- Do not cover an oven rack with aluminum foil. This disturbs the heat circulation and results in poor baking.
- Do not place aluminum foil on the oven bottom because it could cause damage.
- Arrange the oven racks only when the oven is cool.
- When placing an oven rack in the top most rack position, make sure that the rack is stably situated on the embossed stop.

**Removing an oven rack**


- 1 Pull the rack straight out until it stops.
- 2 Lift the front of the oven rack and pull to remove it from the oven.

**Replacing an oven rack**

- 1 Place the back edge of the rack on the a rack support.
- 2 Lift the front of the rack and slide it into the oven.

**Using the oven vent**


The oven vent is located over the left-rear surface element.

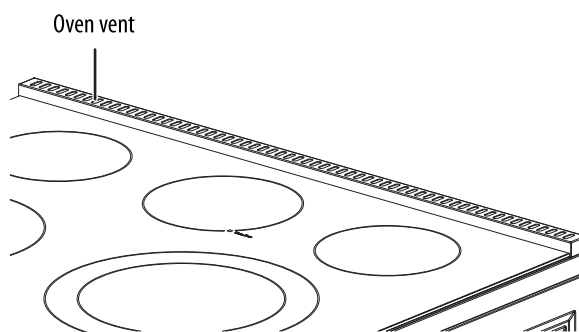

- Steam coming out of the vent is normal.
- Do not block or place items in front of the oven vent. Correct air circulation prevents oven element combustion problems and provides good cooking results.
- Because the oven vent and surrounding area can become hot, use care when placing items near the vent. Hot steam could heat or melt items placed in front of the vent.

## Using the oven light

The oven has a light that is located on the rear oven wall in the upper left rear corner.

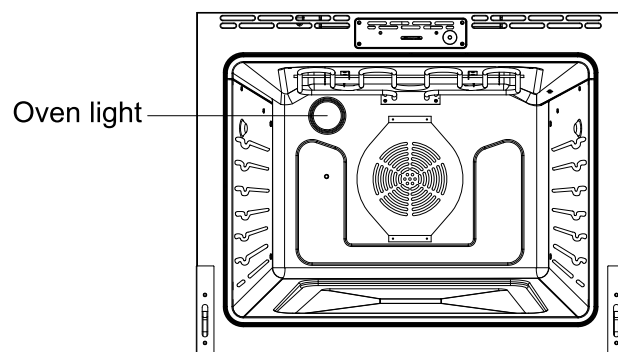


- Touch the **Oven Light** pad to turn the light on or off. The oven light lets you check the cooking progress without opening the oven door.

## Tips for baking

- Use appropriate non-stick coated metal sheets or aluminum containers or use heat-resistant silicone molds.
- Make the best use of the space on the rack. We recommend placing the baking pan in the middle of the rack.
- Select the correct shelf position before turning the oven on.
- Do not move oven shelves when hot. If you must move a rack while the oven is hot, do not let the potholder contact the hot oven element.
- Keep the oven door closed as much as possible.

## Setting the clock

The clock must be set to the correct time of day for the automatic oven timing functions to work correctly. You can adjust the clock to show a 12-hour or 24-hour display. The 12-hour display is the default setting. The time of day can only be changed when your range is not in use (standby).

- 1 Press the  (clock set) pad for three seconds.
- 2 Enter the current time in hours and minutes using the number pads. The time you set blinks on the display.
- 3 Touch the **AM/PM** pad to change between AM/PM.
- 4 Press the **Start** or **Clock Set\*** pad to save. The display shows the time of the day.

## Selecting the 12-hour or 24-hour display setting

- 1 Press and hold the **AM / PM** pad three seconds. The display shows the present mode.
- 2 Press the **AM / PM** pad to change between the 12-hour and 24-hour display setting. The display shows *12Hr* or *24Hr* depending on your selection.
- 3 Press the **Start** pad to save the clock display mode.

## Using the timer

The timer serves as an extra timer that beeps when the set time has elapsed. It does not start or stop cooking functions. You can use this function at the same time as any other oven function or even when neither the cooktop or oven are in use. You can set the timer for any amount of time from 1 minute to 23 hours and 59 minutes.

- 1 Press the **Timer On/Off** pad. The display shows *Timer*, and *00:00* blinks in the display.
- 2 Use the number pads to enter the amount of time you want in minutes or hours and minutes. The display shows the set time.
- 3 Press the **Start** pad to start the timer. The display shows the remaining time. When time has elapsed, the timer continues to beep until you press the **Timer On/Off** pad. After you press the **Timer On/Off** pad, the display shows the time of day.

## Baking

The Bake function lets you program the oven to bake to any temperature between 150° F (66° C) and 550° F (288° C).

- 1 Position the oven rack where you want it.
- 2 Press the **Bake** pad. The display blinks bake icon and shows 350°. If the default temperature is the cooking temperature you want, skip to step 4.
- 3 (Optional) Press the number pads to enter the cooking temperature you want. The display blinks the temperature.
- 4 Press the **Start** pad. The oven automatically turns on and starts preheating. Place food in the oven after preheating is complete. Preheating is important for good baking results.  
The display shows *PRE*, 100°, and bake icons until the oven reaches 100°. Then, the display shows the actual oven temperature. When the oven reaches the temperature you set, it beeps three times.
- 5 When baking is complete, remove the food from the oven, close the oven door, then press **Off/Clear**. The oven shuts off and the display shows the time of day.
- 6 To change a programmed baking temperature, press Bake, enter the new baking temperature, then press **Start**. The oven completes cooking at the new temperature.

## Adjusting the thermostat

If your baking results are not what you are used to, the present oven cooking thermostat can be adjusted by up to ±35° F (±19° C).

**Note:** This temperature adjustment is retained in memory after a power failure. This adjustment will be used in all future baking including Bake, Fan Bake, Fan Roast, Broil, and Keep Warm. Adjusting the thermostat does not affect steam-cleaning. If you want to adjust the temperature for a single baking task, see [Baking](#) on page 31.

- 1 Press and hold the °F / °C pad for three seconds while in standby mode. The display shows 0.
- 2 Use the number pads to enter the temperature adjustment you want. For example, if you want the oven temperature to be 10° higher than the displayed temperature, press **1**, then **0**. If you want the temperature to be 10 degrees lower, press **1**, **0**, then press °F / °C for one second. The display change to -10.
- 3 Press the **Start** pad. The display shows the time of day. The next time you bake, the oven uses the new temperature setting.

## Convection baking and roasting



The Convection Bake and Convection Roast functions let you program the oven to bake or roast at any temperature between 150° F (66° C) and 550° F (288° C). The fan in the back of the oven cavity circulates the hot air evenly throughout the oven cavity. As a result, foods are more evenly cooked and browned in less time than with regular heat.

### For convection baking:

- Ideal for foods being cooked on multiple racks.
- Good for large quantities of baked foods.
- Provides good results with cookies, biscuits, brownies, cupcakes, cream puffs, sweet rolls, angel food cake, and bread.
- Cookies have best cooking results when cooked on flat cookie sheets.
- When convection baking on a single rack, place the oven rack in position 3 or 4.
- When convection baking on multiple racks, place the oven racks in position 3 and 5.

### For convection roasting:

- Good for larger tender cuts of meat, uncovered.
- Place a broil pan and grid under the meat or poultry during convection roast for best results. The pan catches grease spills and the grid prevents grease spatters.

- 1 Position the oven rack in the location you want.
- 2 Press the  **Bake** (Convection Bake) or  **Roast** (Convection Roast) pad. The oven beeps every time a pad is pressed. The display shows the default temperature 325° and the bake icon blinks. If the default temperature is the temperature you want, skip to step 4.
- 3 (Optional) Press the number pads for the temperature you want. All roasting should be done on a broil pan and grid.
- 4 Press the **Start** pad. The oven automatically turns on and starts preheating. Preheating is important for good baking results.

The display shows *PRE*, 100°, the time of day, and *Fan Bake* or *Fan Roast* until the oven reaches 100°. Then, the display shows the actual oven temperature. When the oven reaches the temperature you set, it beeps three times.

- 5 Place the food in the oven and close the oven door.

When baking or roasting is complete, the oven automatically shuts off, *END* blinks on the display, and the oven beeps for 30 seconds or until you press the **Off/Clear** pad. The display shows the time of day.

- 6 To change a programmed baking temperature, press the  **Bake** or  **Roast** pad, enter the new temperature, then press the **Start** pad. The oven completes cooking at the new temperature.


## Air Frying

The Air Fry feature uses hot air for crispier and healthier frozen or fresh foods without any (or less than normal) oil compared to convection modes.

The Air Fry feature works best for single rack baking with packaged and convenience foods. Make sure that you remove the packaging from food before cooking it. You can program for temperatures between 350° F and 550° F. Leave the oven light off when baking.

**Note:** For best results, use this mode in single oven mode and place the air fryer basket in position 4.

- Place a baking sheet or tray (not included) on the rack below the Air fryer basket to catch any drippings. This will help to reduce splatter and smoke.
- Take out the air fryer basket before self cleaning.
- Wear heat-resistant gloves when taking out cooked food.
- Make sure food in the air fryer basket does not exceed 11 lbs. (5 kg).

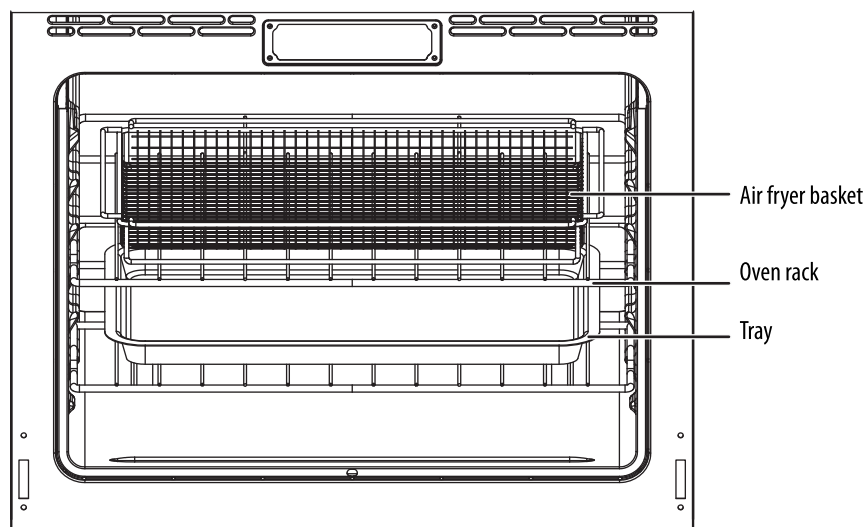

- 1 Arrange the food on the rack.
- 2 Press **Air Fry**. The default temperature is 425° F. If the default temperature is the temperature you want, skip to step 4.
- 3 (Optional) Press the *numbers* for the temperature you want.
- 4 Press **START**.
- 5 When cooking is complete, press **OFF** and take the food out.

## Programming the cook time

The Cook Time function lets you program the oven to cook food at a set temperature for a specified length of time. At the end of the set time, the oven automatically shuts off.

**CAUTION:** Use caution when using the Cooking Time function. This function is best used when cooking cured or frozen meats and most fruits and vegetables. Foods that can easily spoil, like milk, eggs, fish, poultry, and meats, should be chilled in a refrigerator before they are placed in the oven. Even when chilled, they should not stand for more than one hour before cooking begins and should be removed promptly when cooking is completed. Eating spoiled food can result in sickness from food poisoning.

- 1 Position the oven rack in the location you want, then place the food in the oven and close the oven door.

**Note:** Place food in the oven after preheating if the recipe calls for it. Preheating is important for good baking results.

- 2 Press **Bake**. The display shows the default temperature and the bake icon blinks. If the default temperature is the temperature you want, skip to step 4.
- 3 (Optional) Press the number pads for the temperature you want. Preheating is important for good baking results. All roasting should be done on a broil pan and grid.
- 4 Press the **Cook Time** pad. The display will show 00:00.
- 5 Press the number pads for the cooking time you want. The display shows the selected time. You can set the time to any duration from 1 minute to 10 hours.
- 6 Press the **Start** pad. The oven automatically turns on and starts preheating.

The display shows the default or selected temperature, *Bake*, and selected cook time, until the oven reaches the temperature you set. When the oven reaches that temperature, it beeps three times. The oven starts cooking for the set amount of time, and the display shows the remaining cooking time.

When the cooking time has elapsed, the oven automatically shuts off and *END* blinks on the display. The oven beeps for 30 seconds or until you press the **Off/Clear** pad. The display shows the time of day.

- 7 To change the programmed baking temperature, press the **Bake** pad, enter the new baking temperature, then press the **Start** pad. The oven completes cooking at the new temperature.
- 8 To change the cooking time, press the **Cook Time** pad, enter the new cooking time, then press the **Start** pad. The oven continues cooking for the remaining time you set.

**Note:** To see the time of day while cooking, press and hold the **Clock Set\*** pad. When you release the **Clock Set\*** pad, the display goes back to the remaining cooking time.

## Programming a delayed start time

The Delay Start function lets you use the kitchen timer to automatically start and stop another cooking program (Bake, convection Bake, or convection Roast). You can set a delay for up to 10 hours. The clock must be set to the correct time of day for Delay Start to work correctly.

**CAUTION:** Use caution when using the Delay Time function. This function is best used when cooking cured or frozen meats and most fruits and vegetables. Foods that can easily spoil, like milk, eggs, fish, poultry, and meats, should be chilled in a refrigerator before they are placed in the oven. Even when chilled, they should not stand for more than one hour before cooking begins and should be removed promptly when cooking is completed. Eating spoiled food can result in sickness from food poisoning.

- 1 Position the oven rack in the location you want, then place the food in the oven and close the oven door. All roasting should be done on a broil pan and grid.
- 2 Press the pad for the baking or roasting operation you want. The display blinks the function icon and shows the default temperature (350°). If the default temperature is the temperature you want, skip to step 4.
- 3 (Optional) Press the number pads for the temperature you want. The display shows the temperature you set.
- 4 Press the **Cook Time** pad. The display shows the cooking temperature, *Bake*, and 00:00.
- 5 Press the number pads for the cooking duration you want. The display blinks the cooking duration you set. You can set the duration to any amount of time from 1 minute to 10 hours.
- 6 Press **Delay Start**. The display shows *Delay* and 00:00 blinks.
- 7 Use the number pads to enter the duration of time you want the oven to wait before it turns on. You can set the duration to any amount of time from 1 minute to 10 hours.
- 8 Press **Start**. The oven automatically turns on and starts preheating.  
The display shows the default or selected temperature, *Bake*, and selected cook time, until the oven reaches the temperature you set. When the oven reaches that temperature, it beeps three times. The oven starts cooking for the set amount of time, and the display shows the remaining cooking time.  
When the cooking time has elapsed, the oven automatically shuts off, **END** flashes on the display, and the oven beeps for 30 seconds or until you press **Off/Clear**. After that, the display shows the time of day.
- 9 To change the programmed baking temperature, press **Bake**, enter the new baking temperature, then press **Start**. The oven completes cooking at the new temperature.
- 10 To change the cooking time, press **Cook Time**, enter the new cooking time, then press **Start**. The oven continues cooking for the remaining time you set.
- 11 To change the cooking time, press the **Cook Time** pad, enter the new cooking time, then press the **Start** pad. The oven continues cooking for the remaining time you set.

## Broiling

The Broil function lets you cook and brown foods using only a top heat source. The oven door must remain closed during broiling. Meat or fish should always be placed on a broiling grid in a broiling pan.

**WARNING:** If an oven fire occurs, close the oven door and turn the oven off. If the fire continues, throw baking soda on the fire or use a foam-type fire extinguisher. Do not put water or flour on the fire. Flour may explode and water can cause a grease fire to spread. Both can cause personal injury or property damage.

- 1 Position the oven rack so that the top of the food is at least 3 to 5 inches (7.6 to 12.7 cm) away from the top heat source.
- 2 Place the food on a broiling pan with an insert grid and into the oven. Close the oven door.
- 3 Press **Broil** once for **Hi** and twice for **Lo**. Use **Lo** to cook foods such as poultry or thick cuts of meat thoroughly without over browning them.
- 4 Press **Start**. The oven automatically lights the top oven burner and starts cooking. The display shows the broil setting (*Hi* or *Lo*) you selected and **Broil**.  
Broil on one side until food is browned, then turn and broil on the other side.
- 5 When broiling is completed, press **Off/Clear** to shut off the oven. The display shows the time of day.
- 6 To change a programmed broiling setting, press **Broil** to change the setting between **Hi** and **Lo**, then press **Start**. The oven changes the broil setting and completes cooking at the new temperature.

### Broiling guide

This guide is for reference only.

- The size, weight, thickness, starting temperature, and your doneness preference affect broiling times.
- If you covered the meat with aluminum foil and you let it stand covered for 10 minutes after cooking is complete, the internal temperature increases by 5-10° F degrees.
- Make sure that you close the door after turning over the food.
- Keep the broil pan (not included) upright in center of rack for a better broil performance.

FOOD	DONENESS	SIZE	THICKNESS	BROIL SETTING	RACK POSITION
Hamburgers	Medium	9 patties	1 in.	HI	6
Beef steak	Medium	1 pc.	1 in.	HI	5
Chicken pieces	Well done	2-3 lbs.	3/4 to 1 in.	LO	4
Salmon Fillets	Well done	3-4 lbs.	1/2 to 3/4 in.	HI	5
Pork chops	Well done	1-2 pcs.	1/2 to 3/4 in.	LO	4
Lamb chops	Medium	4-6 pcs.	1 in.	HI	5

### Keeping food warm

The Keep Warm function lets you keep cooked foods warm at a low baking temperature for up to three hours.

- 1 Position the oven rack in the location you want, then place the food in the oven and close the oven door.
- 2 Press the **Keep Warm** pad, then press the **Start** pad. The oven automatically turns on and heats to 150° F (65° C). The display shows *Warm* and the time of day.
- 3 When warming is complete, press the **Off/Clear** pad. The display shows the time of day.

### Switching between Fahrenheit or Celsius



You can program the oven control to display temperatures in Fahrenheit or Celsius. The oven was preset at the factory to display in Fahrenheit.

- 1 Press and hold the °F / °C pad for one second. The display shows *F* or *C*. The default is *F*.
- 2 Press and hold the °F / °C pad for one second to change between F and C.
- 3 Press the **Start** pad to save the temperature selection.

### Turning sound on or off



You can turn the sound of the oven controls on or off.

**Note:** The clock and beep warning tones stay on even when you turn sound off.

- 1 Press the  (sound) pad for three seconds. The display shows *Snd On* (sound on) or *Snd Off* (sound off). The default setting is **Snd On**.
- 2 Press the  (sound) pad for three seconds to toggle between **Snd On** and **Snd Off**.
- 3 Press the **Start** pad to save the sound setting.

### Locking oven controls

The Lock function turns off the control panel touch pads to prevent the oven from accidentally being turned on. Touch pads stay locked until you turn this function off.

- 1 Press and hold the  (lock) pad for three seconds. The oven beeps and the display shows *Loc*, the time of day, and the lock icon.
- 2 To unlock the controls, press and hold the  (lock) pad for three seconds.

# Maintenance

## 4.8 Cu. Ft. Electric Convection Range with Self Clean and Air Fry

Cleaning and maintenance.....	36
Cleaning the control panel.....	36
Cleaning painted parts and decorative trim.....	36
Cleaning stainless steel surfaces.....	36
Cleaning the oven racks.....	36
Cleaning the oven door.....	37
Cleaning the surface element control knobs.....	37
Cleaning the cooktop.....	37
Removing and replacing the oven door.....	39
Removing and replacing the storage drawer.....	43
Self-cleaning the oven.....	44
Steam cleaning the oven.....	44
Troubleshooting.....	45
Control panel display.....	45
Cooktop.....	46
Oven.....	47
Drawer.....	48
Error codes.....	49

## Cleaning and maintenance

**WARNING:**

- Always make sure that the controls are off and all surfaces are cool before removing or cleaning any of the range parts. This will prevent you from getting burned.
- If your range is pulled out from the wall for any reason, make sure that the anti-tip device is reengaged after your range has been pushed back into place. Failure to take this precaution could result in your range tipping and personal injury.

### Cleaning the control panel

**CAUTION:**

- Never use steel wool or abrasive cleansers.
  - Protect the surface from sharp objects.
- These items can damage the surface.

- 1 Lock the oven controls. See [Locking oven controls](#) on page 34.
- 2 Clean spatters with a damp cloth or glass cleaner. You can use warm, soapy water to clean heavily soiled areas.
- 3 When cleaning is done, unlock the oven controls.

### Cleaning painted parts and decorative trim

- For general cleaning, use a cloth with hot, soapy water, then dry with a clean, dry, soft cloth.
- For more difficult residue and built-up grease, apply a liquid detergent directly onto the area and leave for 30 to 60 minutes. Wipe with a damp cloth and dry with a clean, dry, soft cloth.

**CAUTION:** Do not use a steel-wool pad or abrasive cleaners on stainless steel surfaces. Abrasive pads and cleaners will scratch the surface and damage the finish.

### Cleaning stainless steel surfaces

**CAUTION:** Do not use a steel-wool pad or abrasive cleaners on stainless steel surfaces. Abrasive pads and cleaners will scratch the surface and damage the finish.

**Note:** To prevent any discolorations or grease stains, we recommend that you clean and remove any spills, spots, and grease from your range after each use.

- 1 Place a small amount of a stainless steel cleaner designed for use with appliances on a damp cloth or damp paper towel.
- 2 Clean a small area, rubbing with the grain of the stainless steel, if applicable.
- 3 Dry and buff with a clean, dry paper towel or soft cloth.
- 4 Repeat as necessary.

**Note:** If you previously used a mineral oil-based stainless steel appliance cleaner, wash the surface with dish washing liquid and water before using the stainless steel cleaner.

### Cleaning the oven racks

**CAUTION:** Make sure that the oven racks have cooled before removing them.

- 1 Pull a rack straight out until it stops.
- 2 Lift the front of the oven rack and pull to remove it from the oven.
- 3 Clean by hand in hot, soapy water with a plastic or soap-filled scouring pad or sponge, then dry with a soft cloth. Do not use steel wool.
- 4 To replace the rack, place the back edge of the rack on the a rack support, then lift the front of the rack and slide it into the oven. If a rack becomes difficult to slide, rub the side rails with wax paper or a cloth containing a small amount of cooking oil. This helps the rack slide more easily in the tracks.




## Cleaning the oven door

### CAUTION:

- DO NOT clean the oven door gasket. The oven door gasket is made of a woven material which is essential for a good seal. Care should be taken not to rub, damage, or remove this gasket.
- DO NOT immerse the door in water.
- DO NOT spray or let water or the glass cleaner to enter the door vents.
- DO NOT use oven cleaners, cleaning powders, or any harsh abrasive cleaning materials on the outside of the oven door.

The oven door has multiple surfaces that require different cleaning techniques. The gasket on the oven door frame should never be cleaned or moved to clean other surfaces. The gasket is made of woven material which is essential for a good heat seal.

- 1 Clean the inside door surface by hand with hot, soapy water and a soapy plastic scouring pad. Do not let moisture get inside the door assembly.

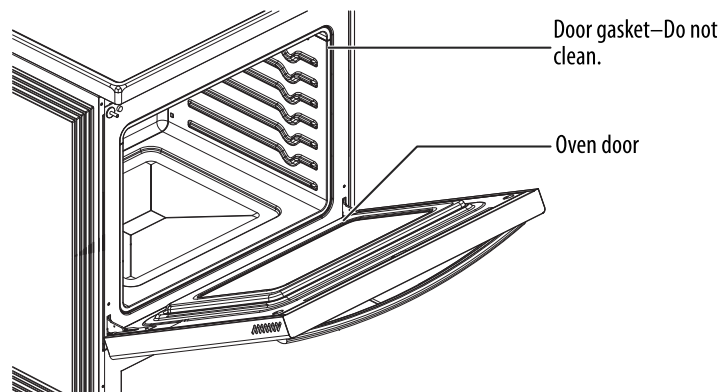

- 2 Rinse and dry thoroughly with a clean, soft cloth.
- 3 Clean the outside door stainless steel surfaces by following the instructions in [Cleaning stainless steel surfaces](#) on page 36.
- 4 Clean the glass window with glass cleaner or warm, soapy water with a thorough rinse. Do not let moisture get inside the door assembly.

## Cleaning the surface element control knobs

### WARNING:

- Do not use spray cleaners on the surface element control panel. Spray entering the valve holes could contact electrical components resulting in death, personal injury, or product damage.
- The knobs and the valve stems must be completely dry before you reinstall them.

- 1 Make sure that all surface element knobs are in the OFF position.
- 2 Pull the control knobs straight off the surface element control valve stems. Do not clean the control knobs in a dishwasher. They are not dishwasher-safe.
- 3 Clean the knobs in warm, soapy water. Rinse and completely dry all surfaces (including back and stem hole).
- 4 Clean stainless steel surfaces with a stainless steel cleaner on a damp, soft cloth.
- 5 Replace the control knobs in the OFF position by pushing them straight onto the control valve stems.

## Cleaning the cooktop

The cooktop surface is a porcelain-enamel surface. To prevent this surface from becoming dull, wipe up and clean spills as they happen. Foods with a lot of acid (for example, tomatoes, sauerkraut, and fruit juices) or foods with high sugar content can cause dull spots if allowed to set.

### CAUTION:

- Do not use a steel-wool pad or abrasive cleaners on stainless steel surfaces. Abrasive pads and cleaners will scratch the surface and damage the finish.
- Carefully check the bottoms of pans for roughness that may scratch the cooktop.

---

### **Normal daily use cleaning**

**Note:** Daily use of a ceramic cooktop cleaner helps keep the cooktop looking new.

Use only a ceramic cooktop cleaner. Other cleaners may not be as effective. By following these steps, you can maintain and protect the surface of the glass cooktop.

Before using the cooktop for the first time, clean it with a ceramic cooktop cleaner. This helps protect the top and makes cleanup easier.

- 1 Shake the cooktop cleaner well, then apply a few drops of cleaner directly on the cooktop.
- 2 Use a paper towel or a cleaning pad for ceramic cooktops to clean the entire cooktop surface.
- 3 Use a dry cloth or paper towel to remove all cleaning residue. You do not need to rinse.

### **Cleaning sugary spills and melted plastics**

**Note:** If pitting or indentations in the glass surface have already occurred, they can't be repaired. The cooktop glass will have to be replaced.

Sugary spillovers (such as jellies, fudge, candy, and syrups) or melted plastics can cause pitting of the cooktop surface. This is not covered under the warranty.

You should clean the spill while it is still hot. Take special care when removing hot substances.

When using a scraper, make sure that it is new and the razor blade is still sharp. Do not use a dull or nicked blade.

- 1 Turn off all surface burners. Remove hot pans.
- 2 Wearing an oven mitt, use a single-edge, razor-blade scraper to move the spill to a cool area of the cooktop. Remove the spill with paper towels.
- 3 Wait until the cooktop has cooled, then remove any remaining spillover.  
Don't use the surface burners again until all of the residue has been completely removed.

### **Removing burned-on residue**

- 1 Make sure that all surface burners are turned off, then let the cooktop cool.
- 2 Spread a few drops of ceramic cooktop cleaner on the entire burned residue area.
- 3 Using a cleaning pad for ceramic cooktops, rub the residue area. Apply pressure as needed.
- 4 If any residue remains, repeat the steps listed above as needed.
- 5 For additional protection, after all residue has been removed, polish the entire surface with a ceramic cooktop cleaner and a paper towel.

### **Removing heavy, burned-on residue**

- 1 Make sure that all surface burners are turned off, then let the cooktop cool.
- 2 Use a single-edge, razor-blade scraper at approximately a 45° angle against the glass surface and scrape the residue. You need to apply pressure to remove the residue. Do not scrape the seal.
- 3 After scraping with the scraper, spread a few drops of ceramic cooktop cleaner on the entire burned residue area. Use the cleaning pad to remove any remaining residue.
- 4 For additional protection, after all residue has been removed, polish the entire surface with a ceramic cooktop cleaner and a paper towel.

### **Cleaning the cooktop seal**

- Lay a wet cloth on the seal for a few minutes, then wipe clean with a nonabrasive cleaner.


## Removing and replacing the oven door

**WARNING:**


- We recommend that you do not remove the door unless directed to do so by KenmoreCustomer Service.
- The oven door is heavy. Do not lift the door by its handle. Be careful not to drop the door during removal. Incorrect handling could result in personal injury.
- Disconnect the electrical power to your range before removing the oven door. This prevents the oven from accidentally being turned on while the door is removed.

### **Removing the door**


- 1 Completely open the oven door.

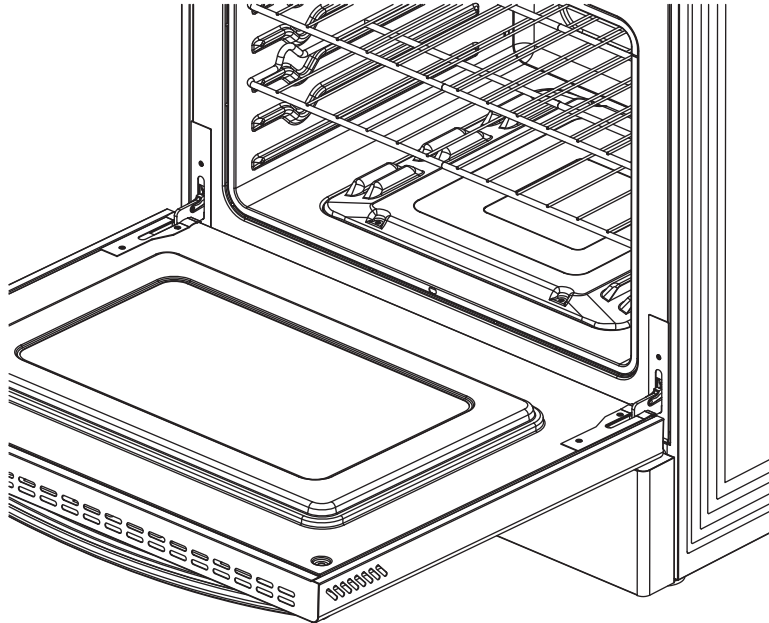


- 2 Open the levers fully on both sides.

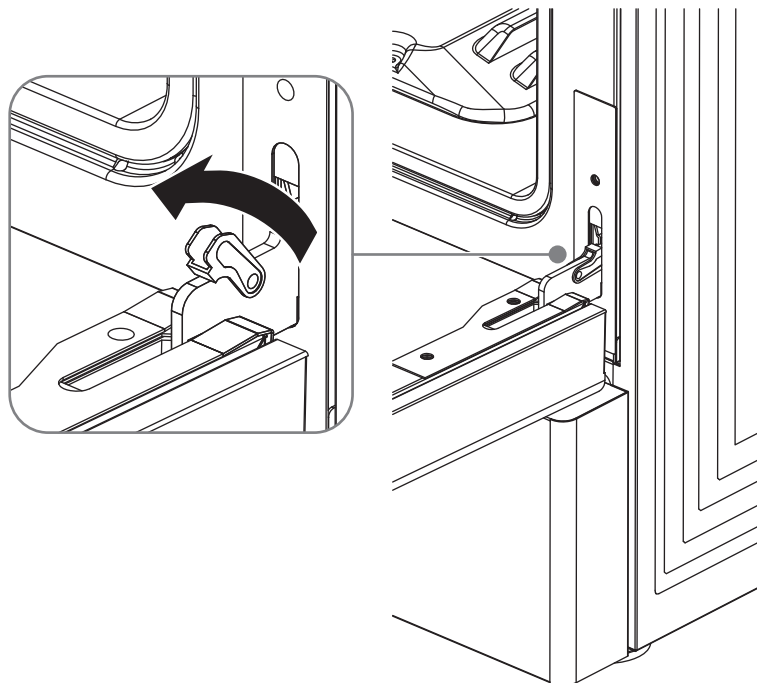

**3** Hold the door firmly on both sides.

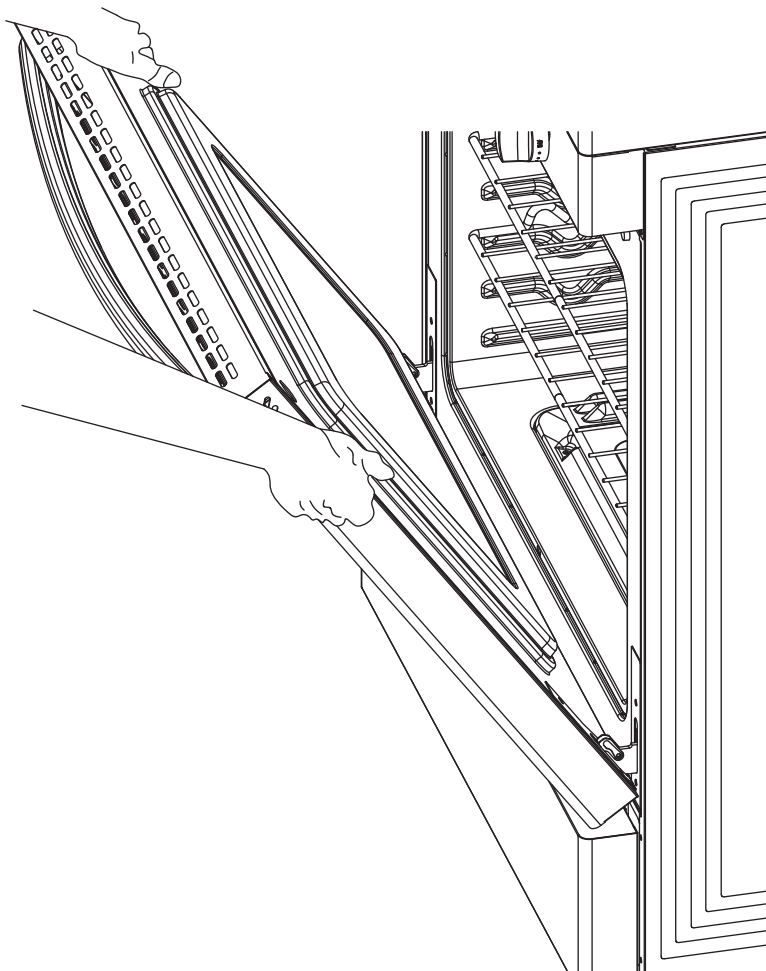


- 4 Disengage the hinges and remove the door gently with a 30° angle between the door and the oven. Place the door on a protected surface.

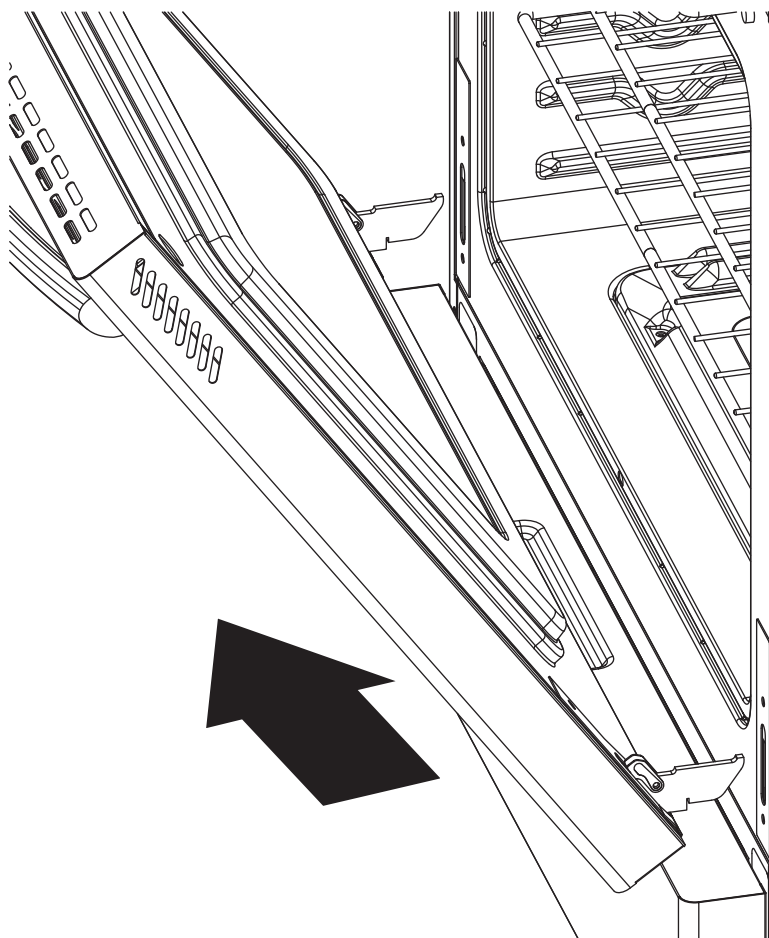


**Replacing the door**


- 1 Hold the door firmly in almost half open position.

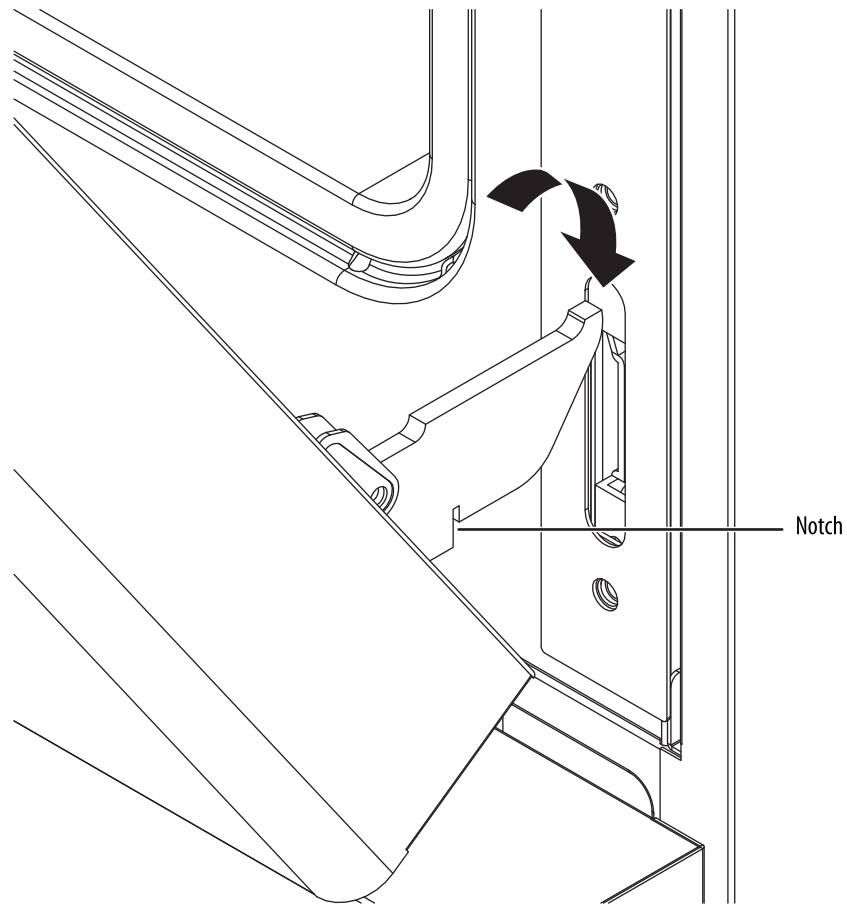

- 2 Insert the hinge tongues into the slots making sure that the notches on both sides drop into place.
- 3 Open the door fully.

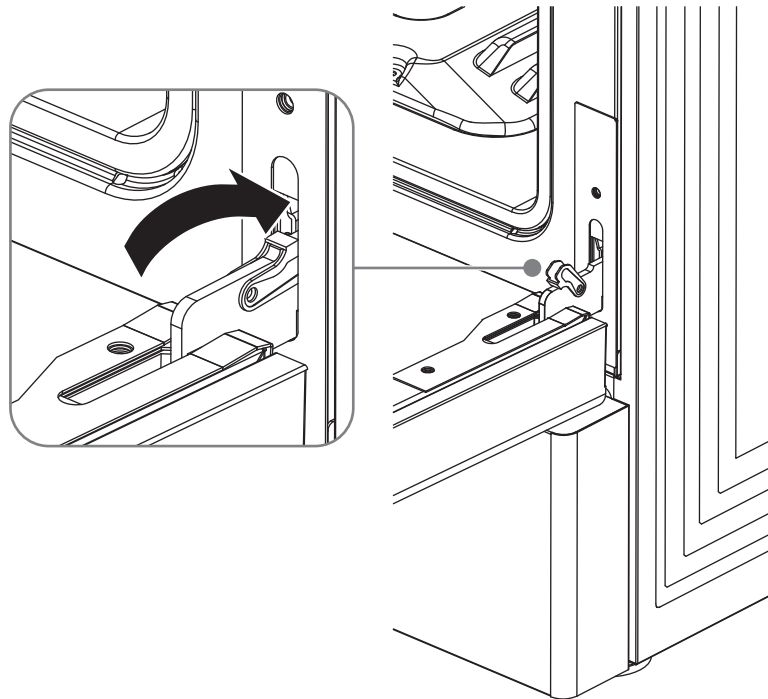


- 
- 4 Fully close the levers on the left and right hinges, then close the door.

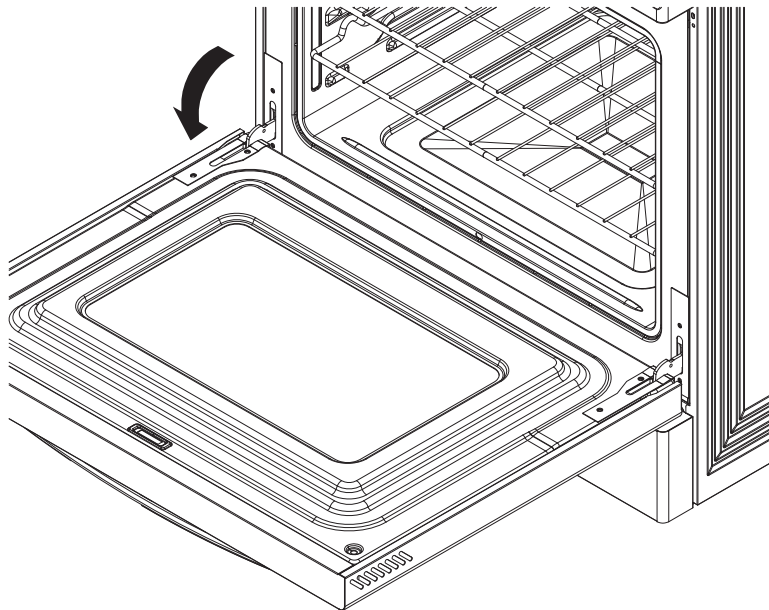


### Removing and replacing the storage drawer

The storage drawer is a good place to store cookware and bakeware. Don't store plastics or flammable material in the drawer. Clean the storage drawer with a damp cloth or sponge. Never use harsh abrasives or scouring pads.

- 1 Slide the drawer open until it stops.
- 2 Locate the roller guide clips on either side.
- 3 Using both hands, lift the left clip while pulling down on the right clip, then remove the drawer.

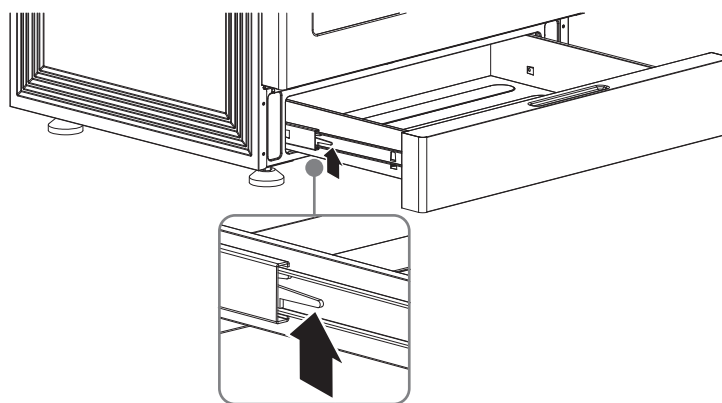

- 4 Clean the drawer in warm, soapy water using a cloth or soft brush, then rinse and dry it thoroughly.
- 5 Put the drawer in the roller guides on either side, and then snap the clips into place.

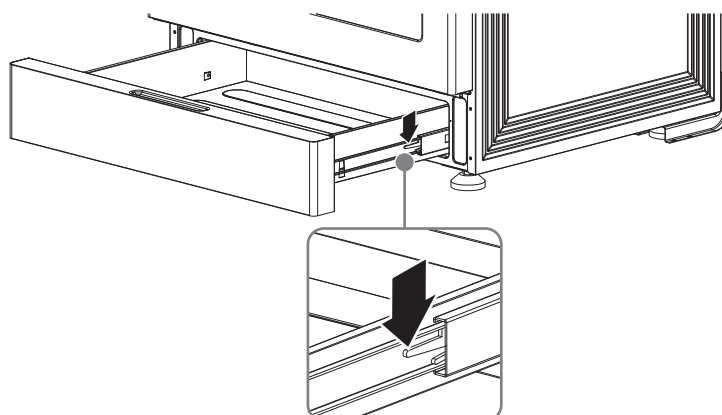

## Self-cleaning the oven

### CAUTIONS:

- Do not leave small children unattended near your range during the self-cleaning cycle. The outside surfaces of the range can get extremely hot.
- Some birds are extremely sensitive to fumes from a self-cleaning oven. Relocate birds to a well-ventilated room away from your range.
- Do not line the oven, oven racks, or oven bottom with aluminum foil. Doing so results in poor heat distribution, produces poor baking results, and causes permanent damage to the oven interior. The aluminum foil melts onto and adheres to the interior oven surfaces.
- Do not force the oven door open during the self-cleaning cycle. This damages the automatic door-locking system. The door automatically locks when the self-cleaning cycle is started and stays locked until the cycle is canceled and the oven temperature is below 400° F (204° C).
- Use caution when opening the oven door after the self-cleaning cycle. The oven may still be VERY HOT and hot air and steam might escape when the door is open.
- Wipe off any excess spillage before using the self-cleaning operation.
- Do not use oven cleaners. Commercial oven cleaners or oven liners should NEVER be used in or around any part of the oven. Residue from oven cleaners damages the inside of the oven during a self-cleaning operation.

- 1 Make sure that the door lock is released. Remove all racks from the oven cavity.
- 2 Make sure that the oven door is completely closed and unlocked.
- 3 Press **Oven Clean** once. The *Steam Clean* icon appears in the display.
- 4 Select the cleaning time by pressing **Oven Clean** two or more times. When you press **Oven Clean** repeatedly, your oven cycles between:
  - One press for steam cleaning
  - Two presses for self cleaning for 3 hours
  - Three presses for self cleaning for 5 hours
  - Four presses, self clean for 2 hours
- 5 Press **START**. The oven door locks and the oven begins to heat up.

When the self-cleaning cycle is complete, the oven beeps three times. The door remains locked and the Lock icon blinks until the oven temperature falls below 400° F (204° C). When the Lock icon turns off, you can open the oven door.

**WARNING:** Do not try to open the oven door immediately after the self-cleaning cycle is complete. The oven is still very hot when the door unlocks. Escaping hot air and/or steam could burn you.

- 6 When the oven has cooled down, wipe the oven surfaces with a cloth to remove ash residue.

Use a steel-wool pad to remove stubborn stains. Use a vinegar-soaked cloth to remove lime deposits.

If you are not satisfied with the cleaning results, repeat the cycle. *HOT* appears on the display until the oven cools down. Wait until the message disappears, and then start a new cycle.
- 7 Press **OFF** to change the display to the time of the day display.

**WARNING:** Make sure that all controls are OFF and all surfaces are COOL before cleaning any part of the range.

**CAUTION:** Do not use the surface burners while the oven is performing a self-cleaning cycle. Self-clean does not operate if a surface burner is on.

**Note:** The cooling fan automatically runs for a certain amount of time after self-cleaning.

### Canceling the self-cleaning cycle

You may need to stop or interrupt a self-cleaning cycle because of smoke in the oven.

- Press **OFF**. The cycle turns off, but the door remains locked and the Lock icon blinks until the oven temperature falls below 400° F (204° C).

## Steam cleaning the oven

**Note:** Steam cleaning the oven takes about 20 minutes and is automatically controlled by the oven.

- 1 Remove all accessories from the oven.
- 2 Pour 10 oz. (300 ml) of water onto the bottom of the empty oven and close the oven door. Use normal water only, not distilled water.

When steam-cleaning, use exactly 10 oz. of water because this produces the best results.

**Note:** For heavy residue, such as grease left over from roasting, we recommend that you rub detergent into the residue before activating the steam-cleaning function.

- 3 Press the **Oven Clean** once. The *Steam Clean* icon appears in the display.



- 4 Press the **Start** pad. When the operation is complete, the display blinks and a beep sounds.

**Note:** If you press the **Oven Clean** pad when the oven temperature is above 150° F (65° C), **Hot** appears in the display. Because this function produces the best results when started while the oven is cool, we recommend that you wait until the oven has cooled down and *Hot* disappears from the display.

- 5 Press the **Off/Clear** pad.

**WARNING:** Be careful when opening the door before a steam-cleaning procedure has ended, the water on the bottom is hot.


- 6 Open the oven door and remove the remaining water with a sponge. Do not leave the residual water in the oven for any length of time. A significant amount of water remains on the bottom of the oven after a steam-cleaning cycle.
- 7 Use a detergent-soaked sponge, a soft brush, or a nylon scrubber to wipe the oven interior. Remove stubborn residue with a nylon scourer. You can remove lime deposits with a cloth soaked in vinegar. If the oven remains dirty, repeat the procedure after the oven has cooled.
- 8 After cleaning, leave the oven door ajar at a 15° angle to let the interior enamel surface dry thoroughly.

## Troubleshooting

If the solutions in this section do not solve a problem, contact a qualified service technician or Kenmorecustomer service.

PROBLEM	POSSIBLE CAUSE	SOLUTION
My range is not level.	Your range has been installed incorrectly.	<ul style="list-style-type: none"><li>Place an oven rack in the center of the oven. Place a level on the oven rack. Adjust the leveling legs at the base of your range until the oven rack is level.</li><li>Make sure that the floor is level and strong and stable enough to adequately support your range.</li></ul>
	The floor is sagging or sloping.	Contact a carpenter to correct the situation.
	The kitchen cabinets are not correctly aligned and make your range appear to be not level.	Make sure that the cabinets are square and provide sufficient room for installation.
My range needs to be accessed for servicing and can't be moved easily.	The oven leg is inside the anti-tip device.	Slide your range forward until the leg is out of the anti-tip device, then move your range as needed. Make sure that you reinstall the range leg into the anti-tip device when you are through.
	The kitchen cabinets are not square and too close to your range.	Contact a builder or installer to make your range accessible.
	Carpet is interfering with movement of your range.	Provide sufficient space so your range can be lifted over the carpet.

### Control panel display


PROBLEM	POSSIBLE CAUSE	SOLUTION
The display goes blank.	A fuse in your home may be blown or the circuit breaker tripped.	Replace the fuse or reset the circuit breaker.
The display flashes.	There was a power failure.	Reset the clock.
The beeper doesn't work.	The beeper sound has been turned off.	Press and hold the  (sound) pad for three seconds.
I turned off the beeper, but it still beeps.	Some beep tones can't be turned off.	The clock and beep warning tones stay on even when you turn the beeper off. This is normal.

## Cooktop

PROBLEM	POSSIBLE CAUSE	SOLUTION
The surface burners do not produce a rolling boil or do not cook fast enough.	You may be using inappropriate cookware.	Use pans which are flat and match the diameter of the surface element you selected.
	In some areas, the power (voltage) may be low.	Cover the pan with a lid until the desired heat is obtained.
	If your range was recently installed, its power cord connection may be incorrect causing the burners and oven to receive half the normal voltage.	Disconnect the circuit breaker to cut power to the range and follow instructions on pages 18 or 19 to make sure the power cord wires are connected in the correct order and that the wire colors match the diagram shown, or contact Kenmorecustomer care for support.
The surface burners do not turn on.	A fuse in your home may be blown or the circuit breaker tripped.	Replace the fuse or reset the circuit breaker.
	The cooktop controls are set incorrectly.	Make sure that you have selected the correct control for the element you are using.
The cooktop has areas of discoloration.	Food spillover was not cleaned up.	See <a href="#">Cleaning the cooktop</a> on page 37.
	The surface is hot and the model features a light-colored cooktop.	This is normal. The surface may appear discolored when it is hot. This is temporary and disappears as the glass cools.
The surface element frequently cycles on and off. The surface element stops glowing when changed to a lower setting.	The element cycles on and off to maintain the power setting.	This is normal operation, and not a system failure. Use the cooktop as usual.
Scratches or abrasions on the cooking surface.	The cooktop is being cleaned incorrectly.	Scratches are not removable. Tiny scratches become less visible in time as a result of cleaning. Use a ceramic glass top cleaning product. Do not use chemical or corrosive agents. These agents may damage the surface of the product.
	Cookware with rough bottoms was used on the cooktop or there were coarse particles (for example, salt or sand) between the cookware and the surface of the cooktop.	To avoid scratches, use the recommended cleaning procedures. Make sure that cookware bottoms are clean before use, and use cookware with smooth bottoms.
	Cookware has been slid across the cooktop surface.	
The cooktop has brown streaks or specks.	Boilovers have been cooked onto the surface.	Wait until the surface cools down. Then, use a scraper to remove those impurities. Use a blade scraper to remove soil. See <a href="#">Cleaning the cooktop</a> on page 37.
Cooktop areas have discoloration with a metallic sheen.	Mineral deposits from water and food have been left on the surface of the cooktop.	Remove using a ceramic-glass cooktop cleaning product. Use cookware with clean, dry bottoms. Clean the cooktop with a ceramic cleaning agent regularly every week.
I hear a "cracking" or "popping" sound.	This is the sound of the metal heating and cooling during both the cooking and self-cleaning functions.	This is normal operation, and not a system failure. Use the cooktop as usual.
The control panel operates but the surface heating elements and the oven don't turn on.	Your range is in demo mode.	Press and hold the <b>1</b> and <b>9</b> number pads on control panel simultaneously for three seconds, then release. Your range resumes its normal mode of operation.

## Oven

PROBLEM	POSSIBLE CAUSE	SOLUTION
The oven does not turn on.	A fuse in your home may be blown or the circuit breaker tripped.	Replace the fuse or reset the circuit breaker.
	The oven controls have been set incorrectly.	See <a href="#">Using the oven</a> on page 28.
	The oven is too hot.	Let the oven cool.
	Incomplete service wiring.	Call for service.
	Power outage.	Check to see if the house lights turn on. If required, call your local electric company for service.
	A delayed start time has been set.	Press the <b>Off/Clear</b> pad to cancel the delayed start time.
	The oven door doesn't close correctly.	Open the oven door and make sure that an item, like a baking dish, is not too big for the oven or is not placed correctly on the oven shelf.
	Your range is in demo mode.	Press and hold the <b>1</b> and <b>9</b> number pads on control panel simultaneously for three seconds, then release. Your range resumes its normal mode of operation.
The oven light does not turn on.	The light bulb is loose or defective.	Tighten or replace the bulb.
	The switch operating the light is broken.	Call for service.
Oven smokes excessively during broiling.	The control has not been set correctly.	See <a href="#">Broiling</a> on page 33.
	The meat has been placed too close to the element.	Reposition the rack to provide the correct clearance between the meat and the element.
	The meat has not been correctly prepared.	Remove the excess fat from the meat. Cut away fatty edges that may curl, leaving the lean part of the meat intact.
	Grease has built up on oven surfaces.	Regular cleaning is necessary when broiling frequently.
Food does not bake or roast correctly.	The oven controls have not been set correctly.	See <a href="#">Using the oven</a> on page 28.
	The oven rack has been positioned incorrectly or is not level.	See <a href="#">Positioning the oven racks</a> on page 28.
	Incorrect cookware or cookware of incorrect size is being used.	
	The oven sensor needs to be adjusted.	See <a href="#">Adjusting the thermostat</a> on page 31.
Food does not broil correctly.	The serving size may not be appropriate.	Refer to the cooking guide on the food packaging for serving sizes and try again.
	The rack has not been correctly positioned.	See <a href="#">Minimum and maximum settings</a> on page 28.
	Cookware not suited for broiling.	Use suitable cookware.
	In some areas, the power (voltage) may be low.	Preheat the broil element for 10 minutes. See <a href="#">Minimum and maximum settings</a> on page 28.
The oven temperature is too hot or too cold.	The oven sensor needs to be adjusted.	See <a href="#">Adjusting the thermostat</a> on page 31.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Steam is coming out of the vent.	When using the convection feature, it is normal to see steam coming out of the oven vent.	This is normal operation, and not a system failure. Use the oven as usual.
	As the number of racks or amount of food being cooked increases, the amount of visible steam increases.	
A burning or oily odor is coming from the vent.	This is normal in a new oven and disappears in time.	
Strong odor.	An odor coming from the insulation around the inside of the oven is normal for the first few times the oven is used.	Operate the oven at the bake setting at 400 °F (204° C) for one hour.
Fan noise.	A fan may automatically turn on and off.	This is normal operation, and not a system failure. Use the oven as usual.
Oven racks are difficult to slide.	The shiny, silver-colored racks were cleaned in a self-cleaning cycle.	Apply a small amount of vegetable oil to a paper towel and wipe the edges of the oven racks with the paper towel.
The oven doesn't self-clean	The oven door lock is turned on.	The display shows the Lock icon. Hold the oven door open, then press  for three seconds. The oven beeps and the Lock icon turns off.
	The oven is too hot.	Let the oven cool down, then reset the controls. The self-clean cycle doesn't lock the oven door if the oven temperature is too hot. The door must lock before the self-clean cycle can start.
	The self-cleaning oven controls aren't set correctly.	Reset the self-cleaning oven controls. See <a href="#">Self-cleaning the oven</a> page 44.
	A surface burner is on.	Turn off the surface burner. Self-clean doesn't operate if a surface burner is on.
Excessive smoking during a self-cleaning cycle.	This is the first time the oven has been cleaned.	This is normal. The oven always smokes more the first time it is cleaned. Wipe up all excess soil before you start a self-cleaning cycle. If smoke persists, press <b>OFF/CLEAR</b> . Open windows to clear the smoke from the room. After the oven has cooled and unlocked, wipe up excess soil, then reset the oven self-cleaning cycle.
The oven door does not open after a self-cleaning cycle.	This is normal.	The oven door stays locked until the oven temperature drops below 400° F (204 °C).
The oven is not clean after a self-cleaning cycle.	A fine dust or ash is normal.	You can wipe the dust or ash clean with a damp cloth.
	The cycle was not long enough to burn off the dirt buildup.	Extremely dirty ovens require hand-cleaning of excessive spillovers and food buildup before you start a self-cleaning cycle. Multiple self-cleaning cycles may be necessary to completely clean the oven.

## Drawer

PROBLEM	POSSIBLE CAUSE	SOLUTION
The drawer does not slide smoothly or drags.	The drawer is out of alignment	Fully extend the drawer and push it all the way in. See <a href="#">Removing and replacing the storage drawer</a> on page 43.
	The drawer is over-loaded or the load is unbalanced.	Reduce weight. Redistribute drawer contents.

## Error codes

ERROR CODE	POSSIBLE CAUSE	SOLUTION
E0	Oven temperature detection circuit failure.	Press <b>Off/Clear</b> , then restart the oven. If the problem persists, disconnect all power to your range for at least 30 seconds, then reconnect the power. If this does not solve the problem, call for service.
E1	After the oven starts to heat up, the temperature rises very slowly.	
E2	Oven door switch detection failure.	
E3	The oven cannot be heated.	
E5	The oven's normal cooking temperature exceeds 650° F (343° C).	
E8	Communication failure between display board and main control board	
E9	The main control board AC main power frequency detection failure.	
E10	The oven cannot be locked or unlocked.	
E11	Main control board CPU internal failure.	
E12	Display board CPU internal failure.	
E13	When oven is working, the ambient temperature of the main control board PCB is too high.	
E14	The ambient temperature detection NTC circuit of the main control board PCB is faulty.	
E15	The software information of the main control board and the display board do not match.	
E16	After the oven is locked, the oven door can be opened or the detection circuit that locks the door in place fails, causing the door to not be securely locked.	
E17	The cooling fan motor speed detection circuit is faulty.	
E18	Communication failure between the touch chip of the display board and the CPU.	

### Turning demo mode on or off

When your range is in demo mode, most of its functions don't work.

- To turn off demo mode, press and hold the **1** and **9** number pads on control panel simultaneously for three seconds, then release. *OFF SHOP* appears on the display for one second, then your range resumes its normal mode of operation.
- Repeat to turn demo mode on. *ON SHOP* appears on the display for one second, then your range enters demo mode.

# Specifications

Dimensions (H × W × D)	36.5to 37.5×29.9×27.1in.(92.7 to 95.2×75.9×69cm)
Weight	<b>95163#</b> Gross Weight: 201.5 lb (91.4 kg) Net Weight: 183.0 lb (83.0 kg)
Power requirements	208 ~ 240VAC, 60Hz, 48 ~ 55A
Cooktop elements	Right Front: 9 in. to 12 in. (22.9 to 30.5 cm), Dual Element, 3,000W Left Front: 6 to 9 in. (15.2 to 22.9 cm), Dual Element, 3,000W Right Rear: 6 in. (15.2 cm), 1,200W Left Rear: 6 in. (15.2 cm), 1,200W Center: 7 in. (17.8 cm), 100W
Oven element	Hidden Bake Element: 3,000W Broil Element: 3,500W Air Fry Rear Element: 800W
Oven temperatures	Bake: 150 ~ 550° F (65.6 ~ 287.8° C) Convection Bake: 150 ~ 550° F (65.6 ~ 287.8° C) Convection Roast: 150 ~ 550° F (65.6 ~ 287.8° C) Air Fry: 350 ~ 550° F (177° ~ 288° C)
Oven light	40W Halogen type, designed for oven use

---

Important Kenmore® Warranty Update:

For appliances delivered in the State of California, your warranty period will begin on the original date of delivery of the appliance. For other important warranty information please see your Use and Care Guide or visit [Kenmore.com](http://Kenmore.com).

<p>Ranges, Cooktops, Wall Ovens</p> <p><b>NOTE: Lifetime coverage on Cooktop Gas Burners, Cooktop Electric Burners and Oven Door Glass applies only to purchases dated on or after February 4, 2018</b></p>	<p><b>WARRANTY SERVICE</b></p> <p><b>With proof of original sale from a Sears, Kmart or other Transformco authorized retailer, call this number to obtain the warranty coverage stated below: 1-844-553-6667</b></p> <p>WITH PROOF OF ORIGINAL SALE, the following warranty coverage applies when this appliance is correctly installed, operated and maintained according to all supplied instructions.</p> <p><b>One Year on Appliance</b></p> <p>FOR ONE YEAR from the date of original sale this appliance is warranted against defects in material or workmanship. A defective appliance will receive free repair. If the appliance cannot be repaired it will be replaced free of charge.</p> <p><b>Two Years on Ceramic Glass Cooktop</b></p> <p>FOR TWO YEARS from the date of original sale, a free replacement part will be supplied for a ceramic glass cooktop that fails due to thermal shock.* If the failure or defect is within the first year, a new cooktop will be installed at no charge. If the failure or defect is after the first year, a new cooktop will be supplied but not installed at no charge. You are responsible for the labor cost of cooktop installation after the first year from the date of sale. *Failure due to thermal shock must be verified by a Kenmore authorized service representative.</p> <p><b>Lifetime on Cooktop Gas Burners, Cooktop Electric Elements and Oven Door Glass</b></p> <p>(applies only to purchases dated on or after February 4, 2018) FOR AS LONG AS IT IS USED from the date of original sale, a free replacement will be supplied for a defective cooktop gas burner, cooktop electric element or oven door glass.* If the defect appears within the first year, a new burner, element or door glass will be installed at no charge. If the defect appears after the first year, a new burner, element or door glass will be supplied but not installed at no charge. This Lifetime warranty covers only the burner, element or door glass, and does not apply to any other related component or mechanism. You are responsible for the labor cost of burner, element or door glass installation after the first year from the date of original sale. *Defects must be verified by a Kenmore authorized service representative.</p> <p>All warranty coverage applies for only 90 DAYS from the date of</p>
---	--



	<p>original sale if this appliance is ever used for other than private household purposes.</p> <p>This warranty covers ONLY defects in material and workmanship, and will NOT pay for the exclusions to repair service listed as <a href="#">follows</a></p>
--	--

#### REPAIR SERVICE EXCLUSIONS

This warranty covers ONLY product defects in material and workmanship, and will NOT pay for:

- 1.A service technician to clean or maintain the product.
- 2.A service technician to instruct the user in correct appliance installation, operation or maintenance.
- 3.Expendable items that can wear out from normal use within the warranty time period, including but not limited to filters, belts, bags or screw-in base light bulbs.
- 4.Cracks in a ceramic glass cooktop that are not a result of thermal shock.
- 5.Stains and scratches on a ceramic glass cooktop resulting from accident or improper operation or maintenance, nor for discoloration of any cooktop surface resulting from normal use.
- 6.Service calls to correct appliance installation not performed by Sears authorized service agents, or to repair problems with house fuses, circuit breakers, house wiring, and plumbing or gas supply systems resulting from such installation.
- 7.Damage to or failure of this appliance resulting from installation not performed by Sears authorized service agents, including installation that was not in accord with electrical, gas or plumbing codes.
- 8.Damage to or failure of this appliance, including discoloration or surface rust, if it is not correctly operated and maintained according to all supplied instructions.
- 9.Damage to or failure of this appliance, including discoloration or surface rust, resulting from accident, alteration, abuse, misuse or use for other than its intended purpose.
- 10.Damage to or failure of this appliance, including discoloration or surface rust, caused by the use of detergents, cleaners, chemicals or utensils other than those recommended in all instructions supplied with the product.
- 11.Damage to or failure of this appliance resulting from natural or other catastrophe, such as flood, fire or storm.
- 12.Damage to or failure of parts or systems resulting from unauthorized modifications made to this appliance.
- 13.Service to an appliance if the model and serial plate is missing, altered, or cannot easily be determined to have the appropriate certification logo.

# Kenmore®

## Customer Care Hotline

To schedule in-home repair  
service or order replacement  
parts

Pour programmer un service de  
reparation a domicile ou  
commander des pieces de  
rechange

Para pedir servicio de reparación  
a domicilio, y ordenar piezas

# 1-844-553-6667

[www.kenmore.com](http://www.kenmore.com)

