


PRB24C01ABSG

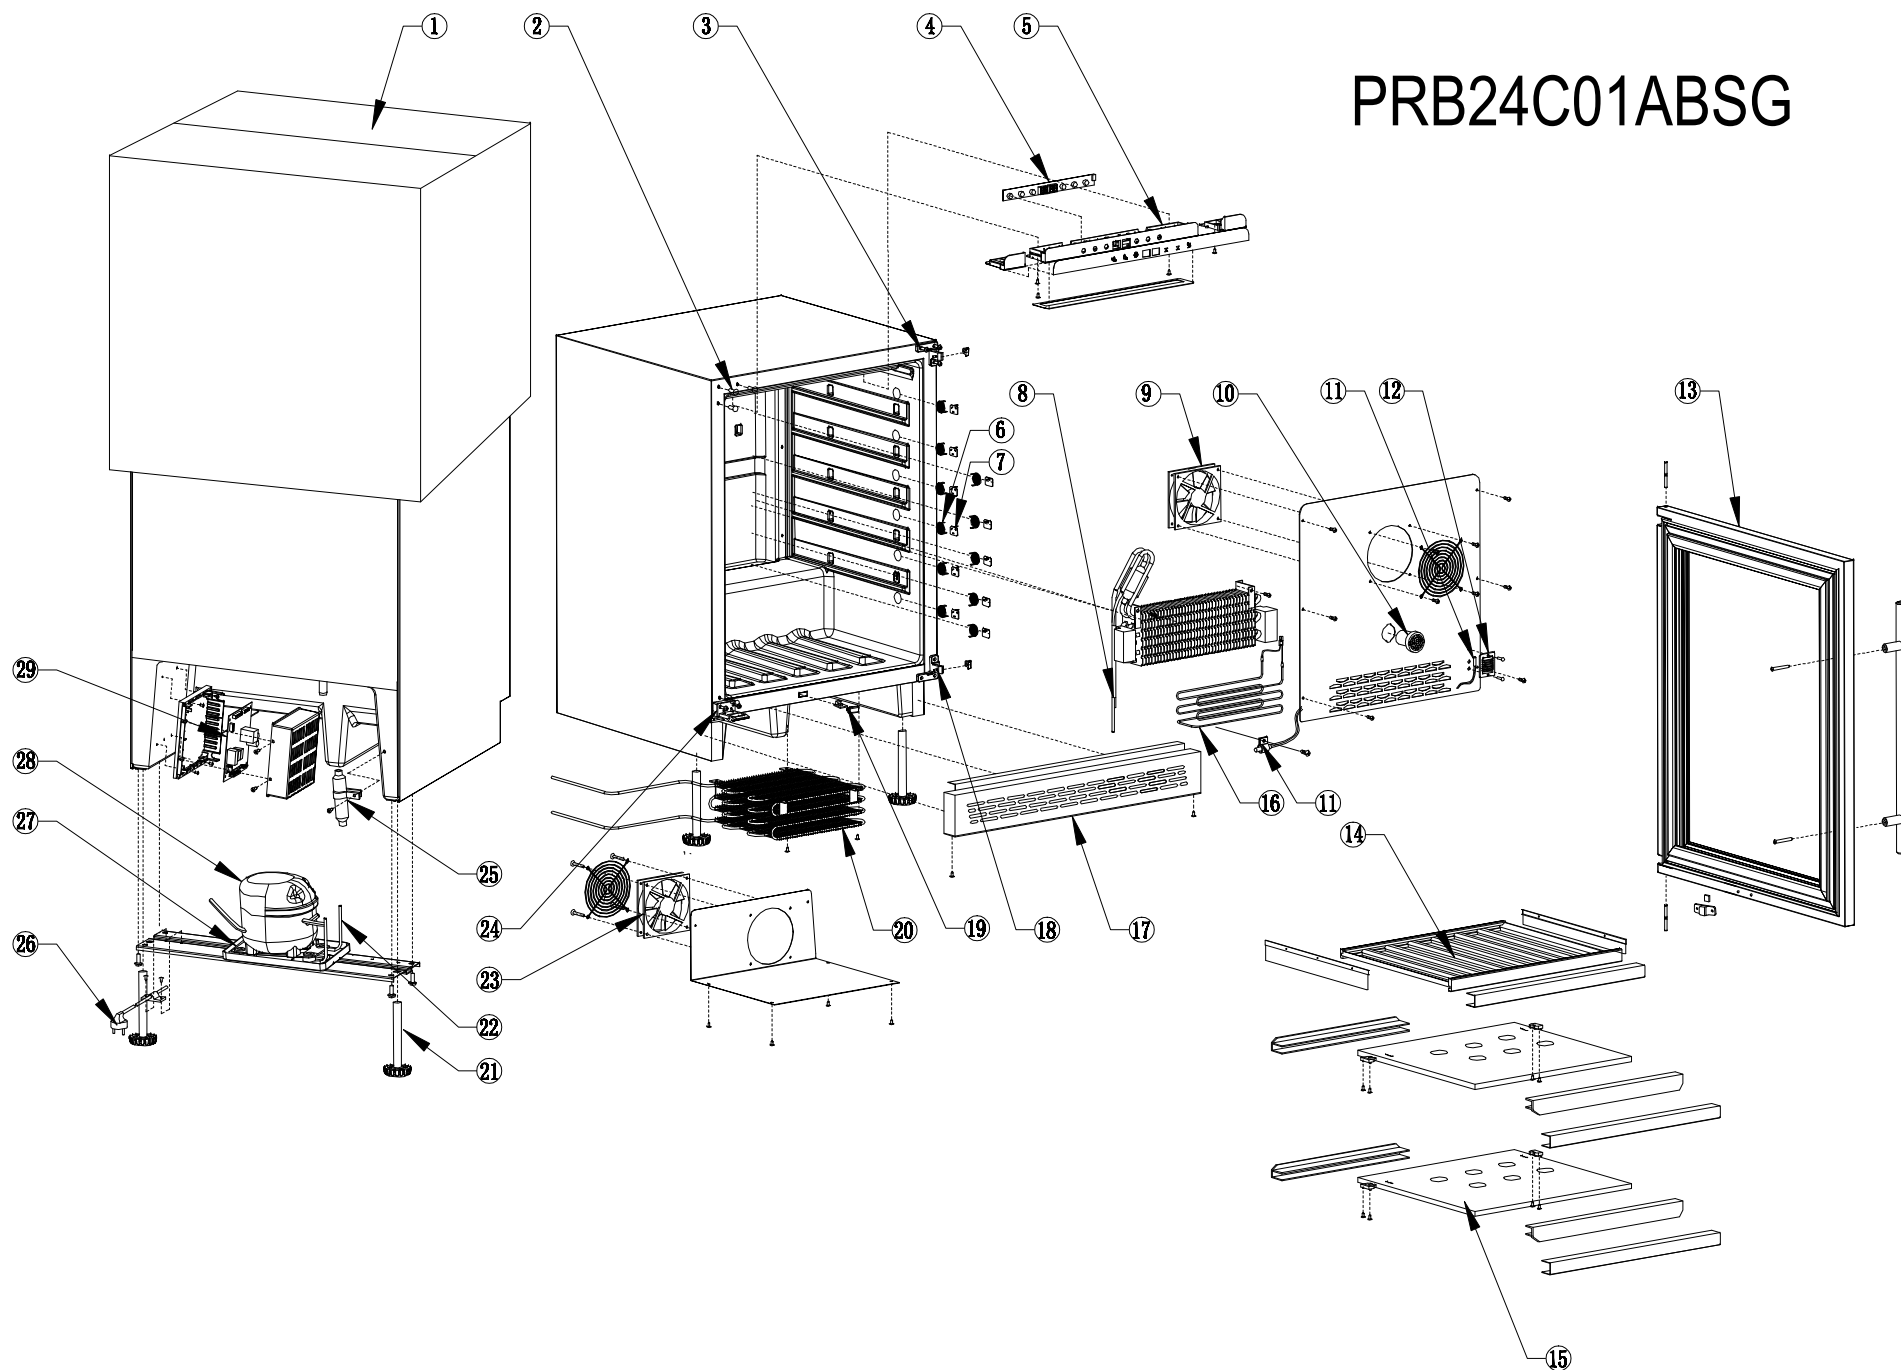

PRB24C01ABSG

Ref #	Part #	Description	Qty.
1	82050266	Carton	1
2	56210076	Decorative Hole Cover	4
3-1	54180009	Top Right Hinge	1
3-2	01020032	Hinge Mount Screw	3
3-3	00100027	Hinge Rubber Stopper	1
4	11010098	Display PCB	1
5-1	56200101	Display Board Box	1
5-2	56210077	Display Board Cover	1
5-3	50140155	Display Cover Panel	1
6	52150012	LED Light Cover	12
7	12010009	Tri Color LED Light	12
8-1	56150004	Suction Tube	1
8-2	54240007	Evaporator	1
9	12130034	Fan Assembly	1
10	Z0F-C007	Charcoal Filter	1
11	11050014	Sensor	2
12-1	56210078	Sensor Cover	1
12-2	56140019	Sensor Cover Cap	2
13-1	56220040	Door Gasket	1
13-2	01020033	Door Axis Screw	2
13-3	50230006	Black Stainless Door	1
13-4	50280005	Black Stainless Handle	1
13-5	01020034	Handle Screw	2
13-6	54220009	Door Magnet	1
13-7	54140257	Door Magnet Bracket	1
13-8	01020035	Door Magnet Bracket Screw	2
14-1	50320047	Sliding Rail, Left	1
14-2	50320048	Sliding Rail, Right	1

14-3	01020036	Sliding Rail Screw	4
14-4	01020037	Sliding Rail Screw	4
14-5	50150012	Black Wood Shelf w/Trim	1
15-1	50150013	Glass Shelf w/Trim	2
15-2	54140258	Glass Door Lock Bracket	4
15-3	02170011	Glass Door Lock Bracket Washer	8
15-4	01020036	Glass Door Lock Bracket Screw	8
16	54280004	Heater	1
17-1	50260005	Black Stainless Kick Plate	1
17-2	01020036	Kick Plate Screw	7
18-1	54180010	Bottom Right Hinge	1
18-2	01020032	Hinge Mount Screw	3
18-3	00100027	Hinge Rubber Stopper	1
19-1	56210079	Magnet Switch Cover	1
19-2	11040030	Magnet Switch	1
20	54270002	Condensor	1
21	50350004	Cabinet Leveling Leg	4
22	50330021	Connecting Pipe	1
23	12130034	Fan Assembly	1
24-1	54140259	Door Catch Roller	1
24-2	54140260	Roller Wheel	1
24-3	50330022	Door Catch Roller Pin	1
24-4	01020032	Door Catch Roller Screw	2
25	56300005	Dryer Filter	1
26	11030133	Power Cord	1
27	56130036	Drip Tray	1
28	12160004	Compressor	1
29	11010099	Main Power Control Board	1