

# ASSEMBLY INSTRUCTIONS

## B6950-1

### NEMY DRESSER



CRWN

(BOX 1) - BOX OF DRESSER							
PARTS LIST				HARDWARE LIST			
NO.	DESCRIPTION	SKETCH	QTY	NO.	DESCRIPTION	SKETCH	QTY
1	DRESSER		1	A	JCBC ( M6 x 35mm ) W/FLAT WASHER & SPRING WASHER		8
2	LEG LEFT		2	B	ALLEN KEY ( M4 )		1
3	LEG RIGHT		2	C	TIPPING RESTRAINT		1
4	CENTER LEG		1				


**IMPORTANT NOTE :**

- \* Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- \* Check to be sure that you have all parts and hardware.
- \* Remove all wrapping materials, including staples & packing straps before you start to assemble.
- \* Do not tighten all screws/bolts until all completely assembled.
- \* Keep all hardware parts out of reach of children.
- \* Periodically check to ensure that all connectors (bolts, screws, etc.) are tight.

**STEP 1**

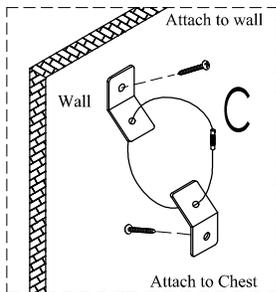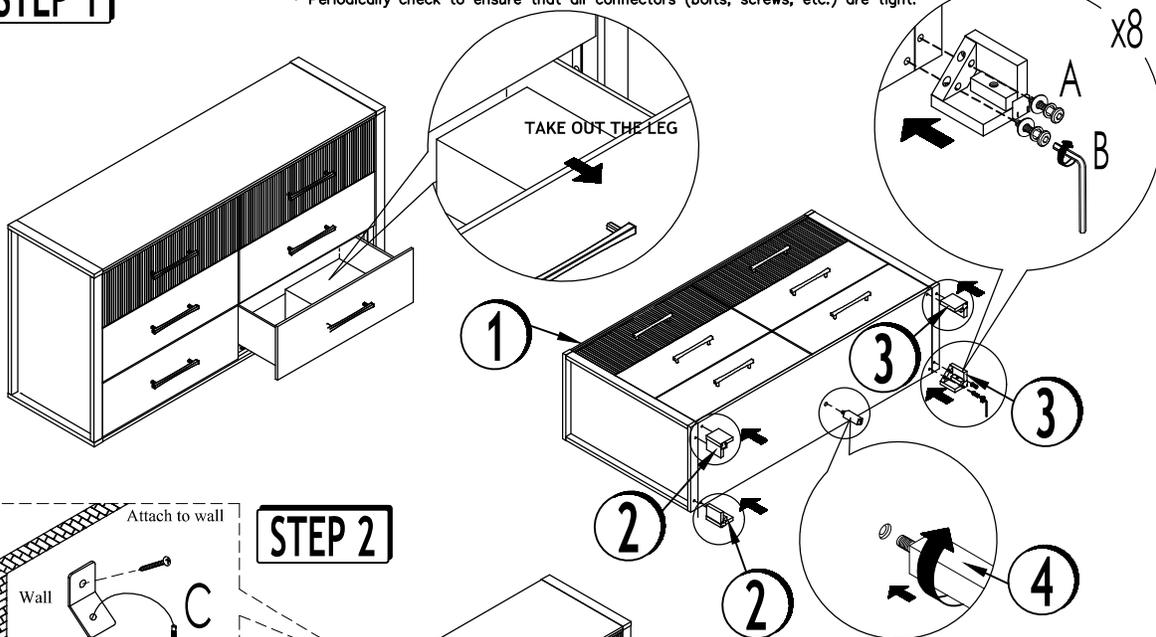

**STEP 2**

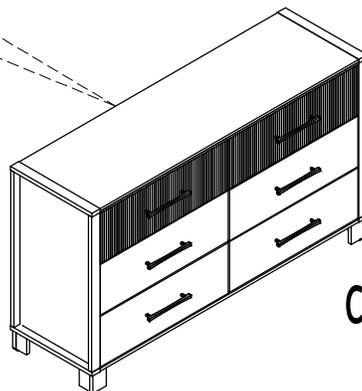

**COMPLETE**

THE ANTI TIPPING HARDWARE IS LOCATED AT THE TOP RIGHT SIDE FRONT DRAWER OF DRESSER

THE HARDWARE IS LOCATED IN THE PACKING ITEMS