

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

707746 MEDIA TOWER

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately. 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

50 MINUTES

PARTS IDENTIFICATION

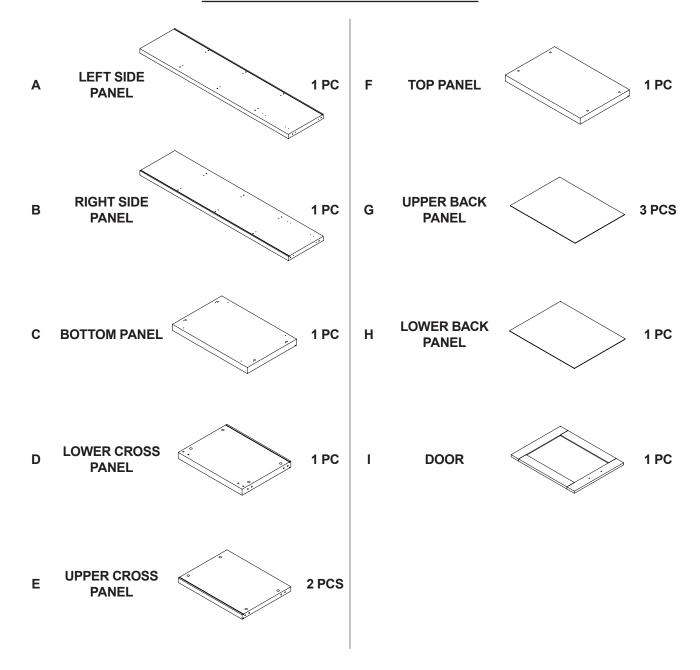

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




HARDWARE IDENTIFICATION


Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	9	HINGE Ø35mm SR		2 PCS
2	WOODEN DOWEL		20 PCS	10	HINGE SCREW	attititi(®)	8 PCS
3	CAM BOLT ø7x35.5mm SR		12 PCS	11	LEG 47mm BLK		4 PCS
4	CAM LOCK ø15x12mm SR		12 PCS	12	SCREW Ø4x19mm BLK		8 PCS
5	BOLT Ø9.5x55mm SR		8 PCS	13	SQUARE FLOOR PROTECTOR 50x50mm		4 PCS
6	DOOR CATCH		1 PC	14	FIXER		6 PCS
7	HANDLE L= 120mm BLK		1 PC	15	FIXER SCREW ø3x19mm SR	and the second	6 PCS
8	HANDLE BOLT Ø4x28mm BLK	(A)	2 PCS	16	STICKER		2 PCS


Z7,Z8,Z9,Z11 not included in blister packaging.


NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

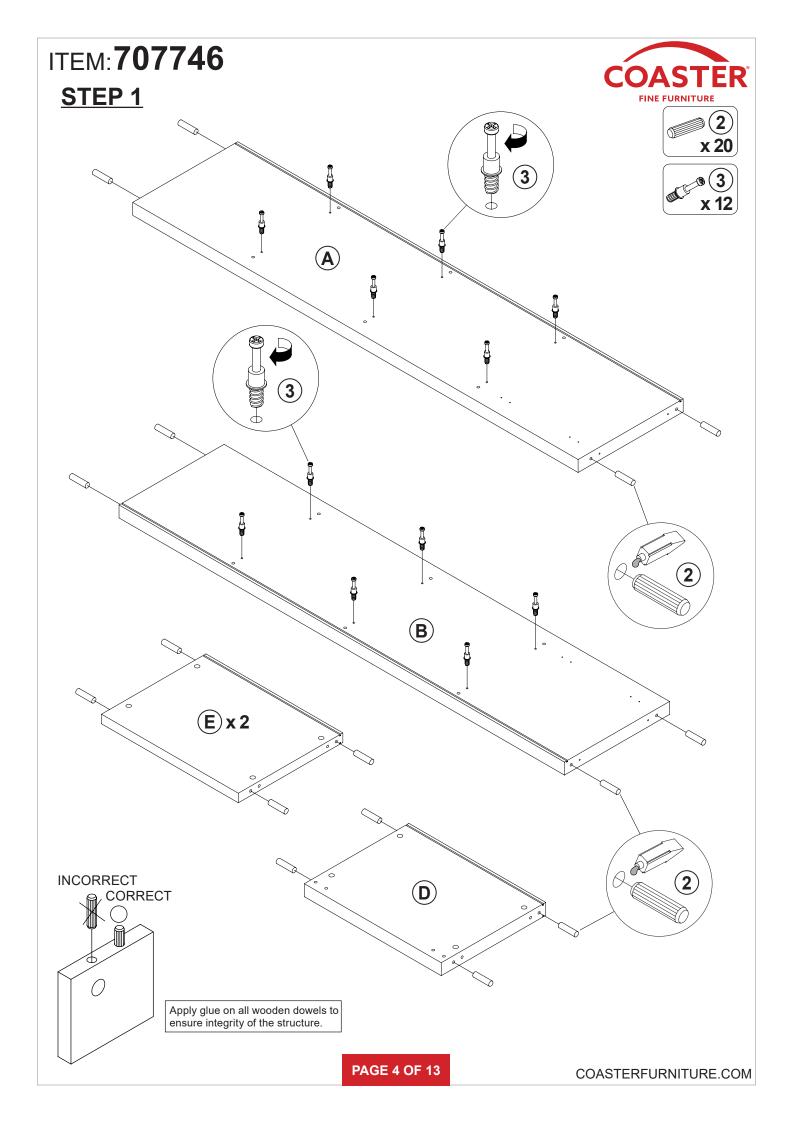


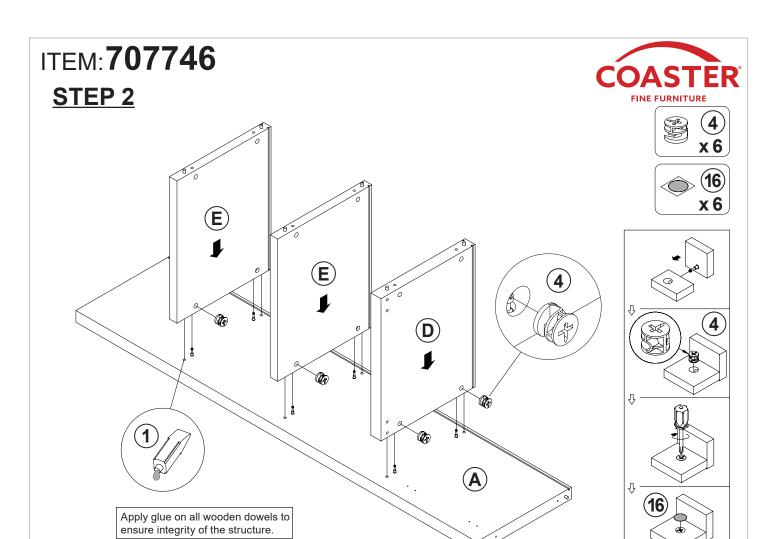

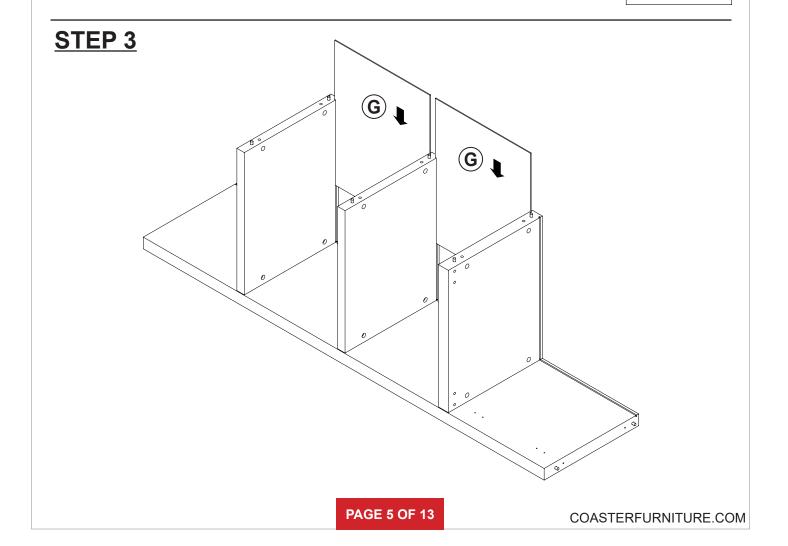


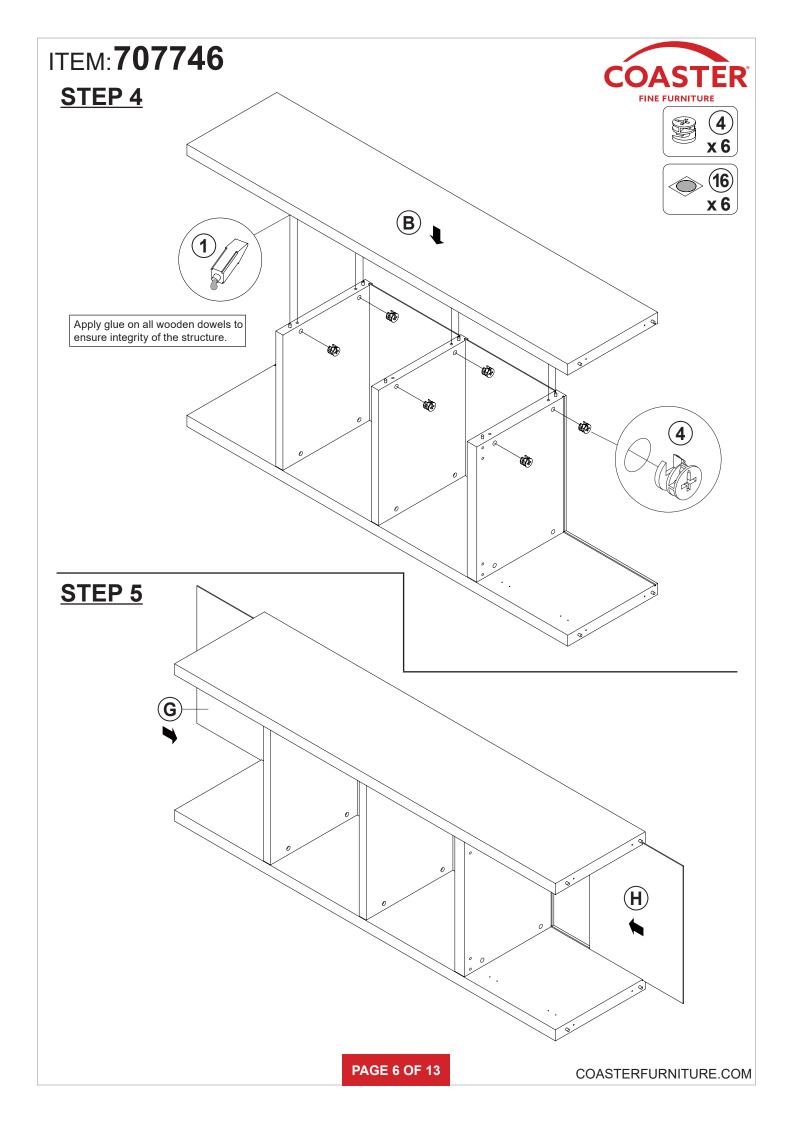

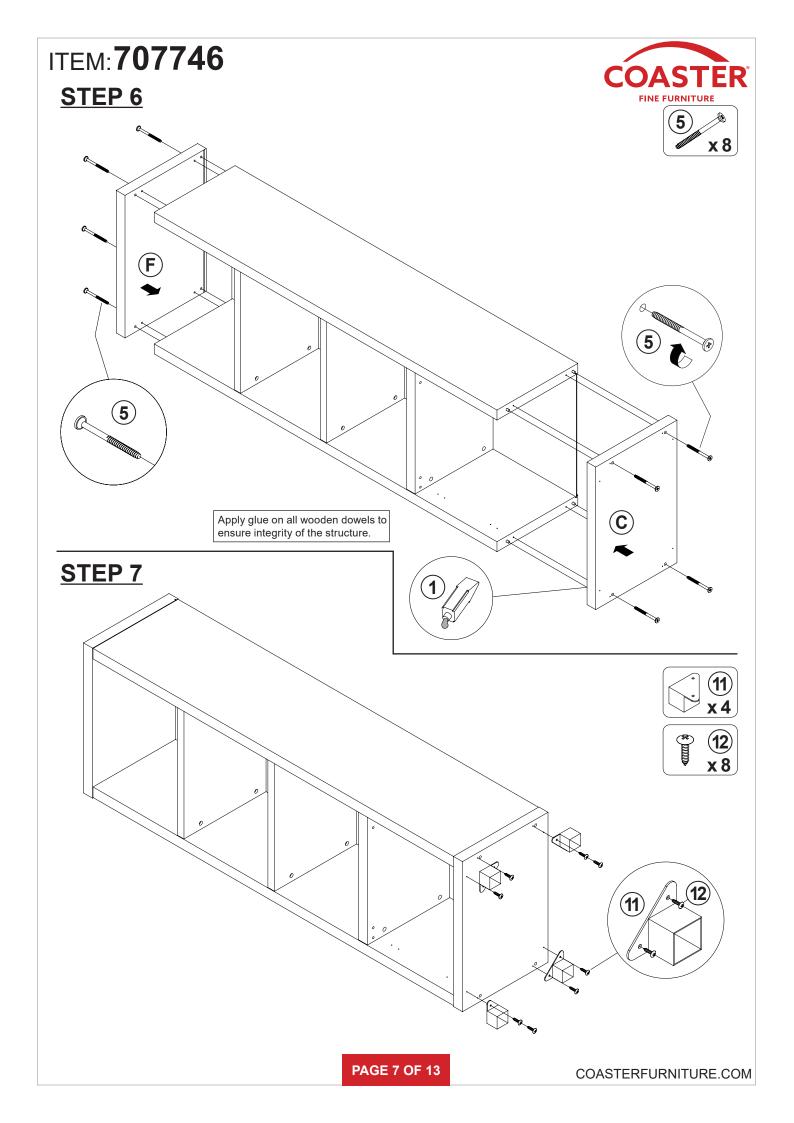


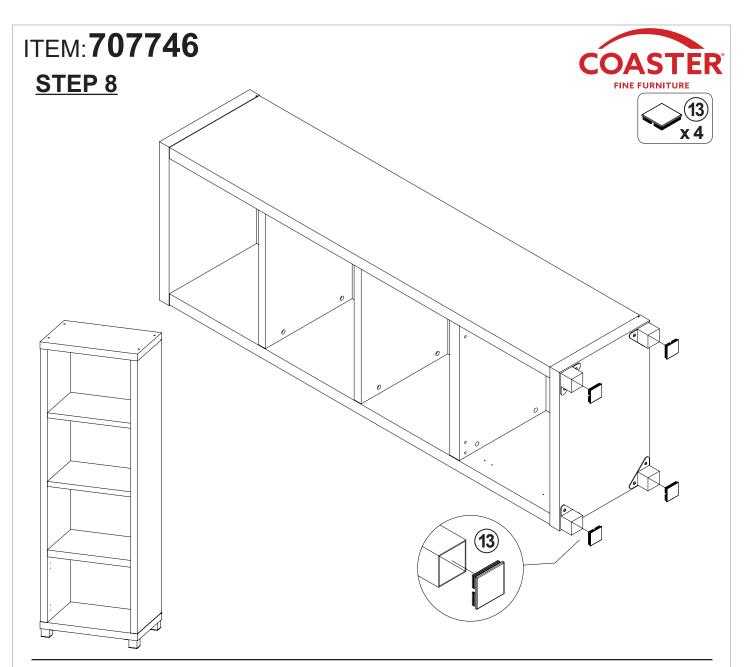



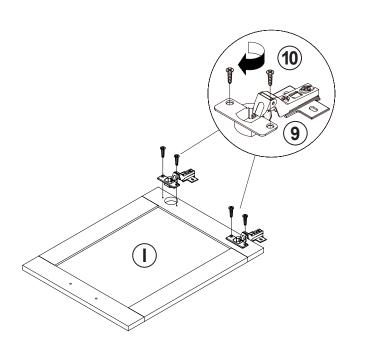

10 x 4

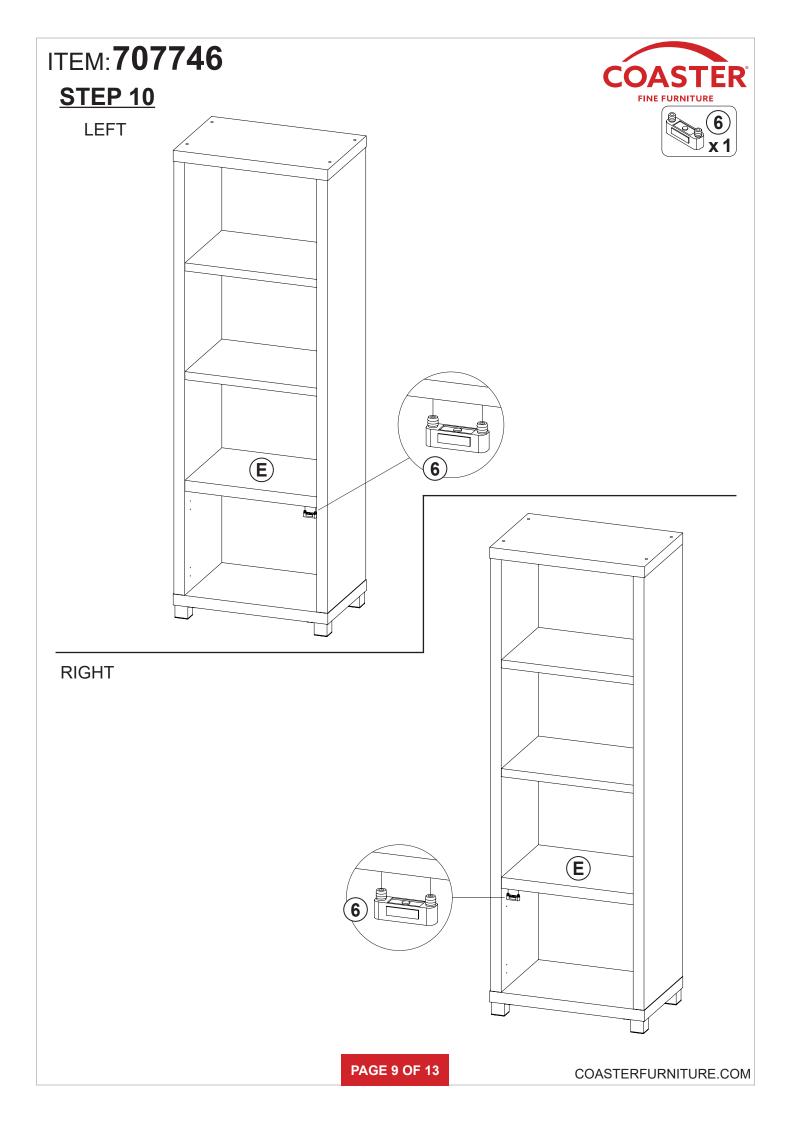

$\mathsf{ITEM:} \textcolor{red}{\mathbf{707746}}$














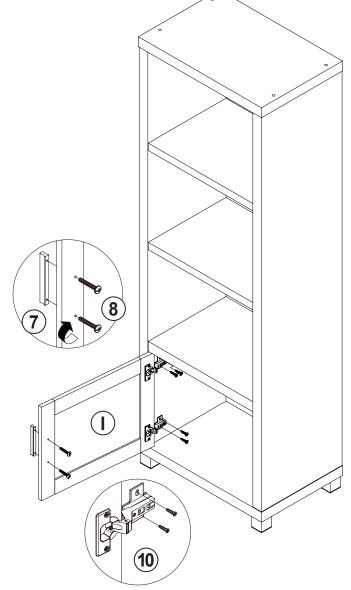


RIGHT

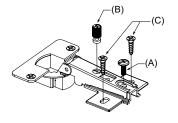


LATERAL BY SCREW B ADJUSTMENT

 


HORIZONTAL BY SCREW AADJUSTMENT

 

VERTICAL BY SCREW C ADJUSTMENT

 


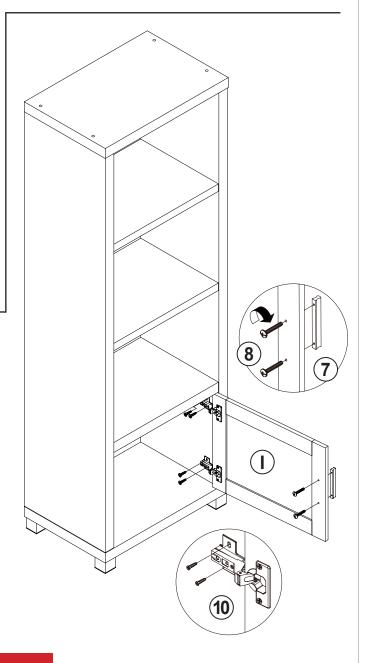


STEP 12






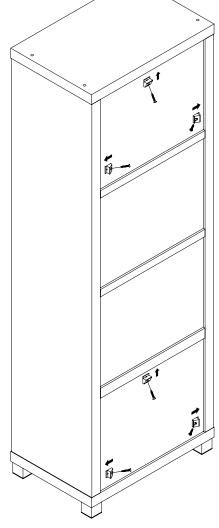



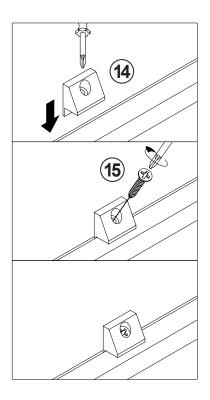


STEP 13
COMPLETE

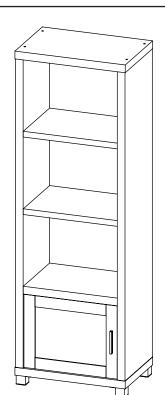







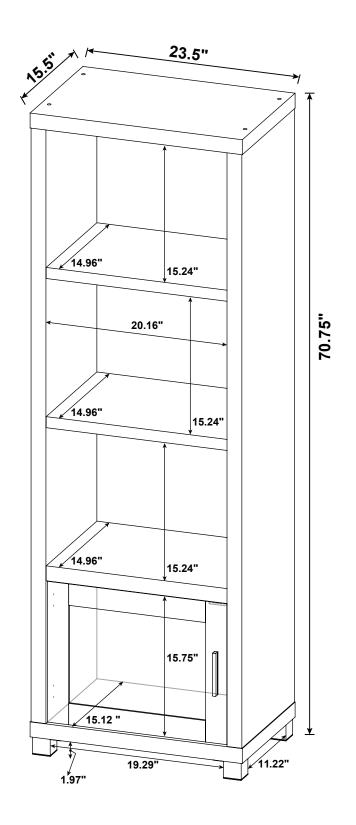

Note: Dimension tolerance ±5%

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. To attach the anti-tip strap, securely mount one end to the top of the case piece with the 5/8" screw.
- 2. Position the case piece against the wall in the desired location.
- 3. Pull the anti-tip strap taut and mark the position of where you will secure the other end on the wall.
- 4. Drill a 1-1/4" hole in the spot you marked.
- 5. Tap in plastic wall plug.
- 6. Fasten anti-tip strap with wall screw provided.

(Please install the anti-tiping kit in the middle of the case piece if only have one set of anti-tipping kit.)

