



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

509963
Accent Chair

ITEM: **509963**



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


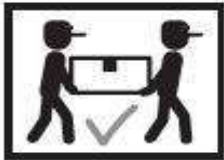


 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.





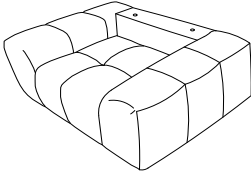


ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A CHAIR SEAT		1PC	D BACKREST CUSHION		1PC
B PILLOW		1PC	E LEG		4PCS
C HEADREST		1PC			

HARDWARE IDENTIFICATION


1 BOLT (5/16" X 70mm - RBW)		8PCS	5 ALLEN WRENCH (M4 - RBW)		1PC
2 LOCK WASHER (5/16" X 12mm - RBW)		8PCS	6 HEADREST CONNECTOR		2PCS
3 FLAT WASHER (5/16" X 16mm - RBW)		8PCS			

ITEM: **509963**


ASSEMBLY INSTRUCTIONS




STEP 1

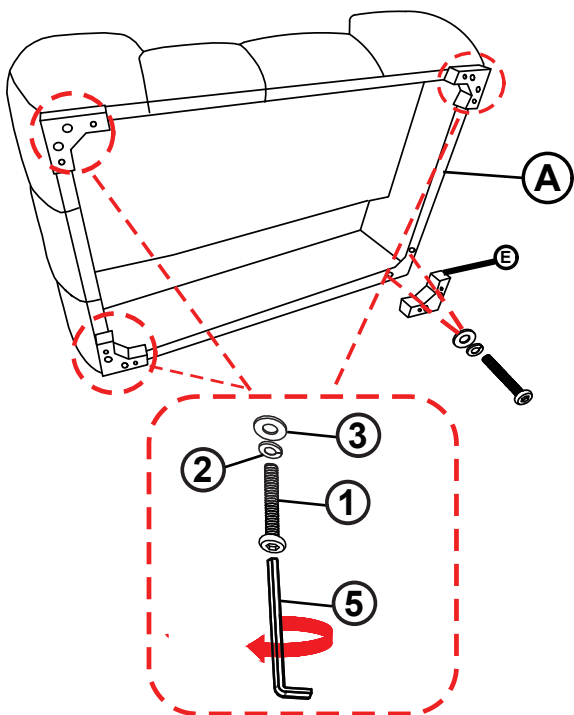



STEP 2

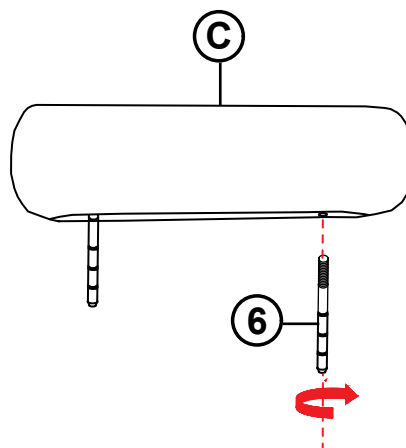


STEP 3

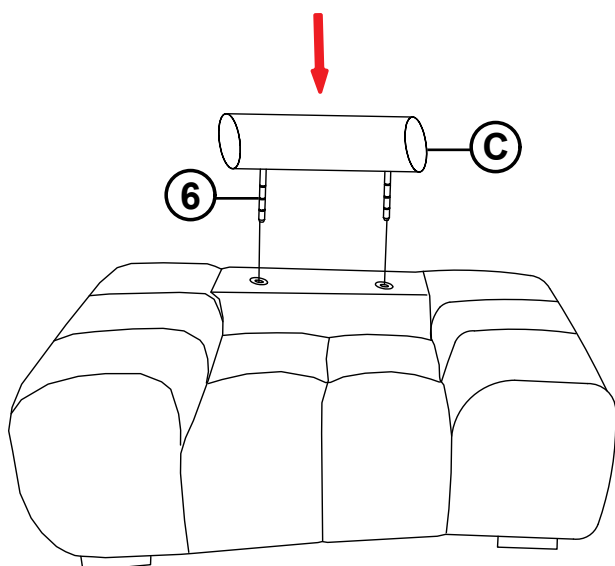

STEP 4 COMPLETE

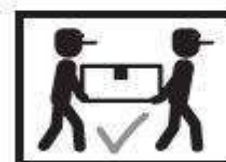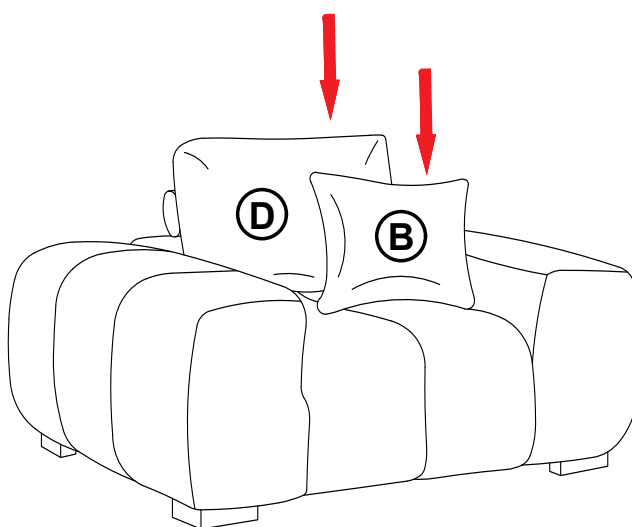

ITEM: **509963**

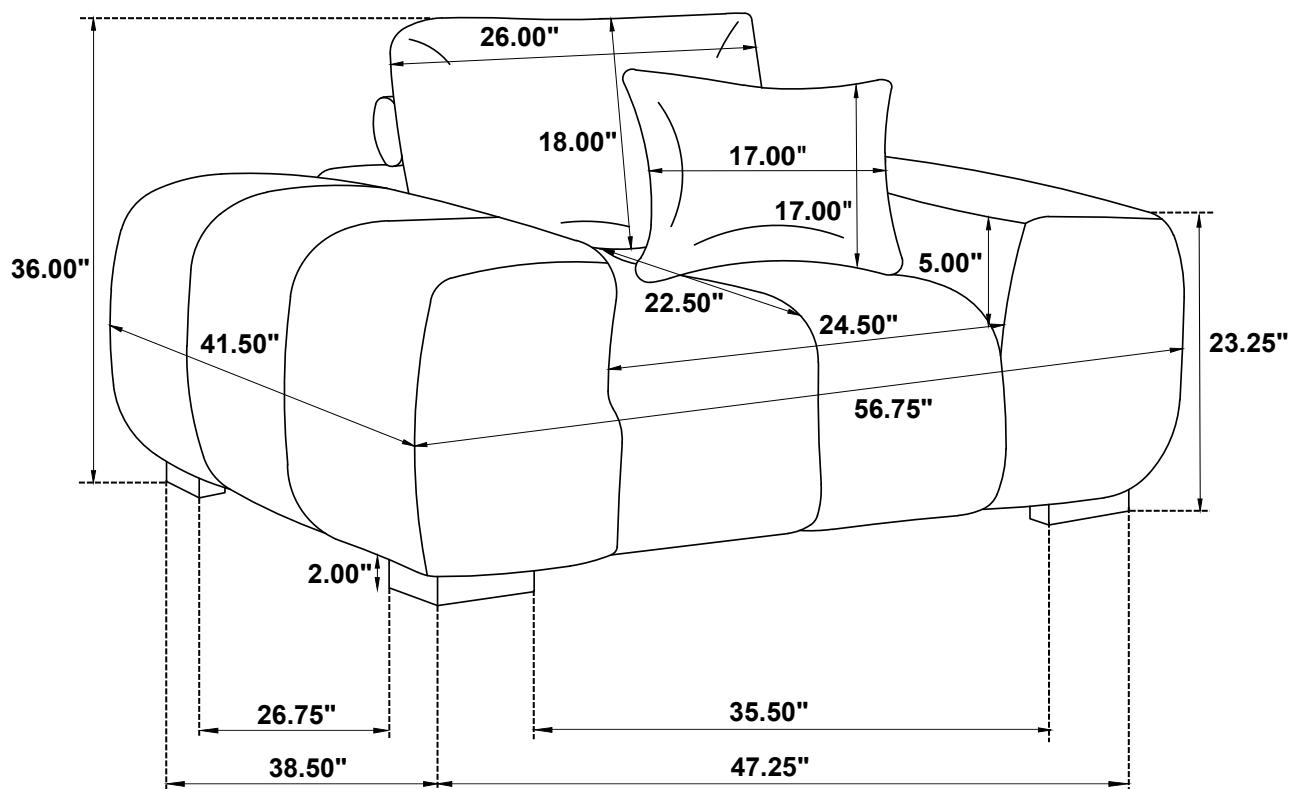

Note: Dimension tolerance $\pm 5\%$