



8471


Model # D4381WNAB3SHTT
Model # D4381WNAB3SHTB

Model # D438102783SHTT
Model # D438102783SHTB

ASSEMBLY INSTRUCTIONS NOTICE DE MONTAGE


**Place tracking label here
Placez l'étiquette de garantie ici**

** Please keep these instructions, and have the product model #, and part # available when requesting a service.
** Veuillez conserver ce notice de montage, et avoir en main le numéro du modèle, et de la pièce pour fin de service.

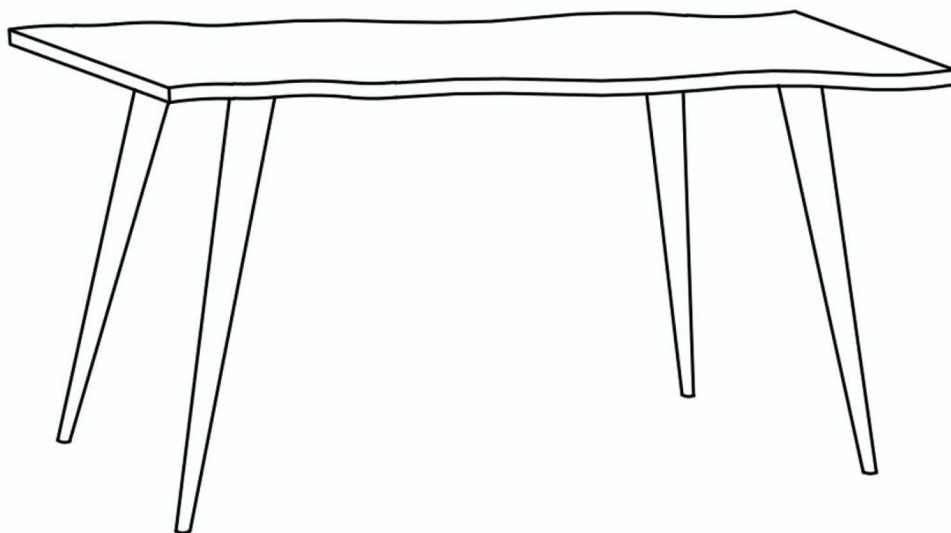

IMPORTANT NOTE


 
Do not use a power tool to assemble this product as it could damage the thread of the hardware and affect the solidity/durability of the product.



NOTE IMPORTANTE

Ne pas utiliser d'outil électrique pour assembler ce produit car cela pourra endommager le filet des quincailleries et par le fait même affecter la solidité/durabilité du produit.

 8471 Dining Table / CC
 Model # D4381WNAB3SHTT + D4381WNAB3SHTB
 Model # D438102783SHTT + D438102783SHTB

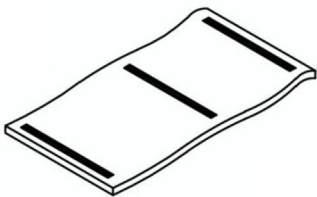29838-02-8471 -00001			1	29838-02-8471 -00002	
A	B	C		2	
					
16X	16X	1X	1X	4X	

