# DENON®

# AVR-X3200W

#### INTEGRATED NETWORK AV RECEIVER

# **Quick Start Guide**

Guide de configuration rapide / Guía de configuración rápida

# **Read Me First....**

Lisez-moi en premier.... / Lea esto primero....

Please do not return this unit to the	Check our AVR setup tips online Usa.denon.com/SetupTips Ca.Denon.com/SetupTips	
store.	Call for Assistance	
If you need help	1-855-MY.DENON (USA) 1-855-693-3666	
	1-800-668-0652 (Canada)	
X	Monday – Friday 10:00AM to 10:00PM E.S.T Saturday 12:00PM to 8:00PM E.S.T	

ENGLISH

FRANÇAIS


ESPAÑOL

# Welcome

# **Before You Begin**

Thank you for choosing a Denon AV receiver. This guide provides step-bystep instructions for setting up your AV receiver.

### **Required for Setup**

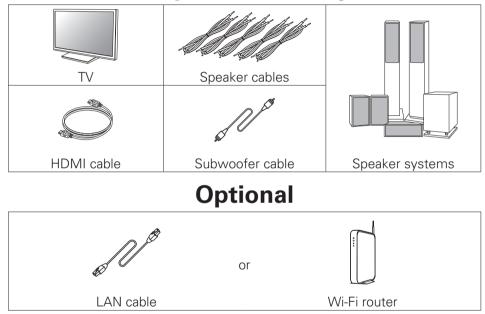

- When connecting this unit to a device that is compatible with the Deep Color, 4K and ARC functions, use a "High Speed HDMI cable with Ethernet" that displays the HDMI logo.
- These drawings are for illustrative purposes only and may not represent the actual product(s).

### What's In the Box

Quick Start Guide	$\langle \rangle$	FM indoor antenna	and the second s
Safety Instructions	$\bigcirc$	AM loop antenna	Q
Notes on radio	$\diamond$	Sound calibration microphone	$\downarrow$
Warranty (for North America model only)	$\diamond$	Sound calibration microphone stand	
Cable labels		Remote control unit	UIIBE
Receiver	0 0	R03/AAA batteries	<u> </u>
Power cord	Þ		

#### **6**


The supplied Sound calibration microphone stand is convenient for use when performing Speaker Calibration. Using your own tripod or the supplied Sound calibration microphone stand enables settings to be automatically configured to the optimum listening environment, providing exceptionally high performance.

## Setup

There are three steps to the setup process.


[1		Installing batteries in the remote control unit
2		Connecting the receiver
3	3	Following the On-Screen Setup Assistant



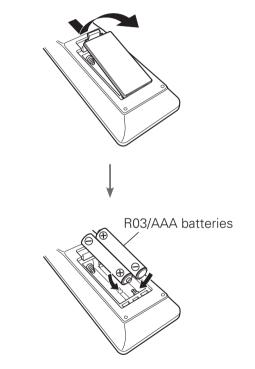



2.1) Place the receiver near your TV and connect the power cord.

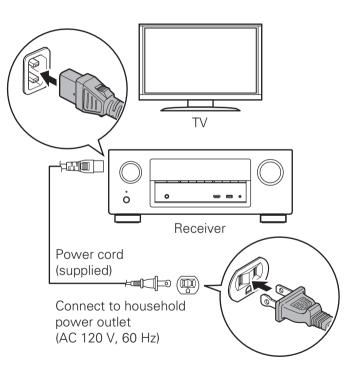


#### 2.2) Connect to the network.

#### Wired LAN


When connecting cables (wired connection), connect a LAN cable between your receiver and your network router.

### Wireless LAN

When using a wireless connection (Wi-Fi), rotate the antennas upward.

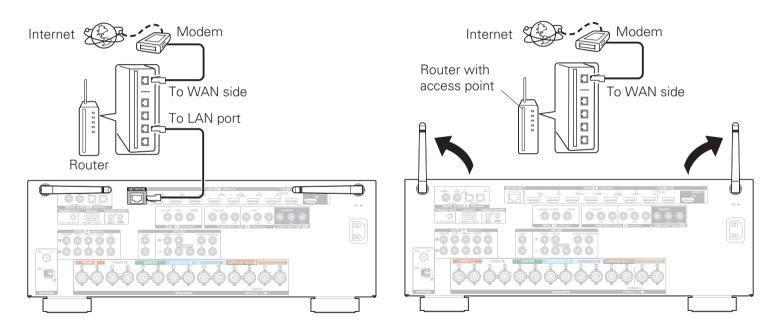


2.3) Connect the receiver to your TV with an HDMI cable.

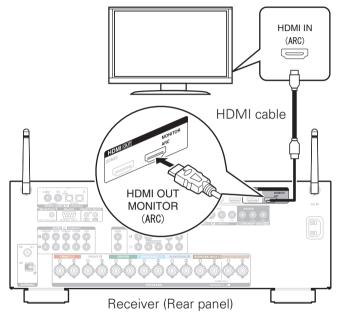

#### ARC (Audio Return Channel) :

If your TV supports ARC, your TV can send audio back to the AV receiver when you are using your TV's built-in video sources (TV tuner, Smart TV streaming services, etc...) ARC requires that you enable HDMI CEC on your TV. Please refer to your TV's Owner's Manual for instructions on how to setup HDMI CEC. Note that some TV manufacturers use other names for the HDMI CEC function.


2.4) Turn on the TV.

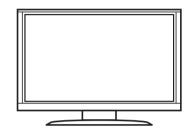




TV remote control unit

2.5) Select the appropriate HDMI input on your TV.

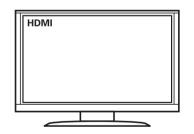


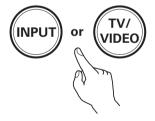

TV remote control unit

#### 2.6) Turn on the receiver.

• Press 🕁 to turn on the receiver.

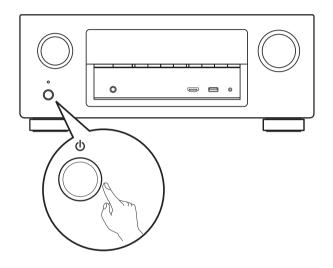

#### 2.7) Verify the connection.

• Verify that you can see this screen on your TV.


💥 AV Reciever Setup Assistant
Please select a language English Français Español

If this screen is not displayed, please go back and retry the steps again in the recommended sequence.

# **3** Following the On-Screen Setup Assistant

The Setup Assistant will walk you through connecting and configuring your speakers and components to your Denon receiver. Please use the remote control and follow the on-screen instructions.



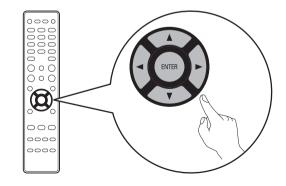

# **Owner's Manual**

- For more information, visit www.denon.com
- Refer to the Online Manual for other functions information and operation procedure details. <u>manuals.denon.com/AVRX3200W/NA/EN/</u>



Online Manual



#### DENON®

www.denon.com

Printed in China 5411 11306 00AD Copyright © 2015 D&M Holdings Inc. All Rights Reserved.