

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

108931
Dining Table

ITEM: **108931**



ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

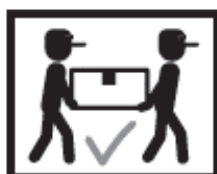


ASSEMBLY TIME

25 MINUTES


PART IDENTIFICATION

 A TOP

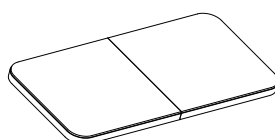

1PC

 B LEAF



1PC

C LEG



4PCS

D LEG SUPPORT

 


1PC

HARDWARE IDENTIFICATION

1

BOLT
(5/16" x 50mm - BLK)



8PCS

2

LOCK WASHER
(1.6 x 14mm - BLK)



8PCS

3

FLAT WASHER
(1 x 18mm - BLK)



8PCS

4

ALLEN WRENCH
(M5 x 70mm - BLK)



1PC

5

FLAT HEAD SCREW
(8 x 63mm - BLK)

 


4PCS


ITEM: **108931**

ASSEMBLY INSTRUCTIONS

STEP 1

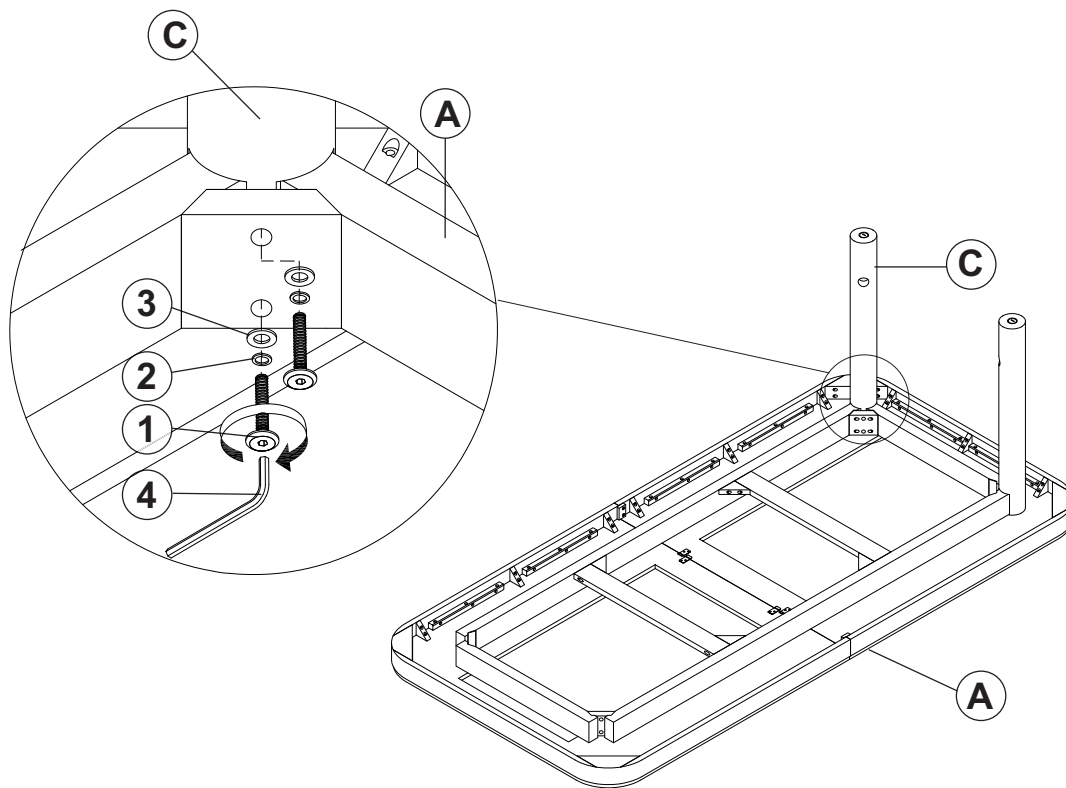

 STEP 2

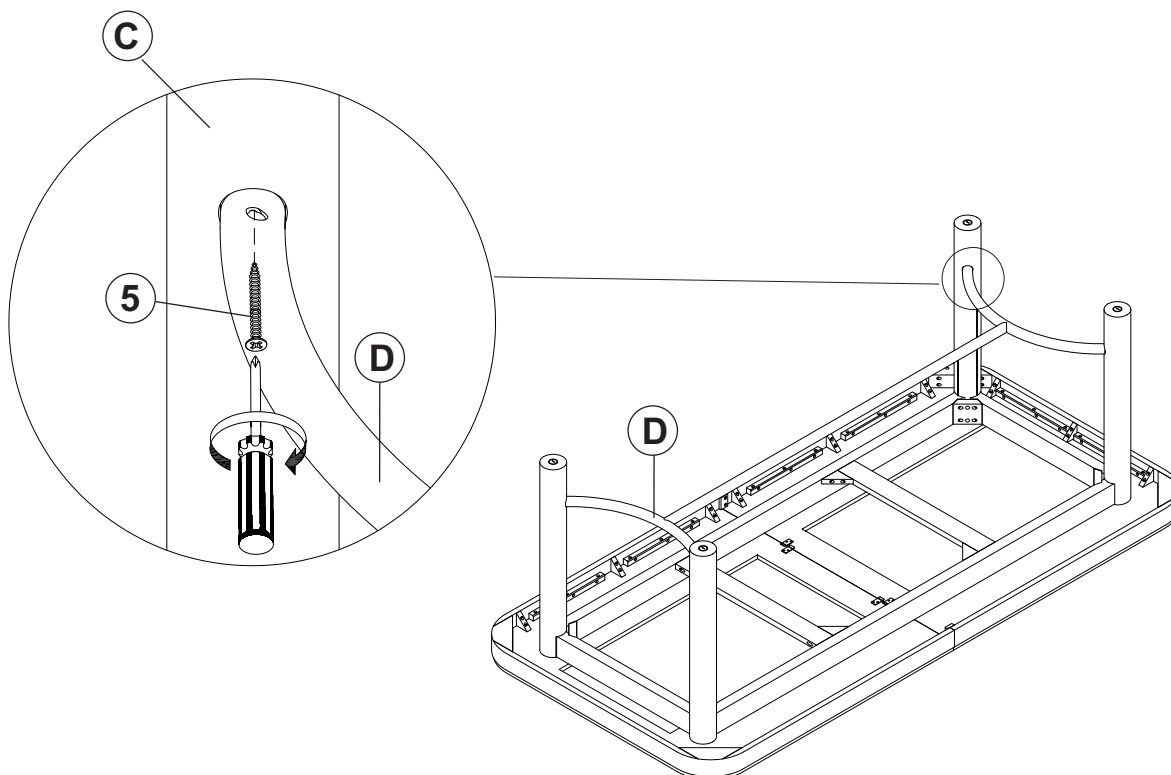

ITEM: **108931**

 
ASSEMBLY INSTRUCTIONS

STEP 3


ATTENTION !

Do not fully tighten bolts in this step.

COASTER
FINE FURNITURE

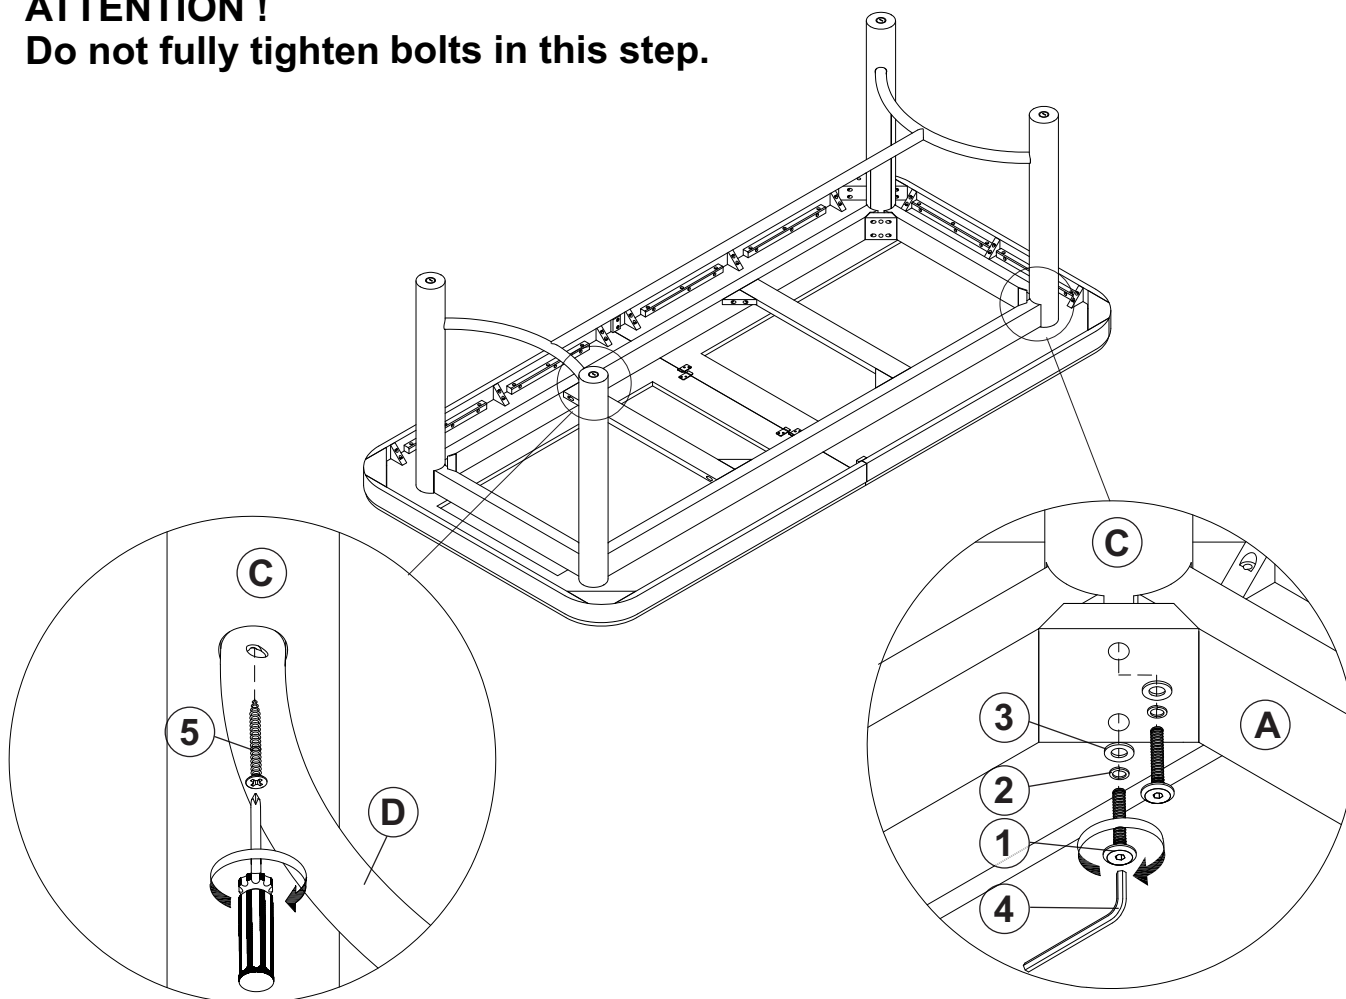


 
STEP 4

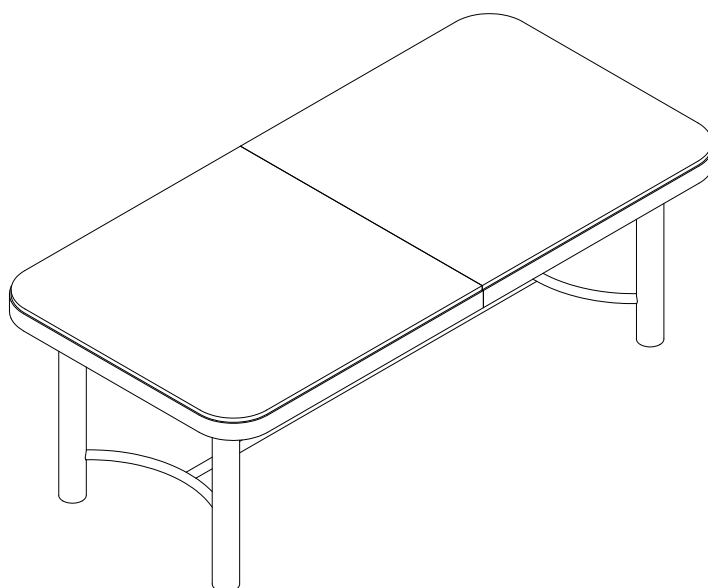


ITEM: **108931**

ASSEMBLY INSTRUCTIONS

  STEP 5

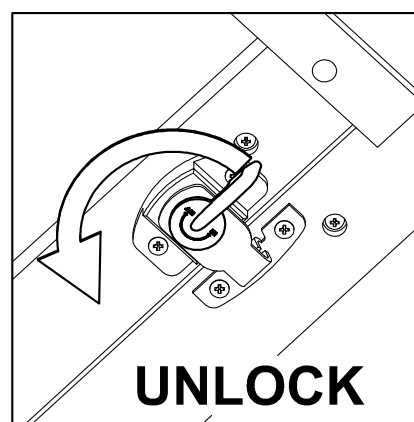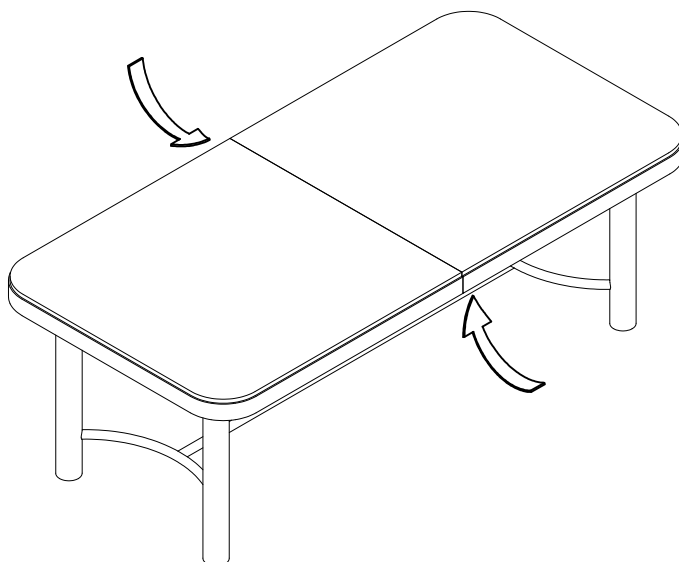

 STEP 6

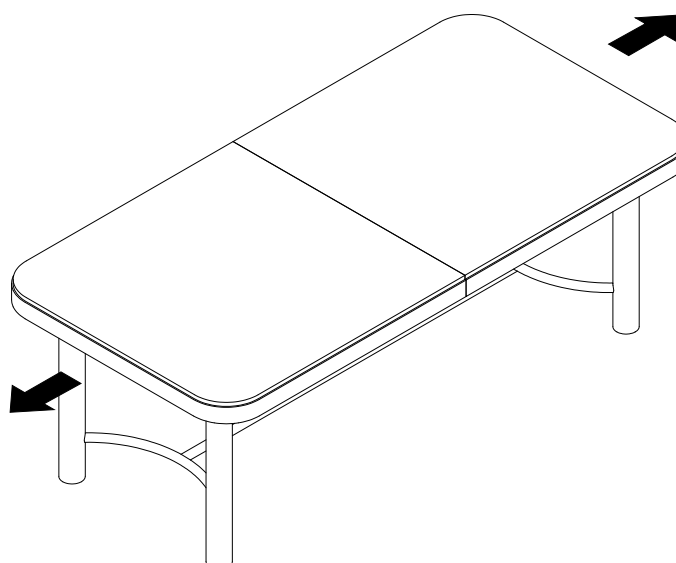


ITEM: **108931**


ASSEMBLY INSTRUCTIONS



 STEP 7

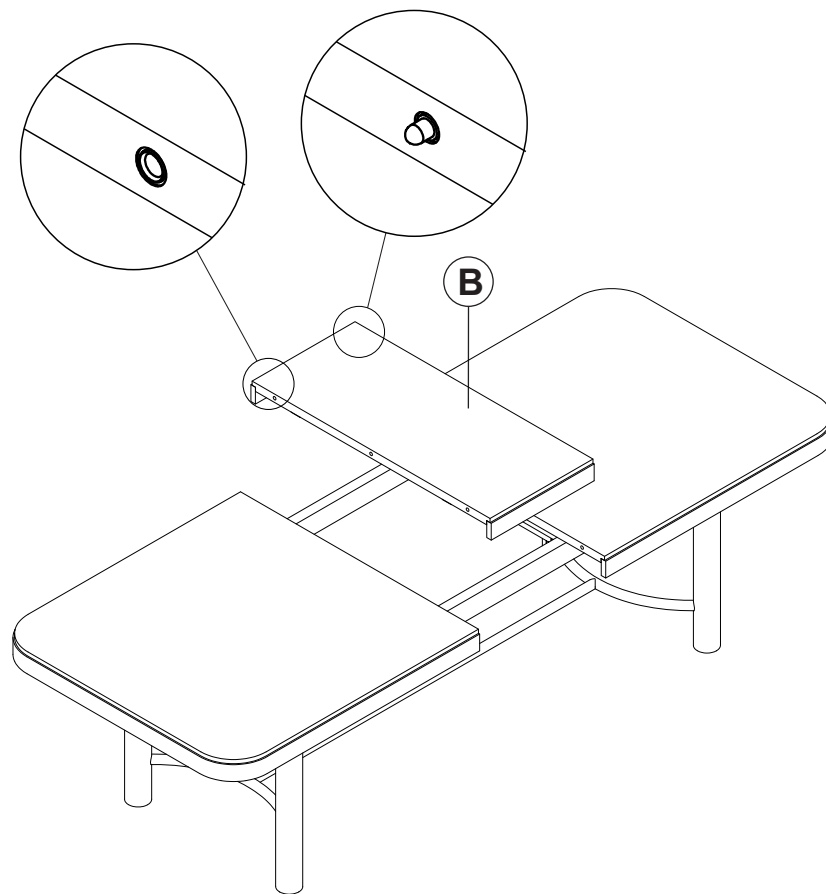


 
STEP 8

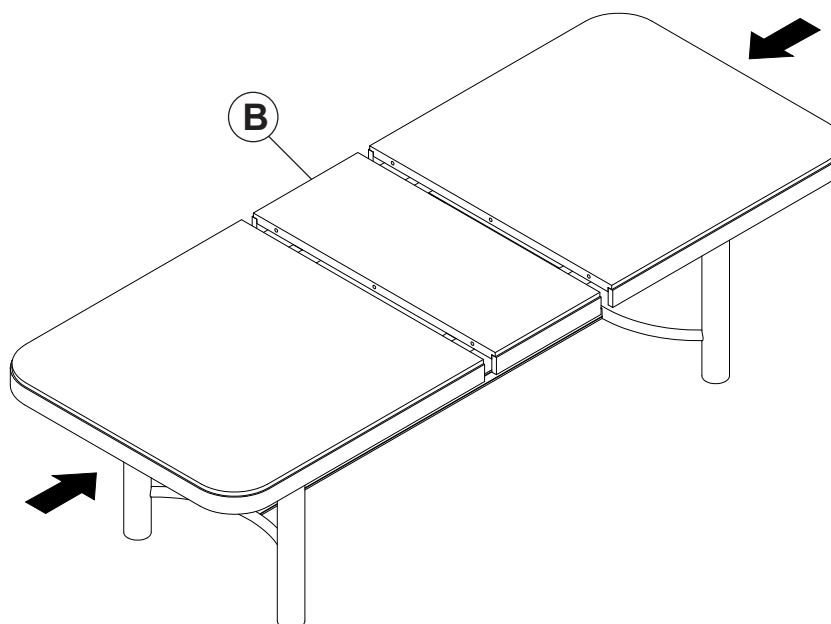



ITEM: **108931**

ASSEMBLY INSTRUCTIONS

  
STEP 9

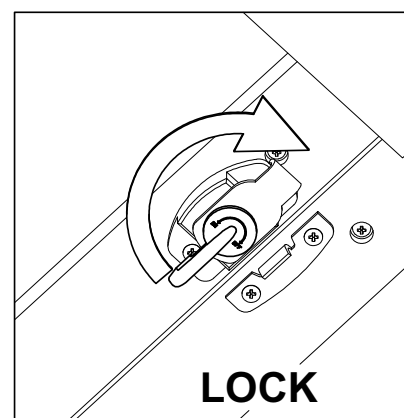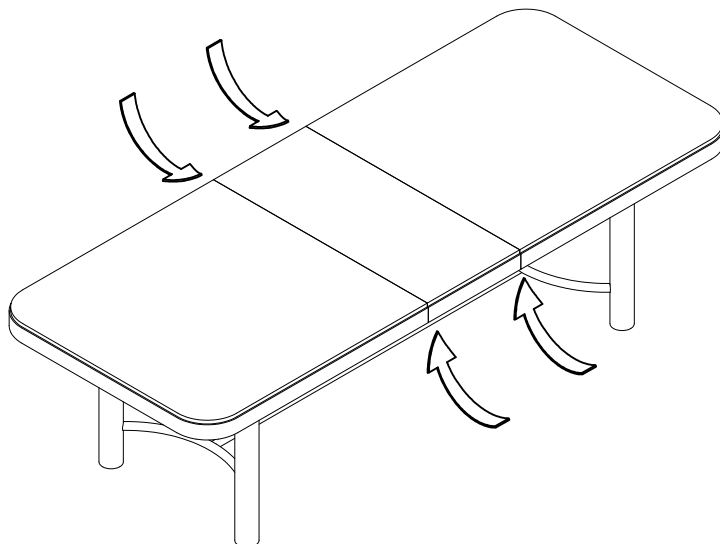

  STEP 10 COMPLETE

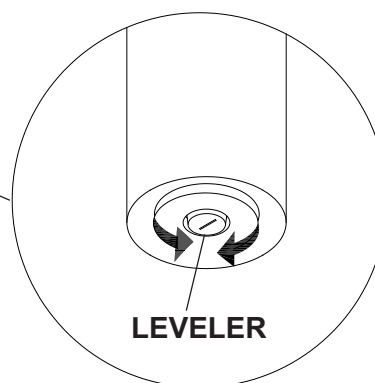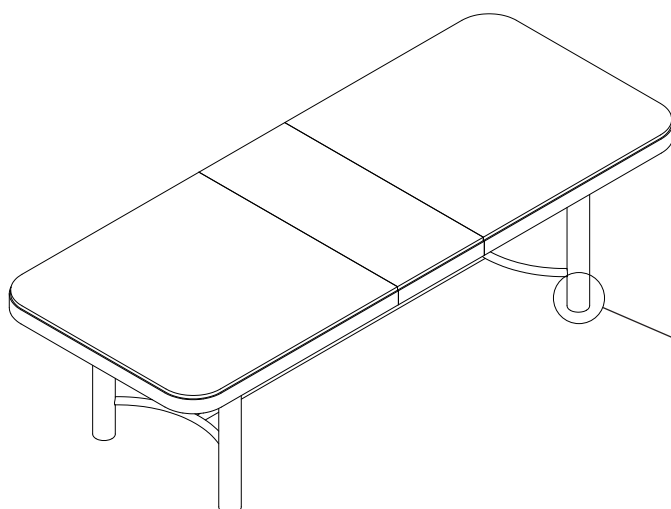

ITEM: **108931**

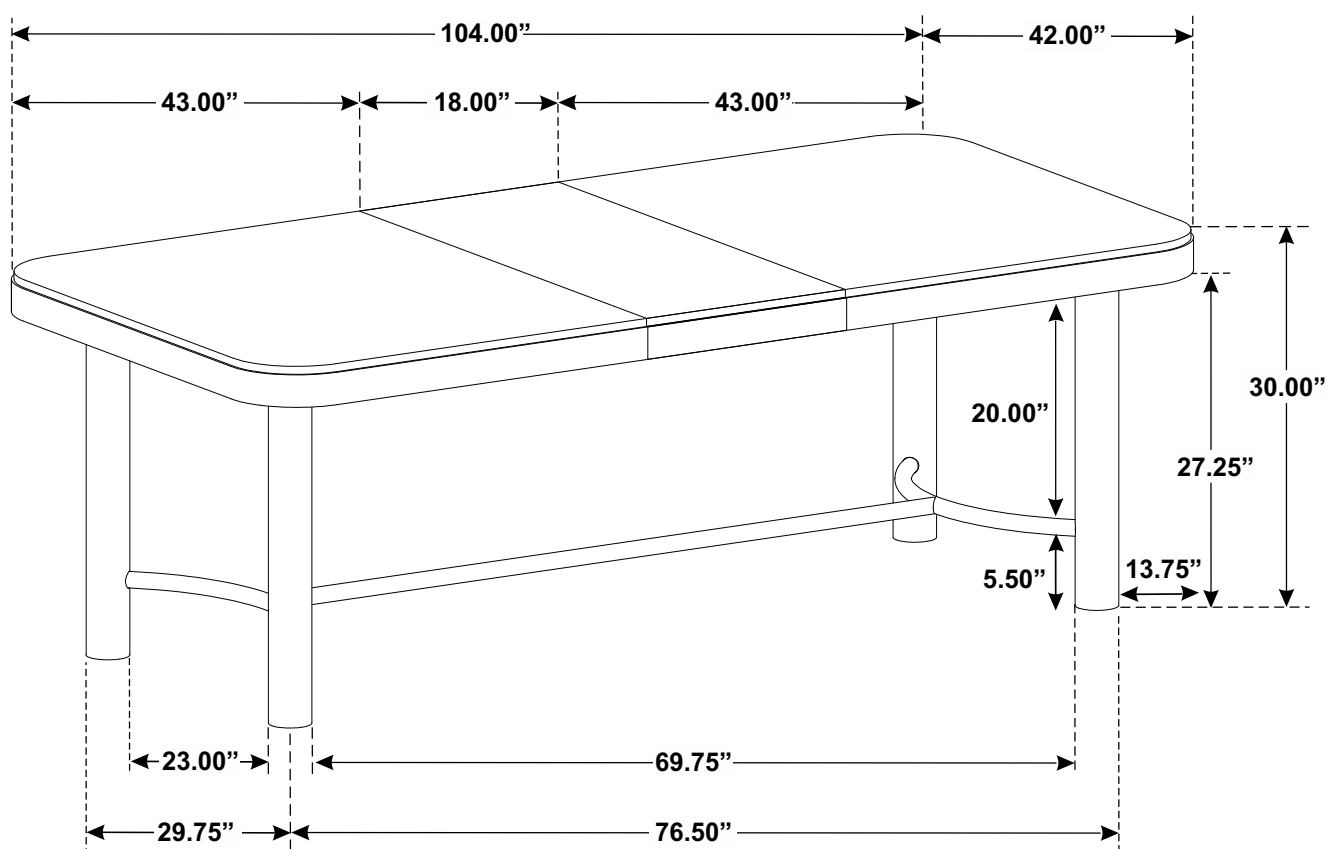 

Note: Dimension tolerance $\pm 5\%$