



# Pressure Balance Shower Systems

Installation Guide and Users Manual



This product can expose you to chemicals including nickel, which is known to the State of California to cause cancer, and birth defects or other reproductive harm.

For more information go to www.P65Warnings.ca.gov.

Even though the materials used in all ZLINE
Kitchen and Bath products conform to all
federal government regulations and all
national product standards, California's
Prop 65 requires all businesses to provide
a "clear and reasonable warning" if one or
more listed chemicals may be present in
the product, even if that chemical is
present in trace quantities



Sourced with materials from across the world, ZLINE's shower systems are easy to operate, reduce water waste, and complement bathroom décor. This exclusive collection blends modern technology with traditional appeal — offering a wide array of finishes.

ZLINE showers offer an aerated water flow for resource conservation, helping both the environment and your wallet. The housing material composition consists largely of brass, which is extremely durable and leak proof. Each shower system produced is examined thoroughly by hand to ensure quality and consistency.

# TABLE OF CONTENTS

<ul><li>SAFETY INSTRUCTIONS</li></ul>	1
Prior to Installation	
Safety Tips	
Care and Maintenance	
BLISS SHOWER SYSTEM (BLS-SHS)	2
Parts	
Dimensions	
Tools	
Assembly	
• EL DORADO SHOWER SYSTEM (ELD-SHS)	22
Parts	
Dimensions	
Tools	
Assembly	
SHOWER FAUCET	42
Parts	
Tools	
Assembly	
<ul><li>TROUBLESHOOTING</li></ul>	47

#### SAFETY INSTRUCTIONS

#### Prior to Installation

- Make sure that the cold and hot water lines are turned off.
- Wrap all threaded connections with Teflon tape. Always wrap in a clockwise direction.
- Cover your drain to avoid losing parts.
- Do not disassemble the main system body, as it has been installed and commissioned correctly and precisely before delivery to the factory.
- To keep the system from jamming, flush the water pipe before installation.


Operating conditions: Working pressure at 0.05-1.0 MPa (including cold and hot water pressure) with applicable water temperature: 39.2°F - 194°F.

#### Care and Maintenance

To keep the product clean and shining, follow the steps below:


- 1. Rinse clean with water and dry with a soft cloth.
- 2. Do not clean with soaps, acid, polish, abrasives, or harsh cleaners.
- 3. Do not use cloth with a coarse surface.
- 4. Unscrew the aerator and clean when necessary.

- If soldering the water connections when installing the system, remove the O-rings, cartridges, and washers before applying any heat.
- Protect your eyes when cutting or soldering.
- Do not over tighten screws/nuts. Finger tighten, then use a wrench/screwdriver to tighten the fixing screw/nut until snug.

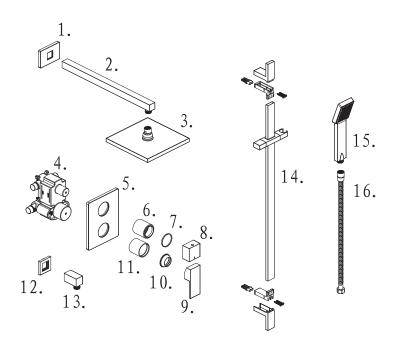


- 1. Flange cover
- 2. Shower arm
- 3. Top spray shower
- 4. Wall valve body
- 5. Faceplate
- 6. Sleeve
- 7. Washer
- 8. Steering handle


- 9. Switch handle
- 10. Cap
- 11. Sleeve
- 12. Flange cover
- 13. Angle valve
- 14. Shower rail
- 15. Shower handle
- 16. Hose

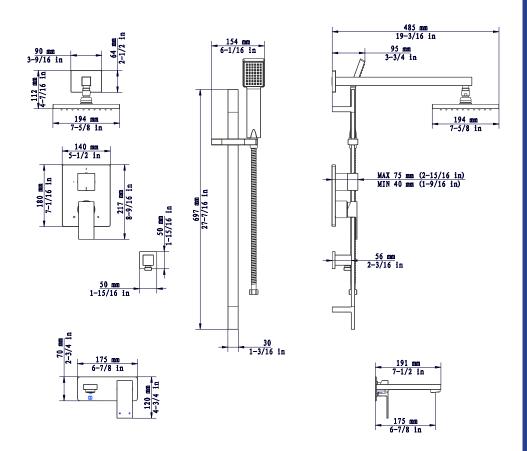


#### Tools:

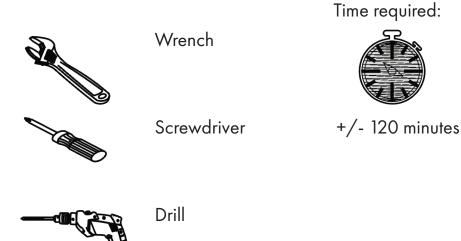




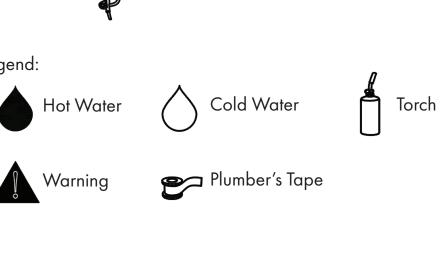

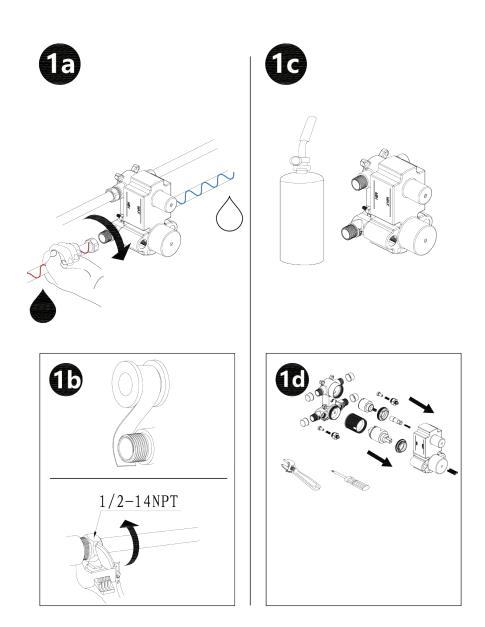


Slide the sleeves onto the pipes and then insert pipes into the wall valve. Tighten the ring around the pipes with the wrench. **NOTE**: If welding is involved, you must remove the internal valve components prior to the welding. Please note the original position of the cartridge.


2

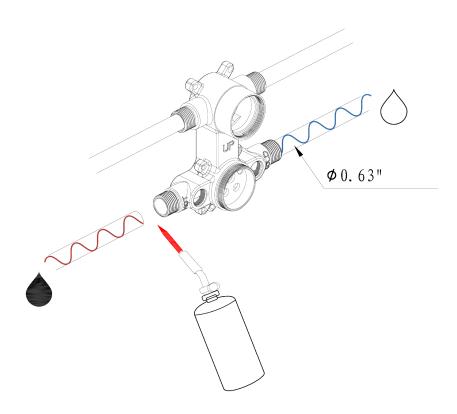


Weld the copper together or use plumber's tape to prevent leaks.

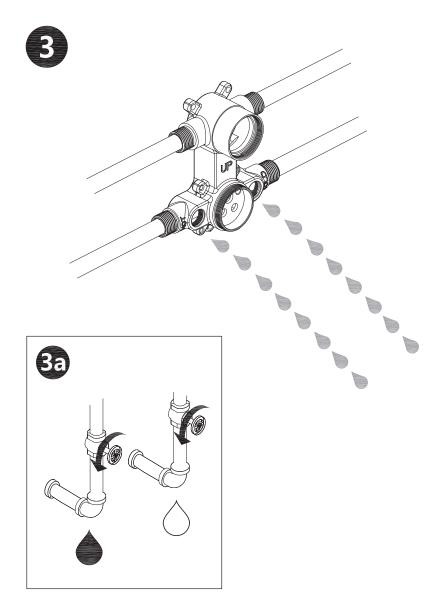

After welding, purge the water supply system for 30 seconds.

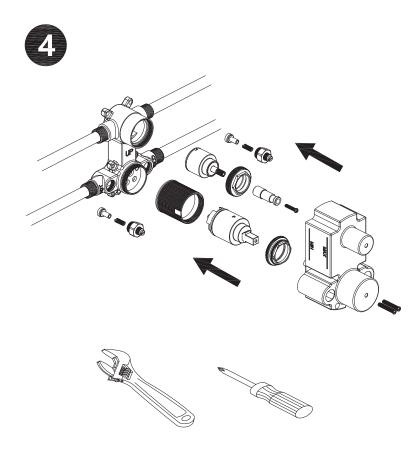


Reinstall the valve components into their original positions.

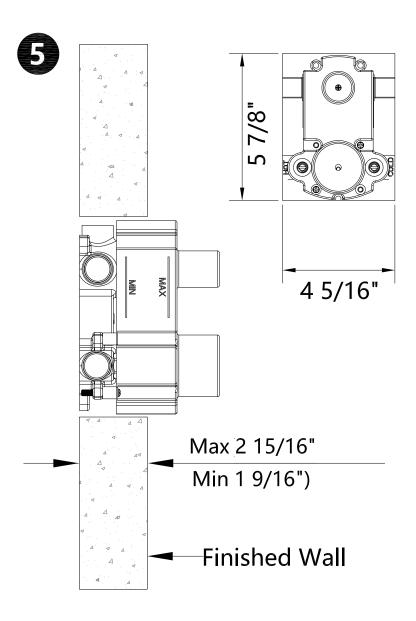


Use this diagram to understand the placement of the wall valve.




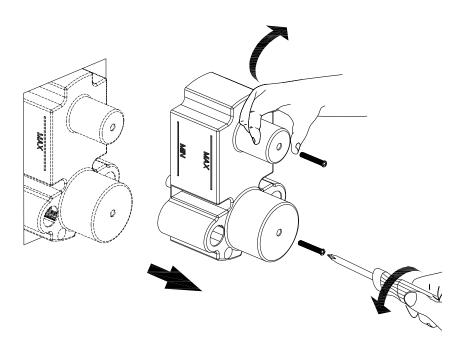


Screw the wall valve body into the system with a screwdriver. Do not overtighten.

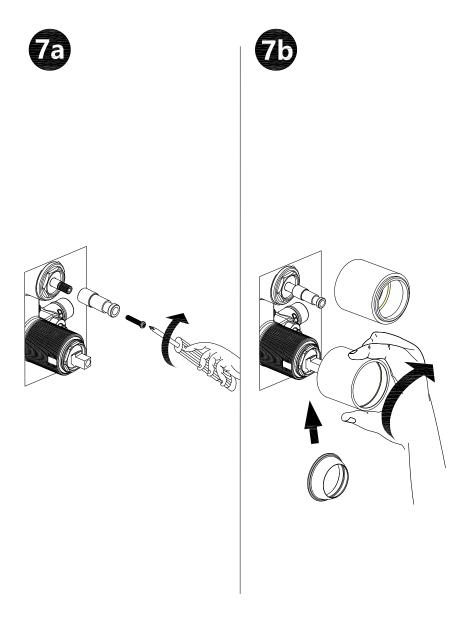

Screw the sleeve and washer into the wall valve body.

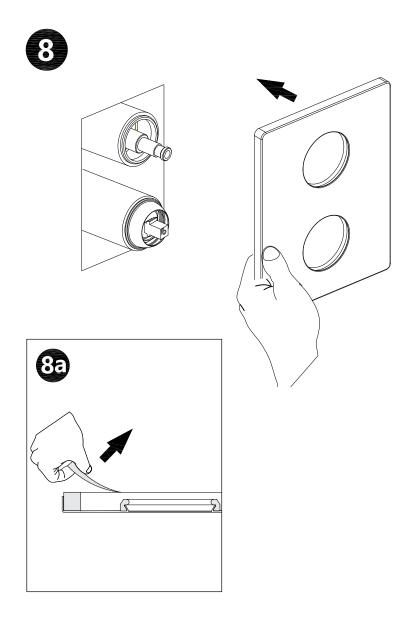



Attach the face plate and remove the plastic.

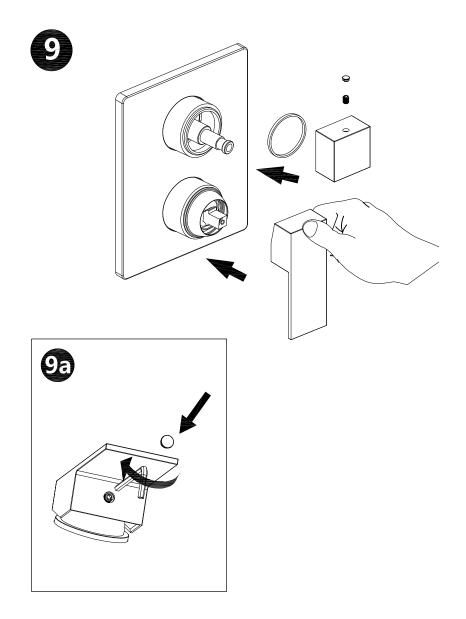


Attach the steering handle.




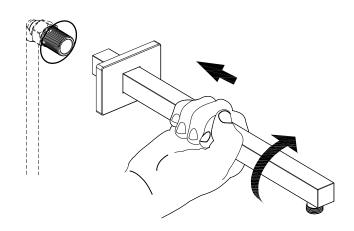

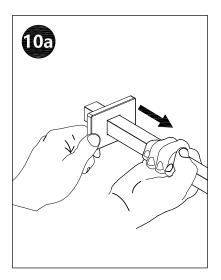

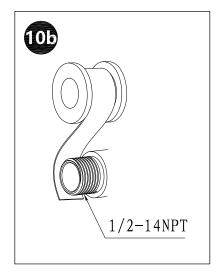



Connect the flange cover to the spout in the wall. Secure with plumber's tape to prevent leaks.

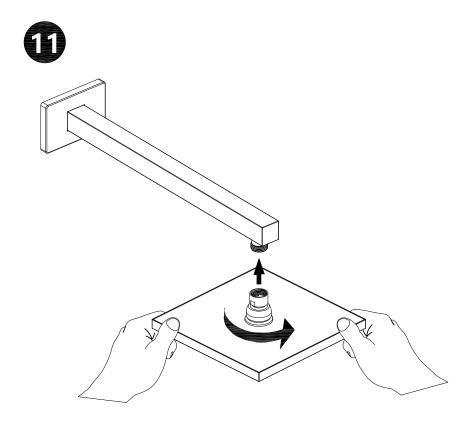


Twist the top spray shower into the shower arm.




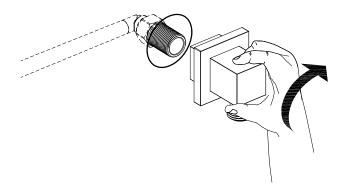


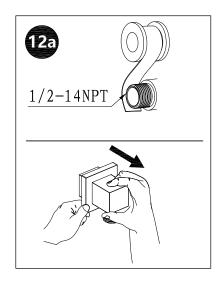


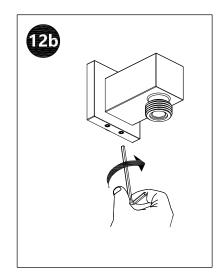

Connect the angle valve to the flange cover and screw together. Secure with plumber's tape to prevent leaks.

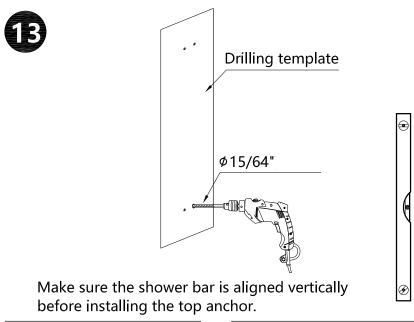


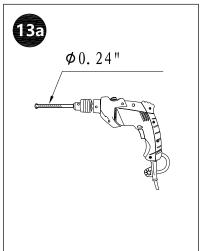

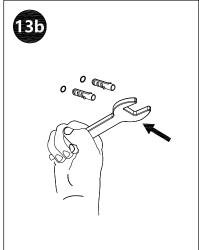


Use a pencil to mark the mounting holes on the wall. Use a wrench to put the screws in.




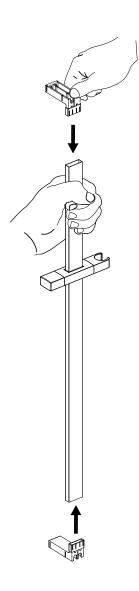


Connect the components of the shower rail.

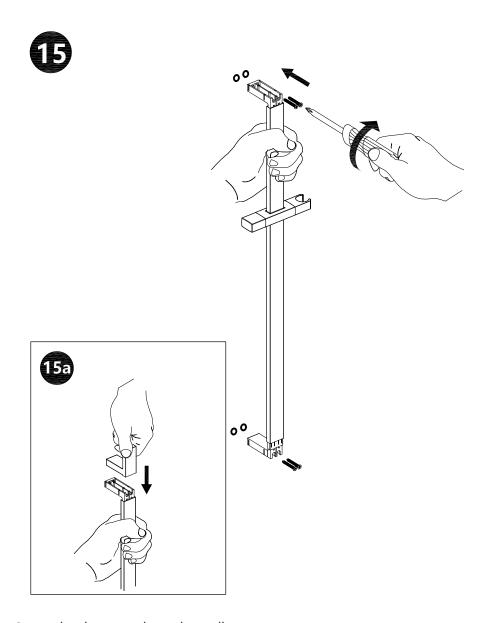


Screw the shower rail into the wall.

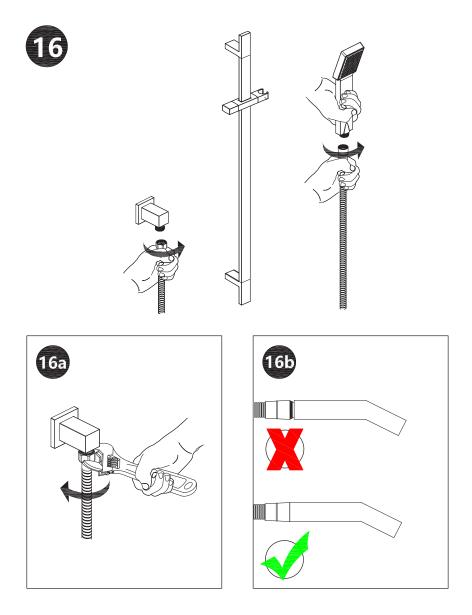

Connect the shower handle to the shower rail. Tighten with a wrench.

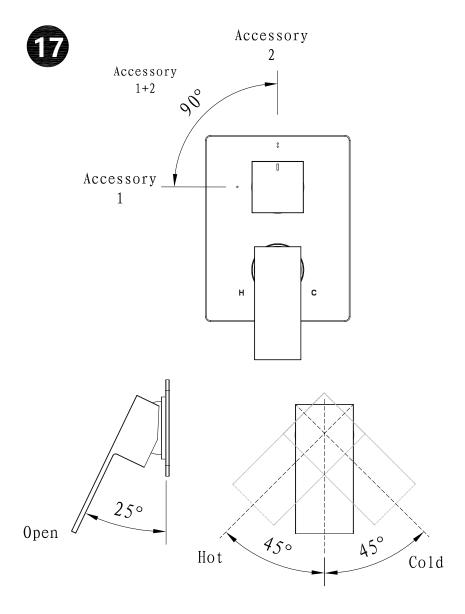


Review the diagram to understand the hot, cold, and open settings.

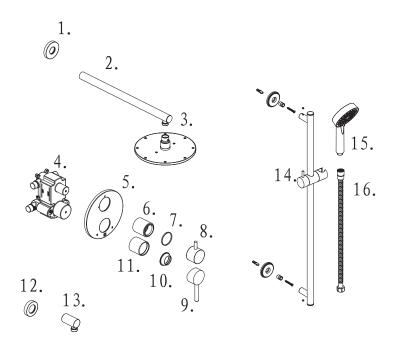


- 1. Flange cover
- 2. Shower arm
- 3. Top spray shower
- 4. Wall valve body
- 5. Faceplate
- 6. Sleeve
- 7. Washer
- 8. Steering handle

- 9. Switch handle
- 10. Cap
- 11. Sleeve
- 12. Flange cover
- 13. Angle valve
- 14. Shower rail
- 15. Shower handle
- 16. Hose

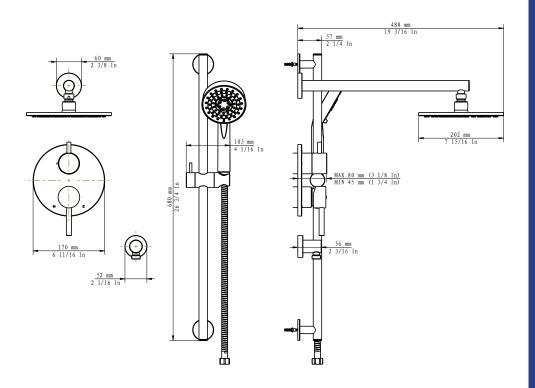


#### Tools:

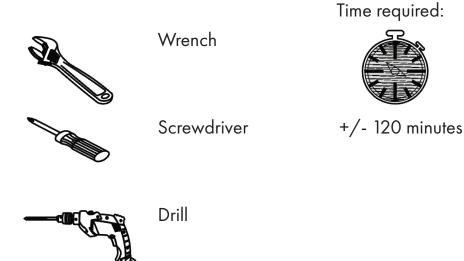






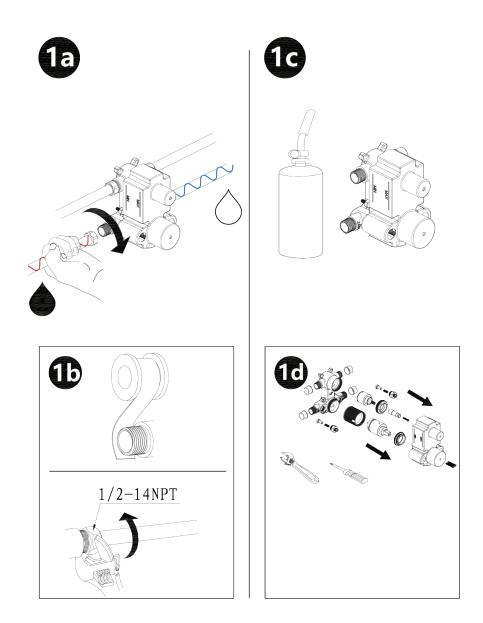


Slide the sleeves onto the pipes and then insert pipes into the wall valve. Tighten the ring around the pipes with the wrench.


2

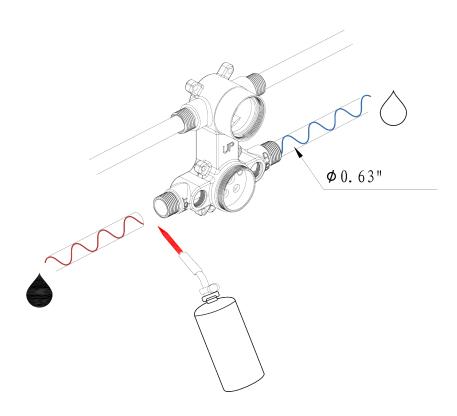


Weld the copper together or use plumber's tape to prevent leaks.

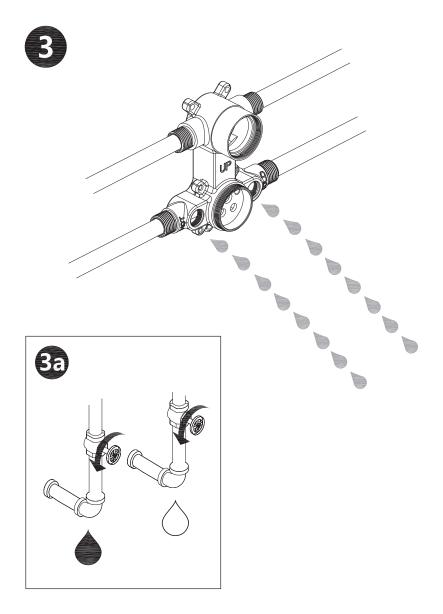


After welding, purge the water supply system for 30 seconds.

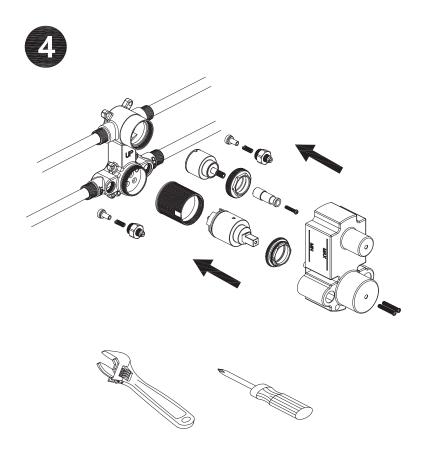


Reinstall the valve components into their original positions.

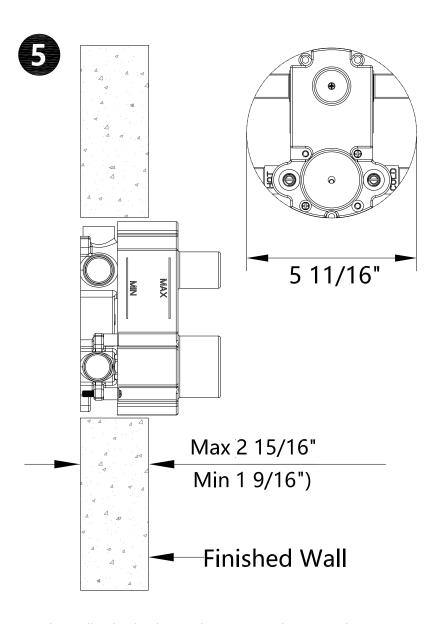


Screw the wall valve body into the system with a screwdriver. Do not overtighten.

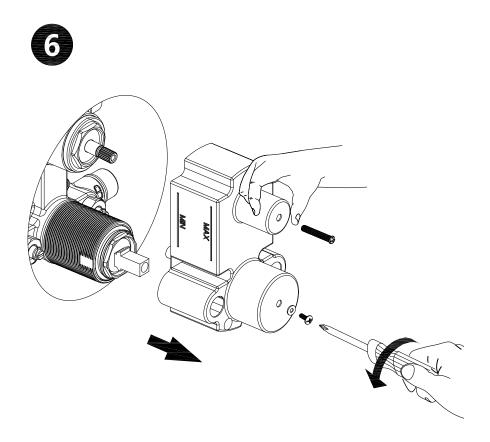


Place the components in the appropriate location.

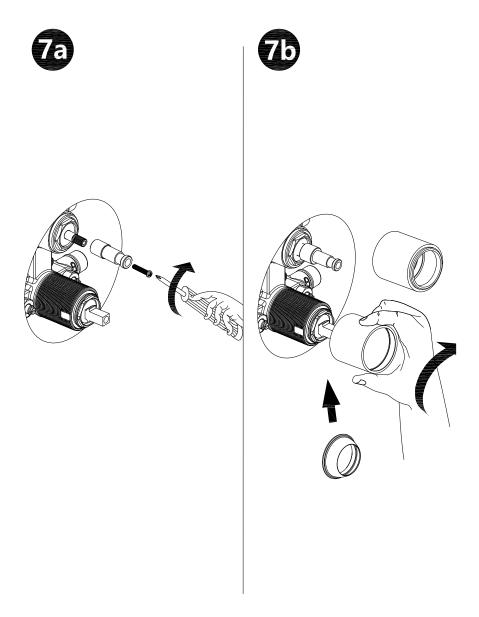


Screw the sleeve and washer into the wall valve body.

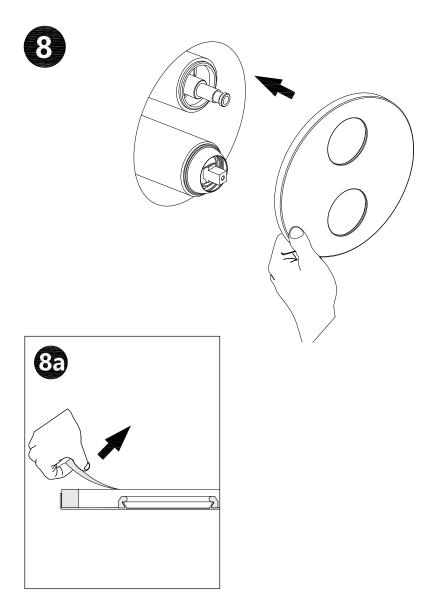



Attach the face plate and remove the plastic.

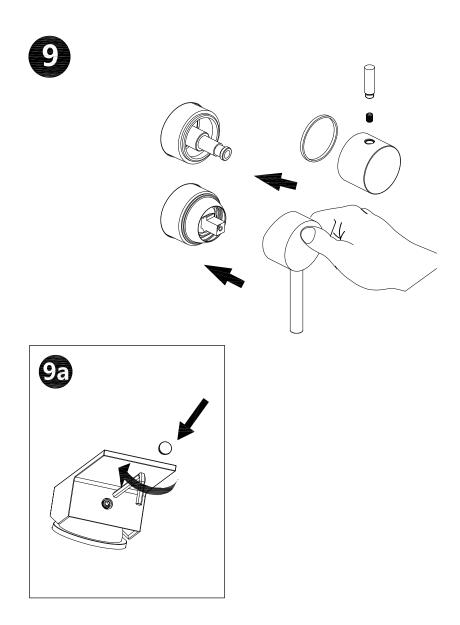

Attach the steering handle.

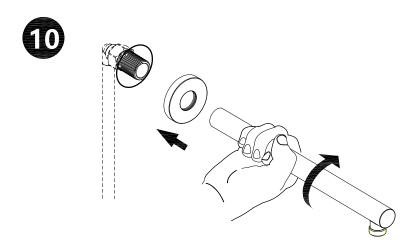


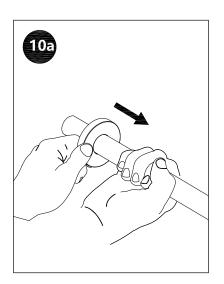

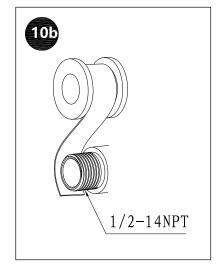


Connect the flange cover to the spout in the wall. Secure with plumber's tape to prevent leaks.



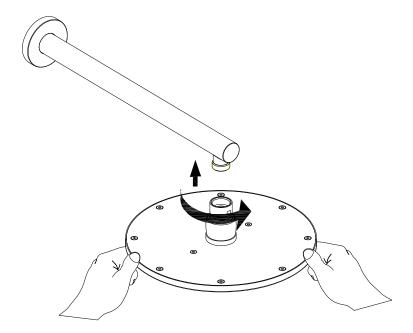



Twist the top spray shower into the shower arm.




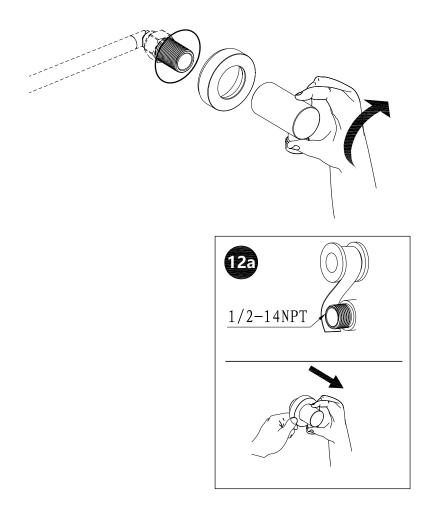

Connect the angle valve to the flange cover and screw together. Secure with plumber's tape to prevent leaks.

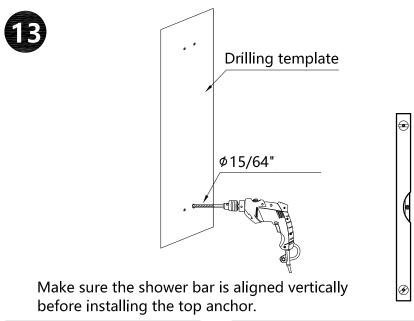


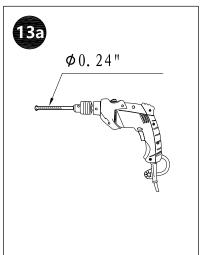

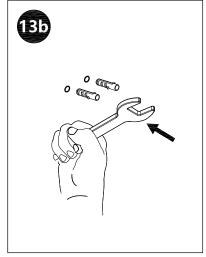

Use a pencil to mark the mounting holes on the wall. Use a wrench to put the screws in.




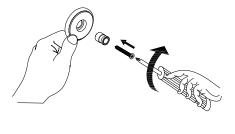




 Connect the components of the shower rail.







Screw the shower rail into the wall.

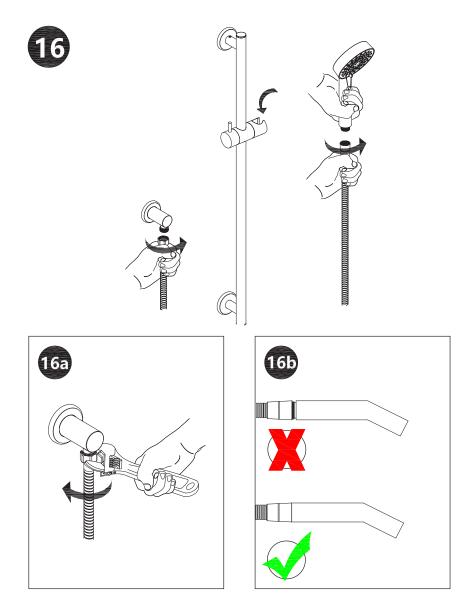

Connect the shower handle to the shower rail. Tighten with a wrench.

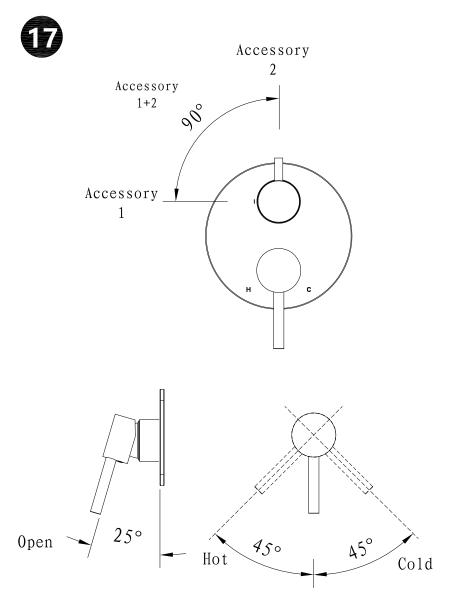


Review the diagram to understand the hot, cold, and open settings.

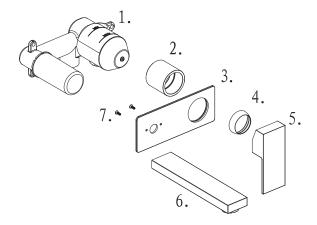



- 1. Rough-in
- 2. Sleeve
- 3. Faceplate
- 4. Cap
- 5. Handle
- 6. Spout
- 7. Screw


### Tools:

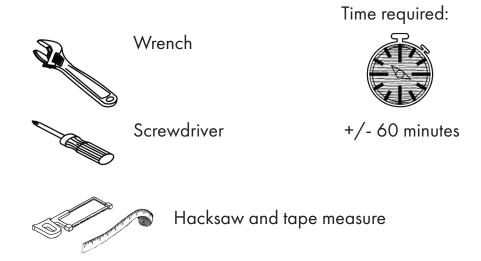

## Legend:

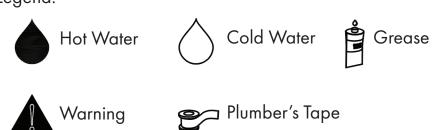


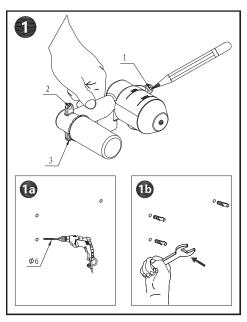

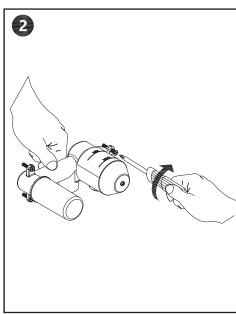


Mark on the wall where you want the faucet to be installed.


Use a screwdriver to screw the faucet onto the wall.

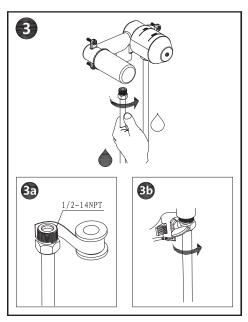


Attach the hose using plumbing tape and a wrench.

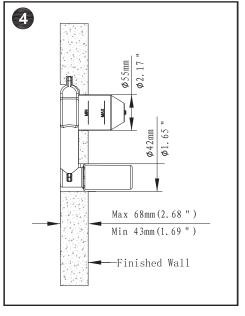


Place the components in the appropriate location.

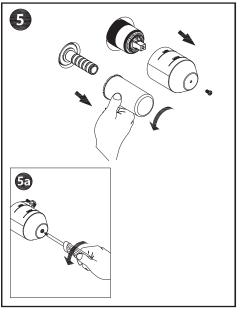

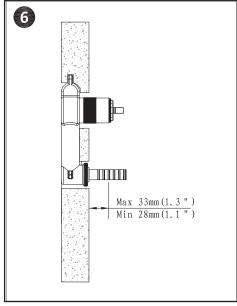


Screw the sleeve and washer into the wall valve body.


Make sure that the components are aligned properly.

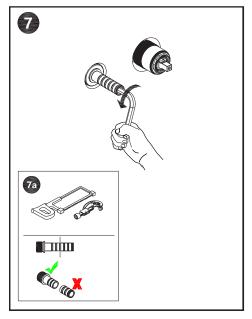


Tighten the components.

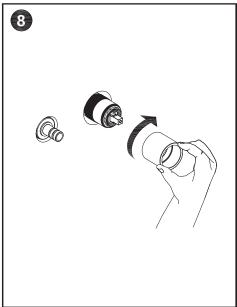


Take off the protective shield.

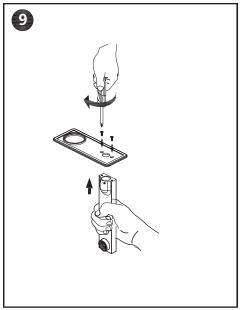

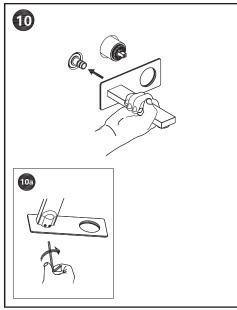


Attach faucet to base plate.

Attach base plate to wall.

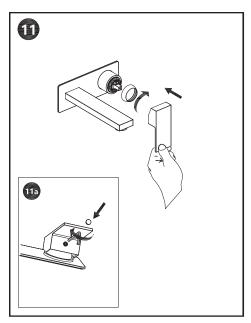

Attach handle to the fixture.

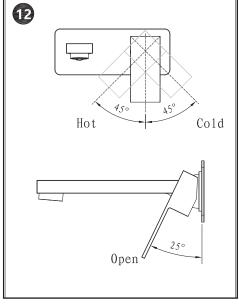

Review the diagram to understand the hot, cold, and open settings.

# Troubleshooting

Problem	Possible Cause	Solution
There is leakage under the handle.	The locking nut has come loose.	Unscrew the lever on the handle by hand. Loosen set screw with a hex wrench. Remove the handle and unscrew trim cap by hand. Tighten locking nut with an adjustable wrench.
Water will not shut off completely.	Cartridge may be defective.	Unscrew the level on the handle by hand. Loosen set screw with a hex wrench. Remove the handle and unscrew trim cap by hand. Unscrew the locking nut with an adjustable wrench. Remove ceramic disc cartridge. Check for cracks.
There is a leak between the spray head and the hose.	The spray head may be loose or the washer is not seated correctly in the hose connection.	Tighten the spray head by hand until snug. Make sure the washer is seated correctly.



#### Three Locations:

350 Parr Circle Reno, NV 89512

916 Delaware Avenue Marysville, OH 43040

427 Rowland Mill Road Bruceton, TN 38317

www.zlinekitchen.com

1-614-777-5004