

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

215791KE(B1-B3)
Eastern King Bed

ITEM: 215791KE(B1-B3)

COASTER
FINE FURNITURE

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

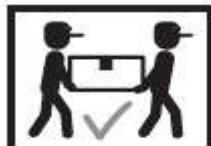


ASSEMBLY TIME


25 MINUTES

PARTS IDENTIFICATION



B1 (BOX 1)

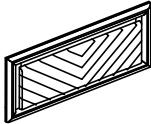A	HEADBOARD PANEL		1PC	C	RIGHT HEADBOARD LEG (WITH "R" LABEL)		1PC
B	LEFT HEADBOARD LEG (WITH "L" LABEL)		1PC	D	ADAPTER		1PC

 B2 (BOX 2)

E	FOOTBOARD		1PC	G	BED SLAT SUPPORT WITH LEVELER		8PCS
F	BED SLAT		4PCS	H	FOOTBOARD LEG		2PCS

 B3 (BOX 3)

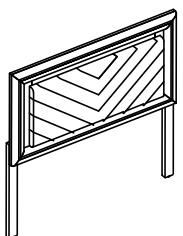I	BED RAIL		2PCS				
HB	215791KE(B1) FROM BOX 1 HEADBOARD COMPLETE		1PC	FB	215791KE(B2) FROM BOX 2 FOOTBOARD COMPLETE		1PC

ITEM: **215791KE(B1-B3)**

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 215791KE(B1)

1	SMALL ALLEN WRENCH (M4 x 65mm - BLK)		1PC	3	LOCK WASHER (1/4" - BLK)		6 PCS
2	BOLT (M6 x 30mm - BLK)		6PCS	4	FLAT WASHER (1/4" x 13mm - BLK)		6 PCS

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 215791KE(B2)

5	BIG ALLEN WRENCH (M5 x 65mm - BLK)		1PC	8	FLAT WASHER (5/16" x 22mm - RBW)		4PCS
6	BOLT (M8 x 16mm - RBW)		4PCS	9	FLAT HEAD SCREW (M4 x 32mm - RBW)		8PCS
7	LOCK WASHER (5/16" - RBW)		4PCS				

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: 215791KE(B1-B3)


ASSEMBLY INSTRUCTIONS

STEP 1

COASTER
FINE FURNITURE

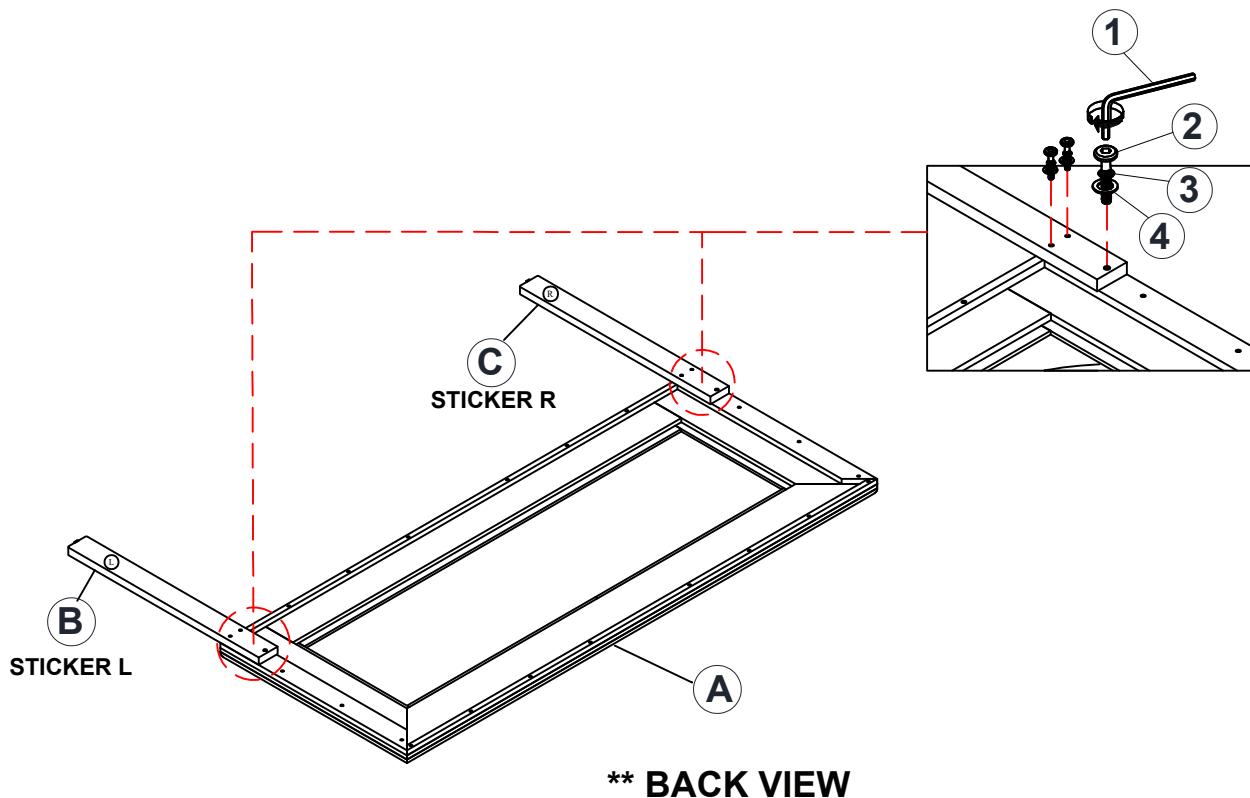


STEP 2

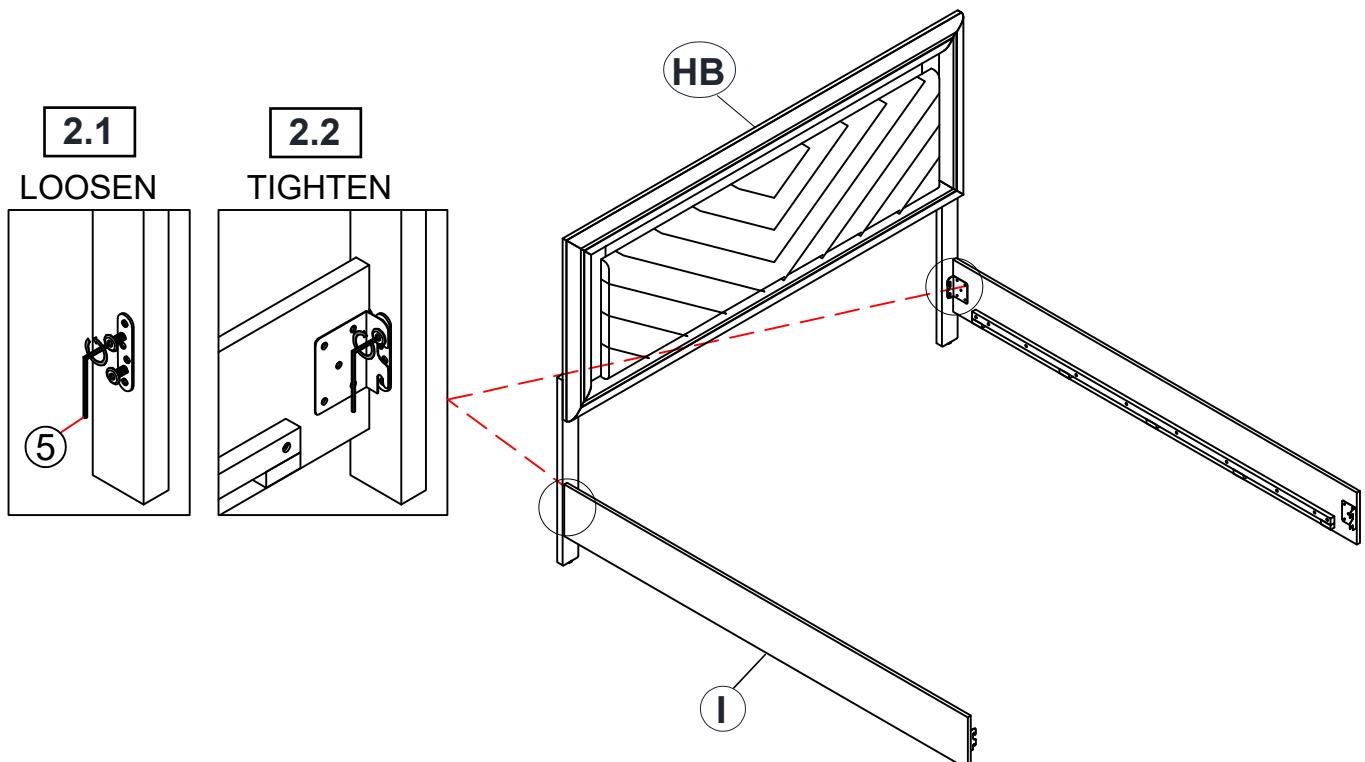

ITEM: 215791KE(B1-B3)
ASSEMBLY INSTRUCTIONS



COASTER®
FINE FURNITURE

STEP 3

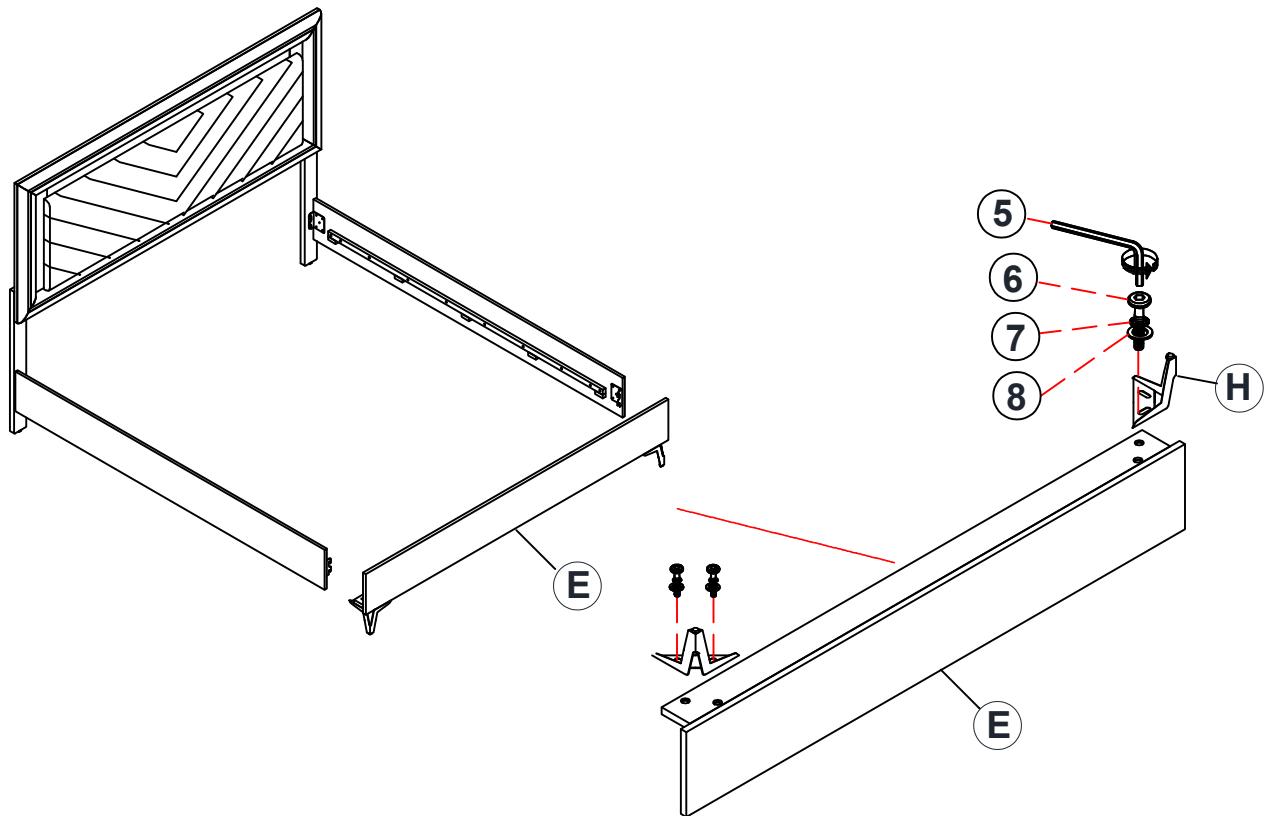

** BOTTOM VIEW


STEP 4

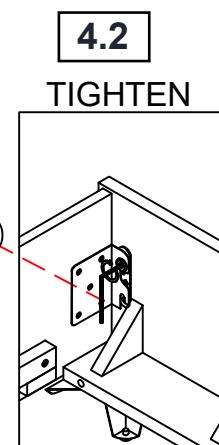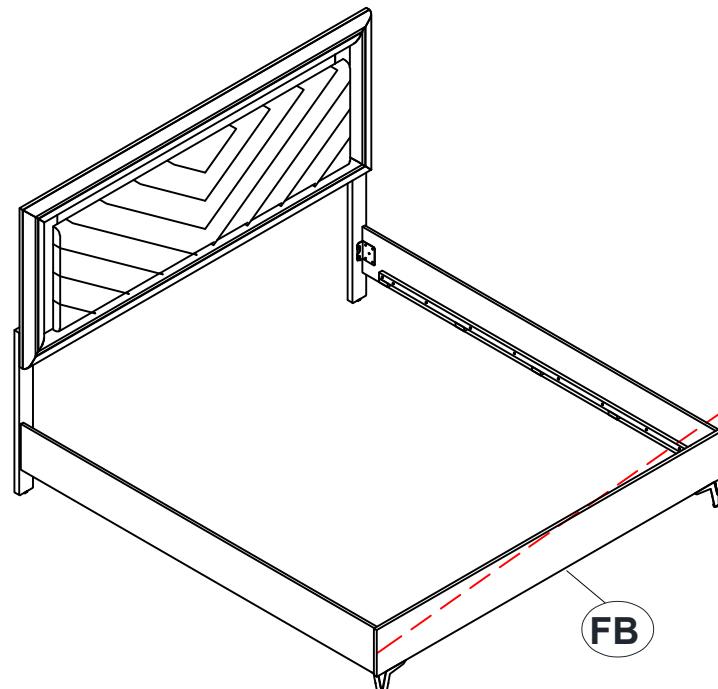



ITEM: 215791KE(B1-B3)
ASSEMBLY INSTRUCTIONS

COASTER
FINE FURNITURE

STEP 5

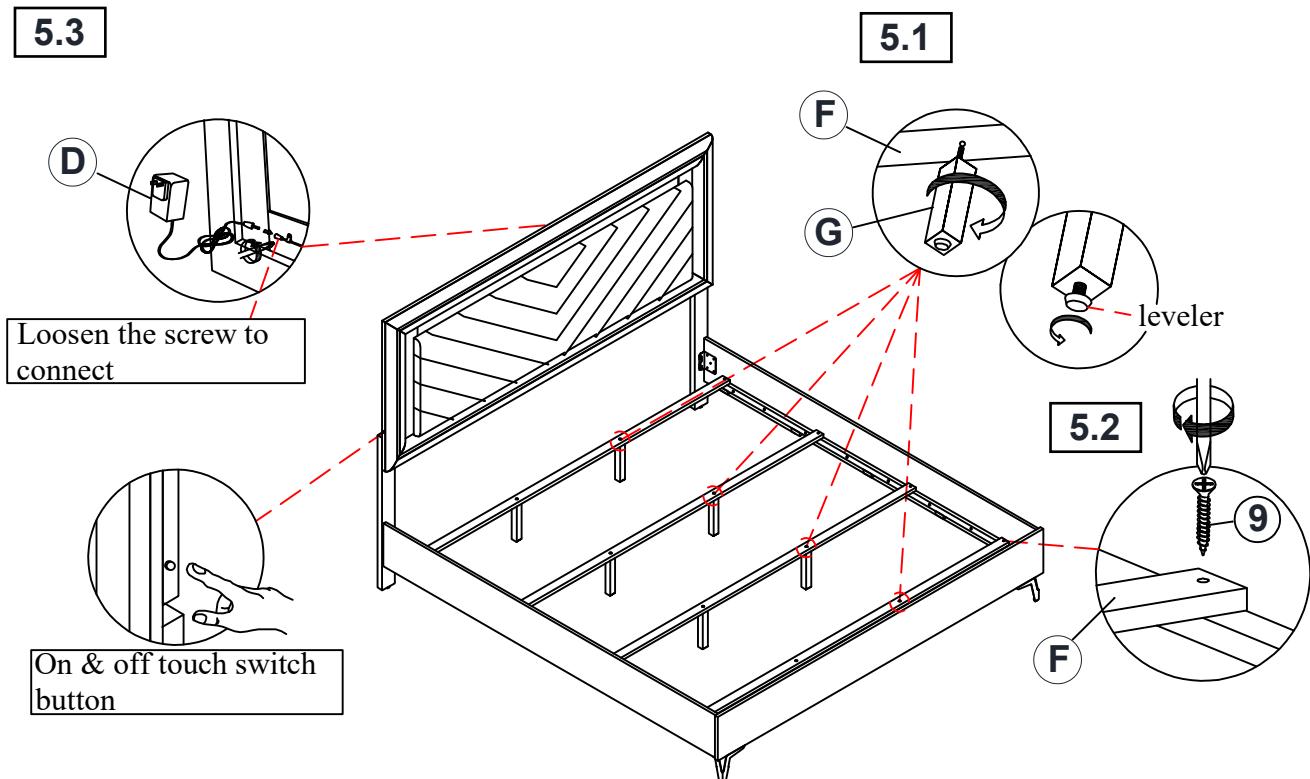


STEP 6
COMPLETE

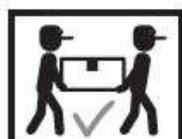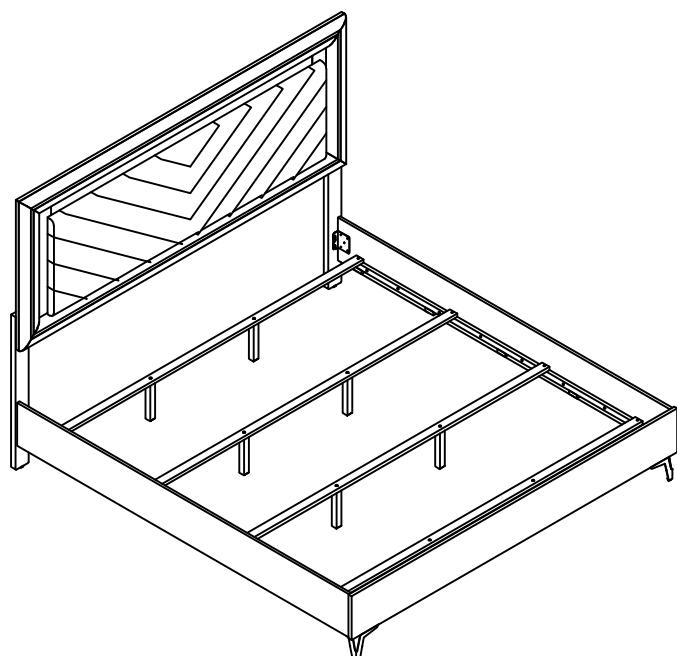

ITEM: 215791KE(B1-B3)

COASTER
FINE FURNITURE

Inner size: 76.50"W x 80.50"D

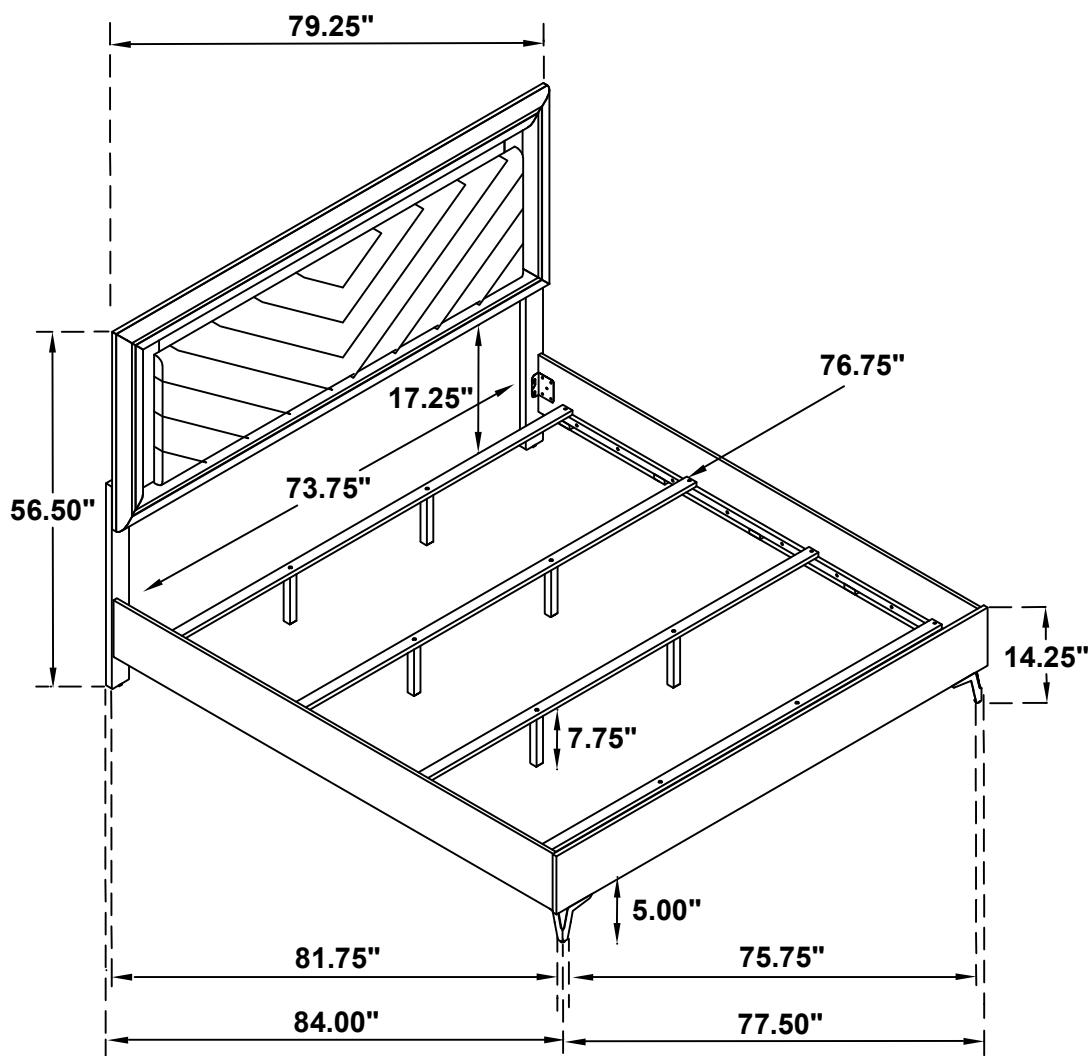

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

215792
Nightstand

ITEM: 215792

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND

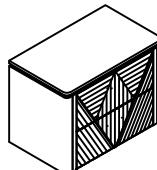

1PC

B LEG



4PCS

HARDWARE IDENTIFICATION

1 ALLEN WRENCH
(M5 x 65mm - BLK)



1PC

2 BOLT
(M8 x 16mm - RBW)



8PCS

3 LOCK WASHER
(5/16" - RBW)



8PCS

4 FLAT WASHER
(5/16" x 22mm - RBW)



8PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 215792


ASSEMBLY INSTRUCTIONS

STEP 1

COASTER
FINE FURNITURE

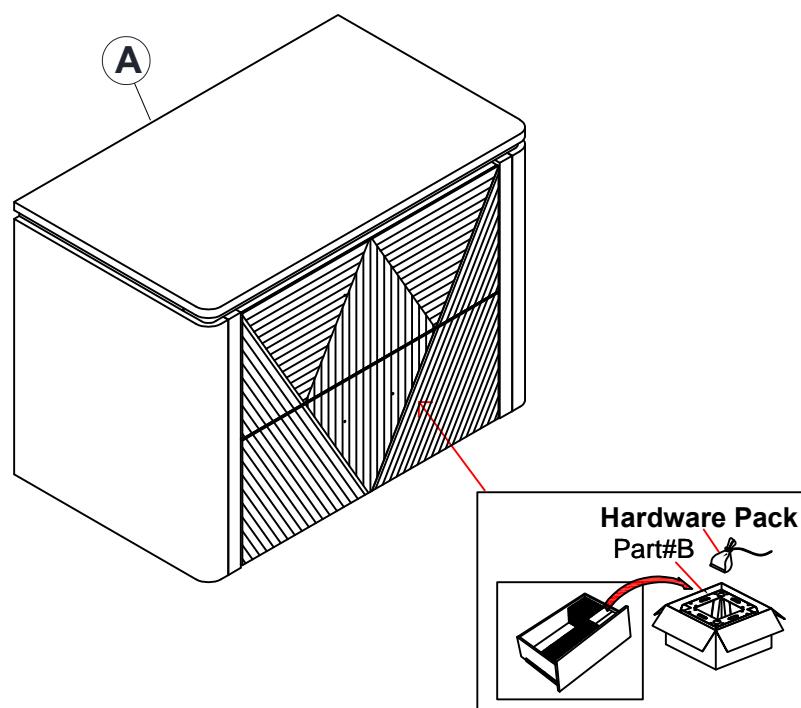

STEP 2

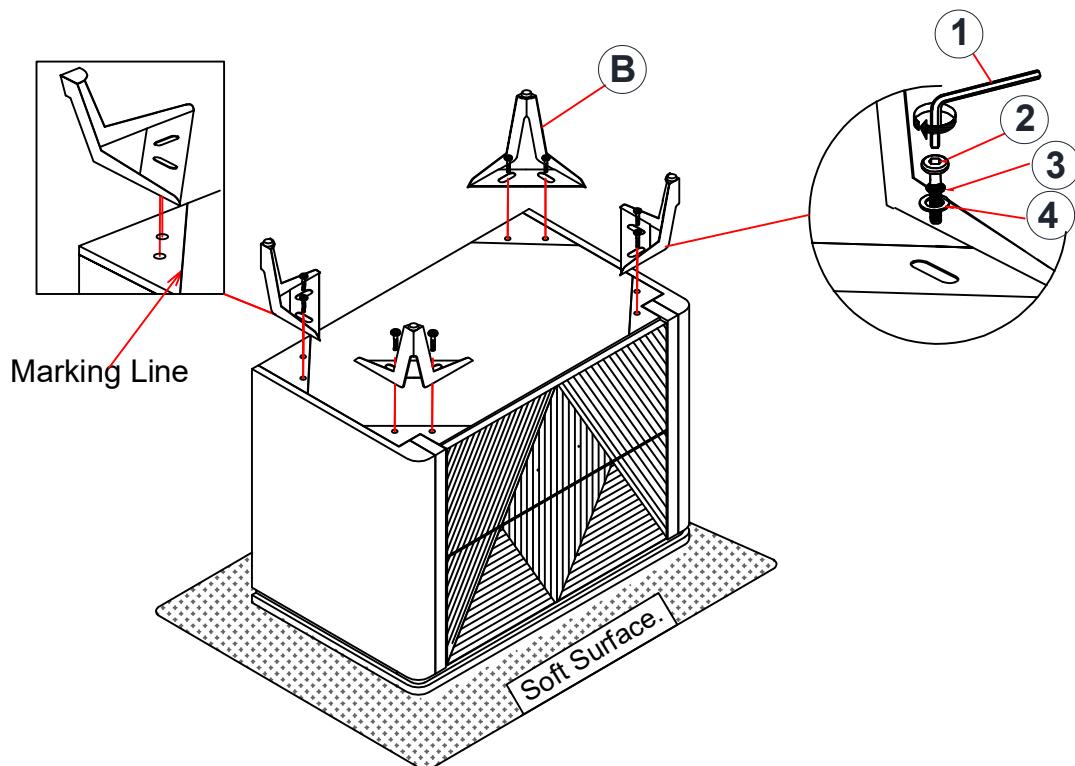


***BOTTOM VIEW**

ITEM: 215792



ASSEMBLY INSTRUCTIONS

STEP 3

COASTER
FINE FURNITURE

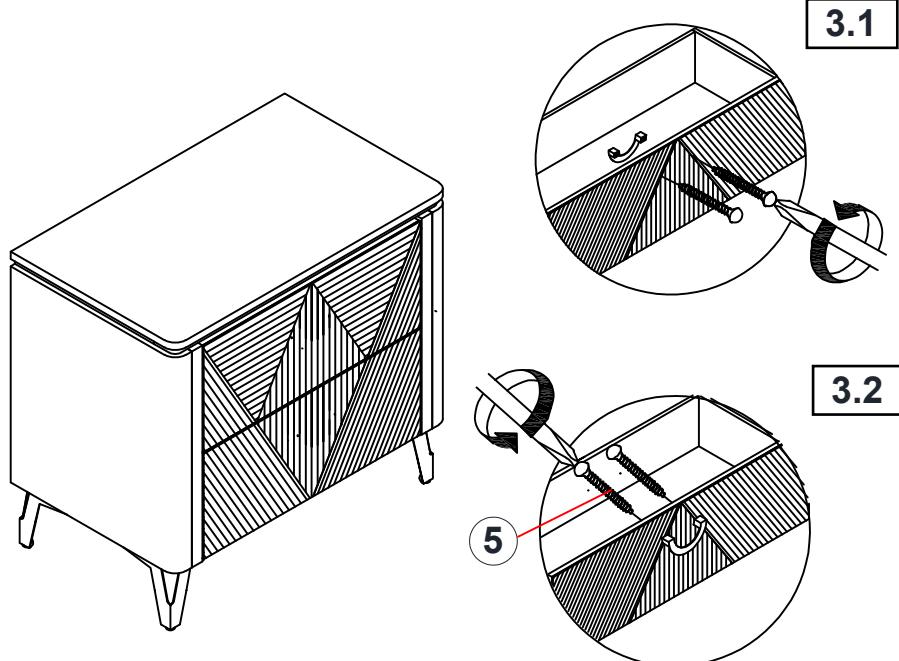


STEP 4
COMPLETE

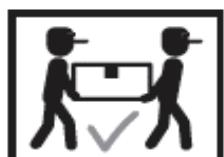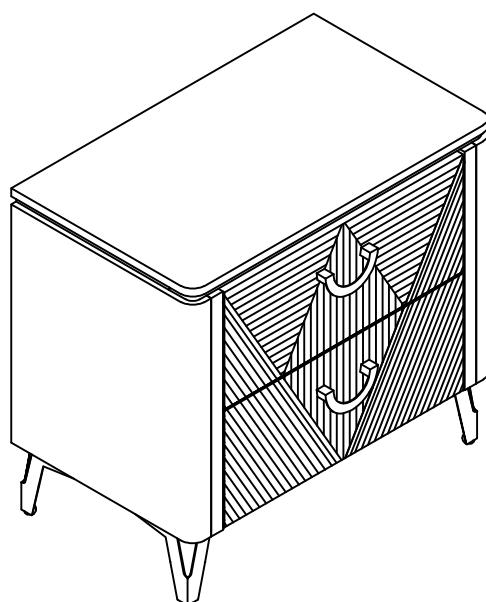

ITEM: 215792

COASTER
FINE FURNITURE

Inner Size of Drawer : 17.00"W X 13.25"D X 7.50"H X 0.25"T

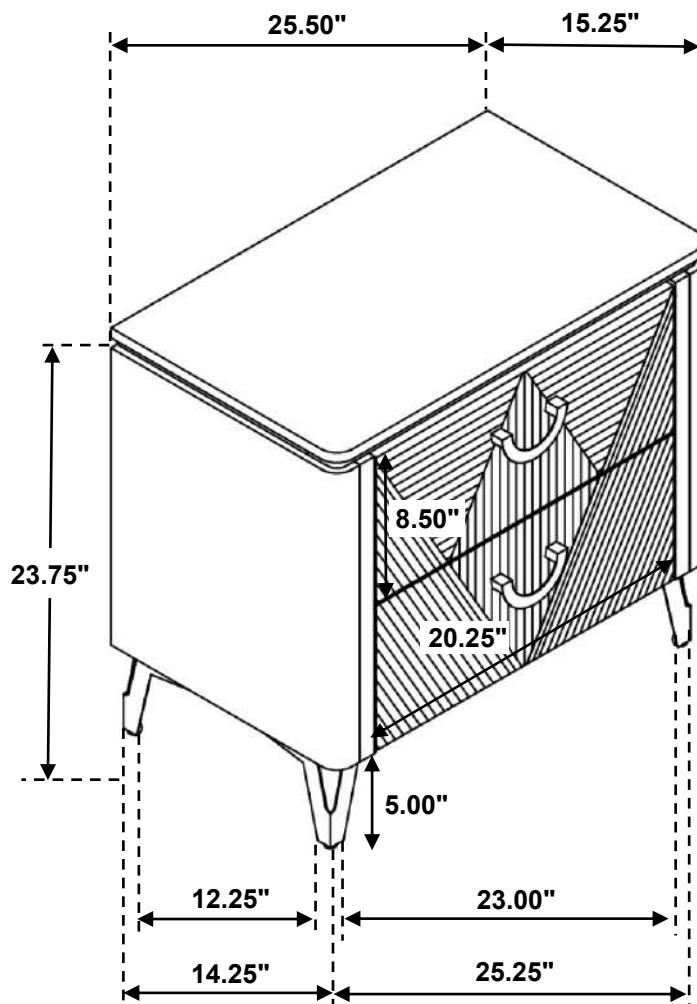

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

215793
Dresser

ITEM: 215793

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

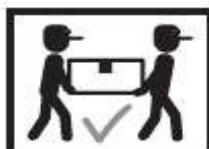


ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A DRESSER

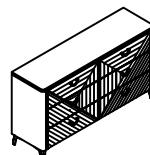

1PC

B LEG



4PCS

C CENTER SUPPORT LEG
WITH LEVELER



1PC

HARDWARE IDENTIFICATION

1 ALLEN WRENCH
(M5 x 65mm - BLK)



1PC

2 BOLT
(M8 x 16mm - RBW)



8PCS

3 LOCK WASHER
(5/16" - RBW)



 
8PCS

4 FLAT WASHER
(5/16" x 22mm - RBW)



8PCS

5 FLAT HEAD SCREW
(M4 x 32mm RBW)



4PCS

6 WOOD DOWEL
(Ø6 x 30mm)




2PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 215793
ASSEMBLY INSTRUCTIONS
STEP 1

COASTER
FINE FURNITURE


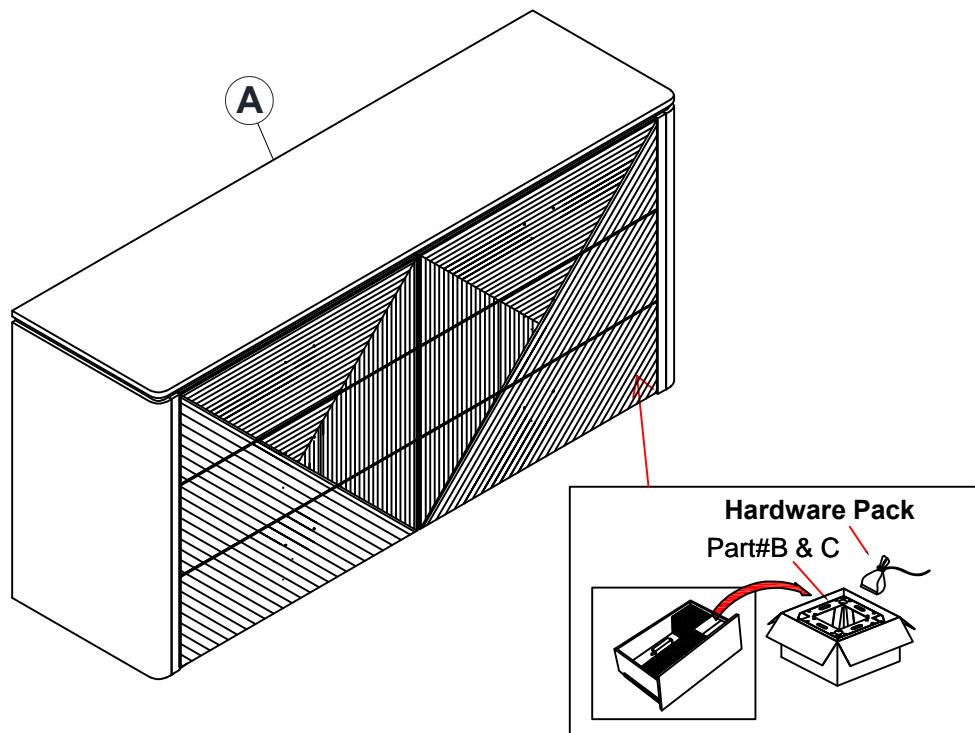


STEP 2


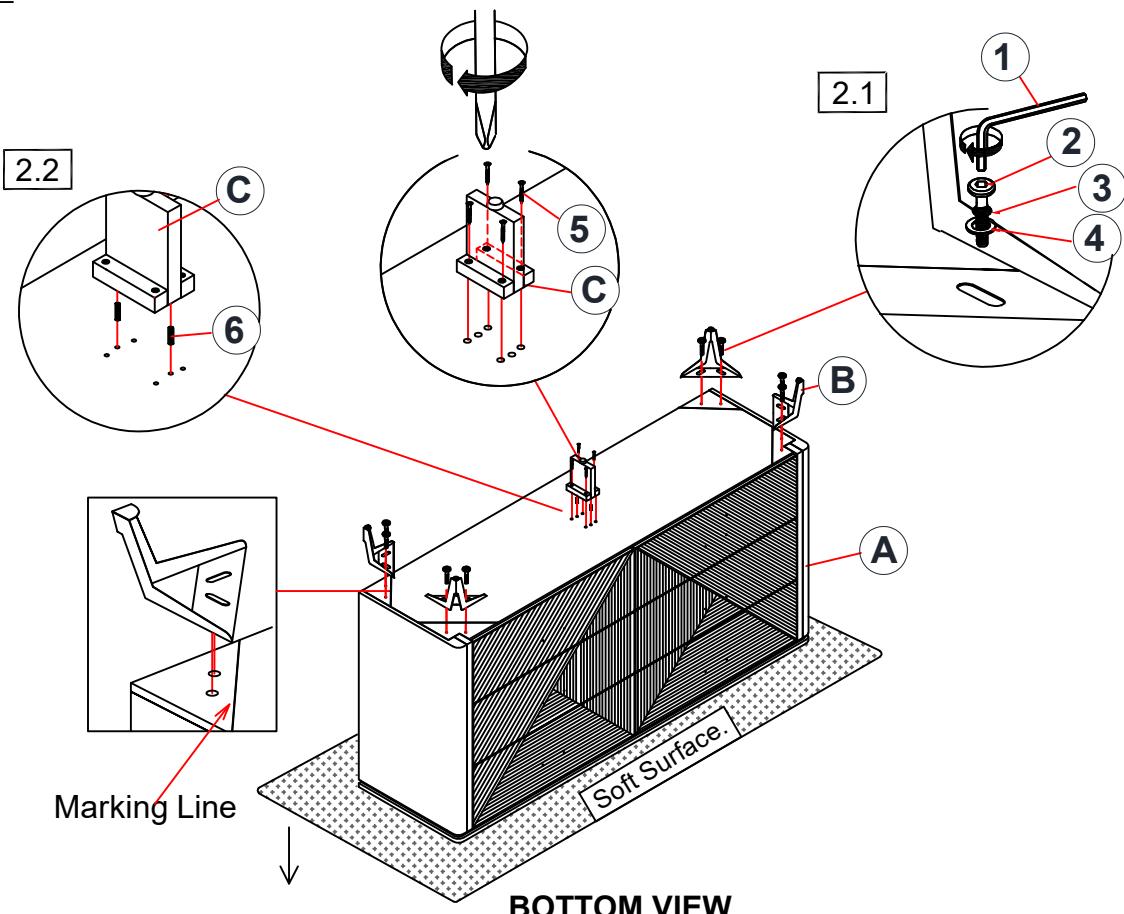


ITEM: 215793
ASSEMBLY INSTRUCTIONS
STEP 3

COASTER
FINE FURNITURE

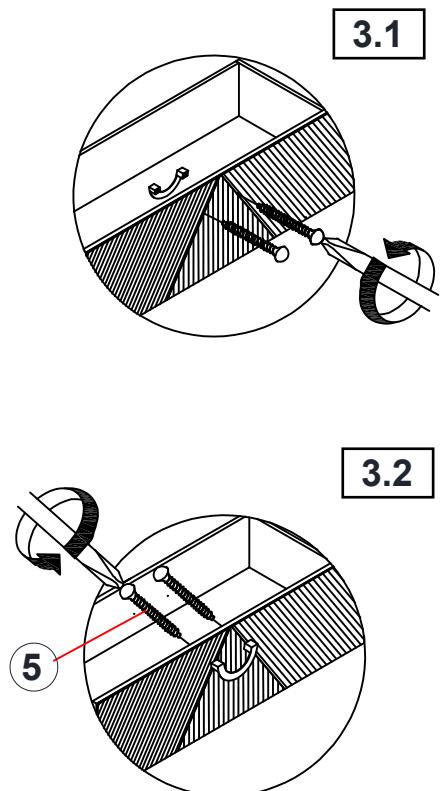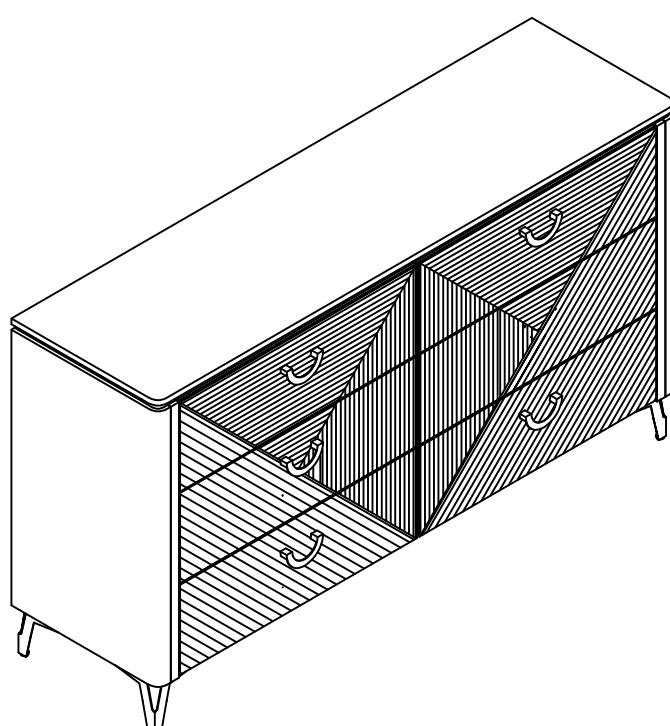

STEP 4
COMPLETE

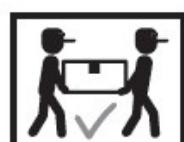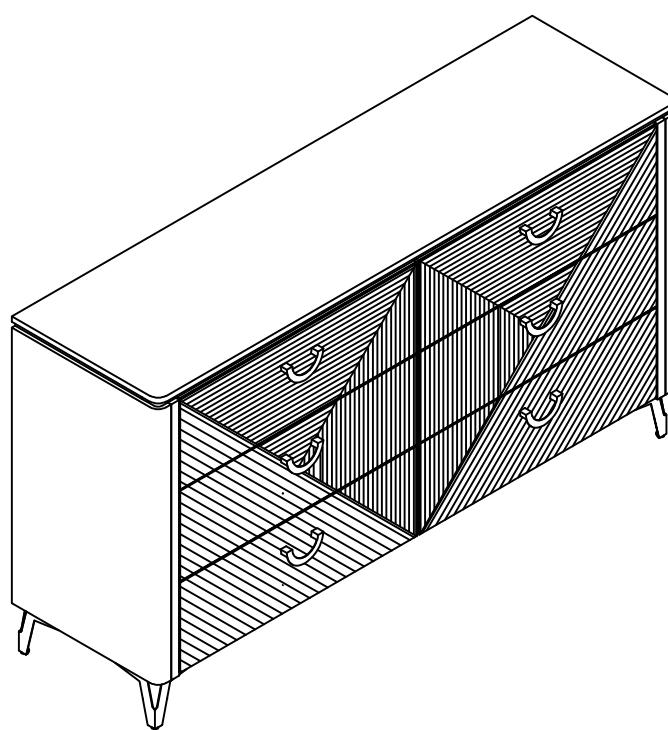

ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

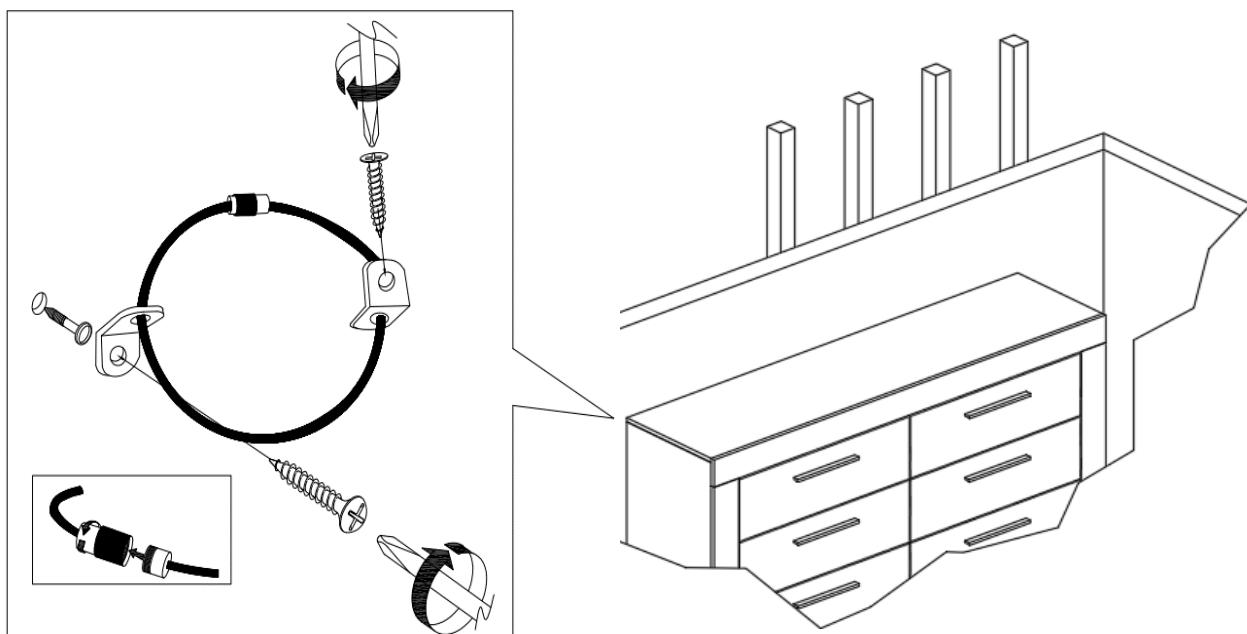

ITEM: 215793

COASTER
FINE FURNITURE

Inner Size of Drawer : 27.25"W X 12.75"D X 5.25"H X 0.25"T

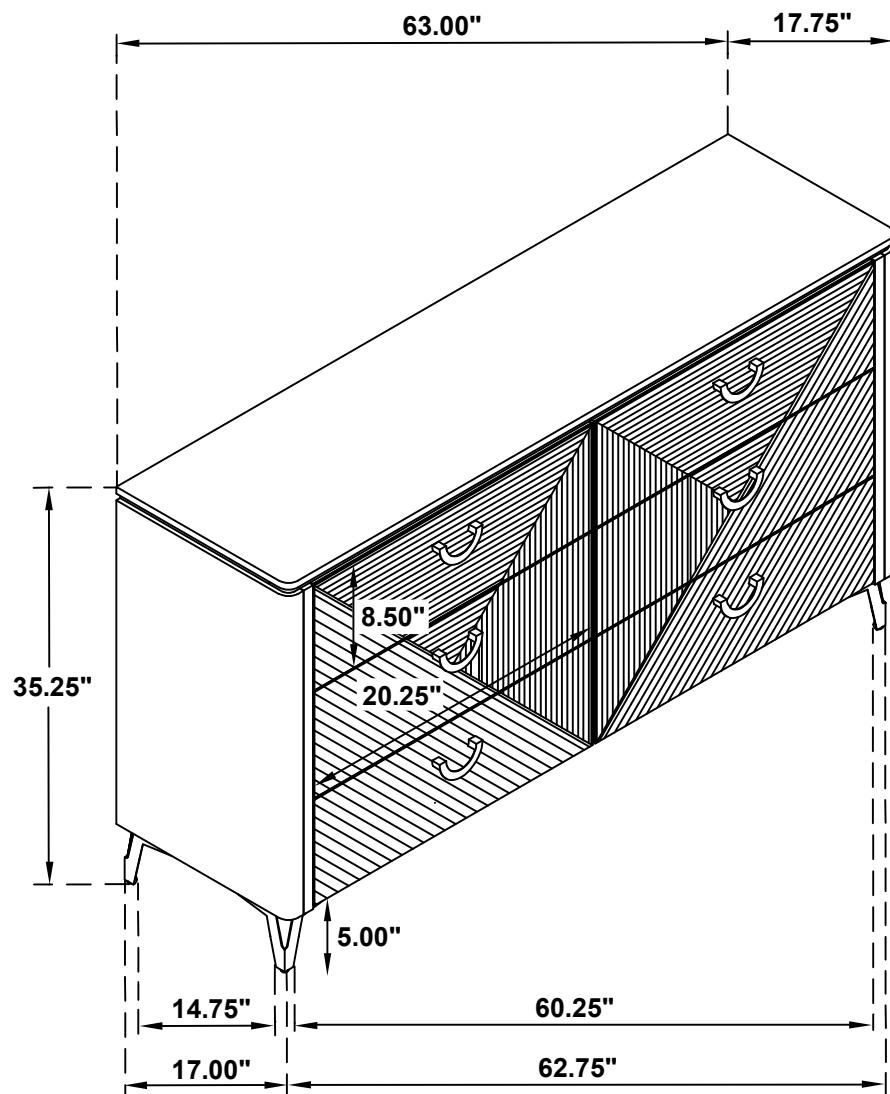


Note : Dimension tolerance \pm 5%



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

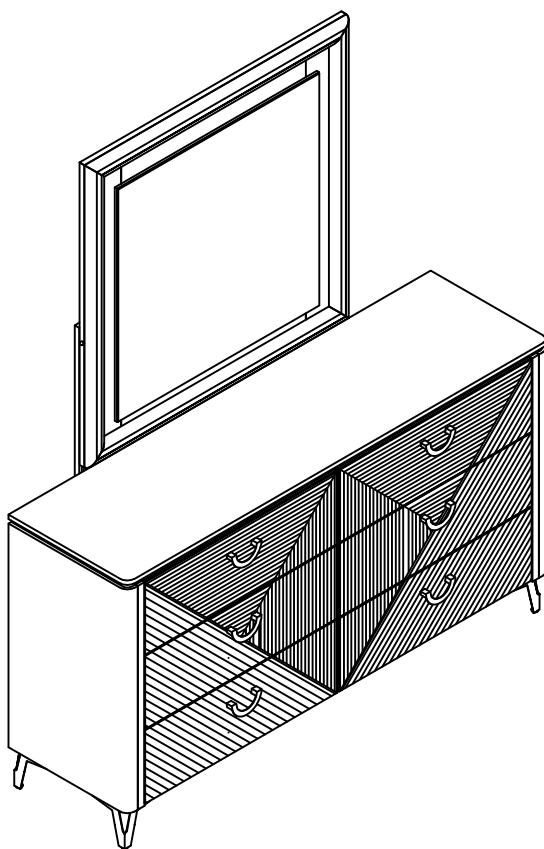

Fine Furniture for every stage of life

215794
Mirror

ITEM: 215794

ASSEMBLY INSTRUCTIONS

COASTER
FINE FURNITURE


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

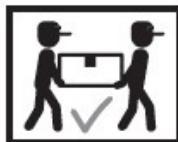

ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A MIRROR



1PC

B MIRROR SUPPORT
(PACKED WITH MIRROR)




2PCS

C ADAPTER



1PC

D DRESSER
(FROM BOX ITEM 215793)

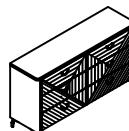

1PC

 
HARDWARE IDENTIFICATION

1 ALLEN WRENCH
(M4 x 65mm - BLK)



1PC

2 BOLT
(M6 x 35mm - BLK)




8PCS

3 LOCK WASHER
(1/4" - BLK)



8PCS

 4 FLAT WASHER
(1/4" x 19mm - BLK)



8PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 215794


ASSEMBLY INSTRUCTIONS

STEP 1

COASTER
FINE FURNITURE

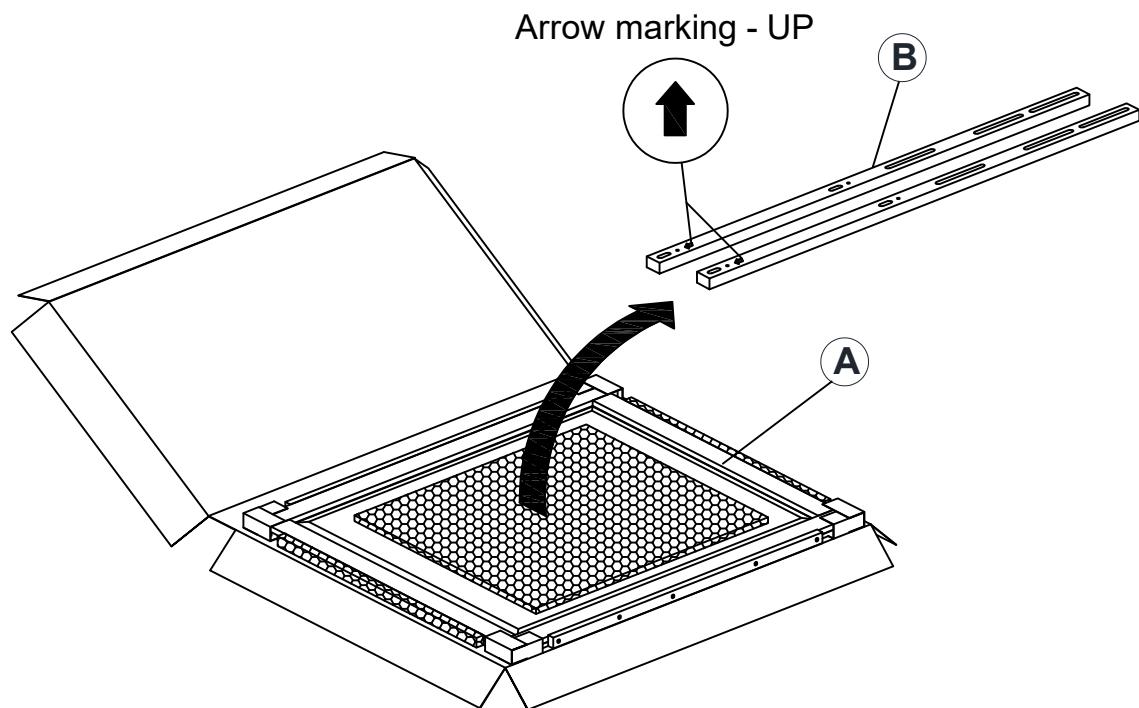

STEP 2

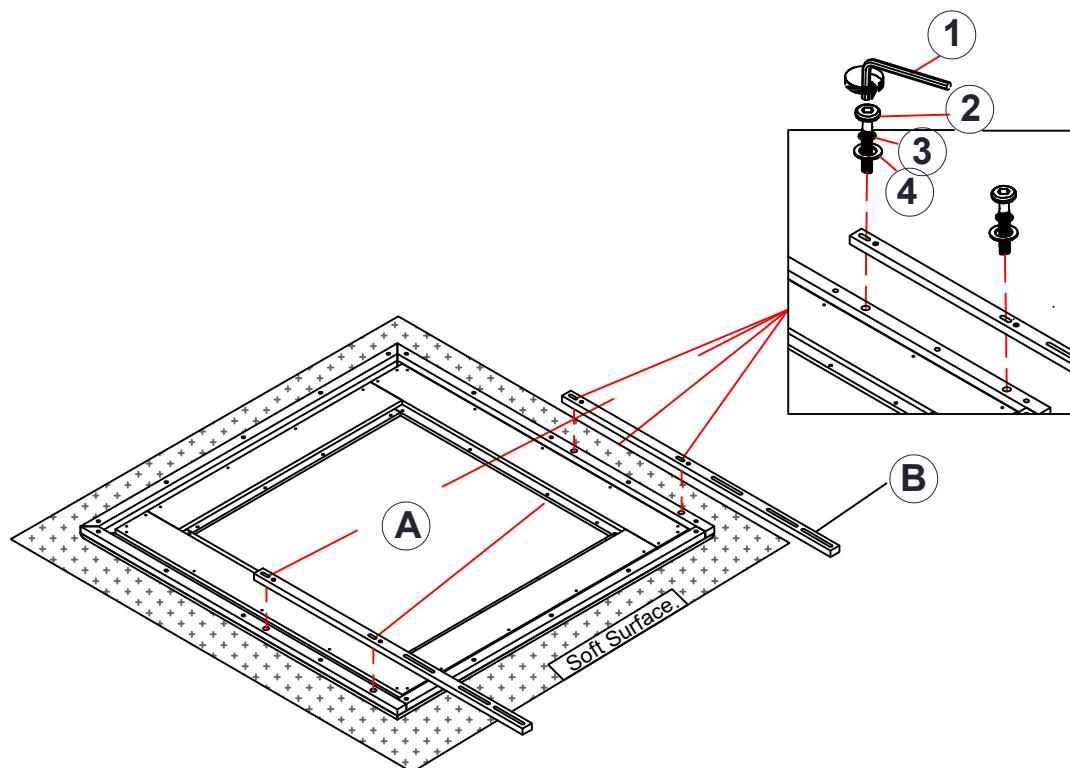


***BACK VIEW**

ITEM: 215794



ASSEMBLY INSTRUCTIONS

STEP 3

COASTER
FINE FURNITURE

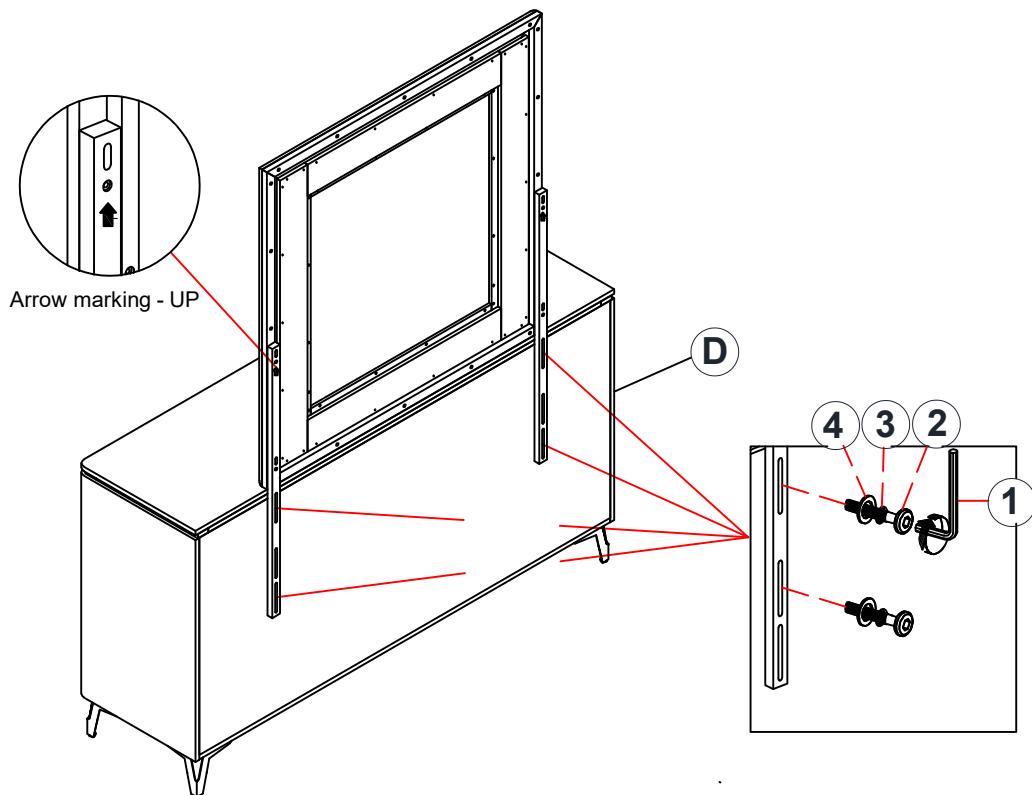


STEP 4 COMPLETE

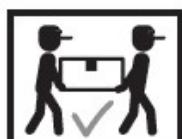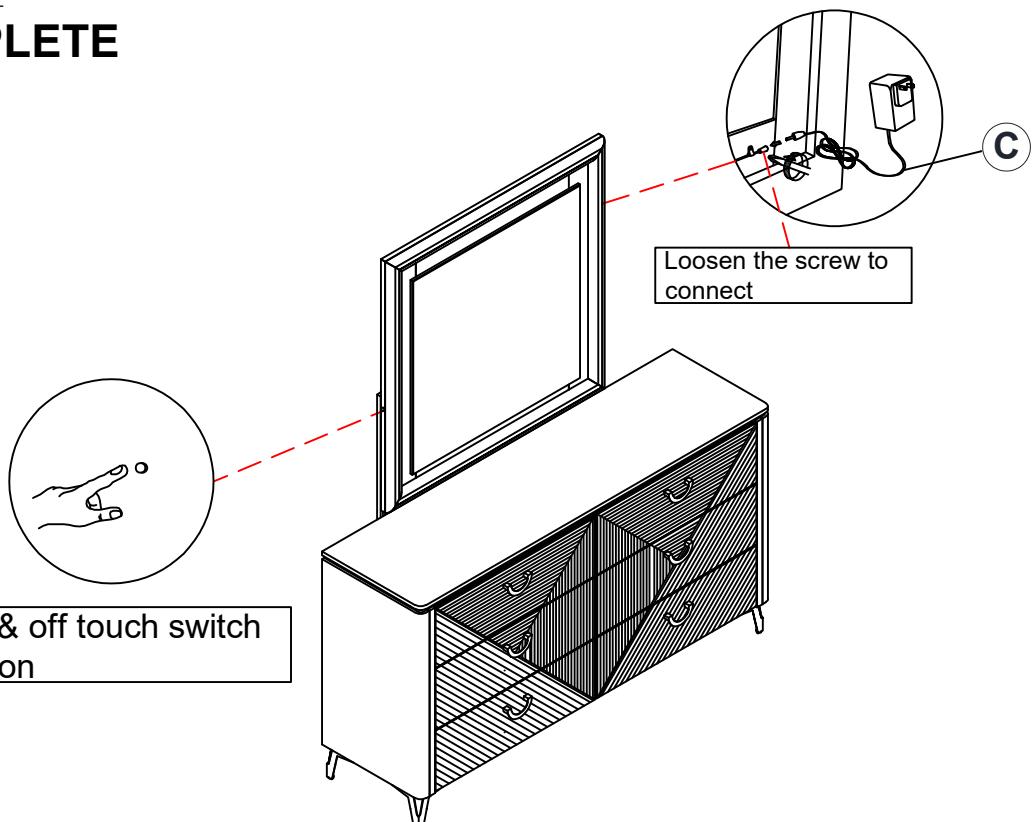

ITEM: 215794

COASTER
FINE FURNITURE

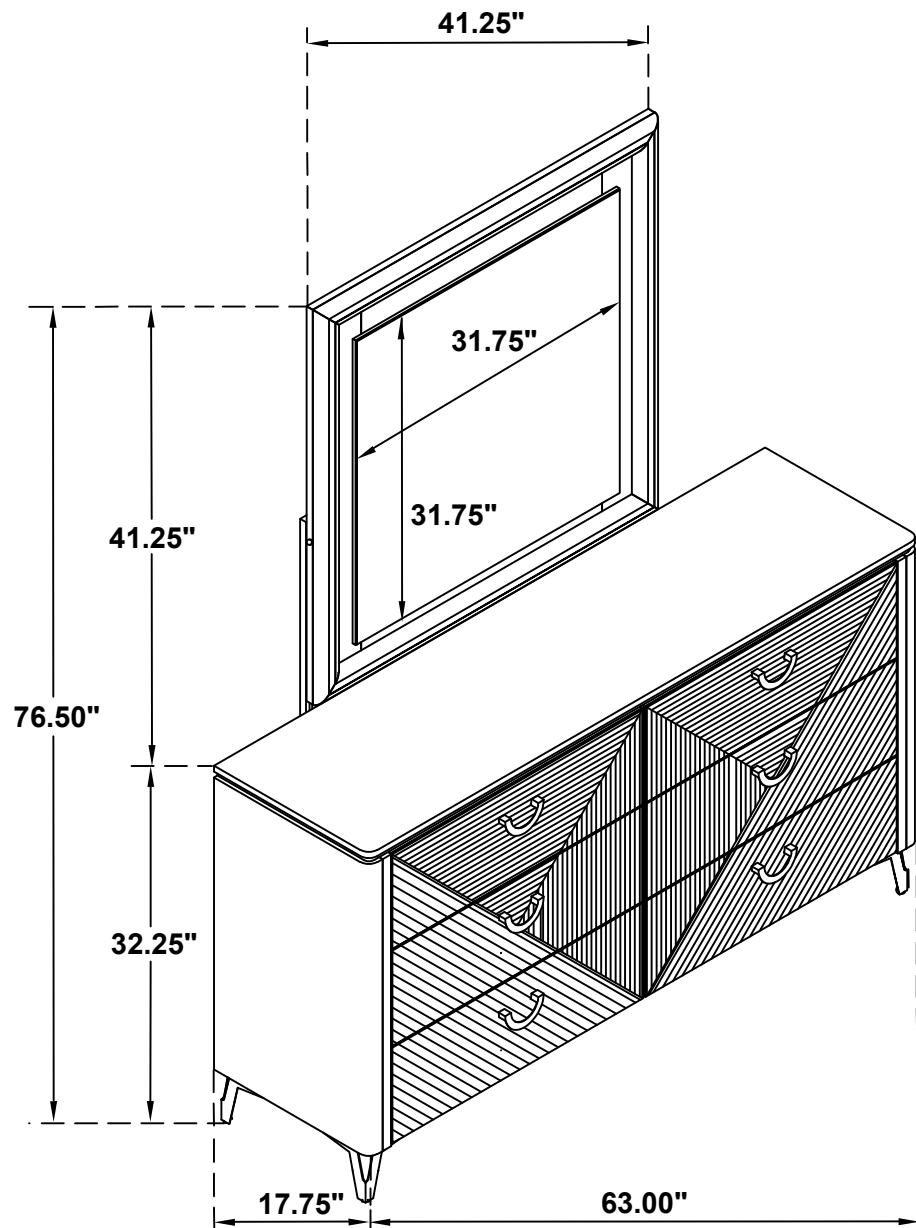

Note : Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

215795
Chest

ITEM: 215795

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

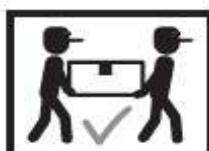

ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A CHEST



1PC

B LEG



4PCS

HARDWARE IDENTIFICATION

1 ALLEN WRENCH
(M5 x 65mm - BLK)



1PC

2 BOLT
(M8 x 16mm - RBW)



 
8PCS

3 LOCK WASHER
(5/16" - RBW)



8PCS

4 FLAT WASHER
(5/16" x 22mm - RBW)




8PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 215795
ASSEMBLY INSTRUCTIONS
STEP 1

COASTER
FINE FURNITURE

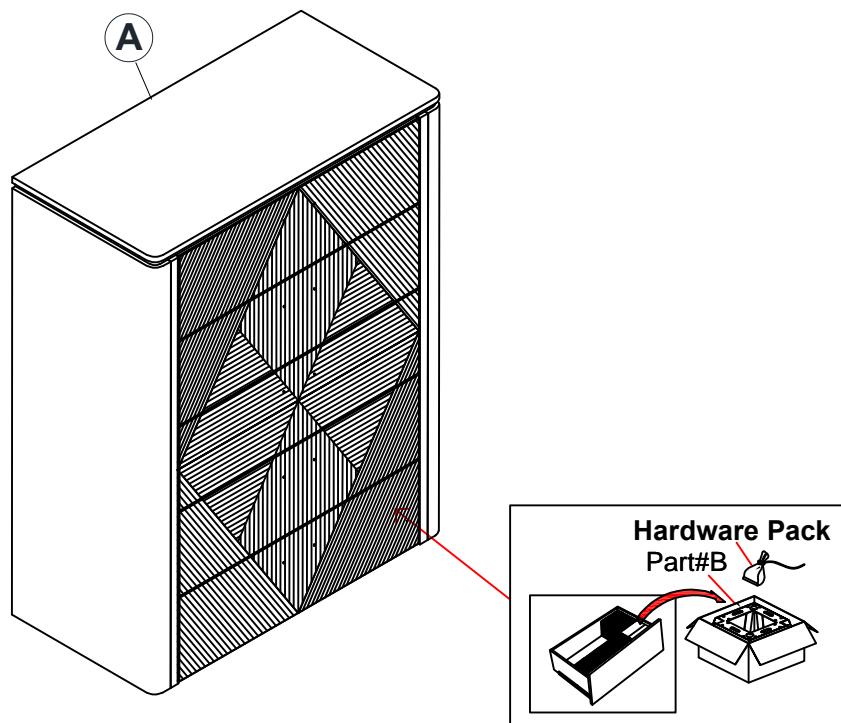

STEP 2

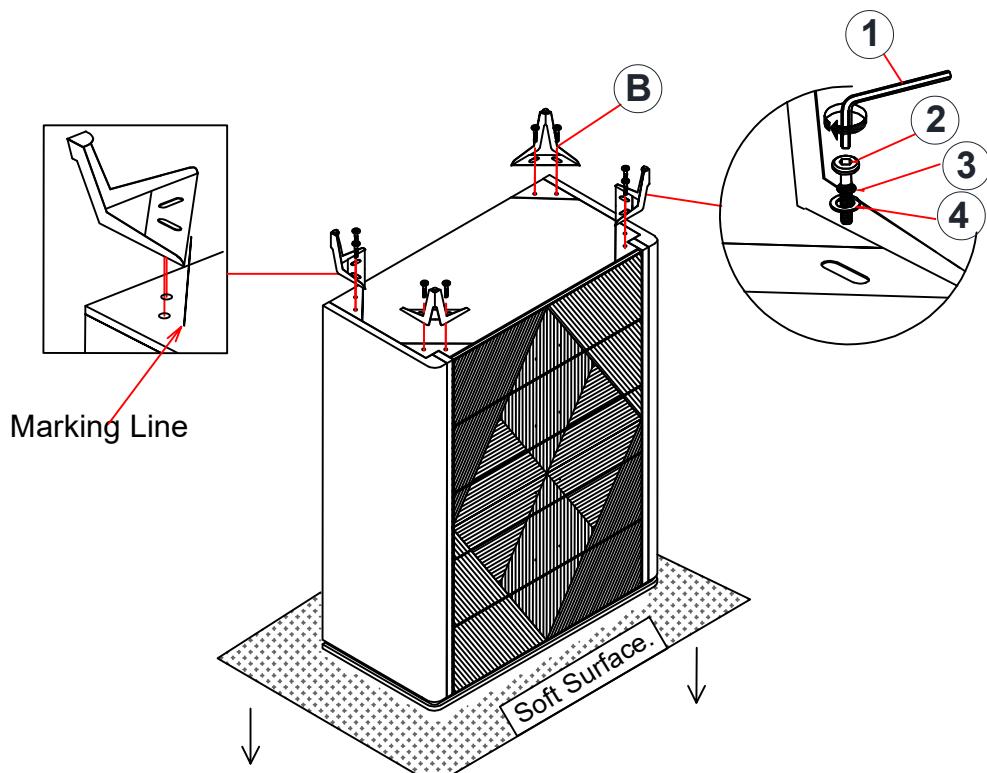


***BOTTOM VIEW**


ITEM: 215795

ASSEMBLY INSTRUCTIONS
STEP 3


COASTER
FINE FURNITURE

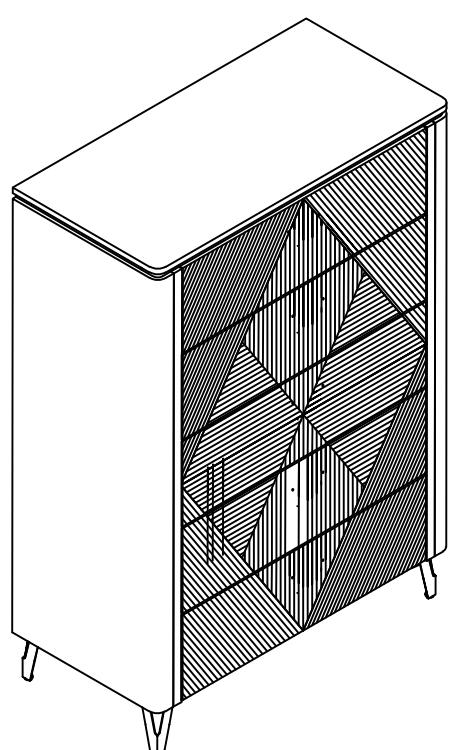



3.1

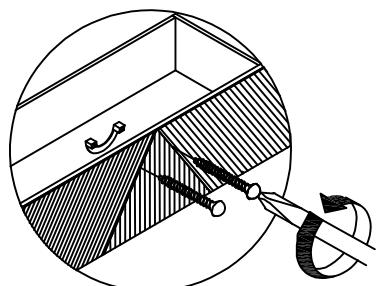

3.2

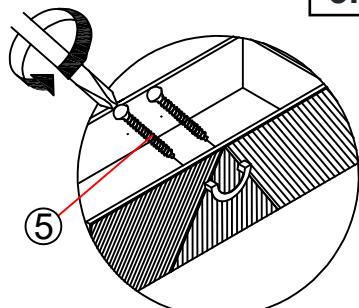

STEP 4
COMPLETE

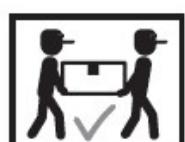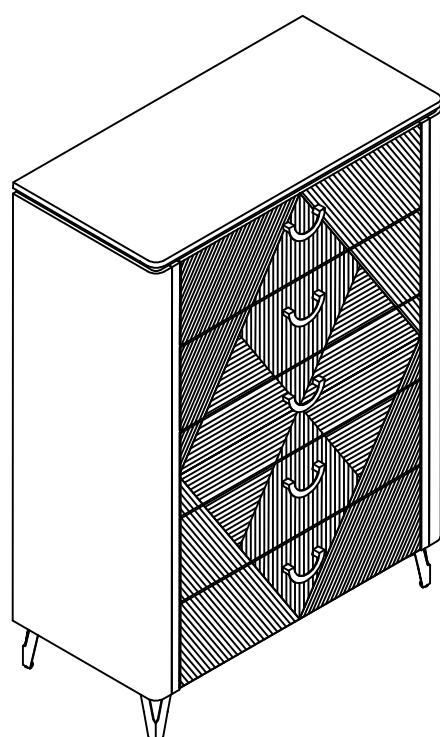

ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

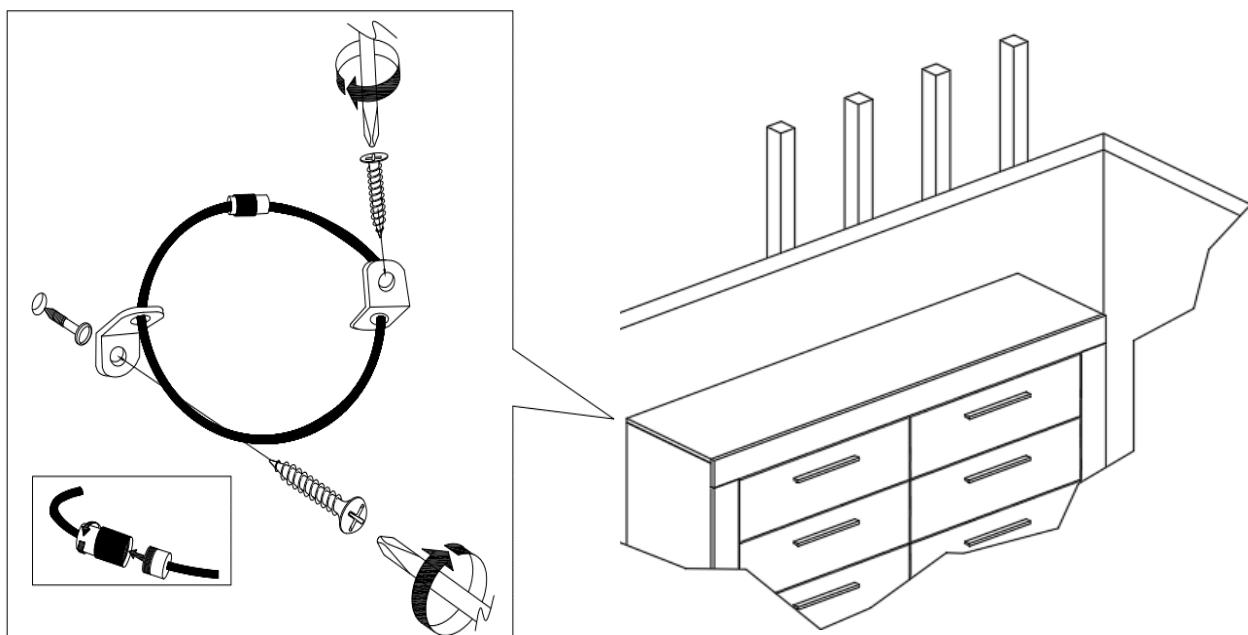

ITEM: 215795

COASTER
FINE FURNITURE

Inner Size of Drawer : 27.25"W X 12.75"D X 5.25"H X 0.25"T

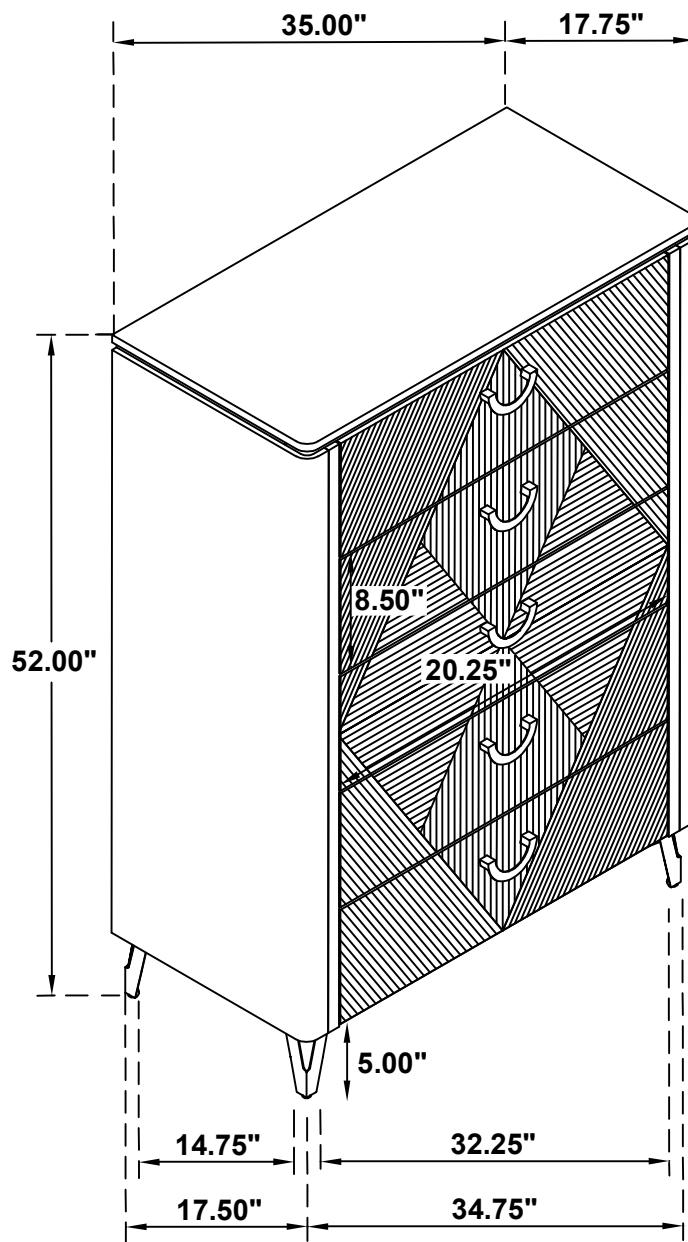

Note : Dimension tolerance $\pm 5\%$