


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

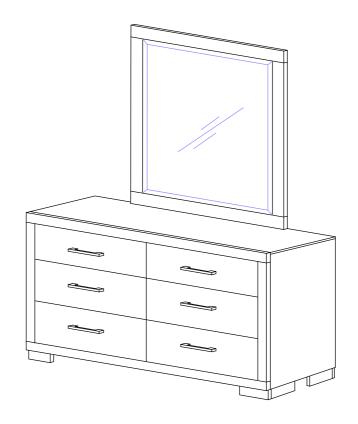

Fine Furniture for every stage of life

200714 *Mirror*

REVISION 0 : 05/14/2008 REVISION 1 : 12/04/2012 REVISION 2 : 08/08/2017 REVISION 3 : 09/11/2018 REVISION 4 : 12/02/2019

ITEM:200714



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A MIRROR

DRESSER
*FROM BOX ITEM
#200713

C MIRROR SUPPORT
(PACKED WITH DRESSER)

2PCS

HARDWARE IDENTIFICATION


1 FLAT HEAD SCREW (M4 x 32mm - BLK)



8PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

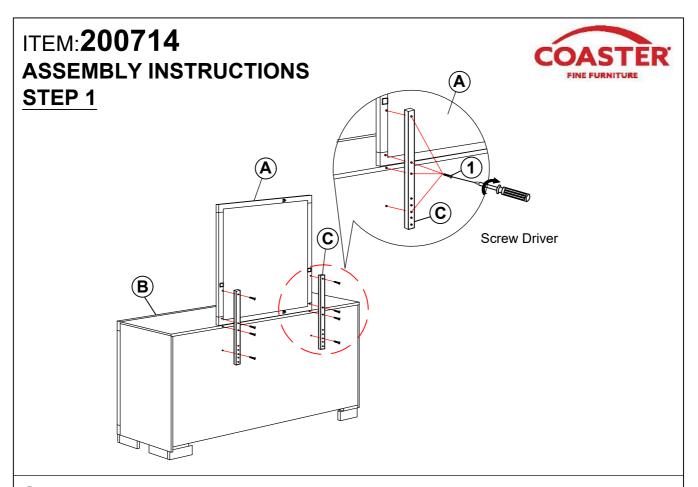

STEP 2


(OPTIONAL)

Align and hang the mirror against the wall in landscape orientation with both left and right pre-fixed metal bracket in correct orientation.

Note: Screws or fittings to fix the mirror to the wall are not included. Choose screws or fittings that are suitable to the wall material and have sufficient holding power.

If you are uncertain, contact your local specialised retailer.

Warning: Wrong assembly can lead to the mirror topples or falls resulting in personal injury or damage.

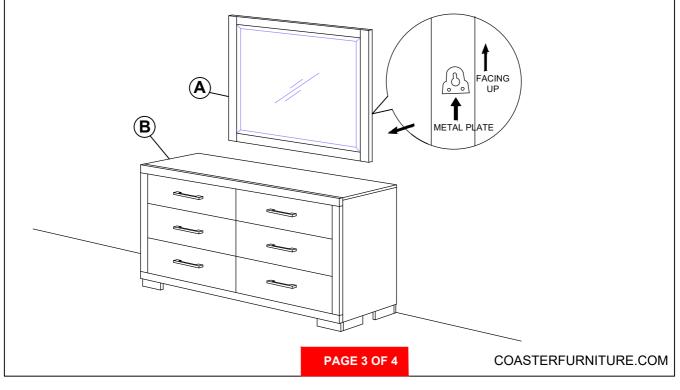

ITEM:200714 ASSEMBLY INSTRUCTIONS STEP 3 COMPLETE



