



Electrolux

Factory Parts Catalog

Product No.	EI24MO45IBDY
Series	Built In
Market	North America
Color	black
Volts	120
Watts	1100
Wiring Diagram	5995709473
Owner's Guide	TINSEB394WRRZ
Installation Instructions	TINS-B003MRR1



Electrolux Major Appliances

 
P.O. BOX 8020
CHARLOTTE, NC 28262

Publication No.
5995709473
18/10/26
(EN/SERVICE/ECL)
099

BUILT-IN MICROWAVE

Model No.
EI24MO45I

OVEN,CABINET

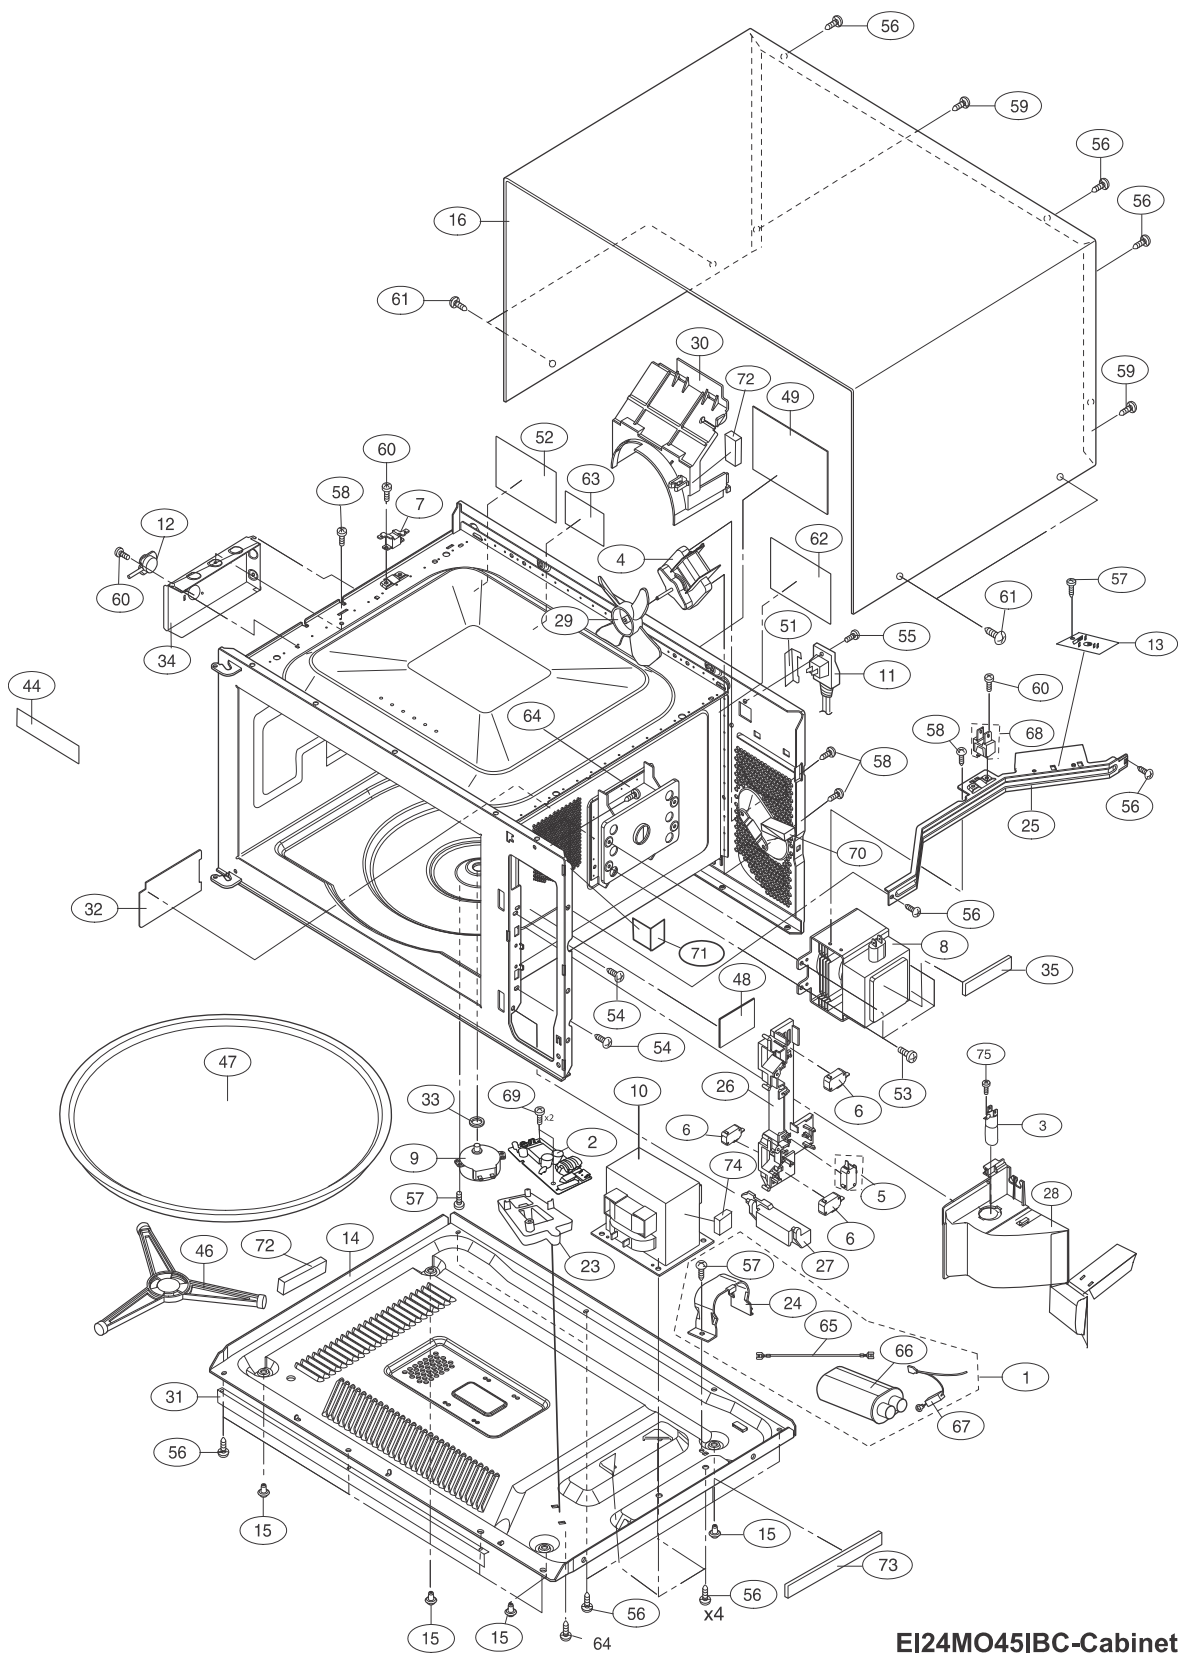


EI24MO45IBC-Cabinet

OVEN,CABINET

POS. NO	PART NO.	DESCRIPTION
1 #	5304478954	Capacitor/Rectifier Kit, HV
2 #	5304507220	Power Unit, AC/DC switching
3	5304464198	Lamp, oven light
4 #	5304493152	Motor, cooling fan
5 #	5304507612	Switch, monitor
6 #	5304493153	Switch, interlock, door sensor
7 #	5304440780	Fuse, cavity temp, 20 Amp, 250 V
8 #	5304472253	Magnetron
9 #	5304440021	Motor, turntable
10 #	5304473321	Transformer, power
11 #	5304478937	Power Cord, electric
12 #	5304516266	Sensor Assembly, AH
13 #	5304507613	Filter, noise, electronic
14	5304478938	Base, unit chassis
15	5304478939	Foot, cabinet support
16	5304478940	Cabinet, outer casing, black
23	5304507222	Holder, power unit
24	5304478941	Retainer, capacitor strap
25	5304478942	Bracket, chassis support
26	5304503439	Latch Hook
27	5304464899	Lever, door release
28	5304464197	Duct, magnetron
29 #	5304493155	Fan Blade, cooling fan
30	5304493156	Duct, cooling fan
31	5304478946	Filler Strip, base plate, bottom
32	5304478947	Cover, waveguide
33	5304467718	Bushing, motor shaft, turntable
34	5304478948	Duct, humidity sensor
35	5304493207	Cushion, magnetron pad
44	5304472255	Label, menu
46	5304467717	Support Assy, turntable, roller
47	5304440868	Tray, turntable, glass
48	5304468227	Label, Caution-monitor
49	5304507618	Label, Caution-DHHS
51	5304505544	Bracket, angle, power cord
52	5304468230	Label, HWC Caution
53	5304467780	Screw, 4 mm x 8 mm, Tap Tight
54	5303319641	Screw, (2)
55	5304462315	Screw, 4 mm x 12 mm, ground
56	5304451552	Screw, 4 mm x 8 mm, chromium
57	5304451550	Screw, 4 mm x 8 mm
58	5304450253	Screw, 4 mm x 8 mm
59	5304440873	Screw, Torx, tamper proof
60	5304467781	Screw, 3 mm x 6 mm
61	5304467777	Screw, 4 mm x 8 mm, black
62	5304507619	Label, caution, UL screw
63	5304451535	Label, height caution
64	5304505546	Screw, 4mm x 10mm
65 #	5304493157	Wire, high voltage, B
66 #	5304487566	Capacitor, high voltage
67 #	5304493150	Rectifier Assembly, HV, w/diode
68 #	5304507620	Fuse, cavity temp
69	5304456930	Screw, 3 mm x 6 mm
70	5304493208	Cushion, fan motor
71	5304493209	Cushion, cavity, control panel
72	5304478949	Cushion
73	5304493206	Cushion, base plate
74	5304505543	Cushion, transformer pad
75	5304474833	Screw, 4 mm x 10 mm, white

 CONTROL PANEL,DOOR,MISC.

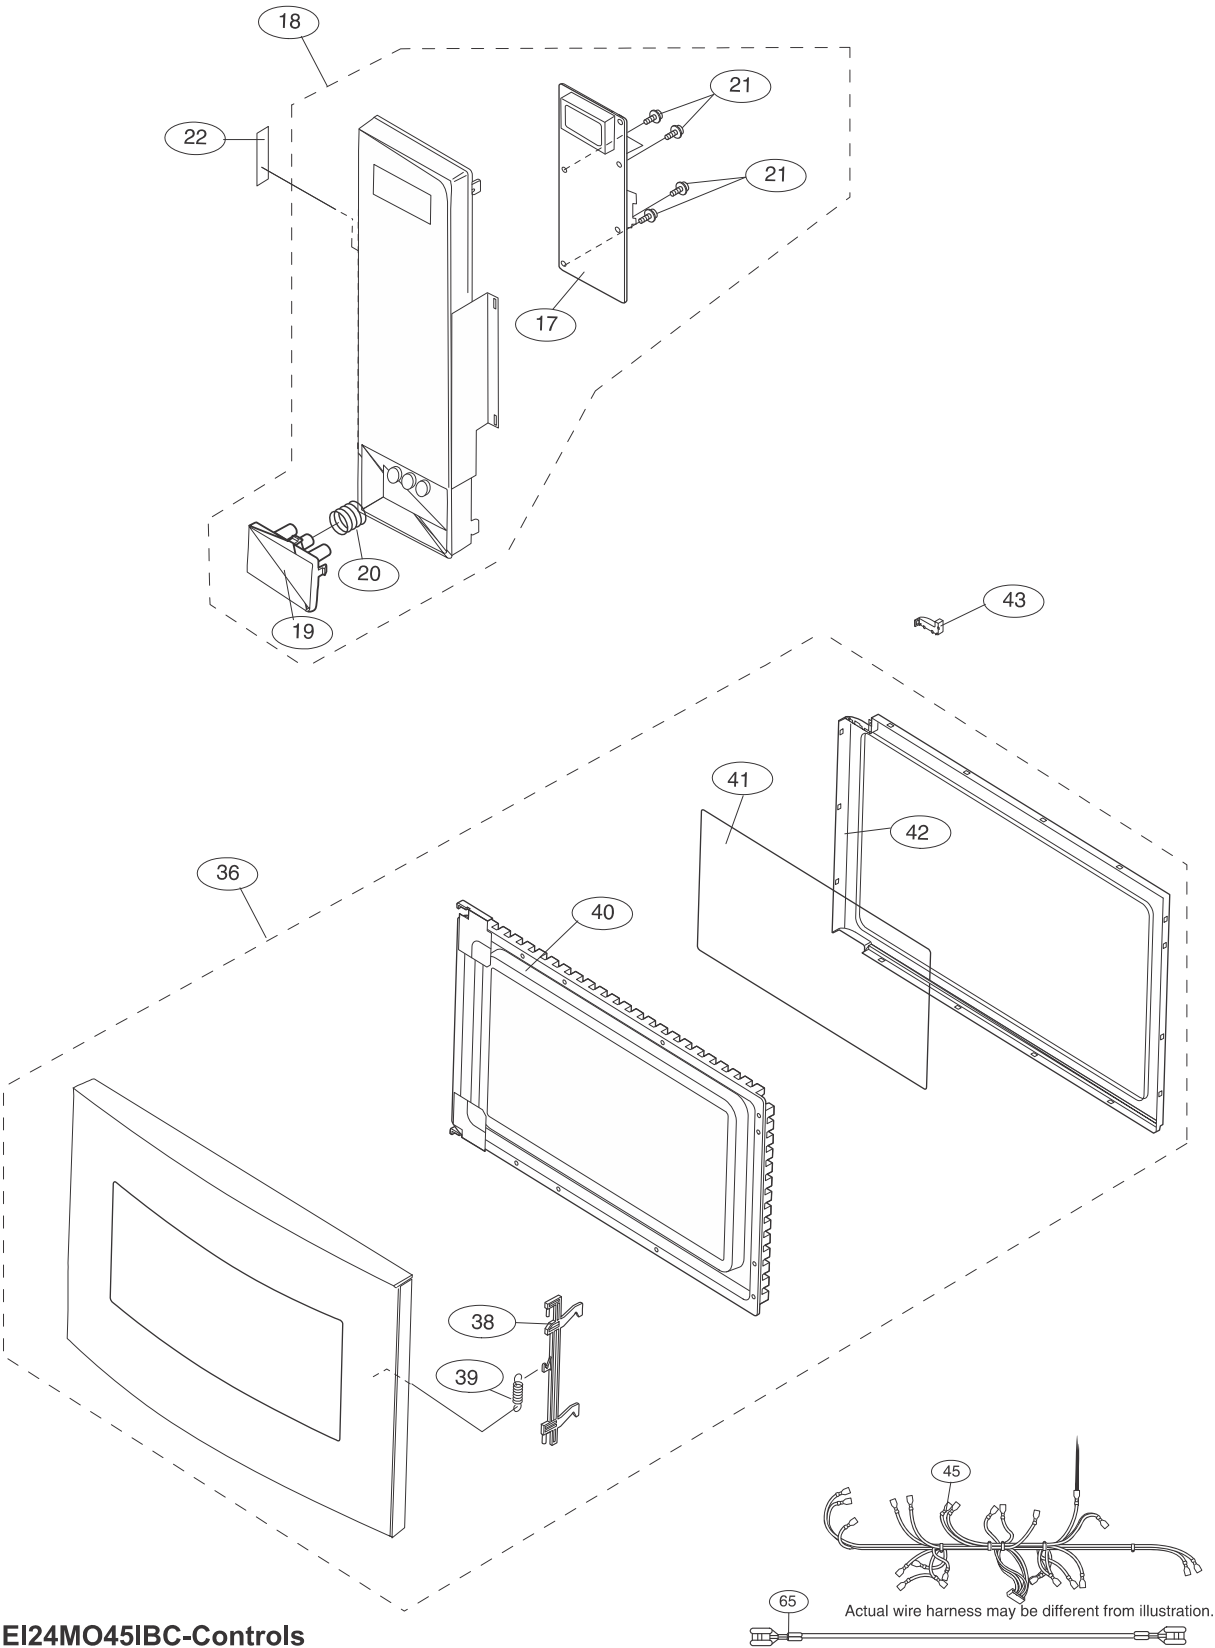

EI24MO45IBC-Controls

CONTROL PANEL,DOOR,MISC.

POS. NO	PART NO.	DESCRIPTION
17 #	5304516274	Control Board, printed circuit
18 #	5304507615	Control Panel Assy, complete
19	5304464196	Push Button, door, black
20	5304507616	Spring, door button
21	5304456930	Screw, 3 mm x 6 mm
22	5304468232	Label, User Caution
36	5304472254	Door Assy, complete, black
38	5304441893	Latch, door
39	5304440316	Spring, door latch
40	5304440857	Panel, inner door, black
41	5304440860	Seal, door, film
42	5304440861	Choke Cover, inner door
43	5304442145	Door Stop
45 #	5304516275	Wiring Harness, main
65 #	5304493157	Wire, high voltage, B

WIRING DIAGRAM

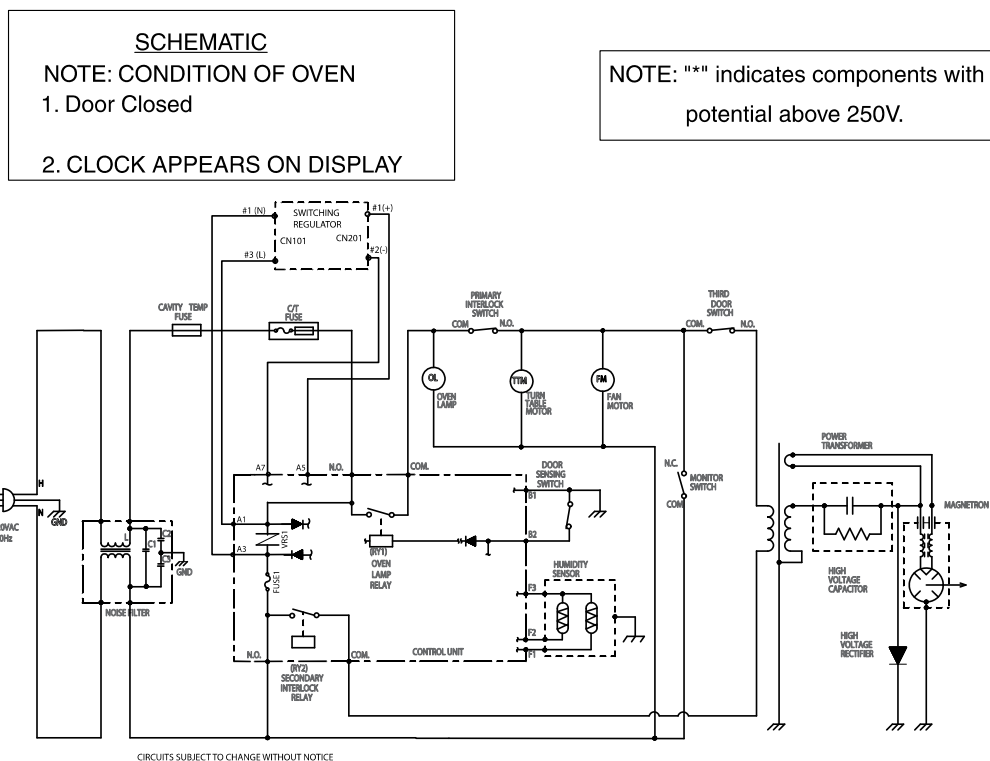 


Figure O-1 Oven Schematic - Off Condition

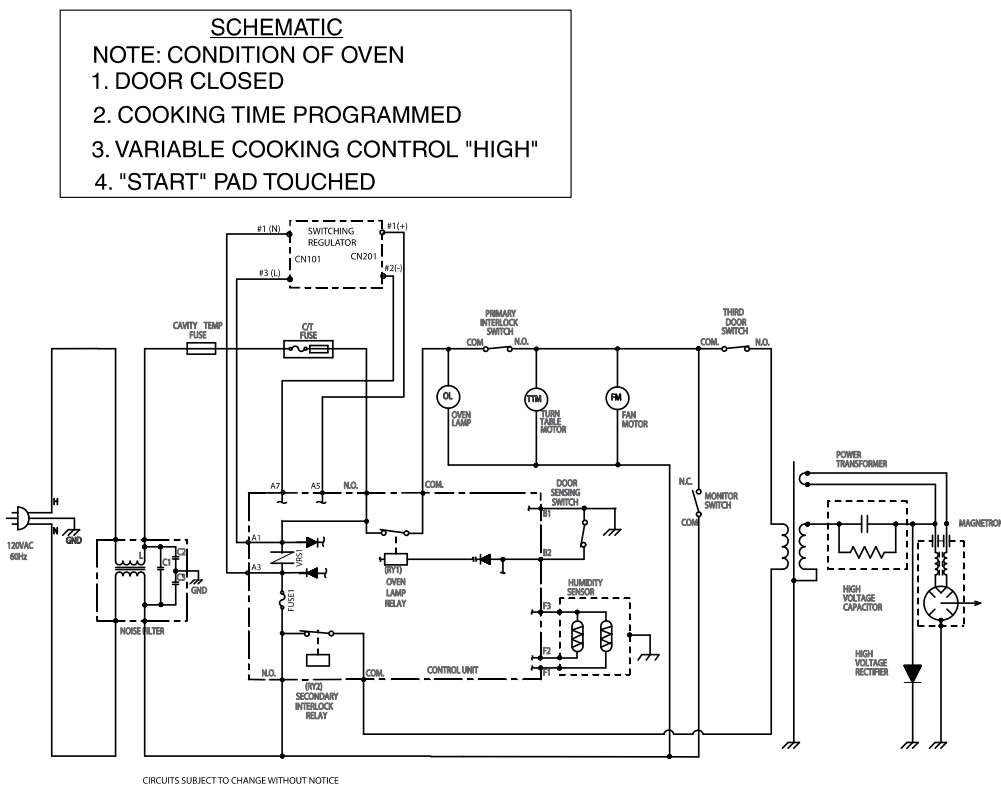 


Figure O-2 Oven Schematic - Cooking Condition