
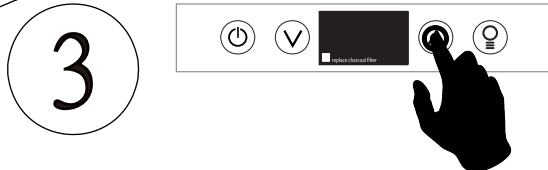
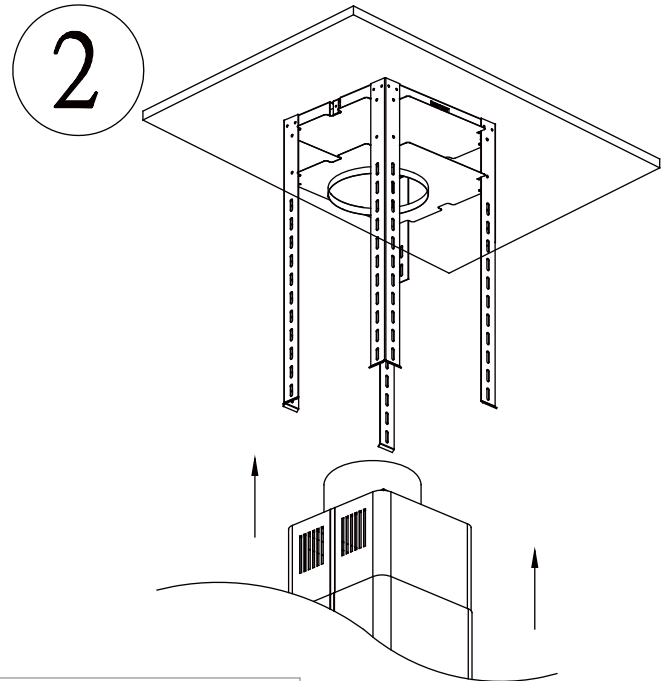
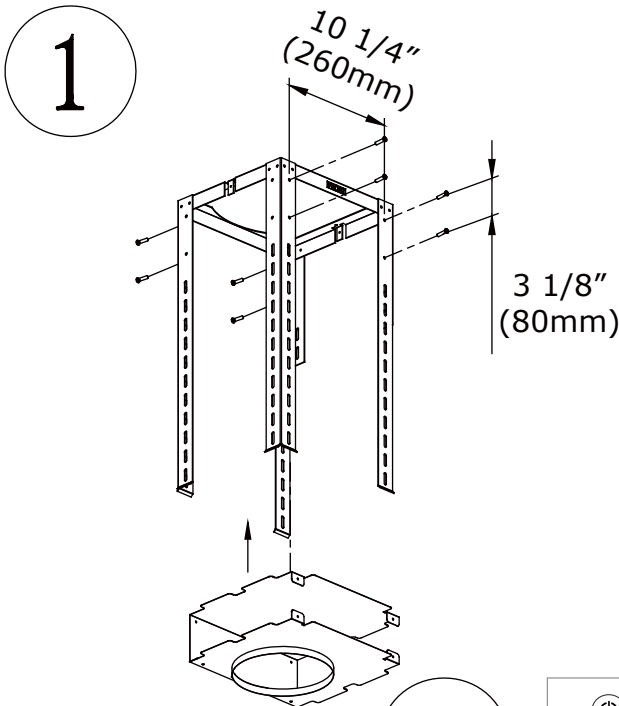


## ZRC-00ML

For use with models : ZML-xxxBx, ZML-xxxCx

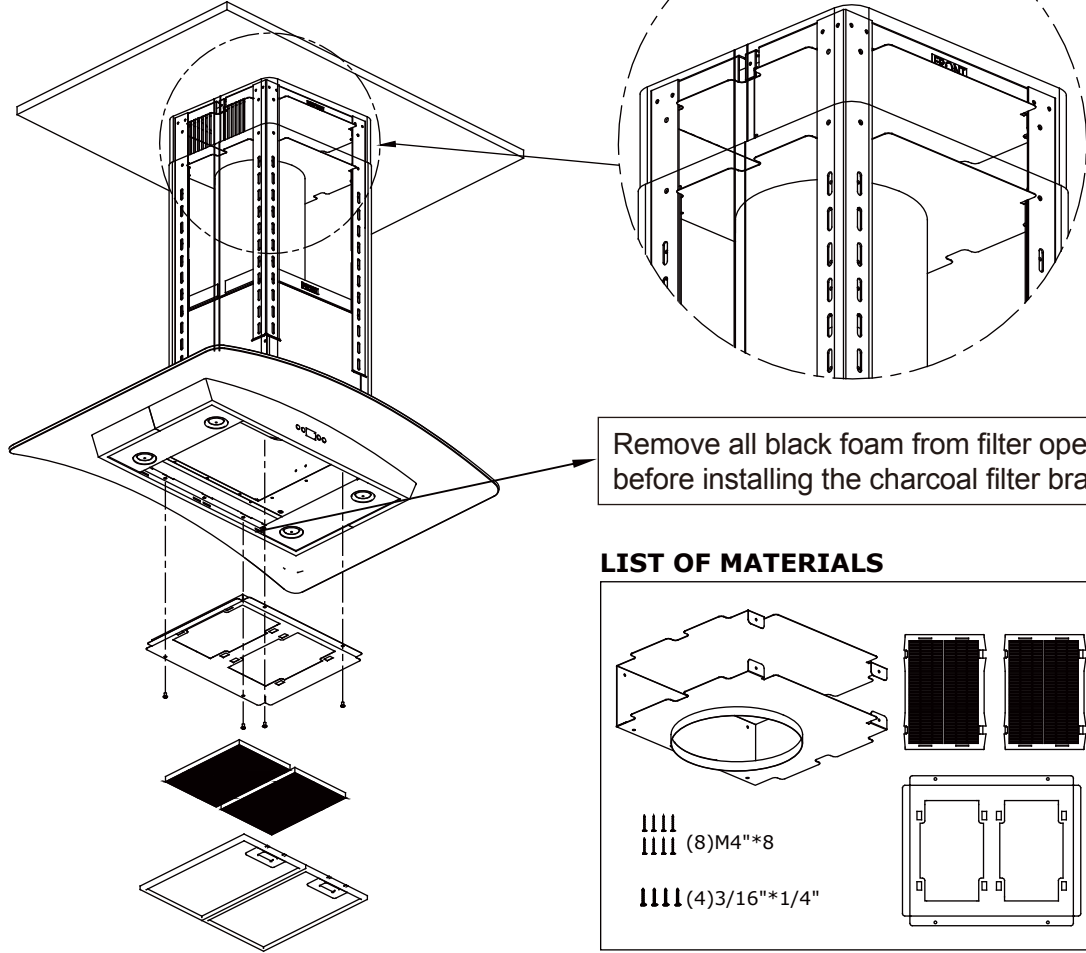

Follow instructions in hood manual to enable the "replace charcoal filter" indicator on the hood controls.