

ALEXA COMMAND GUIDE

Smart Microwave Drawer™ Oven

SMD2479JS, SMD2479MB, SMD2479MW, SMD2489ES

Pair with your Amazon Alexa App and enjoy hands-free cooking with Alexa.

| Menu Item | Command | Quantity Range |
|-----------------------------------|--|--|
| Open | Alexa, open the microwave. | - |
| + 30 Seconds | Alexa, add 30 seconds to the microwave. | 100% Power |
| Add Time | Alexa, add X minutes to the microwave. Alexa, add Y seconds to the microwave. | X = 01:00 – 60:00 Y = 00:01 - 00:59 |
| Pause Time | Alexa, pause the microwave. | - |
| Resume Time | Alexa, resume the microwave. | - |
| Stop Time | Alexa, stop the microwave. | - |
| Time Cook | Alexa, microwave/cook for X minutes and Y seconds. Alexa, reheat for X minutes and Y seconds. | X = 01:00 - 60:00 Y = 00:01 - 00:59 |
| Time Cook (Time & Power Level) | Alexa, microwave/cook for X minutes at level Y . | X = 01:00 - 60:00 Y = 1 - 10 |
| Time Defrost | Alexa, defrost for X minutes. Alexa, defrost for Y seconds. | X = 01:00 - 60:00 Y = 00:01 - 00:59 |
| Popcorn | Alexa, microwave/cook popcorn. Alexa, microwave/cook X popcorn. | X = Regular / Mini |
| Reheat | Alexa, reheat leftovers. Alexa, reheat dinner plate. | - |
| Fish | Alexa, microwave/cook fish. | - |

ALEXA COMMAND GUIDE

Smart Microwave Drawer™ Oven

SMD2479JS, SMD2479MB, SMD2479MW, SMD2489ES

| Menu Item | Command | Quantity Range |
|-------------------------------|---|---------------------------------------|
| Fresh Vegetables | Alexa, microwave/cook fresh vegetables. | Quick Fresh / Longer Fresh Vegetables |
| Frozen Entrée | Alexa, microwave/cook frozen entrée. | - |
| Frozen Vegetables | Alexa, microwave/cook frozen vegetables. | - |
| Ground Meat | Alexa, microwave/cook ground meat. | - |
| Potatoes | Alexa, microwave/cook potatoes. Alexa, microwave/cook baked potatoes. Alexa, microwave/cook sweet potatoes. | Baked / Sweet Potatoes |
| Rice | Alexa, microwave/cook rice. Alexa, microwave/cook brown rice. Alexa, microwave/cook white rice. | Brown / White Rice |
| Seafood | Alexa, microwave/cook seafood. | - |
| Steamer Bags | Alexa, microwave/cook steamer bags. | - |
| Bone-In Poultry (Defrost) | Alexa, defrost bone-in poultry. | X = 0.5 - 3.0 lbs. |
| Boneless Poultry (Defrost) | Alexa, defrost boneless poultry. | X = 0.5 - 2.0 lbs. |
| Casserole (Defrost) | Alexa, defrost casserole. Alexa, defrost X cups of casserole. | X = 1 / 2 / 3 / 4 / 5 / 6 cups |
| Chops (Defrost) | Alexa, defrost chops. Alexa, defrost X pounds of chops. | X = 0.5 - 3.0 lbs. |
| Ground Meat (Defrost) | Alexa, defrost ground meat. Alexa, defrost X pounds of ground meat. | X = 0.5 - 2.0 lbs. |

ALEXA COMMAND GUIDE

Smart Microwave Drawer™ Oven

SMD2479JS, SMD2479MB, SMD2479MW, SMD2489ES

| Menu Item | Command | Quantity Range |
|-----------------------------------|---|---|
| Roast (Defrost) | Alexa, defrost roast. Alexa, defrost X pounds of roast. | X = 0.5 - 4.0 lbs. |
| Steaks (Defrost ¹) | Alexa, defrost steaks. Alexa, defrost X pounds of steaks. | X = 0.5 - 3.0 lbs. |
| Soup (Defrost) | Alexa, defrost soup. Alexa, defrost X cups of soup. | X = 1 / 2 / 3 / 4 / 5 / 6 cups |
| Beverage (Reheat) | Alexa, reheat beverage. Alexa, reheat X cups of beverage. | X = 0.5 / 1 / 1.5 / 2 cups |
| Hot Cereal | Alexa, microwave/cook hot cereal. Alexa, microwave/cook X cups of hot cereal. | X = 1 / 2 / 3 / 4 / 5 / 6 servings |
| Hot Water | Alexa, microwave/cook hot water. Alexa, microwave/cook X cups of hot water. | X = 1 / 2 / 3 / 4 / 5 / 6 cups |
| Butter (Melt) | Alexa, melt X tablespoons of butter. | X = 2 - 8 tbsp. |
| Chocolate (Melt) | Alexa, melt X oz. of chocolate. | X = 1 - 8 oz. |
| Cream Cheese (Soften) | Alexa, soften cream cheese. Alexa, soften X oz. of cream cheese. | X = 2 - 8 oz. |
| Ice Cream (Soften) | Alexa, soften ice cream. Alexa, soften X cups of ice cream. | X = 2 - 6 cups |
| Dessert Topping (Warm) | Alexa, warm dessert topping. Alexa, warm X cups of dessert topping. | X = 0.25 - 0.5 cups |
| Syrup (Warm) | Alexa, warm syrup. Alexa, warm X cups of syrup. | X = 0.25 - 0.5 cups |

¹Must register with Amazon Alexa App. ²Amazon Echo device not included.

© 2025 Sharp Electronics Corporation. All rights reserved. Sharp and all related trademarks are trademarks or registered trademarks of Sharp Corporation and/or its affiliated companies. Amazon, Alexa, and all related marks are trademarks of Amazon.com, Inc. or its affiliates. All other trademarks are property of their respective owners. Product specifications and design are subject to change without notice. Internal capacity calculated by measuring maximum width, depth and height. Actual capacity for holding food is less.