

# Assembly Instructions

COLLECTION : PHOENIX

ITEM NO : D5399-10

PHOENIX 78" DINING TABLE



Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the PARTS LIST and/or HARDWARE LIST shown below.



 

 
 
Please read the instructions thoroughly before assembly.


1. We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
2. Please do not tighten screws or bolts until the assembly is completed.
3. To level the chairs or table, before tightening all the screws, the chairs or table must be placed on a flat surface and then tighten the screws.
4. Please put all parts on a non-abrasive floor before assembly and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

## PARTS LIST

NO.	DESCRIPTION	SKETCH	QTY
A	TABLE TOP		1 PC
B	LEG		4 PCS

## HARDWARE LIST

NO.	DESCRIPTION	SKETCH	QTY
1	FLAT WASHER 5/16" x 3/4" DIA.		8 PCS
2	SPRING WASHER 5/16" DIA.		8 PCS
3	ALLEN KEY M4		1 PC
4	BOLT 5/16" x 3"		8 PCS

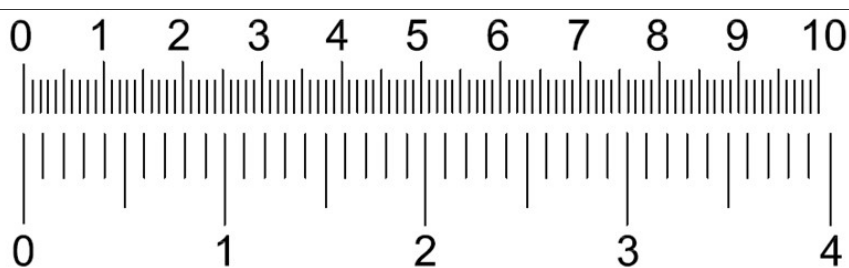

# Assembly Instructions

COLLECTION : PHOENIX


ITEM NO : D5399-10

PHOENIX 78" DINING TABLE

## STEP 1

Place the table top upside down on a soft and flat surface. Assemble the leg (B) to the table top (A) by using Allen Key (3) with hardware 1,2, and 4.

\*Attention: DO NOT TIGHTEN THE BOLTS

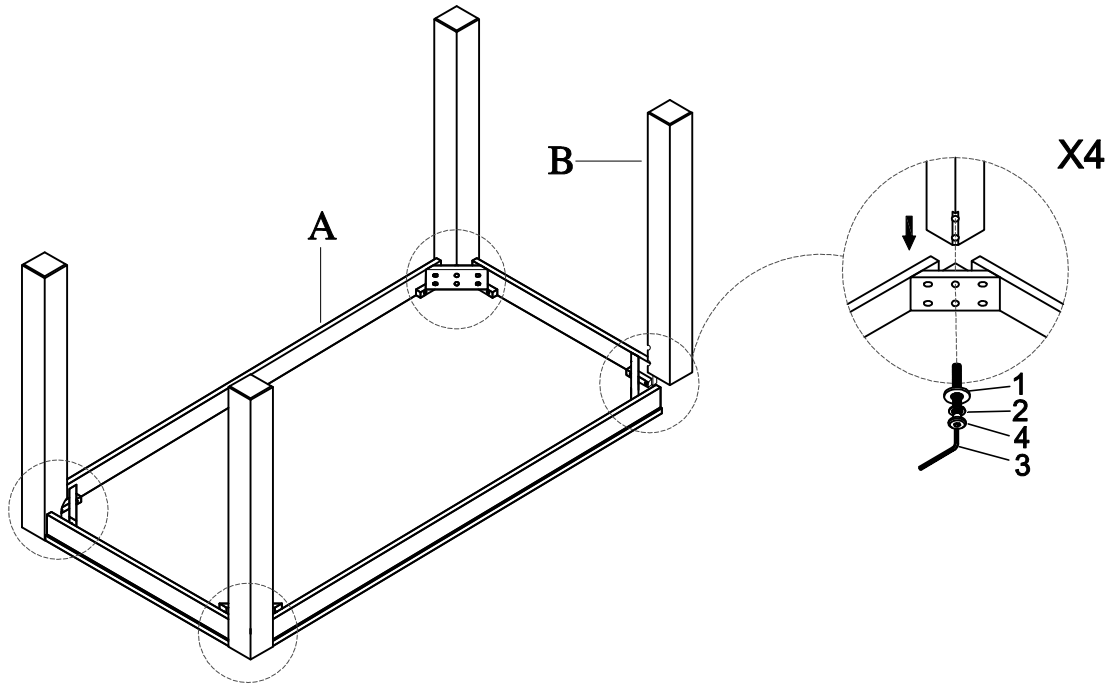

## STEP 2

To level the table, stand the table up on a flat surface and tighten all the bolts by using Allen Key (3).

