


UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE: #30693

Carefully unpack all assembly parts from the carton.

1. Take the lamp carefully out of the carton, and place it on a flat surface.
2. Thread **Part A** into the **Base** by turning **Part A** clockwise to tighten until snug.
3. Attach the **Harp** by pressing the end of the **Harp** into the saddle
4. Place the **Shade** over the top end of the **Harp**.
secure by threading the **Finial** onto the **Harp**. Hand tighten until snug.
5. Install correct bulbs referring to fixture marking and/or labels for maximum wattage. (Not included)

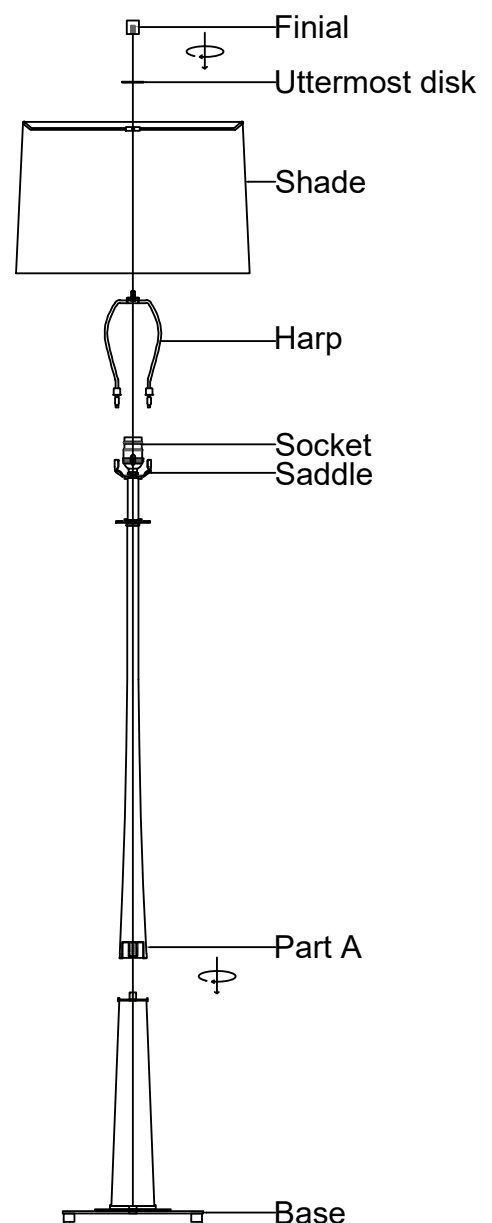

IMPORTANT SAFETY INSTRUCTIONS

This Portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

30693