







Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000

HARDWARE LIST

- A (1) 5/16" 1-3/4" Bolts
B (4) 5/16" 3-14" Bolts
C (4) 5/16" x 2-1/4" Bolts
D (9) Spring Washers
E (9) Flat Washers
F (1) Allen Wrench

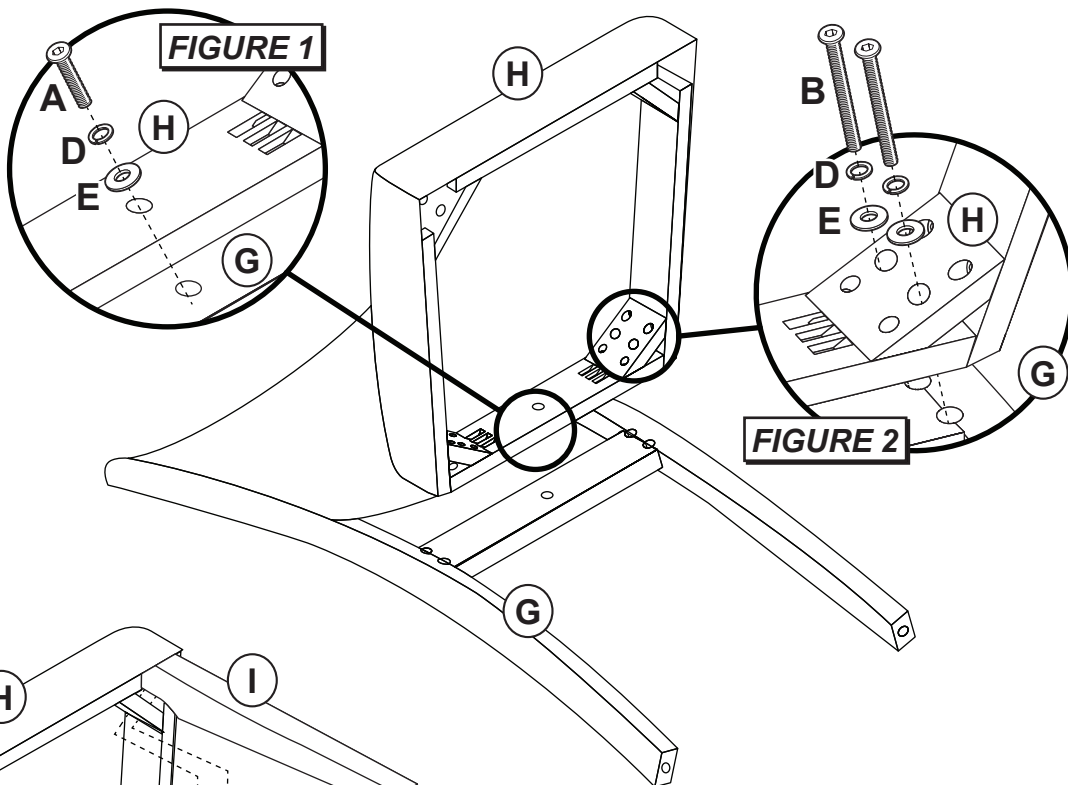
PARTS LIST

- G (1) Chair Back
H (1) Seat
I (2) Front Legs

PART	QTY	HARDWARE	PART	QTY	HARDWARE
A	1		B	4	
C	4		D	9	
E	9		F	1	

STEP 1 - Figure 1

Begin assembly by attaching Seat (H) to Chair Back (G) using 1 Bolt (A), 1 Spring Washer (D) and 1 Flat Washer (E) from the center.


STEP 2 - Figure 2

Next secure Seat (H) to Chair Back (G) using 2 Bolts (B), 2 Spring Washers (D) and 2 Flat Washers (E) from the each side.

STEP 3 - Figure 3

Finally attach Front Legs (I) to Seat (H) using 2 Bolts (C), 2 Spring Washers (D) and 2 Flat Washers (E) per leg. Tighten all bolts using Allen Wrench (F) provided. The assembly is now complete.

