

C091-020-531 ENTERTAINMENT CONSOLE

LILLIAN

1 of 1

ASSEMBLY INSTRUCTIONS

PLEASE UNPACK ALL PARTS AND CHECK AGAINST PARTS LIST ON THIS INSTRUCTION SHEET BEFORE DISCARDING PACKING AND CARTON!!


This is a set-up case and no assembly is required except for anti-tip restraint strap. (follow instruction for anti-tip restraint assembly)

Note: Touch-up pen is provided for repair of minor issues resulting from transit, handling and normal use.

*** NOTE KEEP THIS SHEET!!! ***

In the unlikely event that you would need a replacement part for your furniture, please contact your local authorized Caracole International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

C091-020-531 ENTERTAINMENT CONSOLE		
Part Description	Part No.	QTY
Door Pull	C091-020-531-3082	2
Adjustable Shelf	C091-020-531-3023	4
Nail-in Floor Glide	C093-020-011-3075	2
Anti-tip Restraint	C093-020-011-30157	1
Adjustable Shelf Pin	C092-020-211-3087	16
Adjustable Floor Glide	C093-020-011-3075	3
Magnetic Catch	C092-020-211-4012	4
Single Roller Catch	C092-020-211-40343	4
Touch-up Pen	C093-020-011-30439	1

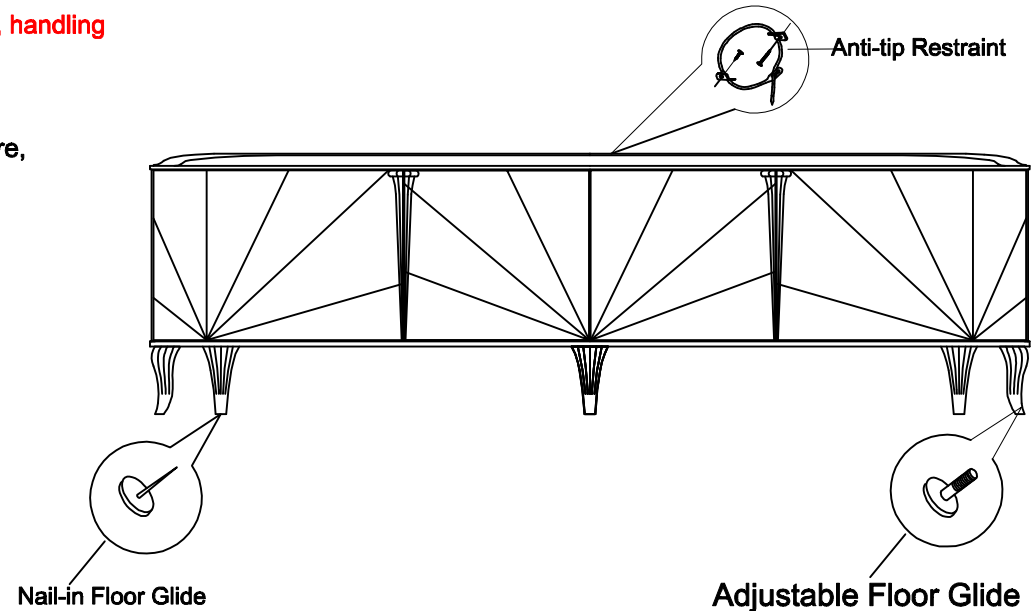

Created on:2021-09-28