


ASSEMBLY INSTRUCTIONS



aspenhome®

Distributed by Furniture Values International, LLC

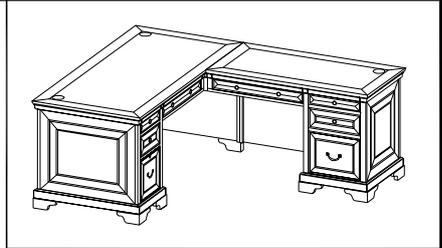

ITEM NO: I40-307 & 308

66" Computer Desk For -308 & 48" Return Desk For -307


HARDWARE PACK

Bolt	5 Pcs	Allen Wrench	1 Pc
Flat Washer	5 Pcs	Wood Screw	2 Pcs
Lock Washer	5 Pcs		

COMPONENT LIST

Key	2 Pcs
-----	-------

Hardware pack.
Do not trash.

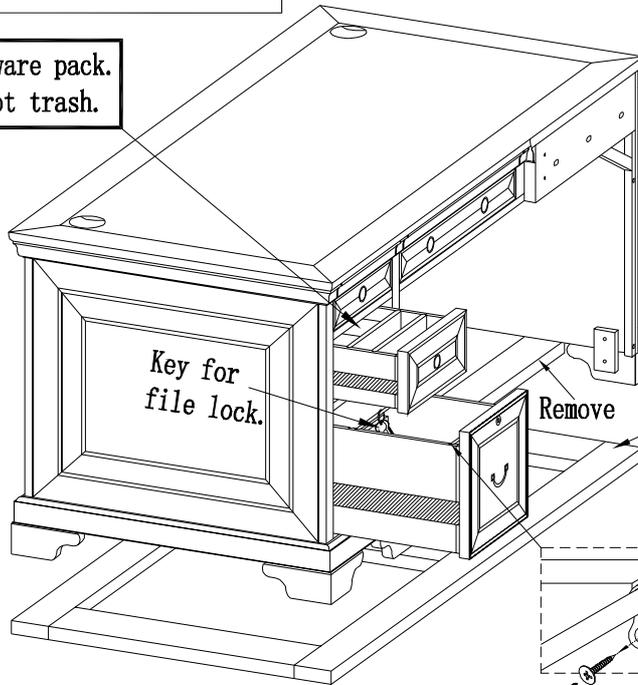

Key for
file lock.


Remove

Take this skid
off and discard.

Remove the wood screws on
the side panels of drawer
box to remove the rod loops
and file rods if necessary.

Remove

Take this skid
off and discard.

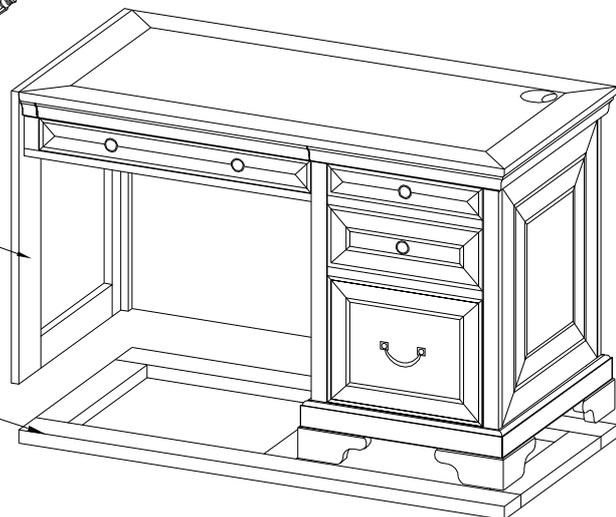


ASSEMBLY INSTRUCTIONS




aspenhome®

Distributed by Furniture Values International, LLC

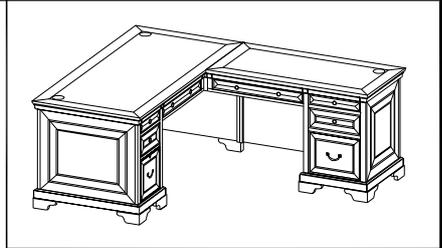


ITEM NO: I40-307 & 308

66" Computer Desk For -308 & 48" Return Desk For -307

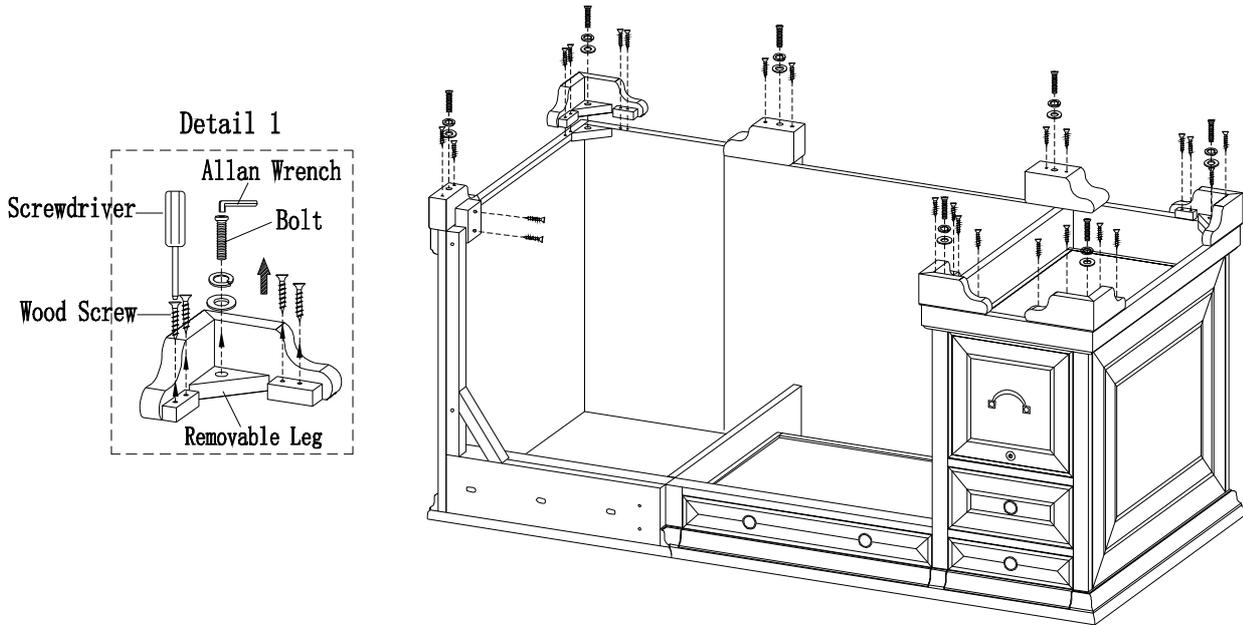

If the desk is too wide to go through the door, then you need to remove the legs, As shown above, using an Allen Wrench and screwdriver, remove the bolts and wood screws from the legs to the desk.

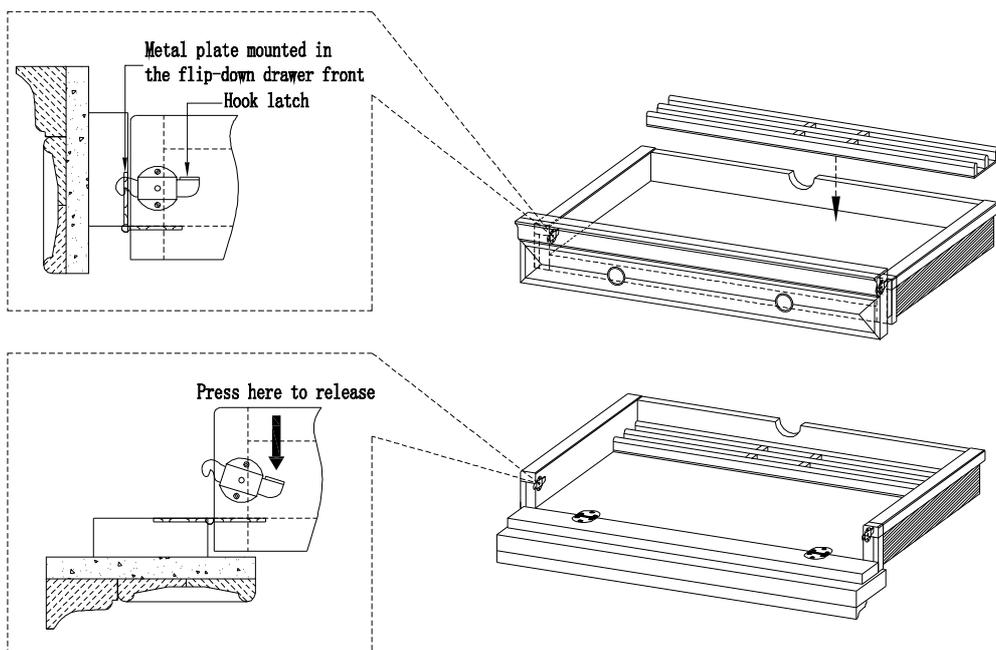


ASSEMBLY INSTRUCTIONS

ah

aspenhome®

Distributed by Furniture Values International, LLC

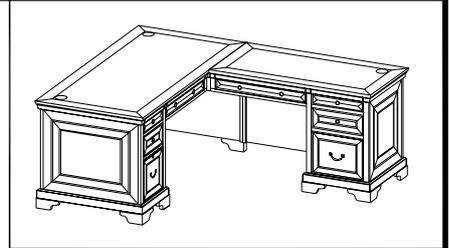


ITEM NO: I40-307 & 308

66" Computer Desk For -308 & 48" Return Desk For -307



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

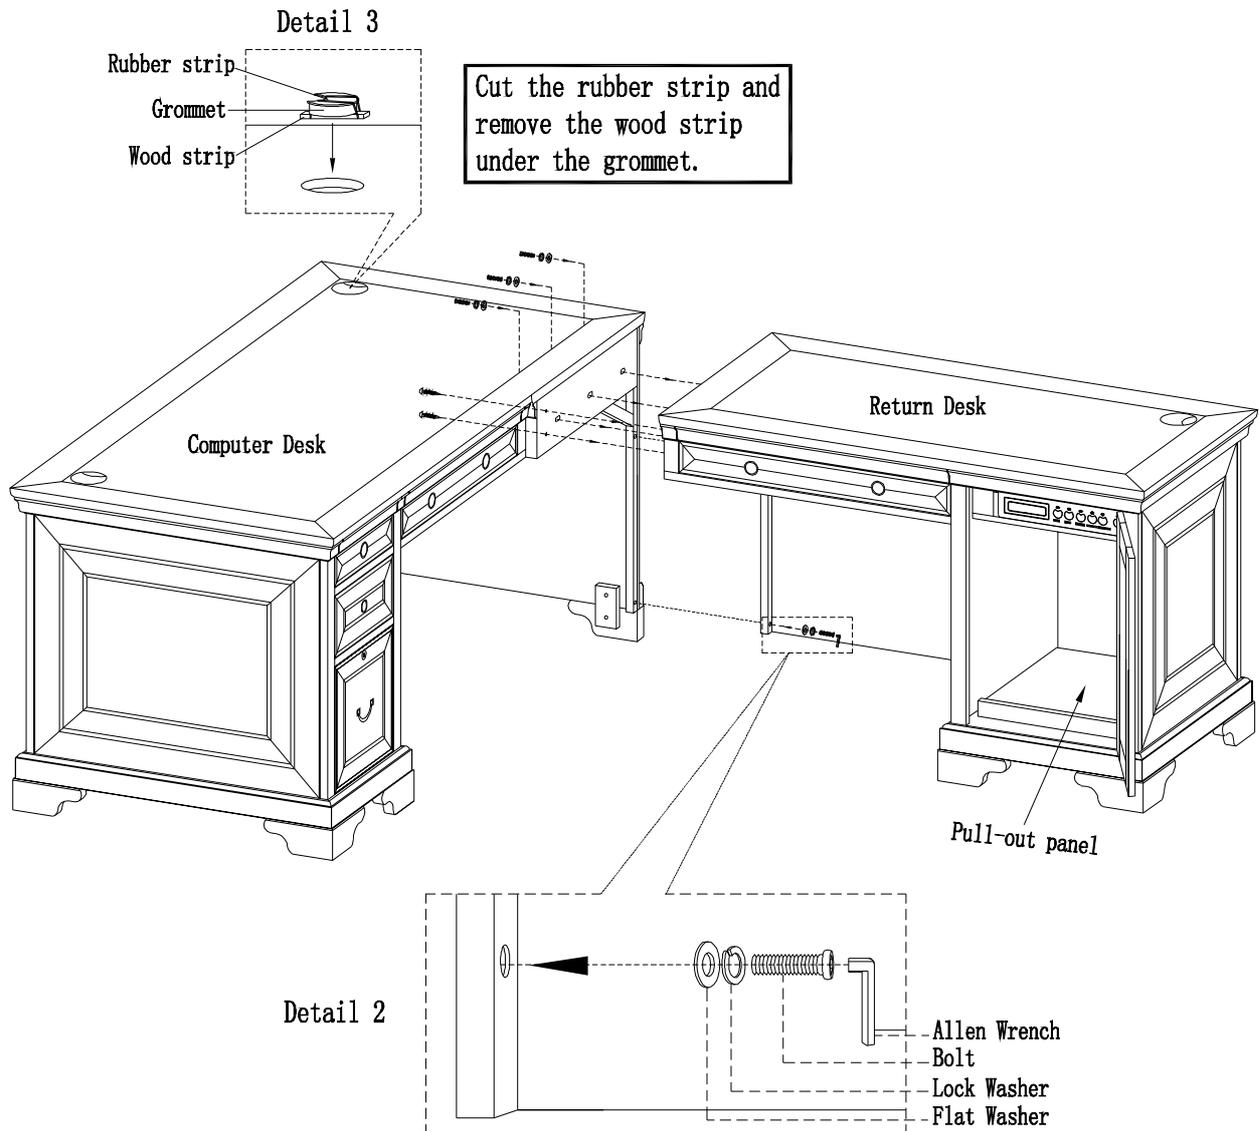

1. Align the holes in the desk end connector with the holes in the return's. Using an allen wrench, bolts, lock washers, flat washers and two wood screws, connect the desk and return together as shown above.
2. Cut the rubber strips and remove the wood strips under the grommets as shown in detail 3.