




ZENTRO[®] FIRE PIT

USER GUIDE

 BREEO[®]

INSTALLATION


IN 3 EASY STEPS

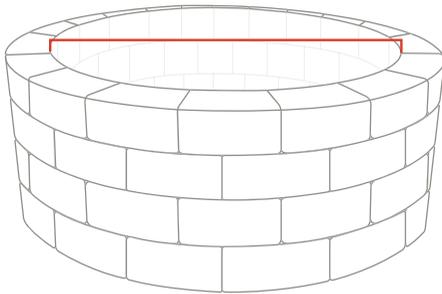

STEP 1


Ensure that you have the correct size block fire surround for your new Zentro® smokeless fire pit (see table below).

ZENTRO SIZE:	BLOCK SURROUND NEEDED:
ZENTRO 24"	27" - 33" INSIDE DIAMETER
ZENTRO 30"	34" - 39" INSIDE DIAMETER

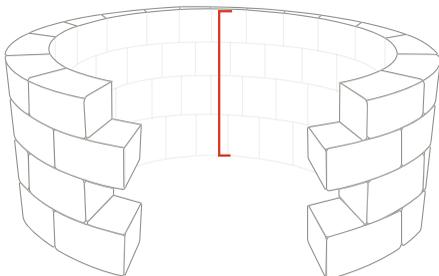

STEP 2

Ensure that the depth of your block fire surround is at least 15 inches; this will provide 3 inches of air space underneath the fire pit insert for airflow. Ensure that nothing is touching the bottom or the sides of your Zentro fire pit as this will affect airflow and interfere with the smoke reduction technology. Remove any debris or ashes from the inside of the block fire surround if necessary.

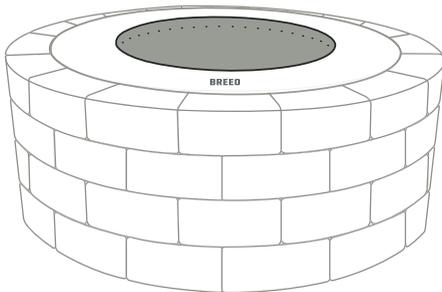

STEP 3

Using 2-3 people, set the fire pit into the block fire surround. The Zentro fire pit has 1/8" spacer brackets welded to the underside of the top flange. Your Zentro fire pit Insert is positioned correctly when these spacer brackets are resting on the top layer of the block fire surround.



FOR YOUR SAFETY

The Zentro® smokeless fire pit is designed for outdoor use only. **Never burn your Zentro fire pit in a building, garage, or any enclosed area.**

Always use your Zentro fire pit on a level, non-combustible surface such as rock, stone or dirt. **Never use your Zentro fire pit on wooden or composite decks, stamped concrete or any heat sensitive surface.**

Do not attempt to move or store your Zentro fire pit until all ashes and coals are completely extinguished and all surfaces have cooled completely. Never touch ashes or coals to see if they are hot.

All surfaces of the Zentro fire pit will become extremely hot when in use. To avoid burns, do not touch any part of the Zentro fire pit until it has completely cooled unless you are using protective gear (potholders, gloves, BBQ mittens, hot pads, etc.).

When using your Zentro fire pit, exercise the same precautions you would with any open fire. **Never leave your Zentro fire pit unattended, especially around children and pets.**

HOW TO BUILD THE ULTIMATE SMOKELESS FIRE

STEP 1

CHOOSE YOUR FUEL.

Select a firestarter material, like shredded newspaper or cardboard, a dry, thinly split softwood for kindling, and a dry, split hardwood for your main fuel. Make sure your fuel is less than 4" in diameter. Focus on creating as much airflow as possible throughout the whole fire building process.

STEP 2

BUILD A LOG CABIN.

Start with 2 full-size pieces of cordwood and lay them caddy-corner on the X Airflow™ system across from each other. Then, lay two pieces of kindling perpendicular across those. Fill the inside square with your firestarter. Continue with the pattern in kindling until it approaches the top of your fire pit, filling the center with firestarter as you go, if you're using newspaper or cardboard. If you're using another type of firestarter, you can place it in the middle when you start building, but there's no need to fill the whole structure with it. Taper the "cabin" inward as you get close to the top.

STEP 3

LIGHT IT UP.

Using a grill lighter or a long match, light the firestarter at the bottom of the log cabin. We do NOT recommend using regular matches, as they can be harder to use when you're reaching into the fire pit.

STEP 4

FEED THE FLAMES.

Once you've got a tiny blaze going, start adding cordwood without disrupting or knocking over the kindling cabin. Starting with smaller cordwood pieces and gradually using larger ones as the fire grows, lay the pieces toward the perimeter of the bottom of the fire pit. This will help your fire spread evenly around your fire pit.

STEP 5

LET IT BURN OUT.

When you're done with your fire, patiently wait for the fire to burn out on its own. Don't pour water on it, and never leave your fire unattended. If you do need to walk away, always cover with a spark screen and make sure there's nothing near the fire pit that could catch on fire or be damaged. Clean out the ashes every 4-5 burns once the fire pit cools to maintain airflow and always have a smokeless fire.

TENDING TO YOUR ZENTRO® FIRE PIT

STEEL

Be sure to burn a hot fire in your fire pit within 24-48 hours of having your fire pit outside. This will help to cure the paint on the top and outside of the fire pit.

This product can reach potential temperatures of 1,900+ degrees Fahrenheit. At this point, there is no paint that can withstand both direct flame contact and outdoor use. We paint our fire pits with a High-Temp outdoor grill paint that has a heating rating up to 1,400 degrees Fahrenheit. However, with use and time, the fire pit will begin to develop surface rust in some areas. For this reason, we build our fire pits very heavy duty so they will last for years and years, despite the rust. You can maintain the painted black look of your fire pit by sanding any spots you would like to paint and then using black high-temperature paint to touch-up the spots.

STAINLESS STEEL

The Zentro stainless steel smokeless fire pits are built out of a high quality 304 stainless steel, which should never rust, allowing you to leave your fire pit out in the elements all year long! This material will naturally develop a beautiful patina finish over time and requires no maintenance.

Breco, LLC warrants to the original purchaser that the Breco Fire Pits and Accessories are free from workmanship and material defects during the lifetime of the original purchaser. In addition Breco, LLC warrants no rust through or burn through for a period of five (5) years from purchase. If a product is covered by this limited warranty, Breco, LLC, at its option, will repair or replace with a new product free of charge, excluding any applicable shipping and handling charges. If the product being warranted has been discontinued, the replacement product will be of equal or similar value. Altering any Breco product, or using the product in any way other than the intended use, will void this Lifetime Warranty. Except as provided above, no warranty is offered on rust, paint or finishes due to being made with material with potential for corrosion. Steel products will develop a natural iron oxide patina over time.

Breco, LLC's liability and obligation is limited to repair or replacement of the product, at their option. The purchaser must provide Breco, LLC with photos of the product's defects for evaluation. Upon approval of warranty, Breco, LLC will issue a return for repair, or return for exchange of the defective product.

This warranty does not cover damage or product failure caused by normal wear and tear, accident, misuse, negligence, tampering, modifications, act of war, overloading, improper attachment, improper maintenance, or failure to maintain. Breco, LLC is held harmless for any injury or death caused by the misuse of this product. This warranty does not cover damage caused by proper or improper use of our products to any surrounding surfaces, structures, or furnishings. This includes, but is not limited to, discoloration or damage to a patio or deck surface, furniture, house, or any other structure.

This warranty gives you specific legal rights providing said product is put to its proper designated use.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. NO ORAL AGREEMENT, GUARANTEE, PROMISE, REPRESENTATION OR WARRANTY SHALL BE BINDING. IN NO EVENT WILL BRECO, LLC BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES EVEN IF BRECO, LLC HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND EVEN IF BRECO, LLC HAS KNOWLEDGE THAT FAILURE TO PERFORM COULD CAUSE CONSEQUENTIAL ECONOMIC LOSSES. IN ANY EVENT, CUMULATIVE DAMAGES FOR BREACH OF THIS WARRANTY WILL BE LIMITED TO THE AMOUNT ACTUALLY PAID TO BRECO, LLC FOR THE PRODUCT. THIS PARAGRAPH SHALL APPLY TO ALL ACTIONS RELATED TO THE PRODUCT, WHETHER BASED ON TORT, CONTRACT OR OTHER THEORIES. THE PURCHASER ACKNOWLEDGES THAT THIS PARAGRAPH ALLOCATES THE RISK OF PRODUCT FAILURE BETWEEN BRECO, LLC AND THE PURCHASER, AND THAT THIS ALLOCATION IS REFLECTED IN THE PRICE PAID.

 **BRECO®**

WWW.BRECO.CO

(800) 413-9848

CONTACT@BRECO.LLC.COM

