

# ASSEMBLY INSTRUCTION FOR ACME FURNITURE

## MODEL # 27675

Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

\*\*\*Do not fully tighten screws until fully assembled\*\*\*

COMPONENT PARTS		
DESCRIPTION	PART NAME	Q'TY (PCS)
①	DRESSER	1
②	LEG	4
③	BOTTOM CENTER SUPPORT	1


### HARDWARE REQUIRED (BOX OF DRESSER)

- (A) BOLT 1/4" x 4" - 4 PCS
- (B) SPRING WASHER 1/4" - 4 PCS
- (C) FLAT WASHER 1/4" - 4 PCS
- (D) ALLEN KEY M4 x 4 3/16" - 1 PC

### How to assemble:

**Step 1:**

**Remove Inner box leg**

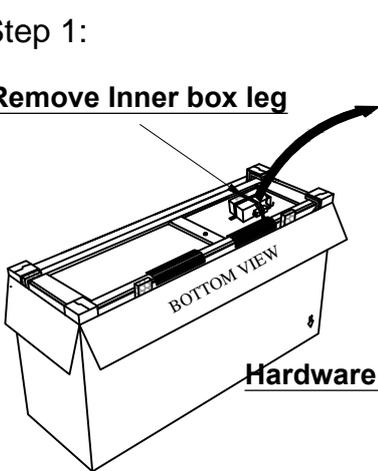


**Remove Center Leg**



**Hardware Pack**

**Step 2:**

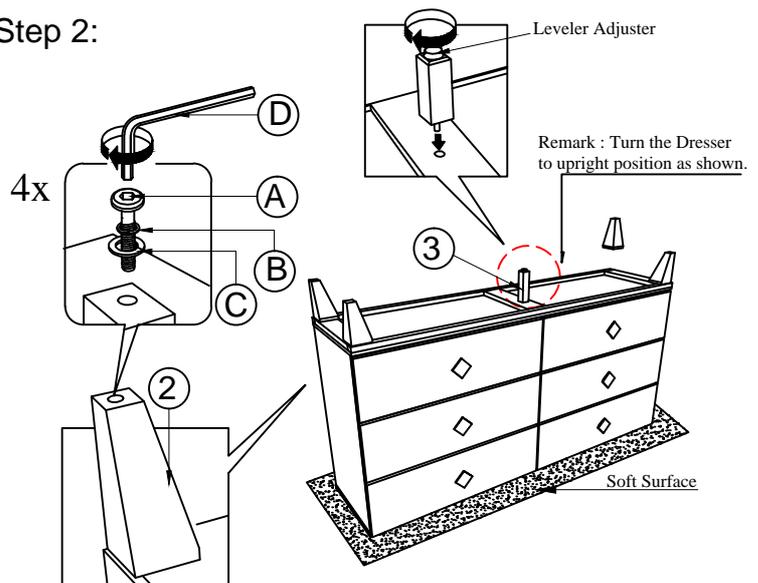

Leveler Adjuster

Remark : Turn the Dresser to upright position as shown.

Soft Surface

**Attention:**

\*\*\* Some number parts listed in the instruction sheet may not be in parts bags as they already be assembled. Carefully check parts and packing materials prior to ordering replacements.