


 


 


 





 

 





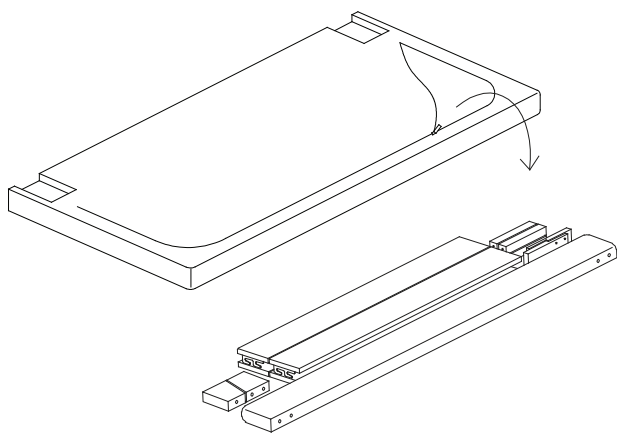 
IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws / bolts until all completely assembled.
- Keep all hardware parts out of reach of children.


PART LIST			
NO	DESCRIPTION		QTY /PCS
1		HEADBOARD	1 PC
2		HEADBOARD LEG	2 PCS
3		FOOTBOARD	1 PC
4		FOOTBOARD LEG	2 PCS
5		SIDE RAIL LEFT	2 PCS
6		SIDE RAIL RIGHT	2 PCS
7		SIDE RAIL SUPPORT	2 PCS
8		SLAT	4 PCS
9		SUPPORT LEG	4 PCS

HARDWARE LIST			
NO	DESCRIPTION		QTY / PCS
A		JCBB M8 X 20 MM	8 PCS
B		JCBC M6 X 45 MM	6 PCS
C		JCBC M6 X 40MM	4 PCS
D		JCBC M6 X 25MM	12 PCS
E		FLAT WASHER M6	18 PCS
F		SPRING WASHER M6	18 PCS
G		WOOD DOWEL M8 X 30MM	2 PCS
H		CSK M4 x 32MM	8 PCS
I		ADJUSTER M6	4 PCS
J		ALLEN KEY M4	1 PC
K		ALLEN KEY M5	1 PC
L		JCBC M6 x 50MM	2 PCS


STEP 1



 
STEP 2

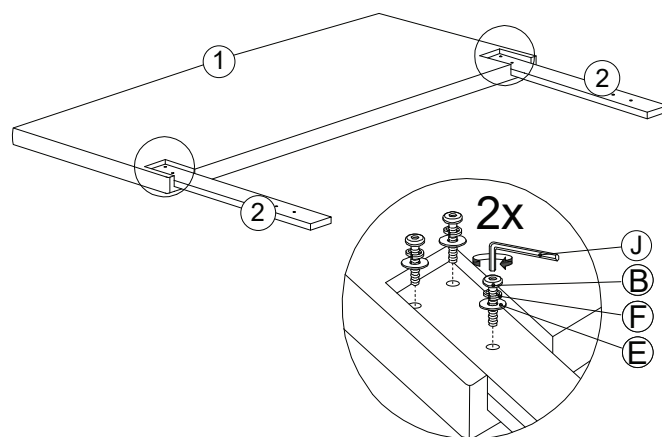

 
STEP 3

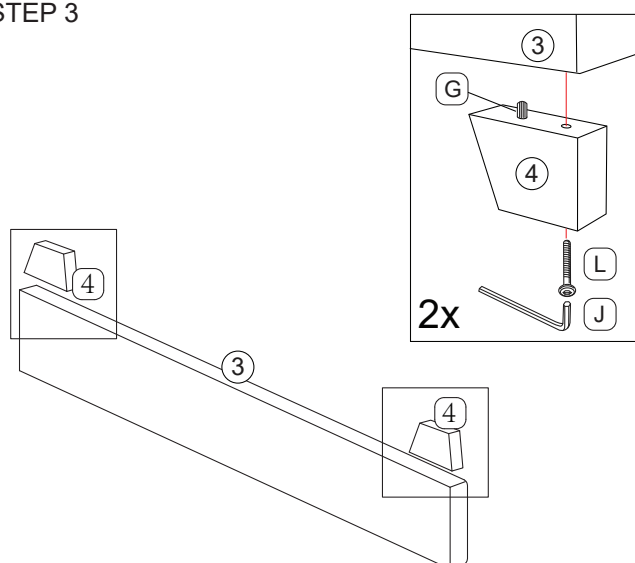

 
STEP 4

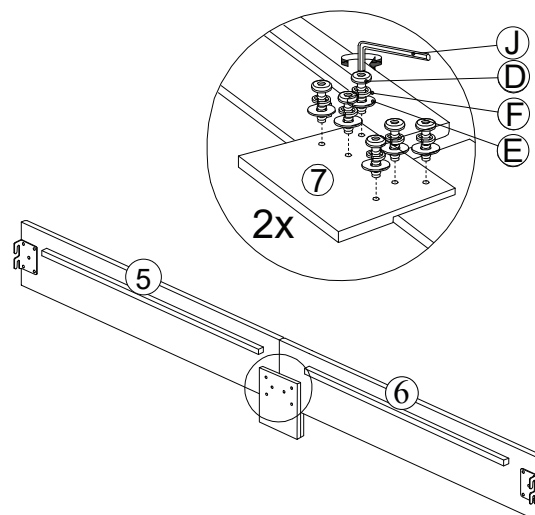

 
STEP 5

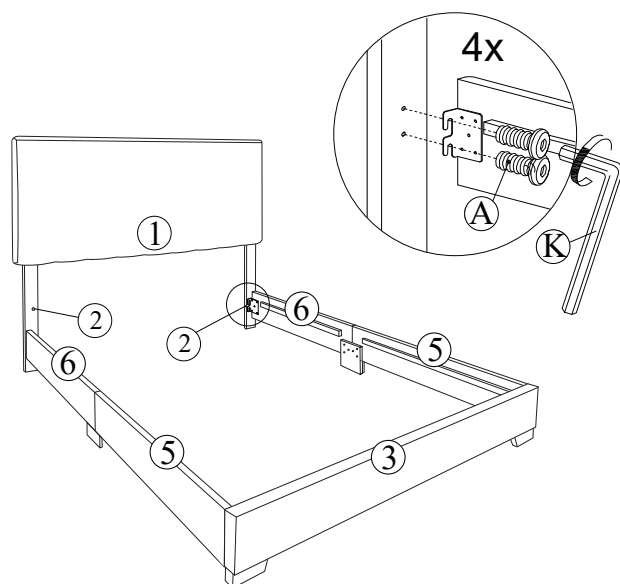

 STEP 6

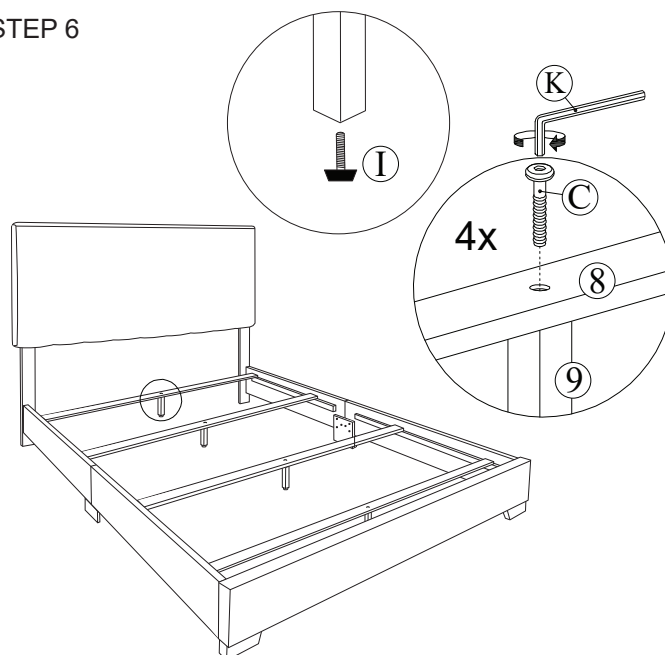

 STEP 7

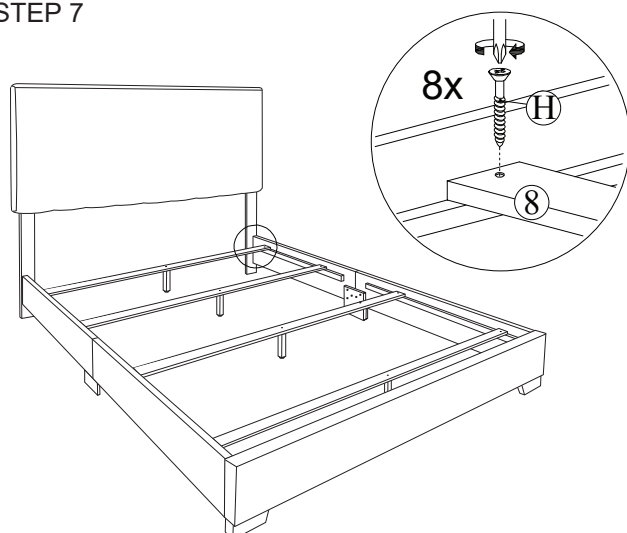

COMPLETED
ASSEMBLY