



MOTOMOTION **Assembly Instructions— Recliner**

FASHION. FORWARD. FURNITURE.


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.



Inside the carton you will find two plastic bags that have the recliner's wings in it. Remove the wings from the plastic bags and set them aside to be used in assembly and installation.

Make sure to read the instructions below before assembling your Recliner.

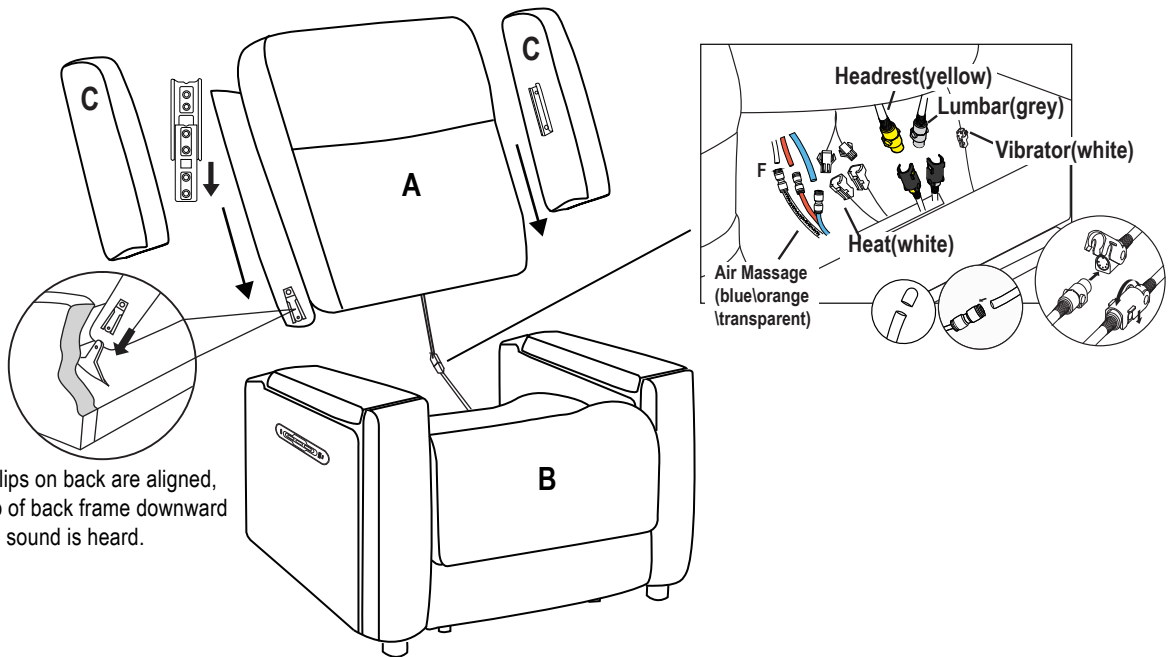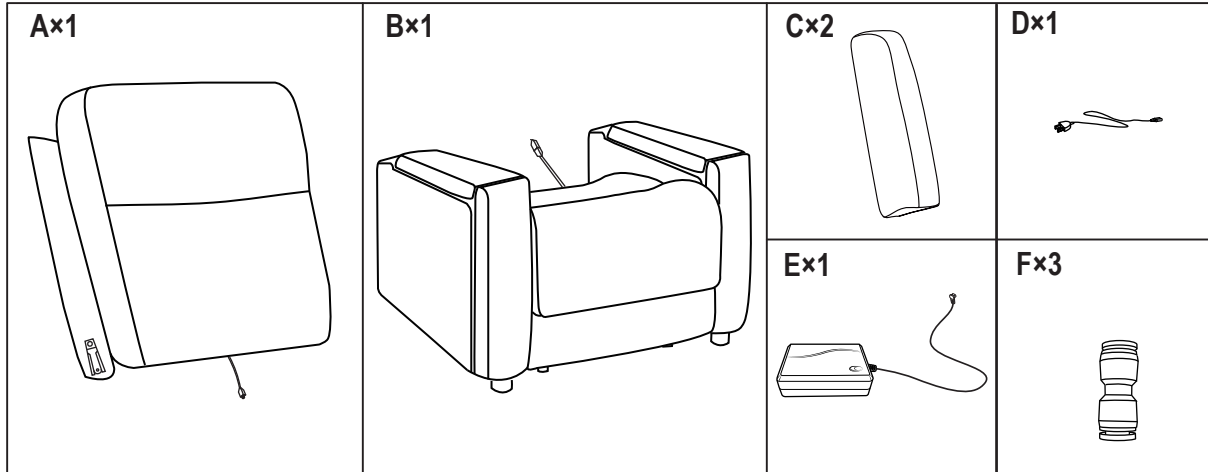

Ensure both clips on back are aligned, then press top of back frame downward until a clicking sound is heard.

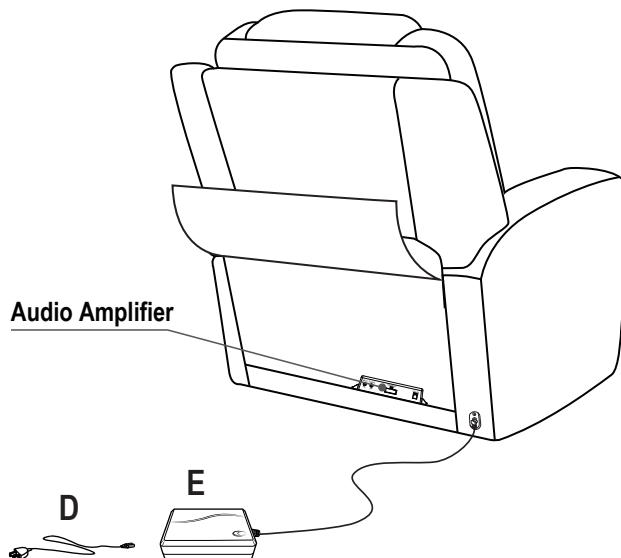

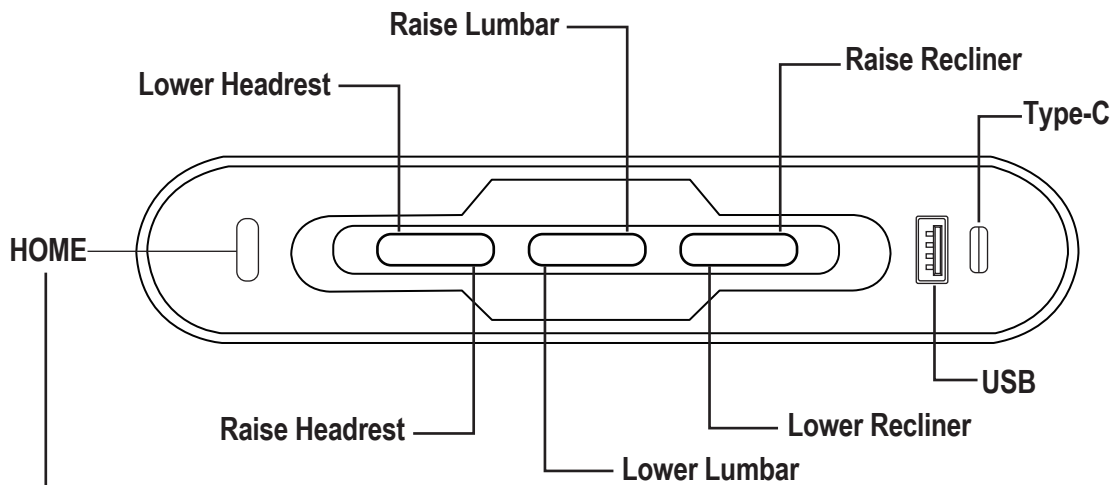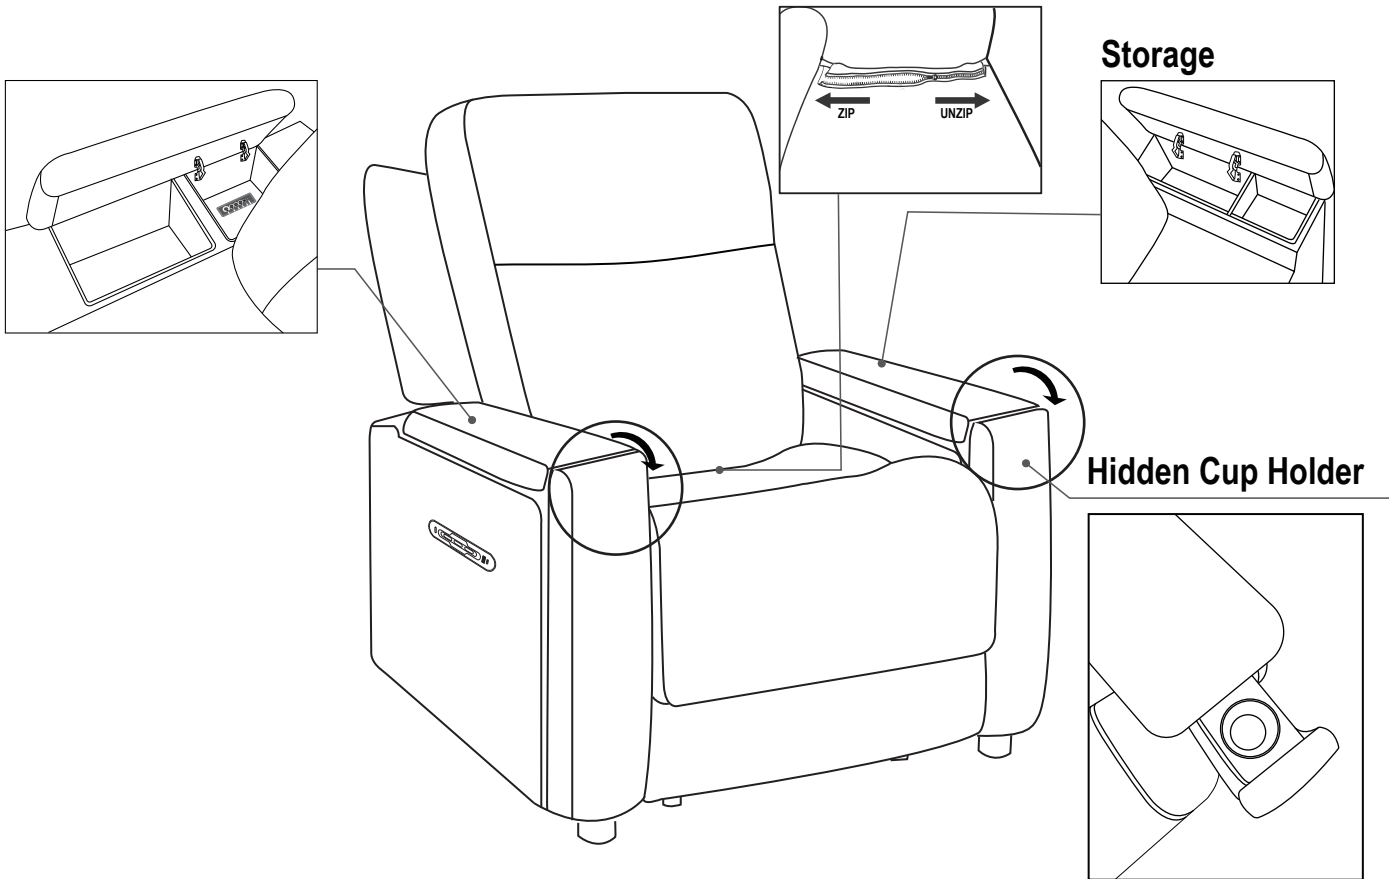


When you cannot find the remote control handle, press and hold this button for 10 seconds and the handle will make a sound to indicate its location.
 NOTE: If the remote control handle is 10 meters away from the base, pressing and holding this button will not cause the remote control to respond.

! WARNINGS & CAUTIONS

- To avoid injury, use care when assembling.
- Use on level surface.
- Adult supervision when used by children.
- Maximum load 158 kg / 350 lb.
- Exceeding this weight may damage product and cause potential injury.
- For indoor use only.
- To avoid any risk of suffocation to children or pets, dispose of all plastic bags immediately.
- To ensure proper performance, occasionally check for loose screws and tighten as needed.

**Caution: Read the important instructions below before operating your power mechanized equipment
Do not allow children to play on or operate this power mechanized equipment**

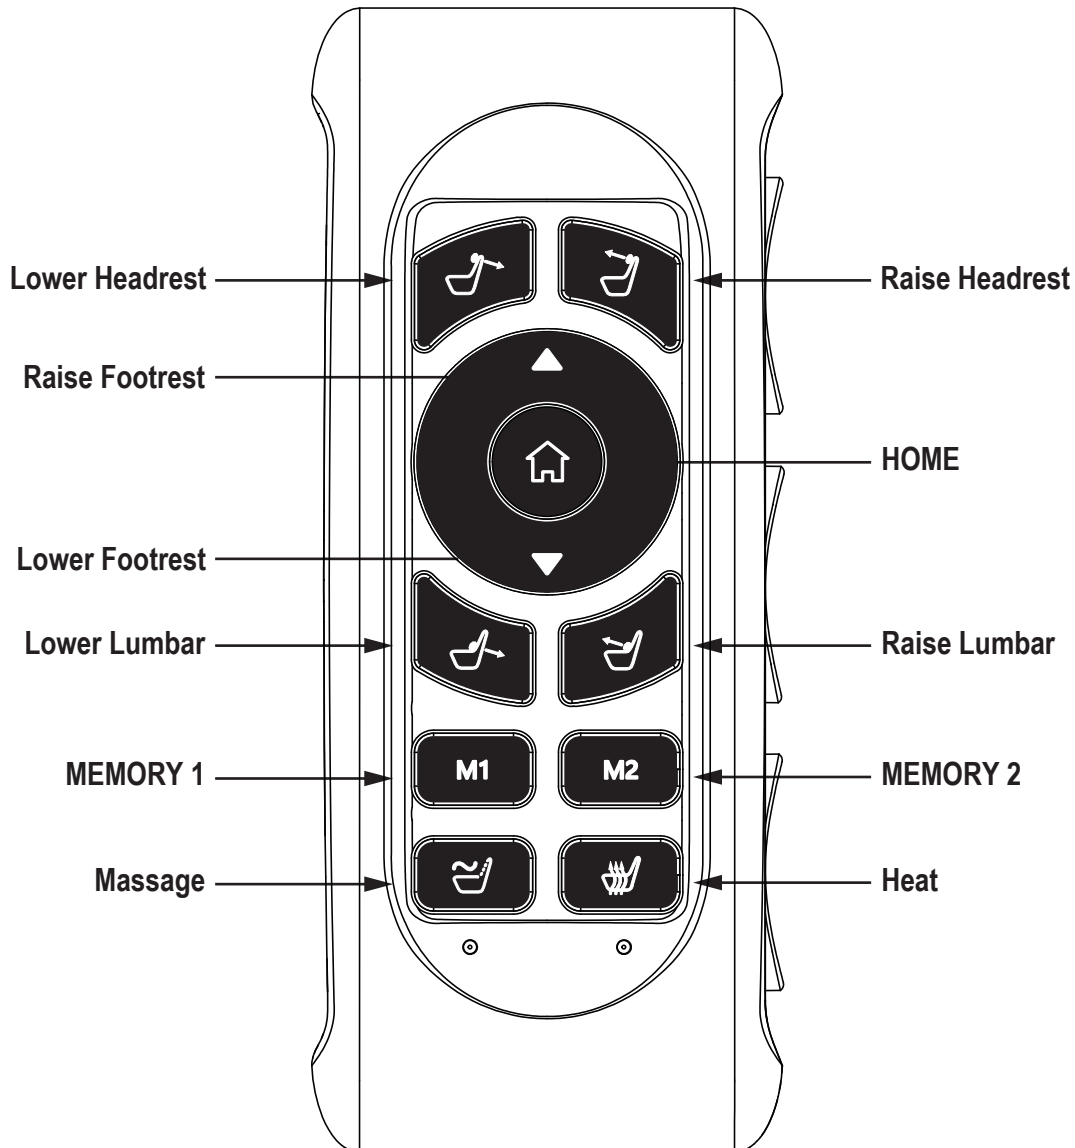

How to use Memory Function

Press and hold Memory 1 button and Memory 2 button for 3 seconds. The buzzer in the Remote will keep ringing to indicate that the hand control is in "set" mode. Press and hold the desired memory button to set the memory position. The buzzer will ring two times .

To go to a preset Memory 1 & Memory 2 position, press and hold the desired memory button M1 & M2.

How to use Massage and Heat

There are two gears for the heating and massage functions; Green light for low grade, red light for high grade. Heating function will stop automatically after 30 minutes, massage function will stop automatically after 20 minutes. Pressing the lumbar support also stops automatically when the heating massage function is running.


How to pair the new remote

Disconnect the power, then Press and hold the "Lower Headrest" button and "Raise Headrest" buttons for 5 seconds, the buzzer in the remote will ring two times. Connect the power, the buzzer in control box will ring three times, and then the remote will ring one time. The pairing is finished.

NOTE: Pairing will not be possible when the remote control is more than 10 meters away.

NOTE: When the remote is completely dead (of batteries), it needs to be charged before it can be paired.


Audio Amplifier

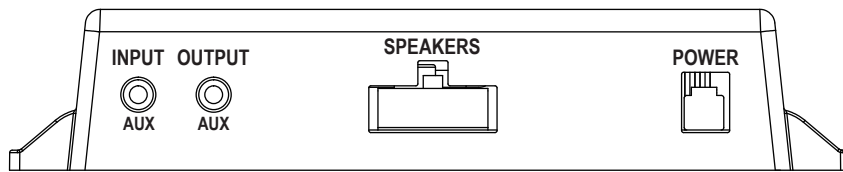

Located under the recliner console, the audio amplifier includes one AUX input, one AUX output, and one S/PDIF port. Multiple devices can be connected using 3.5 mm AUX cables: connect the audio source to the AUX input, then connect the AUX output to the AUX input of the next amplifier. 3.5 mm AUX cables are sold separately.

Your chair is equipped with easily accessible armrest controls for multi media

Audio Control Panel

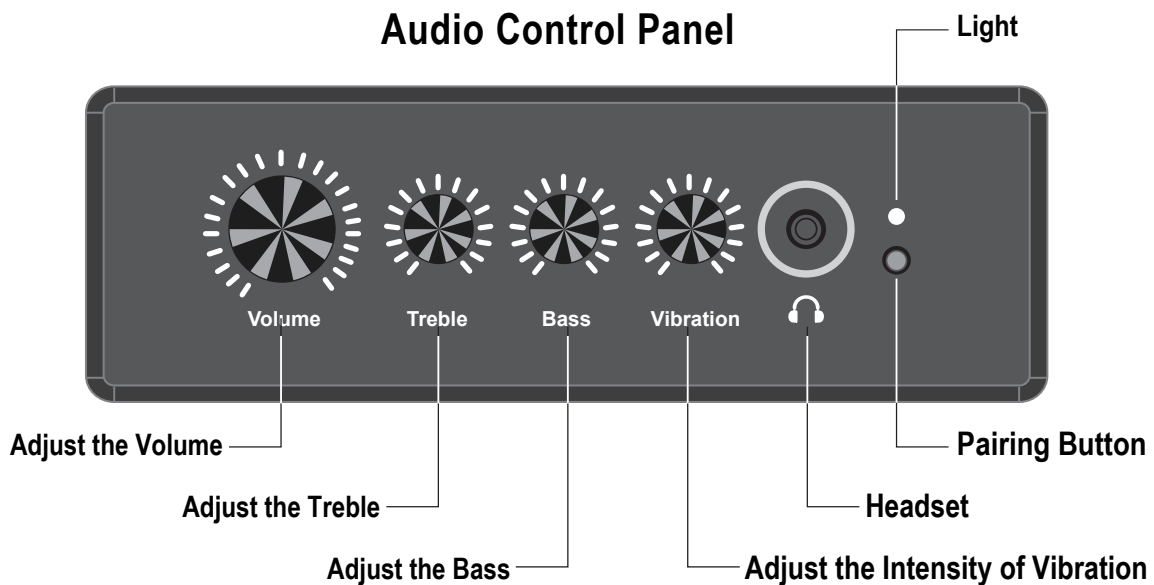

How to Connect Wireless

Press and hold the Pairing button, the LEDs on the memory buttons will flash to indicate that the control is in "pair" mode. Switch on the pairing function on your device.

Turning On/Off the Speaker

Press and hold the volume adjustment knob to turn on the speaker. Press and hold again to turn off the speaker.

Wireless Connection Pairing Mode

Press and hold the pairing button (blue light flashes) to initiate pairing. The wireless device name is: Moto Immersive Audio or Moto Media System. Once connected, the blue light stays on and you will hear a voice prompt: "Connected." If disconnected, the blue light will turn off and you will hear a voice prompt: "Disconnected."

Switching Broadcast Mode

1. Press the pairing button twice quickly; you will hear a voice prompt: "Broadcast mode." When connected, the red light stays on. Press the pairing button twice quickly again, and you will hear a voice prompt: "Broadcast off," which exits broadcast mode.
2. After the device connects via wireless connection, press the pairing button twice quickly (red light flashes) to enter broadcast mode; the blue light will turn purple. Press the pairing button twice quickly again to exit broadcast mode; the purple light will turn back to blue.

Using Broadcast Mode

When a device such as a phone or TV is connected to the wireless connection of Sofa A, press the pairing button twice quickly to switch to broadcast mode (purple light stays on). Then turn on the Sofa B speaker and press the pairing button twice quickly to switch it to broadcast mode (red light stays on). Sofa A will act as the signal source, and Sofa B will sync to play the audio or video from Sofa A.

Notes

1. Wireless button search will automatically end after three minutes without connecting to any devices, and the flashing light will turn off. If you press the button during the flashing period, the search will end.
2. Wireless button mode has higher priority than broadcast mode. In broadcast mode, if different devices connect via wireless button to play audio or video, broadcast mode will stop. If no playback occurs for about 4 seconds, it will re-search for other broadcast signal sources.
3. If multiple sofas are connected to the same device via wireless button, audio and video cannot be played simultaneously. The default is for the last connected sofa to play.

Example: If sofas A, B, and C are all in broadcast mode (red light stays on), press and hold the pairing button (red light flashes) to connect to sofa A (purple light stays on). Sofas B and C will sync to play audio or video from sofa A. If the same device connects to sofa B (purple light flashes), sofa B and C will play normally, and sofa A will stop working. If you then connect to sofa C (purple light stays on), sofa C will play normally, while sofas A and B will not work. A restart is needed for playback.
4. When using wireless button to connect the main speaker sofa to a TV, there may be delays and instability. It is recommended to use a wired connection to the main speaker sofa and then use broadcast mode for wireless synchronization to other sofas.
5. Please keep the wireless button between devices within 10 meters.

FCC INSTRUCTION

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

TROUBLESHOOTING

PROBLEM	POSSIBLE FACTORS	SOLUTION
The power light is not on.	The AC cable end is not plugged in.	Select another outlet with normal power supply and plug it into the AC side of the power supply.
The recliner stretches or shrinks and stutters.	<ul style="list-style-type: none"> • The iron frame rests are deformed. • There is an even pause when the backrest or leg rest is opened. It is possible that the motor hall sensor is damaged. 	<ul style="list-style-type: none"> • Replace the iron frame. • Replace the motor.
The handle cannot be paired with the recliner.	<ul style="list-style-type: none"> • Signal interference. • The pairing distance is out of range. 	<ul style="list-style-type: none"> • Remove interference sources such as metal and electrical appliances between the handle and the recliner, or change the pairing environment and try again. • Hold the handle close to the recliner (usually within 10 meters) and re-pair.
Loud noise during massage work (clearly different from noise during normal operation)	Faulty air pump	Replace the air pump
Heating does not work	The heating pad line and the control box are disconnected.	Check the connection between the heating power cord and the control box to make sure the connection is secure.
The air massage does not work	The control button and the control box wiring are disconnected.	Check the wiring of the massage control switch and the control box to make sure the connection is secure.

MOTO **MOTION**

FASHION. FORWARD. FURNITURE.

Customer Service

If you have any questions regarding the use of this unit, or find that your unit need service, please contact your retailer