

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

## 706178 COFFEE TABLE

### ITEM: 706178

#### **ASSEMBLY INSTRUCTIONS**

#### **ASSEMBLY TIPS:**

1. Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately. 2. This product is for home use only and not intended for commercial establishments.





30 MINUTES

#### PARTS IDENTIFICATION

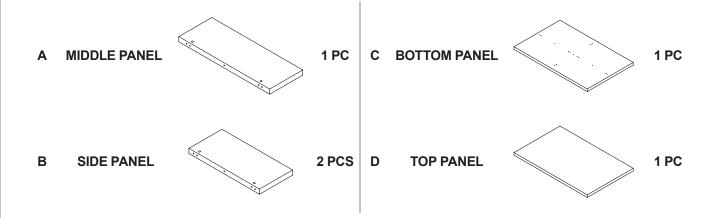

#### HARDWARE IDENTIFICATION

_							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	WOODEN DOWEL Ø8x30mm		15 PCS	4	BOLT ø9.5x55mm SR	addition (%)	9 PCS
2	CAM BOLT Ø7x35.5mm SR		6 PCS	5	FOOT Ø35xH19mm		5 PCS
3	CAM LOCK Ø15x12mm SR		6 PCS	6	STICKER Ø20mm		1 PC

Z5 not included in blister packaging.


#### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: **706178 STEP 1**






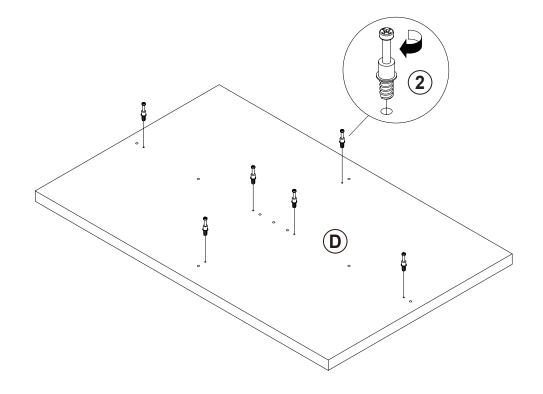


## STEP 2



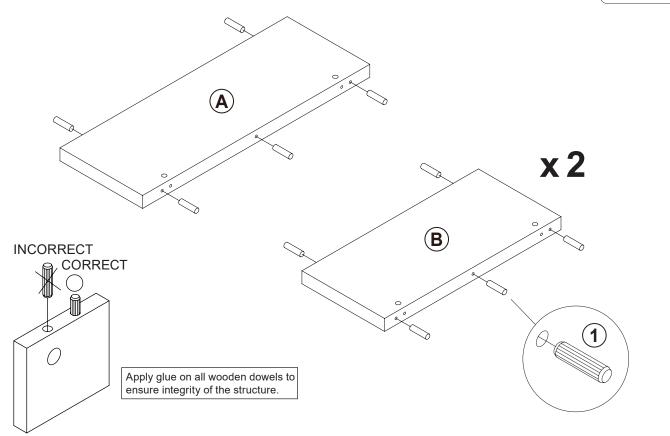

# STEP 3 FINE FURNITURE STEP 3 A B COASTER SIZE S




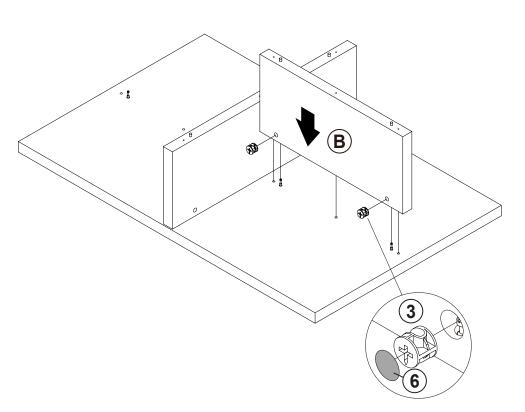

3





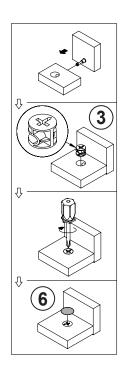


# ITEM: **706178 STEP 5**








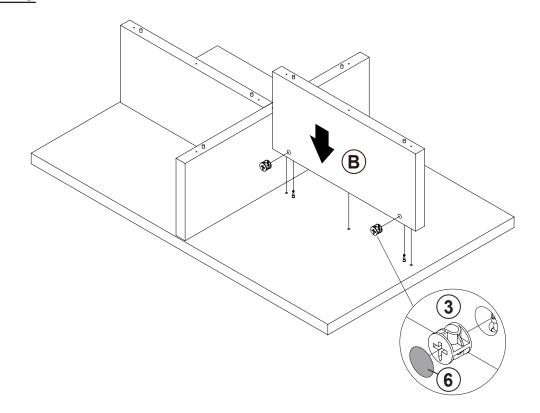

## STEP 6




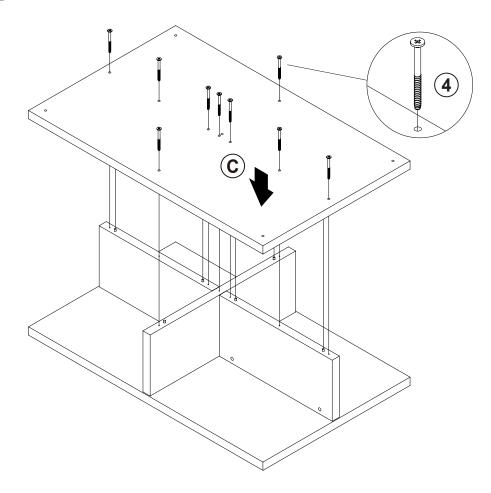


# ITEM: **706178 STEP 7**





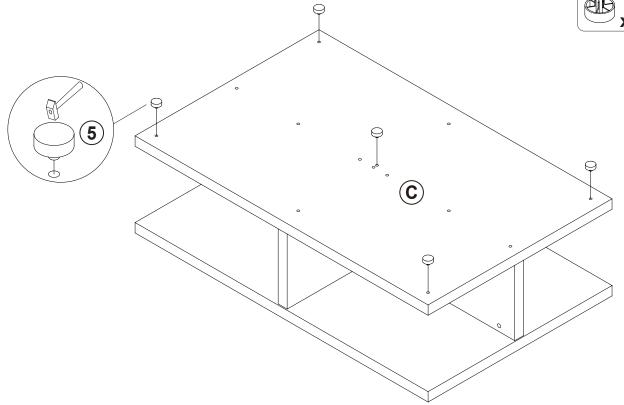

## STEP 8 COMPLETE

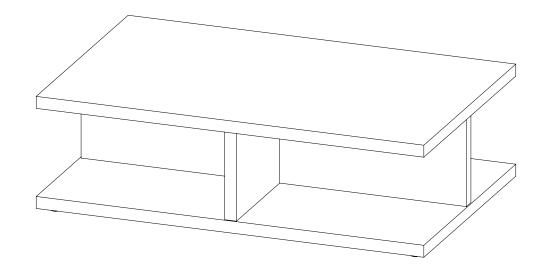






## ITEM: **706178**



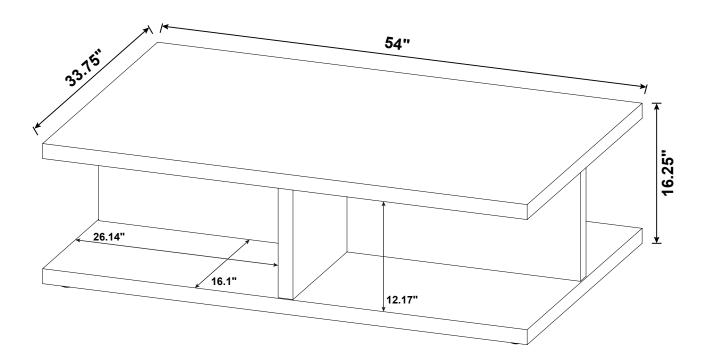

**Note**: Dimension tolerance ±5%