


KitchenAid®

MIXER

MODELS:

KSM180WSEG5 (Evergreen)


COLOR VARIATION PARTS

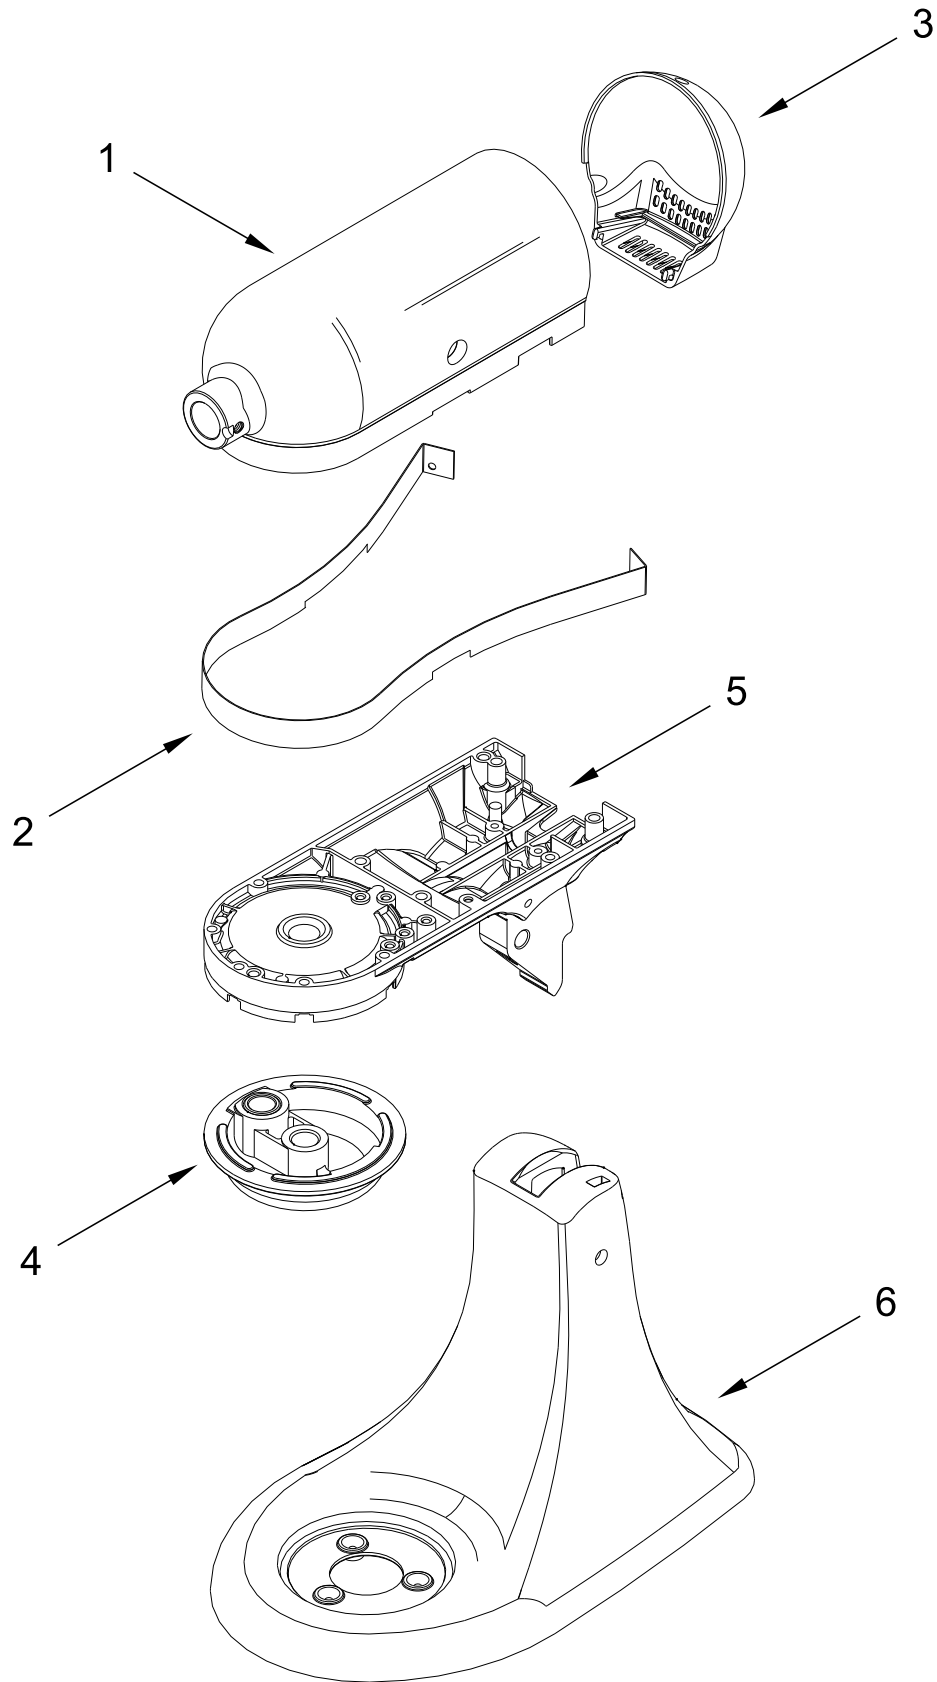

COLOR VARIATION PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Motor Housing	3		End Cover	5		Lower Gearcase
	W11636272	Evergreen		W11636274	Evergreen		W11636267	Evergreen
2		Trim Band	4		Planetary	6		Pedestal with Feet
	W11631450	Enlightened Forest		W11640898	Evergreen		W11635955	Evergreen


BASE AND PEDESTAL UNIT PARTS

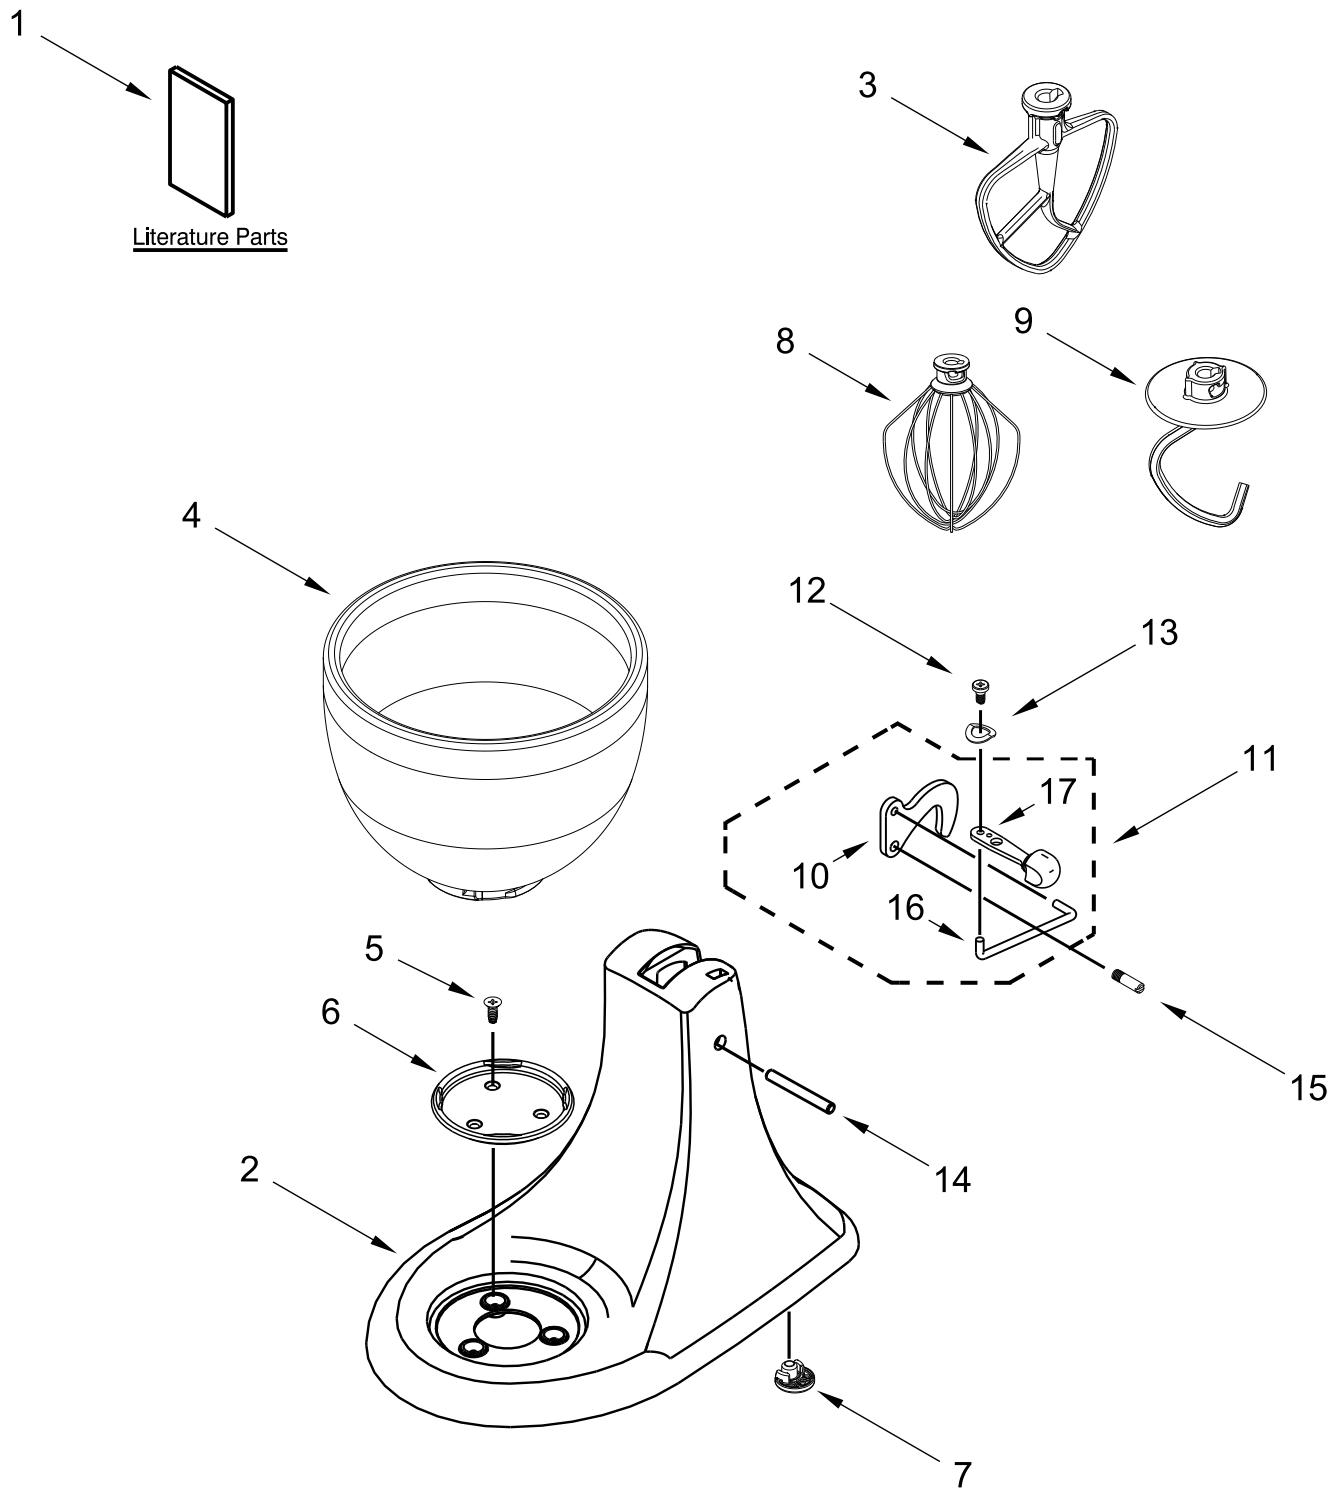

BASE AND PEDESTAL UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	7	W11626982	Foot	14	16910	Pin, Hinge
	W11634655	Owner's Manual	8	W11181074	Whip, Wire	15	W10572158	Screw
2		Pedestal	9	W11180585	Hook, Dough (Stainless)	16	24450	Link, Latch
		(Refer to Color Variation Parts Page)	10	9709055	Latch	17	W11629161	Lever, Latch (Forbidden Forest)
3	W11179237	Beater, Flat (Stainless)	11	W11641073	Latch, Link, and Lever Assy (Forbidden Forest)			
4	W11575000	Bowl, 5 QT Wood						
5	3400020	Screw	12	110679	Screw			
6	W10191926	Cap, Bowl Screw	13	116241	Washer, Spring			


CASE, GEARING AND PLANETARY UNIT PARTS

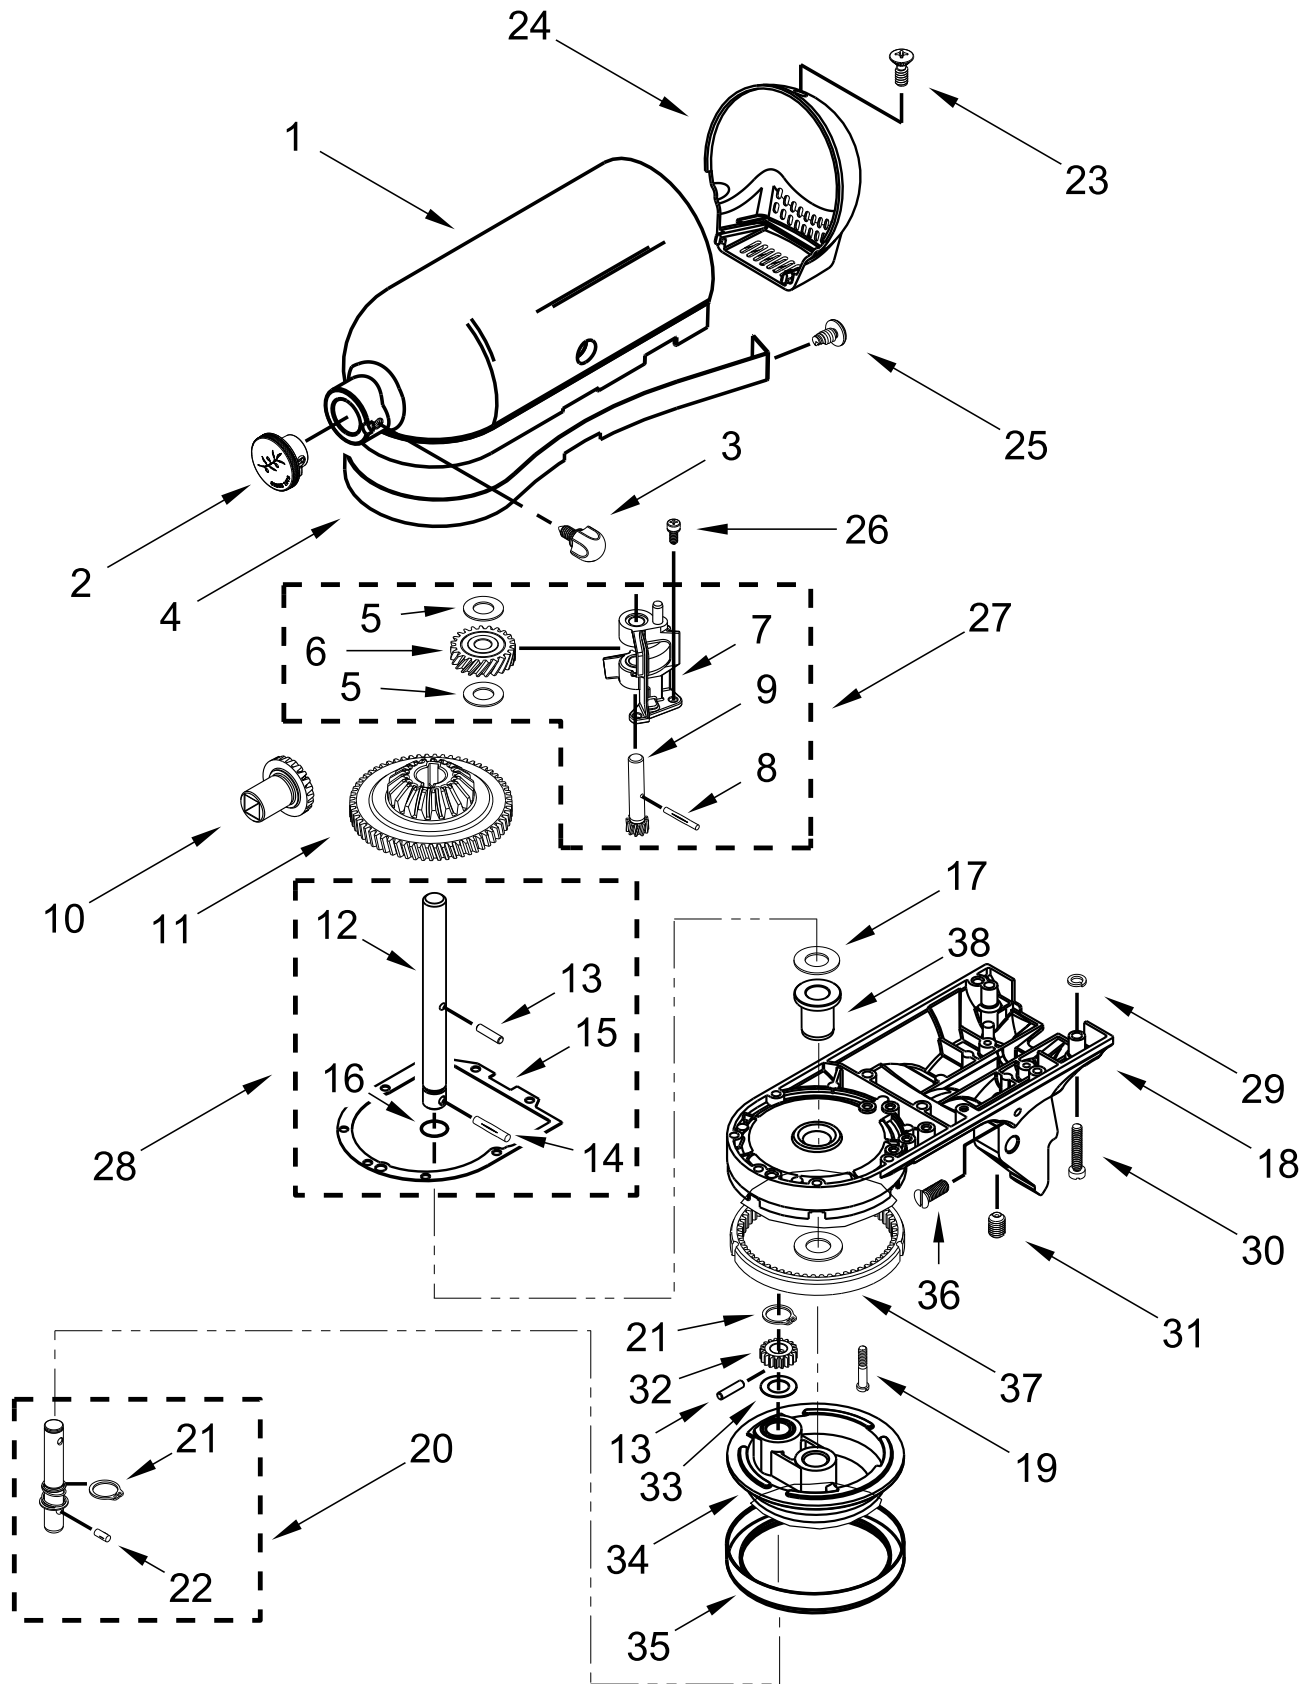

CASE, GEARING AND PLANETARY UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Gearcase Motor Housing (Refer to Color Variation Parts Page)	12	240026	Shaft, Vertical Center	27	240309-2	Worm Gear Bracket and Gear Assembly
			13	240018-1	Pin, Agitator Shaft	28	4160474	Shaft, Center Agitator Assembly
2	W11623002	Cap, Attachment Hub (Satin Bronze)	14	9705443	Pin, Grooved	29	8533914	Washer, Lock
3	W11627976	Thumb Screw Assy (Forbidden Forest)	15	240684	Gasket, Transmission	30	9708652	Screw
4		Band, Trim (Refer to Color Variation Parts Page)	16	67500-55	"O" Ring	31	W11134949	Screw
			17	W10323378	Washer	32	W10903540	Gear, Pinion
			18		Lower Gear Case (Refer to Color Variation Parts Page)	33	9706090	Washer
5	W10323373	Washer, Fiber	19	9708651	Screw	34		Planetary (Refer to Color Variation Parts Page)
6	W11604364	Gear, Worm	20	243368	Shaft, Agitator	35	W11640946	Ring, Planetary Drip (Forbidden Forest)
7	240308	Bracket, Worm Gear and Bearing	21	9703438	Ring, Retaining	36	89411	Screw
8	9705444	Pin, Grooved	22	W11533778	Pin, Groove	37	W11044504	Gear, Internal
9	240210-2	Gear, Pinion and Shaft	23	241877	Screw	38	16897	Bearing, Lower Center
10	W11175140	Gear, Attachment Hub	24		Cover, End (Refer to Color Variation Parts Page)			
11	W11175138	Gear, Center Bevel Pinion	25	3400617	Screw			
			26	3400022	Screw			

MOTOR AND CONTROL UNIT PARTS

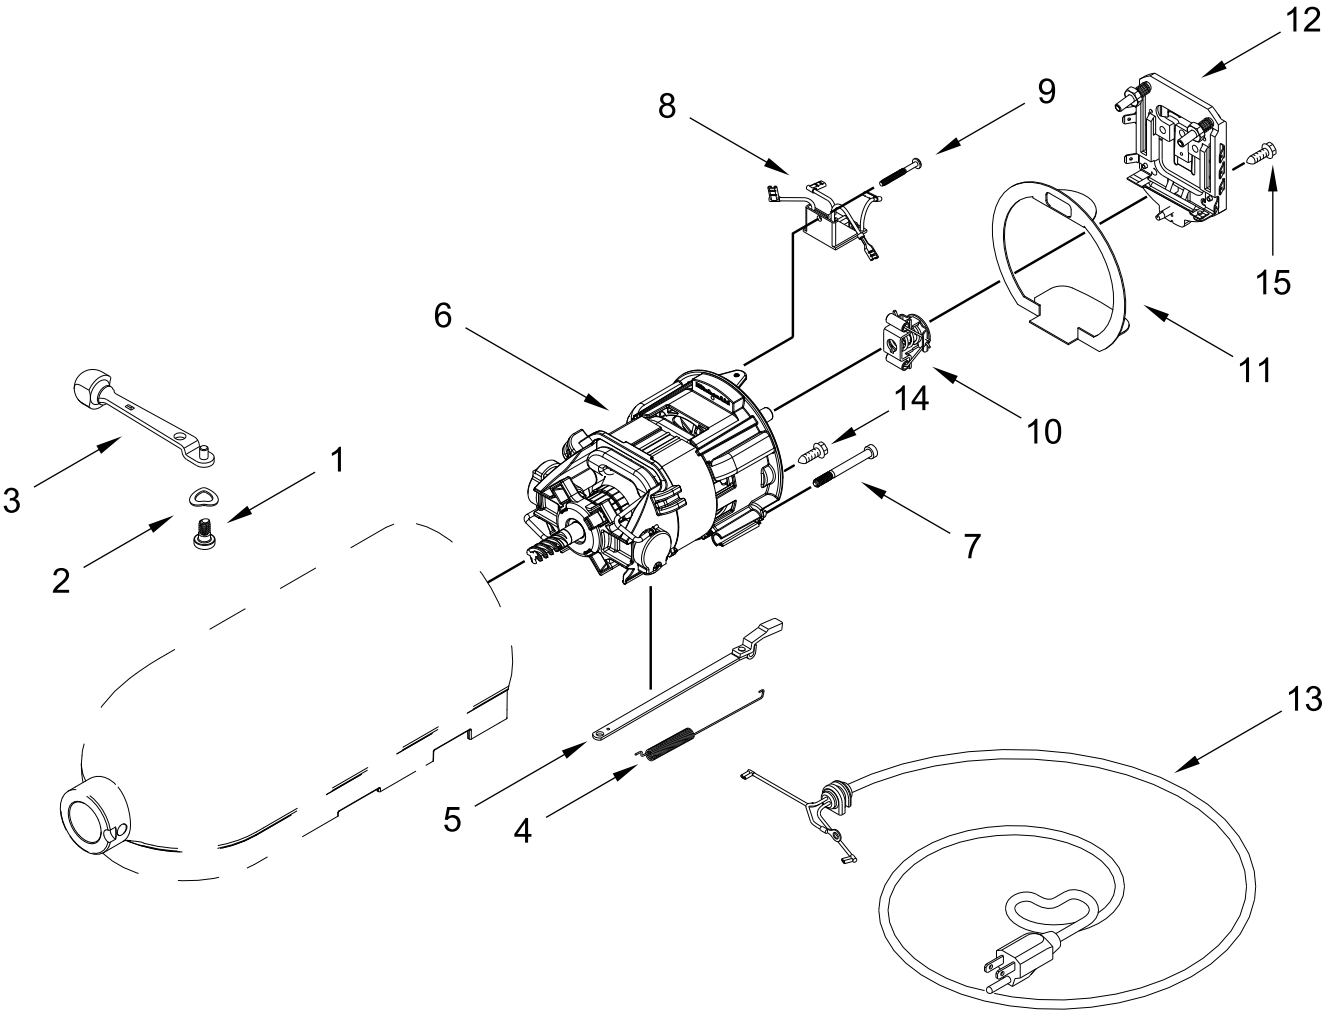

MOTOR AND CONTROL UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11611890	Screw	7	W11573199	Screw, Motor Mounting	13	W11359518	Cord, Power (Black)
2	116241	Washer, Spring	8	W10325124	Phase Control, 120 Volt	14	W10351843	Screw
3	W11627803	Lever, Speed Control Assembly (Forbidden Forest)	9	W10068260	Screw	15	3179559	Screw
4	3183680	Spring, Control Plate	10	W10330804	Governor Assembly			
5	W11435668	Link, Speed and Cam Assembly	11	240775-1	Seal, End			
6	W11610686	Assy, Motor	12	W10119326	Control Plate Assembly			