ASSEMBLY INSTRUCTION FOR

FIREPLACE WITH SOUND SYSTEM LA-14250-8-FP


Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.


- 1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
- 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
- 3. Please do not over tighten screws or bolts.
- 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


PART LIST							
	Part Description		Code.	Q'ty			
A		Fireplace With Sound System	LA-14250-8-FP	1			

 \triangle Only tighten all bolts when all bolts aligned with bolt inserts.

HARDWARE LIST							
No.	Hardware Description		Code.	Q'ty			
1		Allen key M4*2-5/16"		1			
2		Sound System Mic		1			
3	Sound System Remote Control			1			
4	332	User instruction for Sound System		1			

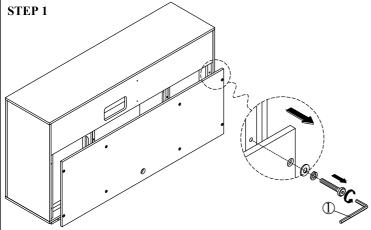

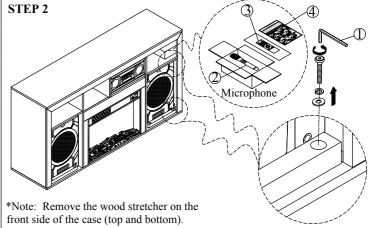

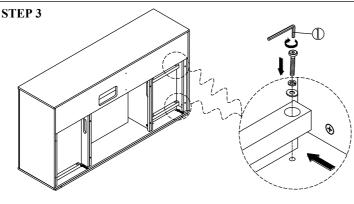

*Note: Slightly move the speaker forward and install the wood stretcher on the back side of the case (top and bottom).

