

**SHARP®**

Simply Better Living

works  
with

alexa

**SWB3085HS**

**SMART CONVECTION WALL OVEN WITH  
MICROWAVE DRAWER™ OVEN**

Alexa Command List

# WALL OVEN COMMAND LIST

Pair with your Amazon Alexa App and enjoy hands-free cooking with Alexa.

MENU ITEM	COMMAND	QUANTITY RANGE
Stop Time	Alexa, stop the oven.	
+2 Minutes	Alexa, add 2 minutes to the oven. <i>Note: Only applicable for manual cook modes</i>	
Preheat	Alexa, preheat the oven. Alexa, preheat the oven to <b>X</b> degrees.	<b>X</b> = 170 - 500°F <b>X</b> = 77 - 260°C
Bake	Alexa, bake for <b>X</b> minutes/hours in the oven. Alexa, bake at <b>Y</b> degrees in the oven. Alexa, bake for <b>X</b> minutes/hours at <b>Y</b> degrees in the oven.	<b>X</b> = 1 minute - 2 hours <b>Y</b> = 170 - 500°F <b>Y</b> = 77 - 260°C
Grill	Alexa, grill for <b>X</b> minutes in the oven. Alexa, grill at <b>Y</b> degrees in the oven. Alexa, grill for <b>X</b> minutes at <b>Y</b> degrees in the oven.	<b>X</b> = 1 - 30 minutes <b>Y</b> = 450 / 475 / 500 / 525 / 550°F <b>Y</b> = 232 / 246 / 260 / 274 / 288°C
Warm	Alexa, warm for <b>X</b> minutes/hours in the oven. Alexa, warm at <b>Y</b> degrees in the oven. Alexa, warm for <b>X</b> minutes/hours at <b>Y</b> degrees in the oven. <i>Note: Default temp is 150 degrees.</i>	<b>X</b> = 1 minute - 4 hours <b>Y</b> = 90 / 150 / 210°F <b>Y</b> = 32 / 66 / 99°C
Air Fry	Alexa, air fry for <b>X</b> minutes/hours in the oven. Alexa, air fry at <b>Y</b> degrees in the oven. Alexa, air fry for <b>X</b> minutes/hours at <b>Y</b> degrees in the oven	<b>X</b> = 1 minute - 2 hours <b>Y</b> = 350 - 450°F <b>Y</b> = 177 - 232°C
Convection Bake	Alexa, convection bake for <b>X</b> minutes/hours in the oven. Alexa, convection bake at <b>Y</b> degrees in the oven. Alexa, convection bake for <b>X</b> minutes/hours at <b>Y</b> degrees in the oven.	<b>X</b> = 1 minute - 2 hours <b>Y</b> = 170 - 500°F <b>Y</b> = 77 - 260°C
Convection Grill	Alexa, convection broil for <b>X</b> minutes/hours in the oven. Alexa, convection broil at <b>Y</b> degrees in the oven. Alexa, convection broil for <b>X</b> minutes/hours at <b>Y</b> degrees in the oven.	<b>X</b> = 1 - 30 minutes <b>Y</b> = 450 / 475 / 500 / 525 / 550°F <b>Y</b> = 232 / 246 / 260 / 274 / 288°C
Convection Roast	Alexa, convection roast for <b>X</b> minutes/hours in the oven. Alexa, convection roast at <b>Y</b> degrees in the oven. Alexa, convection roast for <b>X</b> minutes/hours at <b>Y</b> degrees in the oven.	<b>X</b> = 1 minute - 2 hours <b>Y</b> = 170 - 500°F <b>Y</b> = 77 - 260°C

# WALL OVEN COMMAND LIST

MENU ITEM	COMMAND	QUANTITY RANGE
Apple Pie	Alexa, cook apple pie in the oven. Alexa, bake apple pie in the oven. Alexa, convection bake apple pie in the oven.	1 pie (9-inch pie dish)
Bacon	Alexa, cook bacon in the oven. Alexa, convection roast bacon in the oven.	4 - 12 slices
Baked Potatoes	Alexa, cook baked potatoes in the oven. Alexa, bake baked potatoes in the oven. Alexa, convection bake baked potatoes in the oven.	2 - 8 potatoes (8 - 10 oz each)
Beef Roast	Alexa, cook beef roast in the oven. Alexa, roast beef roast in the oven. Alexa, convection roast beef roast in the oven.	2 - 4 lb (meat probe required)
Biscuits	Alexa, cook biscuits in the oven. Alexa, bake biscuits in the oven. Alexa, convection bake biscuits in the oven.	8 - 16 biscuits
Boneless Chicken Breast	Alexa, cook boneless chicken breast in the oven. Alexa, grill boneless chicken breast in the oven. Alexa, convection broil boneless chicken breast in the oven.	2 - 6 breasts (0.5 - 1 lb each)
Breaded Fillet	Alexa, cook breaded fillet in the oven. Alexa, roast breaded fillet in the oven. Alexa, convection roast breaded fillet in the oven.	4 - 16 fillets
Breaded Shrimp	Alexa, cook breaded shrimp in the oven. Alexa, roast breaded shrimp in the oven. Alexa, convection roast breaded shrimp in the oven. Alexa, air fry breaded shrimp in the oven.	8 - 24 shrimps
Breakfast Hash Brown Casserole	Alexa, cook breakfast casserole in the oven. Alexa, bake breakfast casserole in the oven. Alexa, convection bake breakfast casserole in the oven.	1 casserole (8x8-inch pan)
Brownies	Alexa, cook brownies in the oven. Alexa, bake brownies in the oven. Alexa, convection bake brownies in the oven.	1 pan (8x8-inch pan)
Brussel Sprouts	Alexa, cook brussel sprouts in the oven. Alexa, roast brussel sprouts in the oven. Alexa, convection roast brussel sprouts in the oven.	1 tray (1 - 2 lb)
Bundt Cake	Alexa, cook bundt cake in the oven. Alexa, bake bundt cake in the oven. Alexa, convection bake bundt cake in the oven.	1 fluted tube pan

# WALL OVEN COMMAND LIST

MENU ITEM	COMMAND	QUANTITY RANGE
Butternut Squash	Alexa, cook butternut squash in the oven. Alexa, roast butternut squash in the oven. Alexa, convection roast butternut squash in the oven.	1 squash (2 - 3 lb)
Chicken Tenders	Alexa, cook chicken tenders in the oven. Alexa, roast chicken tenders in the oven. Alexa, convection roast chicken tenders in the oven. Alexa, air fry chicken tenders in the oven.	1 tray (8 - 25 oz)
Chocolate Chess Pie	Alexa, cook chocolate pie in the oven. Alexa, bake chocolate pie in the oven. Alexa, convection bake chocolate pie in the oven.	1 pie (10-inch pie dish)
Cookies	Alexa, cook cookies in the oven. Alexa, bake cookies in the oven. Alexa, convection bake cookies in the oven.	6 - 12 cookies
Crescent Rolls	Alexa, cook crescent rolls in the oven. Alexa, bake crescent rolls in the oven. Alexa, convection bake crescent rolls in the oven.	8 - 16 rolls
Dinner Rolls	Alexa, cook dinner rolls in the oven. Alexa, bake dinner rolls in the oven. Alexa, convection bake dinner rolls in the oven.	12 - 24 rolls
Fish Fillets	Alexa, cook fish fillet in the oven. Alexa, roast fish fillet in the oven. Alexa, convection roast fish fillet in the oven. Alexa, convection broil fish fillet in the oven.	2 - 4 fillets
Flank Steak	Alexa, cook flank steak in the oven. Alexa, grill flank steak in the oven. Alexa, convection broil flank steak in the oven.	1 steak (1.5 - 2.75 lb)
French Fries	Alexa, cook french fries in the oven. Alexa, roast french fries in the oven. Alexa, convection roast french fries in the oven. Alexa, air fry french fries in the oven.	1 tray (10 - 43 oz)
Fresh Pizza on Pizza Stone	Alexa, bake fresh pizza in the oven. Alexa, convection bake fresh pizza in the oven.	1 medium pizza
Frozen Classic Pizza	Alexa, cook frozen classic pizza in the oven. Alexa, bake frozen classic pizza in the oven. Alexa, convection bake frozen classic pizza in the oven.	1 medium pizza

# WALL OVEN COMMAND LIST

MENU ITEM	COMMAND	QUANTITY RANGE
Frozen Rising Pizza	Alexa, cook frozen rising pizza in the oven. Alexa, bake frozen rising pizza in the oven. Alexa, convection bake frozen rising pizza in the oven.	1 medium pizza
Frozen Thin Crust Pizza	Alexa, cook frozen thin crust pizza in the oven. Alexa, bake frozen thin crust pizza in the oven. Alexa, convection bake frozen thin crust pizza in the oven.	1 medium pizza
Green Bean Casserole	Alexa, cook green bean casserole in the oven. Alexa, bake green bean casserole in the oven. Alexa, convection bake green bean casserole in the oven.	1 casserole (9x13-inch pan)
Hamburger	Alexa, cook hamburger in the oven. Alexa, grill hamburger in the oven. Alexa, convection broil hamburger in the oven.	6 patties (6 oz each)
Lasagna	Alexa, cook lasagna in the oven. Alexa, bake lasagna in the oven. Alexa, convection bake lasagna in the oven.	1 lasagna (9x13-inch pan)
Layered Cake	Alexa, cook layered cake in the oven. Alexa, bake layered cake in the oven. Alexa, convection bake layered cake in the oven.	1 - 4 cakes (8-inch rounds)
Mac and Cheese	Alexa, cook mac and cheese in the oven. Alexa, bake mac and cheese in the oven. Alexa, convection bake mac and cheese in the oven.	1 casserole (8x8-inch pan)
Mahi Mahi	Alexa, cook mahi mahi in the oven. Alexa, roast mahi mahi in the oven. Alexa, convection roast mahi mahi in the oven.	2 - 4 steaks
Meatloaf	Alexa, cook meatloaf in the oven. Alexa, bake meatloaf in the oven. Alexa, convection bake meatloaf in the oven.	1 loaf (3 - 3.5 lb)
Mixed Vegetables	Alexa, cook mixed vegetables in the oven. Alexa, roast mixed vegetables in the oven. Alexa, convection roast mixed vegetables in the oven.	1 tray (1.5 - 2 lb)
Mozzarella Sticks	Alexa, cook mozzarella sticks in the oven. Alexa, roast mozzarella sticks in the oven. Alexa, convection roast mozzarella sticks in the oven. Alexa, air fry mozzarella sticks in the oven.	5 - 20 pieces



# WALL OVEN COMMAND LIST

MENU ITEM	COMMAND	QUANTITY RANGE
Pecan Pie	Alexa, cook pecan pie in the oven. Alexa, bake pecan pie in the oven. Alexa, convection bake pecan pie in the oven.	1 pie (9-inch pie dish)
Pork Chop	Alexa, cook pork chop in the oven. Alexa, grill pork chop in the oven. Alexa, convection broil pork chop in the oven.	2 - 8 pork chops
Pork Loin	Alexa, cook pork tenderloin in the oven. Alexa, roast pork tenderloin in the oven. Alexa, convection roast pork tenderloin in the oven. Alexa, cook pork loin in the oven. Alexa, roast pork loin in the oven.	2 - 3.5 lb (meat probe required)
Quiche	Alexa, cook quiche in the oven. Alexa, bake quiche in the oven. Alexa, convection bake quiche in the oven.	1 quiche
Salmon	Alexa, cook salmon in the oven. Alexa, roast salmon in the oven. Alexa, convection roast salmon in the oven.	2 - 4 steaks
Scalloped Potato (Au Gratin)	Alexa, cook scalloped potatoes in the oven. Alexa, bake scalloped potatoes in the oven. Alexa, convection bake scalloped potatoes in the oven.	1 pan (8x8-inch pan)
Snapper	Alexa, cook snapper in the oven. Alexa, roast snapper in the oven. Alexa, convection roast snapper in the oven.	2 - 4 steaks
Spatchcock Chicken	Alexa, cook spatchcock chicken in the oven. Alexa, roast spatchcock chicken in the oven. Alexa, convection roast spatchcock chicken in the oven.	3 - 7.5 lb (meat probe required)
Sweet Potato	Alexa, cook sweet potato in the oven. Alexa, bake sweet potato in the oven. Alexa, convection bake sweet potato in the oven.	2 - 8 potatoes (8 - 10 oz each)
Sweet Potato Fries	Alexa, cook sweet potato fries in the oven. Alexa, air fry sweet potato fries in the oven.	1 tray (10 - 43 oz)
Swordfish	Alexa, cook swordfish in the oven. Alexa, roast swordfish in the oven. Alexa, convection roast swordfish in the oven.	2 - 4 steaks
Tater Tots	Alexa, cook tater tots in the oven. Alexa, roast tater tots in the oven. Alexa, convection roast tater tots in the oven. Alexa, air fry tater tots in the oven.	1 tray (10 - 50 oz)

# WALL OVEN COMMAND LIST

MENU ITEM	COMMAND	QUANTITY RANGE
Tuna	Alexa, cook tuna in the oven. Alexa, roast tuna in the oven. Alexa, convection roast tuna in the oven.	2 - 4 steaks
Turkey Breast	Alexa, cook turkey breast in the oven. Alexa, roast turkey breast in the oven. Alexa, convection roast turkey breast in the oven.	3 - 7.5 lb (meat probe required)
Whole Chicken	Alexa, cook whole chicken in the oven. Alexa, roast whole chicken in the oven. Alexa, convection roast whole chicken in the oven.	3 - 7.5 lb (meat probe required)

# MICROWAVE DRAWER™ COMMAND LIST

**NOTE:** The Microwave Drawer™ oven must be opened and closed prior to giving a cooking command. For safety, the microwave oven will not accept two, back-to-back cooking commands. Never give a cooking command to an empty microwave oven.

MENU ITEM	COMMAND	QUANTITY RANGE
Open	Alexa, open the microwave.	
Time Cook	Alexa, microwave for <b>X</b> minutes and <b>Y</b> seconds in the microwave. Alexa, cook for <b>X</b> minutes and <b>Y</b> seconds in the microwave.	<b>X</b> = 01:00 - 60:00 <b>Y</b> = 00:01 - 00:59
Time Cook + Power Level	Alexa, microwave for <b>X</b> minutes/ <b>Y</b> seconds at <b>Z</b> power level in the microwave. Alexa, cook for <b>X</b> minutes/ <b>Y</b> seconds at <b>Z</b> power level in the microwave.	<b>X</b> = 01:00 - 60:00 <b>Y</b> = 00:01 - 00:59 <b>Z</b> = 0 - 10 Power Level
+ 30 Seconds	Alexa, add 30 seconds to the microwave. <i>Note: This can only be used while microwave is already running</i>	100% Power
Pause Time	Alexa, pause the microwave.	
Resume Time	Alexa, resume the microwave.	
Stop Time	Alexa, stop the microwave.	
Time Defrost	Alexa, defrost for <b>X</b> minutes in the microwave. Alexa, defrost for <b>Y</b> seconds in the microwave. Alexa, defrost for <b>X</b> minutes/ <b>Y</b> seconds in the microwave.	<b>X</b> = 01:00 - 60:00 <b>Y</b> = 00:01 - 00:59
Popcorn	Alexa, microwave/cook popcorn in the microwave. Alexa, microwave/cook mini popcorn in the microwave. Alexa, microwave/cook regular popcorn in the microwave. Alexa, microwave/cook <b>X</b> ounces of popcorn in the microwave.	Mini / Regular <b>X</b> = 1.16 / 3.3 oz
Reheat	Alexa, reheat leftovers in the microwave. Alexa, reheat dinner plate in the microwave.	
Baked Potatoes	Alexa, microwave/cook baked potatoes in the microwave.	
Fish	Alexa, microwave/cook fish in the microwave.	
Fresh Vegetables	Alexa, microwave/cook fresh vegetables in the microwave.	



# MICROWAVE DRAWER™ COMMAND LIST

MENU ITEM	COMMAND	QUANTITY RANGE
Frozen Entree	Alexa, microwave/cook frozen entree in the microwave.	
Frozen Vegetables	Alexa, microwave/cook frozen vegetables in the microwave.	
Ground Meat	Alexa, microwave/cook ground meat in the microwave.	
Hot Cereal	Alexa, microwave hot cereal in the microwave. Alexa, microwave <b>X</b> cups of hot cereal in microwave.	<b>X</b> = 0.5 / 1 / 1.5 / 2 / 2.5 / 3 cups
Rice - Brown	Alexa, microwave/cook brown rice in the microwave. Alexa, reheat brown rice in the microwave.	
Rice - White	Alexa, microwave/cook white rice in the microwave. Alexa, reheat white rice in the microwave.	
Seafood	Alexa, microwave/cook seafood in the microwave.	
Steamer Bags	Alexa, microwave/cook steamer bag in the microwave.	
Sweet Potatoes	Alexa, microwave/cook sweet potatoes in the microwave.	
Beverage (Reheat)	Alexa, reheat beverages in the microwave. Alexa, reheat <b>X</b> cups of beverage in the microwave.	<b>X</b> = 0.5 / 1 / 1.5 / 2 cups
Hot Water	Alexa, microwave hot water in the microwave. Alexa, microwave <b>X</b> cups of hot water in the microwave.	<b>X</b> = 1 / 2 / 3 / 4 / 5 / 6 cups
Bone-In Poultry (Defrost)	Alexa, defrost bone-in poultry in the microwave.	<b>X</b> = 0.5 - 3.0 lbs
Boneless Poultry (Defrost)	Alexa, defrost boneless poultry in the microwave. Alexa, defrost <b>X</b> pounds of boneless poultry in the microwave.	<b>X</b> = 0.5 - 2.0 lbs
Casserole (Defrost)	Alexa, defrost casserole in the microwave.	<b>X</b> = 1 / 2 / 3 / 4 / 5 / 6 cups
Chops (Defrost)	Alexa, defrost chops in the microwave. Alexa, defrost <b>X</b> pounds of chops in the microwave.	<b>X</b> = 0.5 - 3.0 lbs
Ground Meat (Defrost)	Alexa, defrost ground meat in the microwave. Alexa, defrost <b>X</b> pounds of ground meat in the microwave.	<b>X</b> = 0.5 - 2.0 lbs
Roast (Defrost)	Alexa, defrost roast in the microwave. Alexa, defrost <b>X</b> pounds of roast in the microwave.	<b>X</b> = 0.5 - 4.0 lbs

# MICROWAVE DRAWER™ COMMAND LIST


MENU ITEM	COMMAND	QUANTITY RANGE
Steaks (Defrost)	Alexa, defrost steaks in the microwave. Alexa, defrost <b>X</b> pounds of steaks in the microwave.	<b>X</b> = 0.5 - 3.0 lbs
Soup (Defrost)	Alexa, defrost soup in the microwave. Alexa, defrost <b>X</b> cups of soup in the microwave.	<b>X</b> = 1 / 2 / 3 / 4 / 5 / 6 cups
Butter (Melt)	Alexa, melt butter in the microwave. Alexa, melt <b>X</b> tablespoons of butter in the microwave.	<b>X</b> = 2 / 8 tbsp
Chocolate (Melt)	Alexa, melt chocolate in the microwave. Alexa, melt <b>X</b> ounces of chocolate in the microwave.	<b>X</b> = 1 / 8 oz
Cream Cheese (Softening)	Alexa, soften cream cheese in the microwave. Alexa, soften <b>X</b> ounces of cream cheese in the microwave.	<b>X</b> = 3 / 8 oz
Ice Cream (Softening)	Alexa, soften ice cream in the microwave. Alexa, soften <b>X</b> cups of ice cream in the microwave.	<b>X</b> = 2 / 6 cups
Dessert Topping (Warm)	Alexa, warm dessert topping in the microwave. Alexa, warm <b>X</b> cup of dessert topping in the microwave.	<b>X</b> = 0.25 / 0.5 cup
Syrup (Warm)	Alexa, warm syrup in the microwave. Alexa, warm <b>X</b> cup of syrup in the microwave.	<b>X</b> = 0.25 / 0.5 cup



Simply Better Living



## A THRIVING ONLINE COMMUNITY

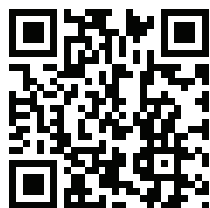

Simply Better Living is an online community that encourages a mindful lifestyle with Sharp home appliances through simple recipes and lifestyle tips. Our lifestyle blog [sbl.sharppusa.com](https://sbl.sharppusa.com) is dedicated to creative, ingenious solutions that make your life simpler, healthier, and better than ever before. Welcome home.

Start your free-forever, weekly subscription to [Simply Better Living Newsletter](#) today! Every week we share tips, recipes, life hacks and articles to help support and invigorate your healthy lifestyle.

The key to a simply better you is [Simply Better Living](#)! Come and see.

Amazon, Echo, Alexa, and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

© 2023 Sharp Electronics Corporation. All rights reserved.

Sharp and all related trademarks are trademarks or registered trademarks of Sharp Corporation and/or its affiliated companies. All other trademarks are property of their respective owners.

QUESTIONS?

1.800.BE.SHARP

### SIMPLY BETTER LIVING

At Sharp Home Electronics Company of America, we are committed to Simply Better Living. Our innovative home appliance products are SIMPLE to use, BETTER than the competition, and encourage a HEALTHY LIFESTYLE.

SHARP ELECTRONICS CORPORATION  
100 Paragon Drive, Montvale NJ, 07645  
1.800.237.4277 • [www.sharppusa.com](https://www.sharppusa.com)



**SHARP**

Be Original.