

Assembly Instructions

ITEM NO. D1464-30

ESSENCE SERVER/CONSOLE
(1 PC/CTN)

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the PARTS LIST and/or HARDWARE LIST shown below.



Please read the instructions thoroughly before assembly.


1. We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
2. Please do not tighten screws or bolts until the assembly is completed.
3. To level the chairs or table, before tightening all the screws, the chairs or table must be placed on a flat surface and then tighten the screws.
4. Please put all parts on a non-abrasive floor before assembly and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PARTS LIST

NO.	COMPONENT	SKETCH	QTY
A	SERVER BODY		1 PC
B	LEGS		4 PCS

HARDWARE LIST

NO.	COMPONENT	SKETCH	QTY
1	FLAT WASHER 5/16" DIA.		8 PCS
2	SPRING WASHER 5/16" DIA.		8 PCS
3	BOLT 5/16" x 2"		8 PCS
4	ALLEN WRENCH (5/32")		1 PC
5	ANTI TIPPING KIT		1 SET

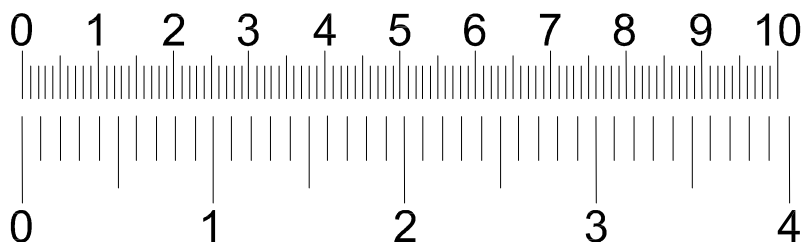

Assembly Instructions


ITEM NO. D1464-30

ESSENCE SERVER/CONSOLE
(1 PC/CTN)

STEP 1


Place the server body (A) down on a flat and clean surface.

Assemble the leg (B) with the server body (A) using the Allen Wrench (4) with hardware 1,2 and 3.

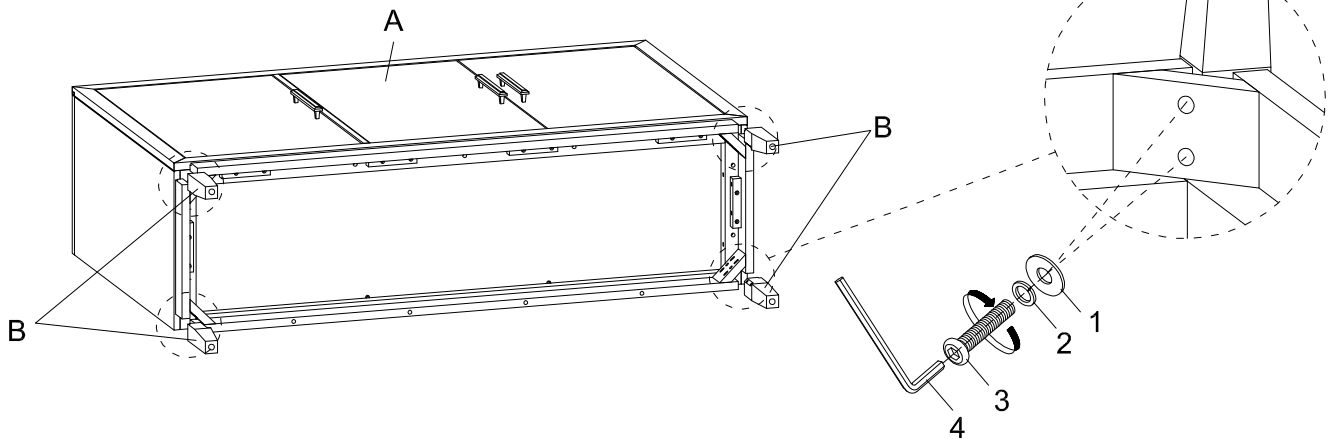

STEP 2

To level the server, stand the server up on a flat surface. Twist the adjustable glides till the server gets even.

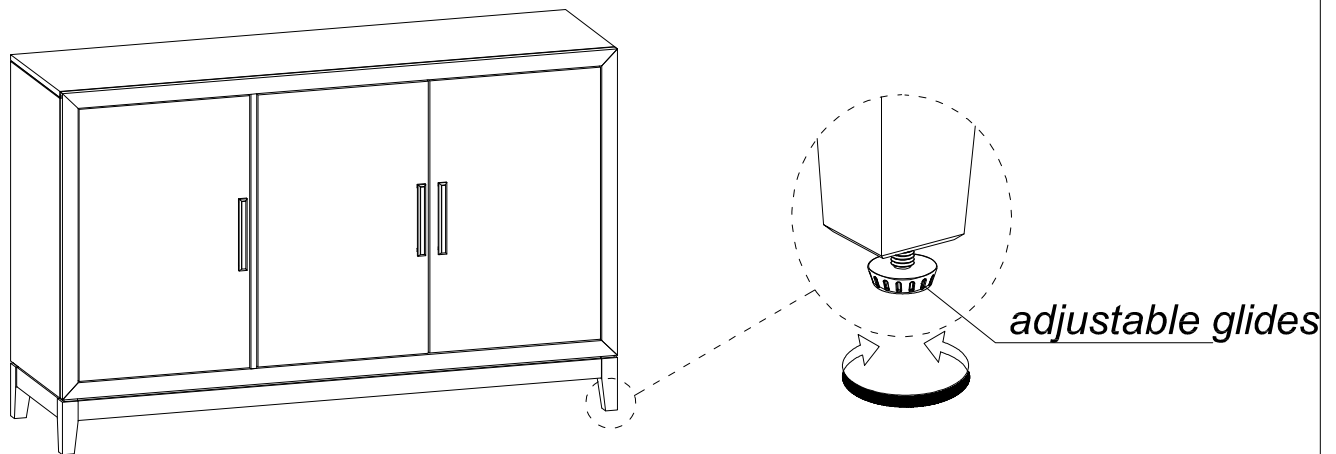

STEP 3

Install the Anti-tipping kit (5).

Anti- Tipping kit

Top

Wall

Anti- Tipping kit must always be used to prevent the furniture from tipping.

