

# Top Assembly Instructions

**88 9100 101 C**  
**Solid Wood Top**



 
**9100 Series**

## PART LIST



W1.  
Top  
1 pc.

## HARDWARE LIST



X.  
Top Support  
2 pcs.





Head Cap Bolt  
6 pcs. (+1 extra)

*Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319*  
*[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com)*

# 9100 Series Top Assembly Instructions

## STEP 1

Put Top Support (X) into the pre-drilled holes, using Head Cap Bolts to attach it to the unit.

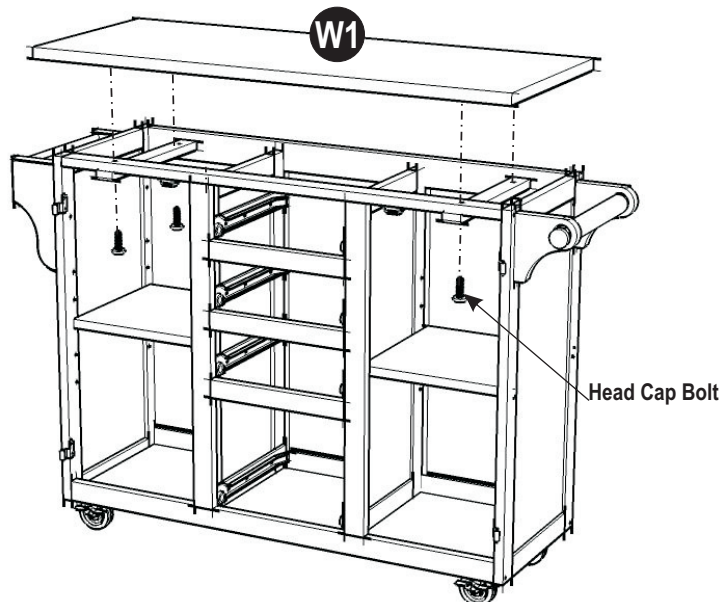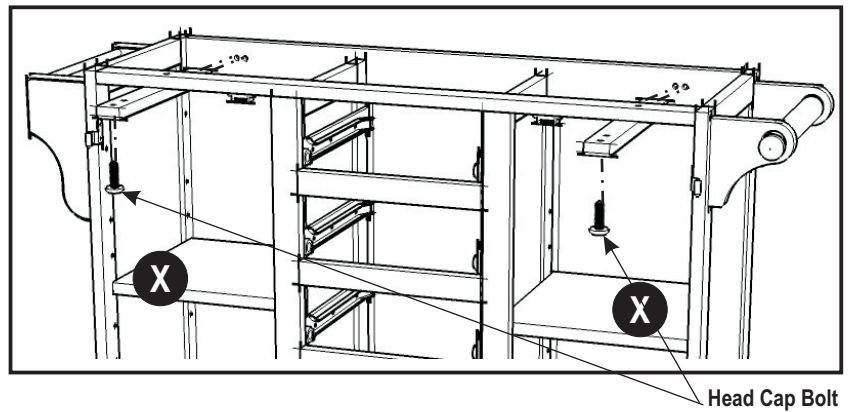

## STEP 2

Place Top (W1) onto the unit, then tighten up all Head Cap Bolts.

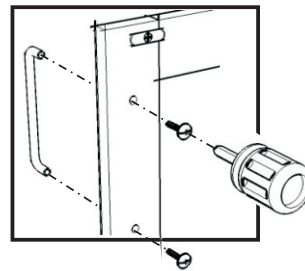


Figure 1

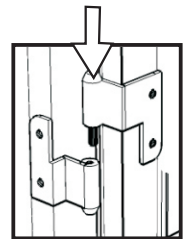



Figure 2

## STEP 3

Attach Pull Handles to Door (S) and (T), using Machine Screws. (See figure 1)

Attach Door (S) and (T) to Side Panel (A) and (B), slide the door lift hinges into the side panel lift hinges. (See figure 2)

Slide Drawers (U) and (V) into place.

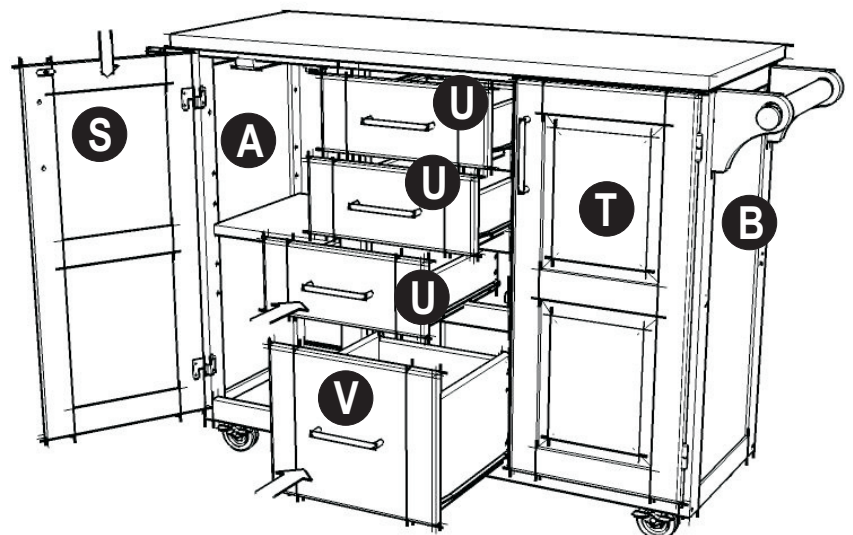

# Top Assembly Instructions


**88 9100 101 C**

**Solid Wood Top**



**9200 Series**

# 9200 Series Top Assembly Instructions

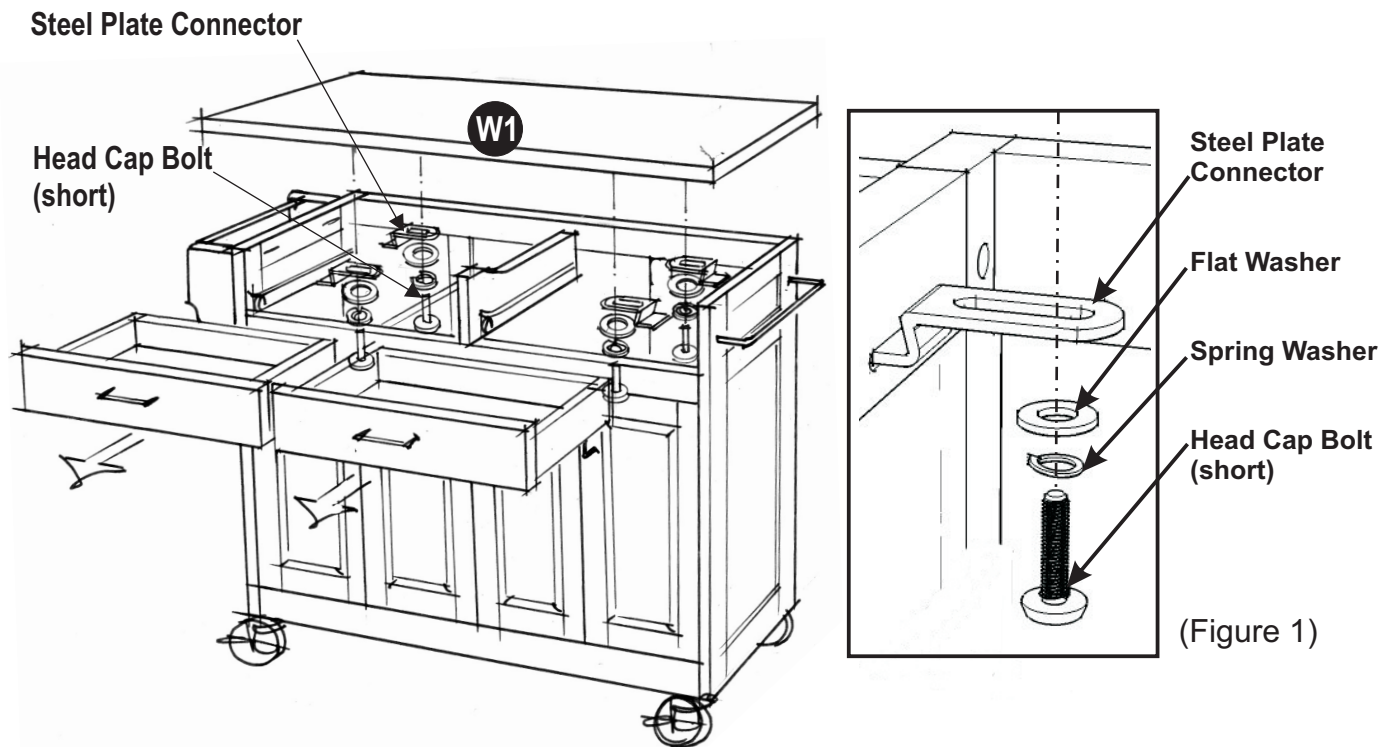

## STEP 1

Remove Drawers from the unit.

Place the selected 'Top' on the unit, attach it to the body with the Steel Plate Connectors, Flat Washers, Spring Washers and Head Cap Bolts. (See figure 1)

Slide the Drawers into place.

