

 

 

 


Assembly Instruction for

COFFEE TABLE


CKS100CT / CKS100CTE / CML100CT / CML100CTE / CSD800CT / CSD800TE

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.



1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts .
4. Please put all parts on a non - abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PARTS LIST					HARDWARE LIST				
No	PARTS DESC.		CODE.	Q'TY.	No	HARDWARE DESC.		CODE.	Q'TY.
A		TOP	PCKS / PCML 100CTTOP PCSD 800CTTOP	1PC	1		BOLT 5/16"x 55mm	PCKS / PCML 100CTHW PCSD 800CTHW	12PCS
B		LEG	PCKS / PCML 100CTLEG PCSD 800CTLEG	4PCS	2		SPRING WASHER Ø5/16"		12PCS
C		BOTTOM SHELF	PCKS / PCML 100CTSHF PCSD 800CTSHF	1PC	3		FLAT WASHER Ø5/16"		12PCS
					4		ALLEN KEY 2-1/4"x4mm		1PC

STEP 1

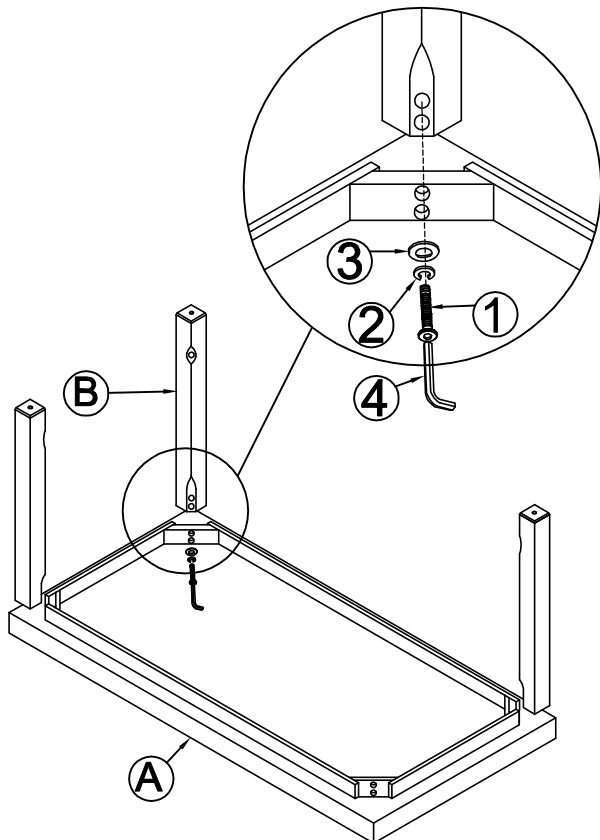

STEP 2

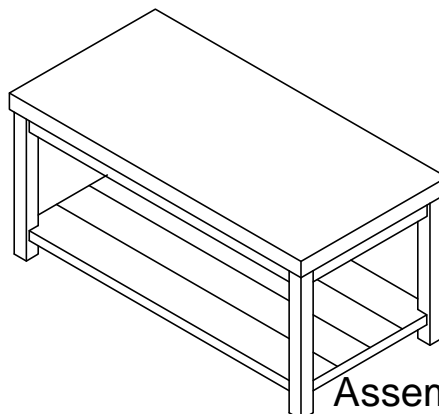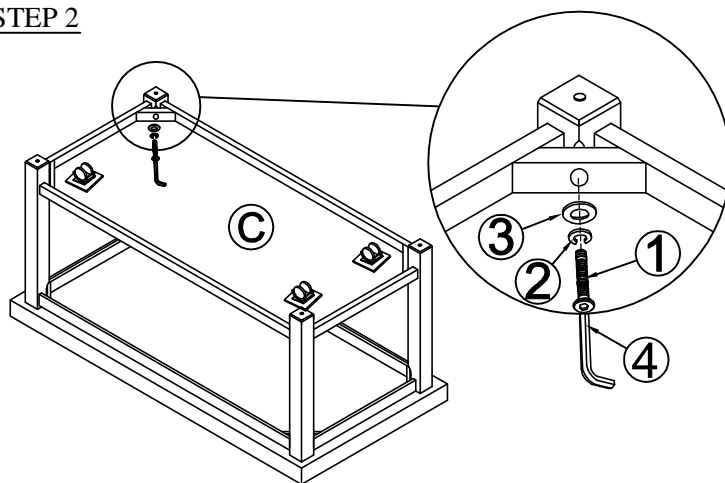

Assembly completed