



1714-50PH in Fabric 814-70



1714-50PH in Fabric 814-70



1714-50PH in Fabric 814-70

FLEXSTEEL®

© Flexsteel Industries, Inc. | Last Updated 02/02/2024

50PH	FEATURES
●	Flexsteel Spring Unit
	DualFlex
	Back Construction
●	Attached
	Seat Construction
●	Attached
	Seat Cushion(s)
●	High-Density (HC)

- Standard
- Optional

PRODUCT DIMENSIONS	OVERALL			SEAT			Arm Height	Open Depth	Wall Clearance
	Height	Width	Depth	Height	Width	Depth			
Power Recliner with Power Headrest & Lumbar -50PH	43"	38"	43"	19"	23"	22"	25"	72"	6"

Stocked Colors



Java  
**814-70**  
Fabric



Sepia  
**814-72**  
Fabric

*Printed samples may vary from actual swatches. Please refer to swatches for actual color.*

NOTES

Use the MyRecline F4 App to personalize comfort and support from your mobile device

Extended footrest provides more comfort area for taller users

Lay-flat mechanism allows you to fully recline for a quick snooze or longer sleeping comfort

Built to last with our patented Flexsteel DualFlex Spring System™—sturdy steel ribbons attached to flexible coils that offer a wide range of motion and durability

Fine tune your comfort with a power control that adjusts the headrest, lumbar support and recline independently

Power lumbar support takes pressure off the lower back for enhanced comfort

Home button returns the headrest and footrest to their original positions with one touch

USB charging port built into power control for convenient charging

High-density foam cushions with high-resiliency polyurethane foam core and a soft fiber wrap ensure comfort that lasts

Removable back allows for easy lifting and maneuvering through doorways

Available in two durable, cleanable 100% polyester fabric choices

Power allows you to smoothly recline to any position, adjust the headrests, and adjust the lumbar supports.

A single USB port is included on each power button control on styles with arms.

A home feature returns the headrest, footrest, and lumbar support to their original positions.



Home Button

The home button returns the headrest, footrest, and lumbar support to their original positions. To activate the home button, press and hold the button used to lower the footrest.



MyRecline F4 Mobile App

Download the free MyRecline F4 app to program memory positions and use your device as a wireless remote control.