

# PTZ Camera with HDBaseT Output



## Version Information

---

Version	Release Date	Notes
1	March 2020	Initial release

## Welcome to Atlona!

---

Thank you for purchasing this Atlona product. We hope you enjoy it and will take an extra few moments to register your new purchase.

Registration only takes a few minutes and protects this product against theft or loss. In addition, you will receive notifications of product updates and firmware. Atlona product registration is voluntary and failure to register will not affect the product warranty.

To register your product, go to <http://www.atlona.com/registration>

## Sales, Marketing, and Customer Support

---

### Main Office

Atlona Incorporated  
70 Daggett Drive  
San Jose, CA 95134  
United States

Office: +1.877.536.3976 (US Toll-free)  
Office: +1.408.962.0515 (US/International)

Sales and Customer Service Hours  
Monday - Friday: 6:00 a.m. - 4:30 p.m. (PST)

<http://www.atlona.com/>

### International Headquarters

Atlona International AG  
Ringstrasse 15a  
8600 Dübendorf  
Switzerland

Office: +41 43 508 4321

Sales and Customer Service Hours  
Monday - Friday: 09:00 - 17:00 (UTC +1)

## Operating Notes

---

As of this writing, there are no firmware updates for this product. When new firmware is released, update instructions will be included with the firmware and will be appended to this manual.



**IMPORTANT:** Visit <http://www.atlona.com/product/AT-HDVS-CAM-HDBT> for the latest firmware updates and User Manual.

# Atlona, Inc. (“Atlona”) Limited Product Warranty

---

## Coverage

Atlona warrants its products will substantially perform to their published specifications and will be free from defects in materials and workmanship under normal use, conditions and service.

Under its Limited Product Warranty, Atlona, at its sole discretion, will either:

- repair or facilitate the repair of defective products within a reasonable period of time, restore products to their proper operating condition and return defective products free of any charge for necessary parts, labor and shipping.

OR

- replace and return, free of charge, any defective products with direct replacement or with similar products deemed by Atlona to perform substantially the same function as the original products.

OR

- refund the pro-rated value based on the remaining term of the warranty period, not to exceed MSRP, in cases where products are beyond repair and/or no direct or substantially similar replacement products exist.

Repair, replacement or refund of Atlona products is the purchaser's exclusive remedy and Atlona liability does not extend to any other damages, incidental, consequential or otherwise.

This Limited Product Warranty extends to the original end-user purchaser of Atlona products and is non-transferrable to any subsequent purchaser(s) or owner(s) of these products.

## Coverage Periods

Atlona Limited Product Warranty Period begins on the date of purchase by the end-purchaser. The date contained on the end-purchaser's sales or delivery receipt is the proof purchase date.

### Limited Product Warranty Terms – New Products

- 10 years from proof of purchase date for hardware/electronics products purchased on or after June 1, 2013.
  - PTZ motor is not covered under the 10 year warranty, the PTZ motor is covered for 3 years.
- 3 years from proof of purchase date for hardware/electronics products purchased before June 1, 2013.
- Lifetime Limited Product Warranty for all cable products.

### Limited Product Warranty Terms – Refurbished (B-Stock) Products and Discontinued Products

- 3 years from proof of purchase date for all Refurbished (B-Stock) and Discontinued hardware and electronic products purchased on or after June 1, 2013.

## Remedy

Atlona recommends that end-purchasers contact their authorized Atlona dealer or reseller from whom they purchased their products. Atlona can also be contacted directly. Visit [www.atlona.com](http://www.atlona.com) for Atlona's contact information and hours of operation. Atlona requires that a dated sales or delivery receipt from an authorized dealer, reseller or end-purchaser is provided before Atlona extends its warranty services. Additionally, a return merchandise authorization (RMA) and/or case number, is required to be obtained from Atlona in advance of returns.

Atlona requires that products returned are properly packed, preferably in the original carton, for shipping. Cartons not bearing a return authorization or case number will be refused. Atlona, at its sole discretion, reserves the right to reject any products received without advanced authorization. Authorizations can be requested by calling 1-877-536-3976 (US toll free) or 1-408- 962-0515 (US/international) or via Atlona's website at [www.atlona.com](http://www.atlona.com).

## Exclusions

This Limited Product Warranty excludes:

- Damage, deterioration or malfunction caused by any alteration, modification, improper use, neglect, improper packaging or shipping (such claims must be presented to the carrier), lightning, power surges, or other acts of nature.

## Atlona, Inc. (“Atlona”) Limited Product Warranty

---

- Damage, deterioration or malfunction resulting from the installation or removal of this product from any installation, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by Atlona to make such repairs, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product.
- Equipment enclosures, cables, power supplies, batteries, LCD displays, and any accessories used in conjunction with the product(s).
- Products purchased from unauthorized distributors, dealers, resellers, auction websites and similar unauthorized channels of distribution.

### Disclaimers

This Limited Product Warranty does not imply that the electronic components contained within Atlona’s products will not become obsolete nor does it imply Atlona products or their electronic components will remain compatible with any other current product, technology or any future products or technologies in which Atlona’s products may be used in conjunction with. Atlona, at its sole discretion, reserves the right not to extend its warranty offering in instances arising outside its normal course of business including, but not limited to, damage inflicted to its products from acts of god.

### Limitation on Liability

The maximum liability of Atlona under this limited product warranty shall not exceed the original Atlona MSRP for its products. To the maximum extent permitted by law, Atlona is not responsible for the direct, special, incidental or consequential damages resulting from any breach of warranty or condition, or under any other legal theory. Some countries, districts or states do not allow the exclusion or limitation of relief, special, incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

### Exclusive Remedy

To the maximum extent permitted by law, this limited product warranty and the remedies set forth above are exclusive and in lieu of all other warranties, remedies and conditions, whether oral or written, express or implied. To the maximum extent permitted by law, Atlona specifically disclaims all implied warranties, including, without limitation, warranties of merchantability and fitness for a particular purpose. If Atlona cannot lawfully disclaim or exclude implied warranties under applicable law, then all implied warranties covering its products including warranties of merchantability and fitness for a particular purpose, shall provide to its products under applicable law. If any product to which this limited warranty applies is a “Consumer Product” under the Magnuson-Moss Warranty Act (15 U.S.C.A. §2301, ET SEQ.) or other applicable law, the foregoing disclaimer of implied warranties shall not apply, and all implied warranties on its products, including warranties of merchantability and fitness for the particular purpose, shall apply as provided under applicable law.

### Other Conditions

Atlona’s Limited Product Warranty offering gives legal rights, and other rights may apply and vary from country to country or state to state. This limited warranty is void if (i) the label bearing the serial number of products have been removed or defaced, (ii) products are not purchased from an authorized Atlona dealer or reseller. A comprehensive list of Atlona’s authorized distributors, dealers and resellers can be found at [www.atlona.com](http://www.atlona.com).

## Important Safety Information



CAUTION: TO REDUCE THE RISK OF  
ELECTRIC SHOCK  
DO NOT OPEN ENCLOSURE OR EXPOSE  
TO RAIN OR MOISTURE.  
NO USER-SERVICEABLE PARTS  
INSIDE REFER SERVICING TO  
QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the product.




The information bubble is intended to alert the user to helpful or optional operational instructions in the literature accompanying the product.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this product near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install or place this product near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of a polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
11. Only use attachments/accessories specified by Atlona.
12. To reduce the risk of electric shock and/or damage to this product, never handle or touch this unit or power cord if your hands are wet or damp. Do not expose this product to rain or moisture.
13. Unplug this product during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.



## FCC Statement

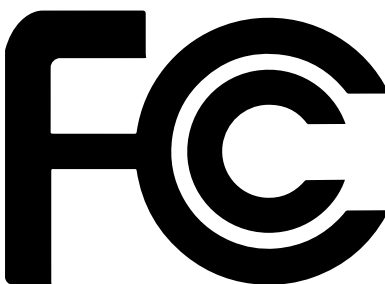

FCC Compliance and Advisory Statement: This hardware device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulations.

# Table of Contents

---

<b>Introduction</b>	<b>8</b>
<b>Features</b>	<b>8</b>
<b>Package Contents</b>	<b>8</b>
<b>Panel Description</b>	<b>9</b>
<b>Installation</b>	<b>10</b>
Connection Instructions	10
Mounting Instructions	10
Connection Diagram	12
<b>Basic Operation</b>	<b>13</b>
Initialization Procedure	13
Home Position	14
Field of View	15
Sample Calculations Table	15
Calculating Specific Values	16
Controlling the Camera	17
Tilt	17
Pan (Rotation)	17
Tilt and Pan Combinations	18
Zoom	19
Focus	19
Backlight Compensation (BLC)	20
Standby Mode	20
Managing Presets	21
Saving Presets	21
Clearing a Preset	21
Recalling Presets	21
Function List	22
<b>WebGUI</b>	<b>23</b>
<b>IR Remote and OSD</b>	<b>35</b>
IR Remote Control	35
OSD	35
Remote Functions	37
<b>Appendix</b>	<b>38</b>
Specifications	38

## Introduction

---

The Atlona **AT-HDVS-CAM-HDBT** is an enterprise-grade PTZ camera designed for use in video conferencing and other applications such as lecture capture and distance education. It features an HDBaseT output for extending video, power, and camera control over distances up to 330 feet (100 meters). The HDVS-CAM-HDBT is ideal for remotely interfacing into HDBaseT equipped switchers and extenders, for use with a video conferencing codec, lecture capture appliance, or PC equipped for video capture. Camera control over HDBaseT or TCP/IP facilitates remote integration into AV control systems. The HDVS-CAM-HDBT delivers high performance, professional-quality imaging with video resolutions up to 1080p @ 60 Hz, as well as fast and accurate auto-focusing, and a fast yet quiet pan and tilt mechanism. This PTZ camera is ideal for large meeting spaces, classrooms, training rooms, and many other environments. The HDVS-CAM-HDBT is available in black or white.

## Features

---

- Designed for video conferencing and other applications such as lecture capture and distance education
- HDBaseT output for extending video, power, and camera RS-232 control up to 330 feet (100 meters) @ 1080p with CAT5e/6 cable
- Remote powering over HDBaseT – local powering available with included power supply
- High performance imaging, fine detail, and color rendering with 1/2.8" low-noise, HD CMOS sensor
- Delivers HD video resolutions including 1080p @ 60 Hz
- Up to 255 camera presets available, 10 accessible from IR remote
- Fast and accurate auto focus, plus auto white balance and auto exposure modes
- Fast and quiet pan and tilt mechanism
- Multi-element zoom lens with 10x optical zoom and a 60.9° horizontal field of view
- Picture controls available for brightness, color, saturation, contrast, sharpness, and gamma
- TCP/IP, RS-232, and IR control – convenient handheld IR remote control included
- Supports VISCA, Pelco-D, and Pelco-P camera control protocols
- Easy, GUI-based configuration using integrated web server
- Camera can be mounted on a wall, or inverted for ceiling installation with the optional AT-HDVS-CAM-CMNT ceiling mount kit
- Includes installation guide, wall mounting bracket, IR remote control, VISCA to RS-232 DB-9 adapter, lens cap, and external universal power supply
- Available in black or white
- Three-year limited product warranty


## Package Contents

---

- 1 x AT-HDVS-CAM-HDBT-BK or AT-HDVS-CAM-HDBT-WH
- 1 x Wall mounting plate
- 1 x 1/4 200UNC screws
- 1 x IR Remote Control
- 1 x VISCA to RS-232 DB-9 adapter
- 2 x AAA battery
- 1 x Installation Guide

## Panel Description

Front (AT-HDVS-CAM-HDBT-WH shown)

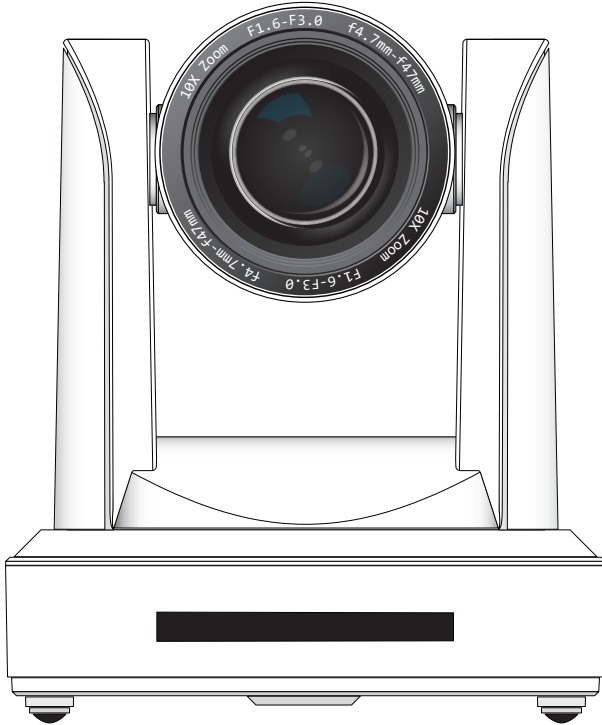

Back (AT-HDVS-CAM-HDBT-BK shown)



### 1. RS-232

Connect included VISCA to RS-232 adapter here to control the camera with a third party software or hardware controller.

### 2. AUDIO IN

Port not used.

### 3. HDBaseT OUT

Connect to a compatible PoE switcher or receiver, such as: AT-OME-RX11, AT-OME-PS62, etc.

### 4. LAN

Connect to a network switch to control the unit via TCP/IP or webGUI.


### 5. DC 12V

Connect the included 12V power supply to this port.

# Installation

## Connection Instructions

1. Connect the Ethernet cable to the LAN port on the back of the AT-HDVS-CAM-HDBT.
2. Connect to a category cable (CAT-5e or better) from the HDBaseT port to a compatible PoE A/V switcher or receiver, such as the AT-OME-RX11.
3. \*Optional\* Connect the Visca to RS-232 cable to the Visca port for RS-232 control. Note that RS-232 can also be connected to an AT-OME-RX11 or other receiver that supports RS-232 for remote control.

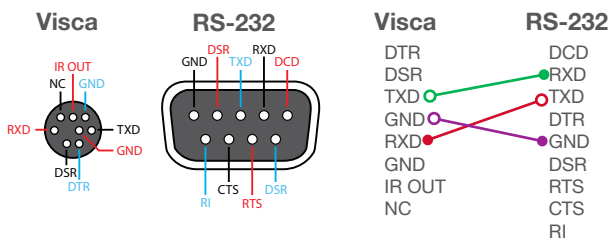

4. \*Optional\* Connect the DC 12V power cable to the unit. This is only required if the camera is not being powered using PoE.


## Mounting Instructions

The AT-HDVS-CAM-HDBT has two installation options, wall mount (included) and ceiling mount (purchased separately).

### Wall Mount installation

Install the AT-HDVS-CAM-HDBT, 4 M6 swelling bolts, 1 1/4 20 UNC bolt, 4 M6 nuts and shims, the included wall mount bracket, and the AT-HDVS-CAM-HDBT are needed.


1. Install the M6 swelling bolts in a rectangular pattern on the wall, 100 mm wide and 50 mm high.
2. Attached the wall mount bracket onto the wall, by placing them on the M6 swelling bolts and securing it with the M6 nuts and shims.
3. Once the wall mount bracket is secure on the wall, place the camera on the top of the wall mount bracket and secure it with the 1/4 20UNC bolt.

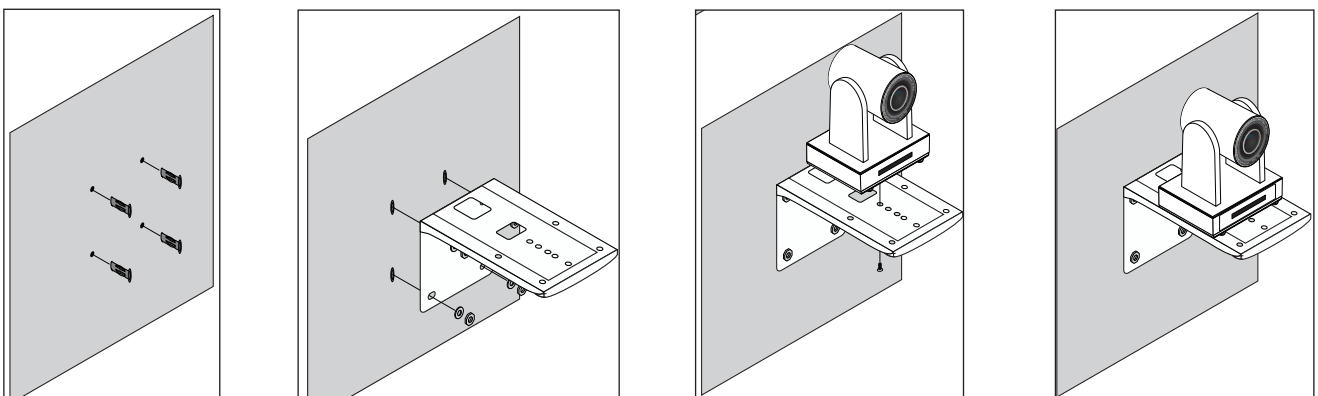

### Ceiling Mount installation


To install the AT-HDVS-CAM-HDBT, 4 PA3X30 self-tapping screws, 4 PM3X6 screws, 4 screw stoppers, 1 1/4 20 UNC screw, the optional ceiling upper and lower covering plates, and the AT-HDVS-CAM-HDBT are needed.

1. Install the 4 screw stoppers in the ceiling.
2. Connect the upper ceiling covering plate to the screw stoppers using the PA3X30 self-tapping screws.
3. Connect the lower ceiling covering plate to the bottom of the AT-HDVS-CAM-HDBT using the 1/4 20 UNC screw.
4. Mount the lower ceiling covering plate to the upper ceiling plate using 3 PM3X6 bolts.

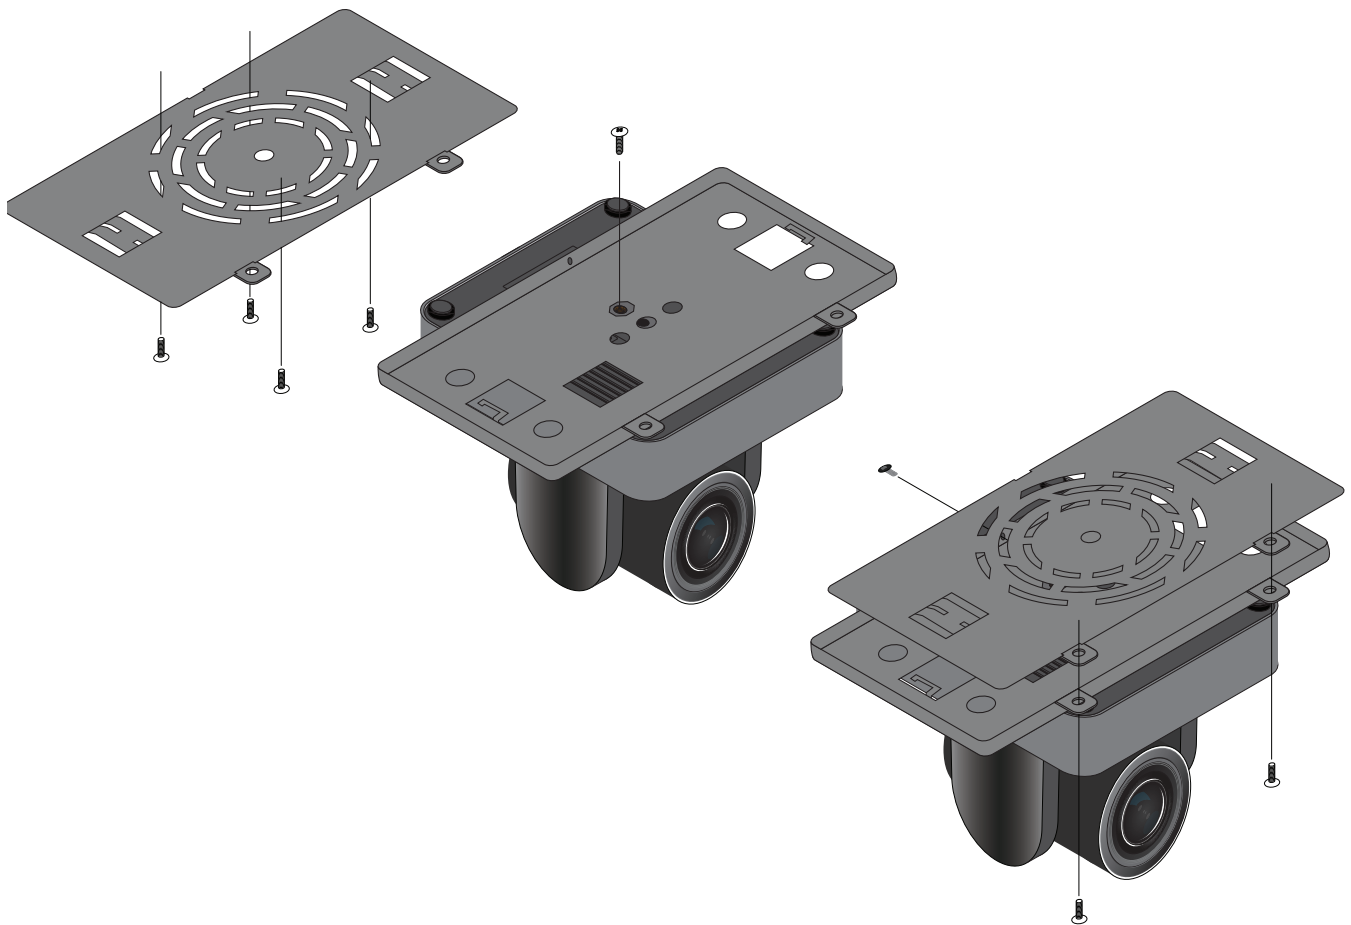

**NOTE:** The camera picture will need to be inverted for video to be viewed correctly. View the AT-HDVS-CAM-HDBT manual for instructions on how to invert video.

## Connection Diagram

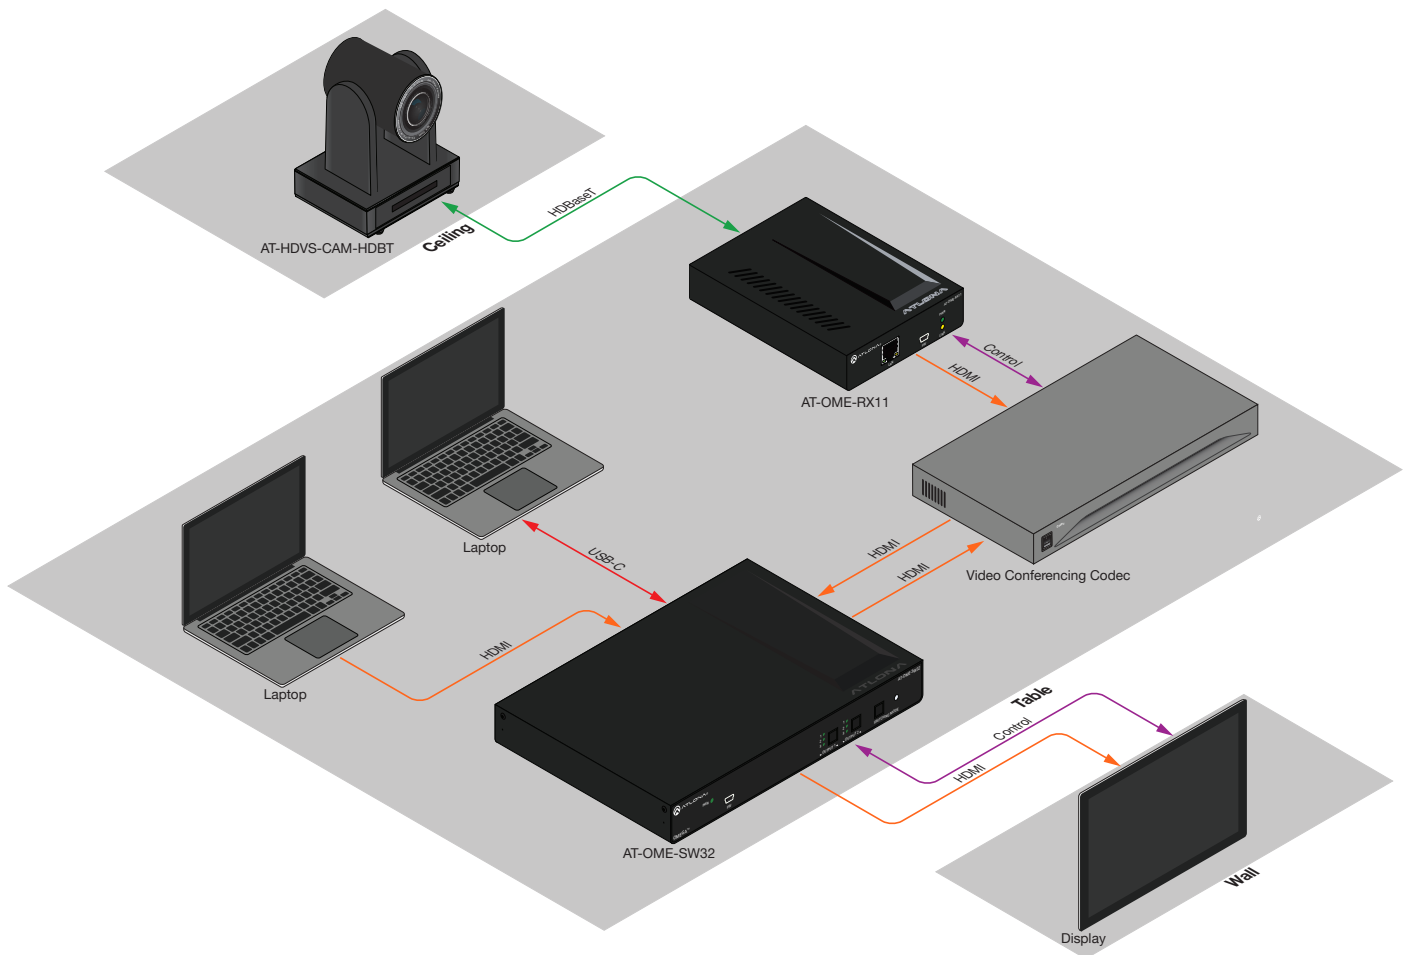

## Basic Operation

---

### Initialization Procedure

Once the camera is powered, it will go through an initialization procedure. During this process, a flashing red LED indicator will be displayed. When the AT-HDVS-CAM-HDBT is ready for use, the LED indicator on the front panel will be solid green. The AT-HDVS-CAM-HDBT will repeat this process each time it is powered on.



Flashing red LED during initialization



Camera "ready" state

### Home Position

“Home” position is a term that is used throughout this manual. When the AT-HDVS-CAM-HDBT is in home position, the camera is facing forward and has no tilt angle, as shown in the illustration below:



Front




Left Side

### Field of View

When positioning the camera in a huddle room or similar area, it will be helpful to know the viewing area of the camera, based on a fixed target. The viewable area of the camera is called the *linear field of view* or sometimes referred to as the *image plane*.

The illustration below shows the AT-HDVS-CAM-HDBT pointed at a fixed target.

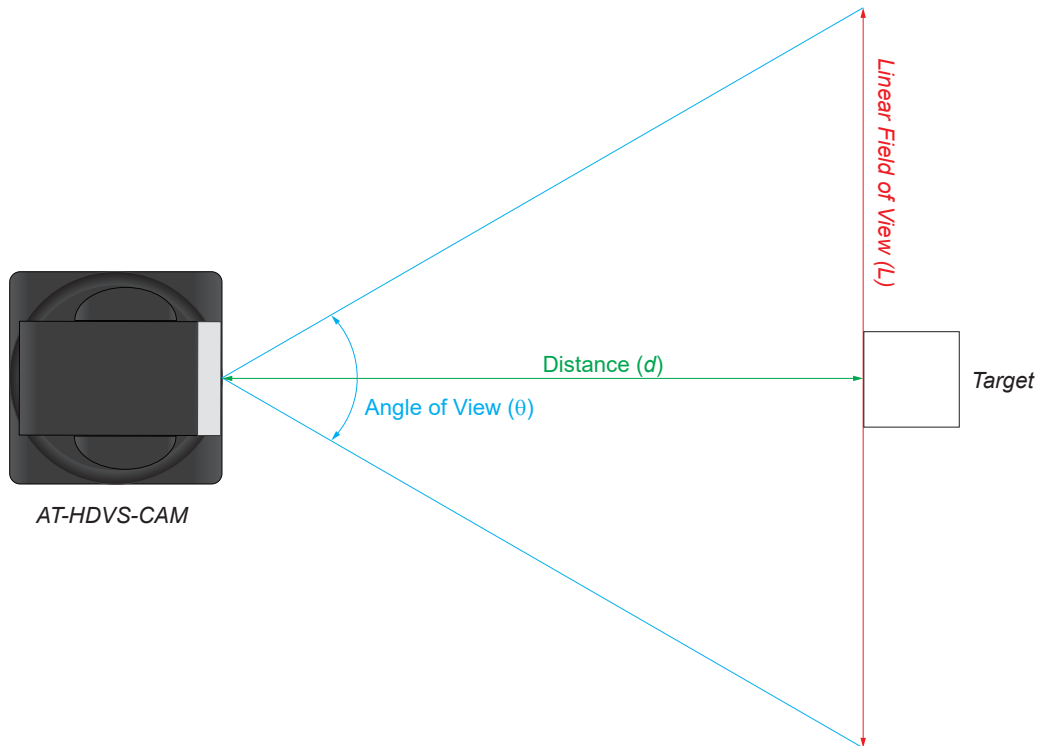

### Sample Calculations Table

The following table provides a list of predefined distances, which the camera must be placed from the target, in order to capture the required Linear Field of View (L). The Angle of View, for the camera, has been set to 60.9° (wide-angle).

To calculate custom values, refer to [Calculating Specific Values](#) (page 16).

Angle of View ( $\theta$ ), in degrees	Distance ( $d$ ), in feet	Linear Field of View ( $L$ ), in feet
60.9°	5	5.875076864
	10	11.75015373
	15	17.62523059
	20	23.50030746
	25	29.37538432

### Calculating Specific Values

In order to calculate custom values, this section introduces some trigonometric formulas which can be used to find the Linear Field of View (L), Distance (d), or the Angle of View ( $\theta$ ). The derivation of each formula is beyond the scope of this manual. As long as any two values are known, the third value can be calculated as follows:

#### Linear Field of View (FOV)

$$L = 2 \cdot d \cdot \tan\left(\frac{\theta}{2}\right)$$

#### Angle of View

$$\theta = 2 \cdot \arctan\left(\frac{L}{2 \cdot d}\right)$$

#### Distance to target


$$d = \frac{L}{2 \cdot \tan\left(\frac{\theta}{2}\right)}$$



**NOTE:** When calculating the Angle of View, using a calculator that is set to radians, multiply the result by  $\frac{\pi}{180}$  to convert the answer to degrees. The value of  $\pi$  can be approximated as 3.1415.

### Example

In the following diagram, the camera angle of view is set to  $54.7^\circ$ . The viewing area to be captured is measured to be 9 feet. How far from the target must the camera be placed in order to capture this area?

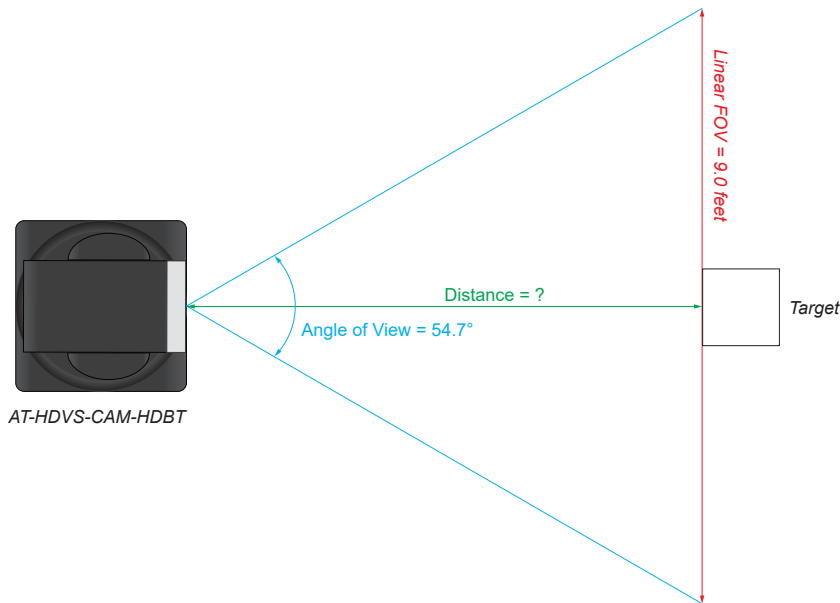


- Use the following formula:  $d = \frac{L}{2 \cdot \tan\left(\frac{\theta}{2}\right)}$
- Substitute the known values for each variable in the equation. In this case, we know both the linear FOV and the angle of view. Therefore:  
 $L = 9$   
 $\theta = 54.7$
- The equation becomes:  $d = \frac{9}{2 \cdot \tan\left(\frac{54.7}{2}\right)}$
- $\tan\left(\frac{54.7}{2}\right) = 0.5172$
- Multiplying this result by 2 gives:  $1.0344$
- Dividing 9 by  $1.0344$ , yields:  $8.700$ . Therefore, the camera must be placed 8.7 feet from the target.

### Controlling the Camera

The AT-HDVS-CAM-HDBT can be controlled using the included IR remote control, RS-232, TCP/IP, or through the webGUI. Refer to the [WebGUI \(page 23\)](#) for more information about accessing the webGUI.


#### Tilt

The camera tilt range is approximately -45 degrees to +90 degrees. Use one of the following methods to adjust the camera tilt.

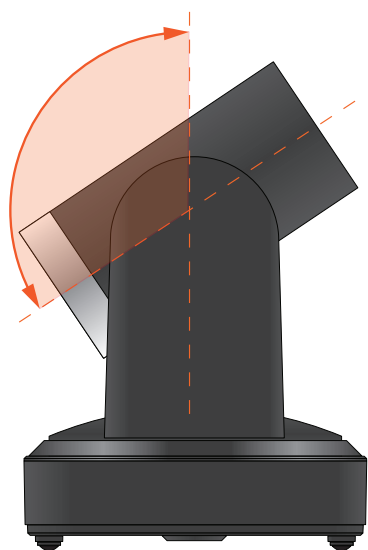

##### IR Remote Control


- Press and release the up or down arrow button to adjust the tilt of the camera in small increments.
- Press and hold the up or down arrow button to adjust the camera tilt at a faster rate.
- Press the **HOME** button to return the camera to the “home” position.

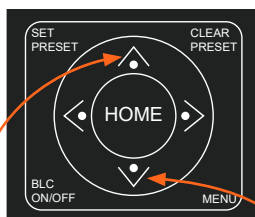


Tilt up

Tilt down

##### webGUI

1. Click **Control** in the side menu bar.
2. Click the up-arrow or down-arrow button to tilt the camera up or down, respectively.
3. Click the  icon in the center to return the camera to the “home” position.

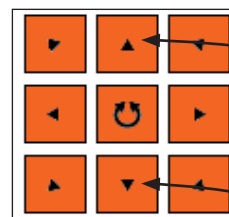


Tilt up

Tilt down


#### Pan (Rotation)

The camera pan range is approximately 360 degrees. Use one of the following methods to adjust the camera pan.

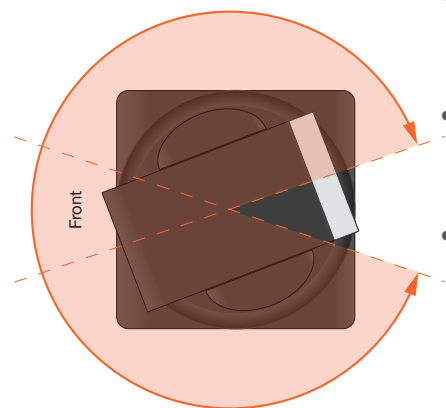

##### IR Remote Control


- Press and release the left or right arrow button to adjust the camera tilt in small increments.
- Press and hold the left-arrow or right-arrow button to adjust the camera tilt at a faster rate.
- Press the **HOME** button to return the camera to the “home” position.

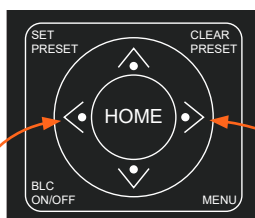


Pan left

Pan right

##### webGUI

1. Click **Control** in the side menu bar.
2. Click the left arrow or right arrow button to tilt the camera up or down, respectively.
3. Click the  icon in the center to return the camera to the “home” position.

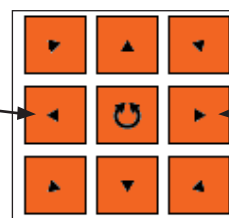


Pan left


Pan right

### Tilt and Pan Combinations

The webGUI provides a method for combining both tilt and pan motion. Note that this function is *not* available on the included IR Remote Control.

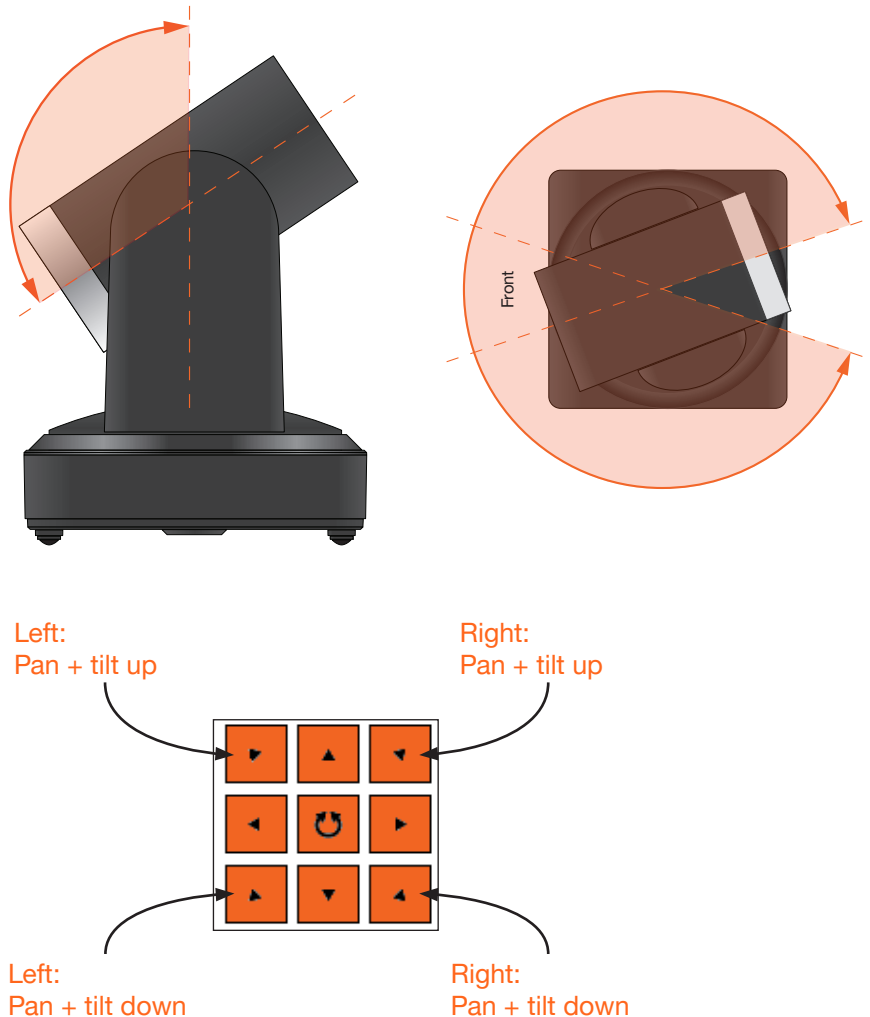

#### webGUI (only)


1. Click **Control** in the side menu bar.
2. Click the diagonal arrow buttons to simultaneously tilt and pan the camera in the desired direction:
  - **Upper Diagonal-left arrow**  
Pans and rotates camera up and to the left.
  - **Lower Diagonal-left arrow**  
Pans and rotates camera down and to the left.
  - **Upper Diagonal-right arrow**  
Pans and rotates camera up and to the right.
  - **Lower Diagonal-right arrow**  
Pans and rotates camera down and to the right.
3. Click the  icon in the center to return the camera to the “home” position.

### Zoom

The camera provides a zoom factor up to 10x. Use one of the following methods to adjust the camera zoom.

#### IR Remote Control

- Locate the **ZOOM** rocker switch on the IR Remote Control.
- Press and release + to zoom-in or press - to zoom-out.
- Press and hold these buttons to zoom-in or zoom-out at a faster rate.

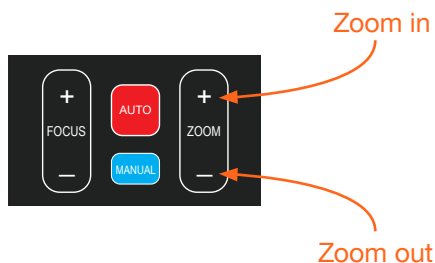

#### webGUI

1. Click **Control** in the side menu bar.
2. Click + to zoom-in or click - to zoom out.



### Focus


When positioning the camera on an object, it may be necessary to adjust the focus for a clear image. The AT-HDVS-CAM-HDBT can be set to auto focus or manual focus. By default, the AT-HDVS-CAM-HDBT is set to auto-focus mode.



**NOTE:** In order to manually control the focus, the AT-HDVS-CAM-HDBT must be in manual focus mode. Press the **MANUAL** button to enter manual focus mode.


#### IR Remote Control

- Press and release the **MANUAL** button.
- Locate the **FOCUS** rocker switch on the IR Remote Control.
- Press and release + to increase focus on objects in the foreground. Press and release the - to focus on objects in the background.
- Press and hold these buttons to adjust the focus at a faster rate.

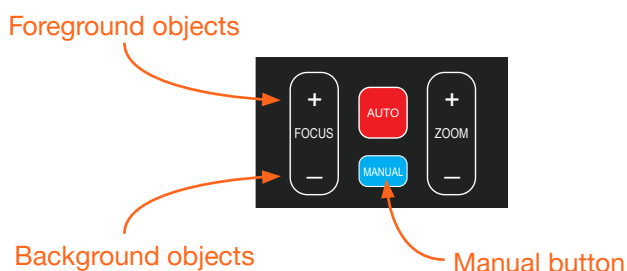

#### webGUI

1. Click **Control** in the side menu bar.
2. Set the AT-HDVS-CAM-HDBT to manual focus mode by selecting **Manual** from the **Focus Mode** drop-down list.
3. Click + to focus on foreground objects or click - to focus on background objects.

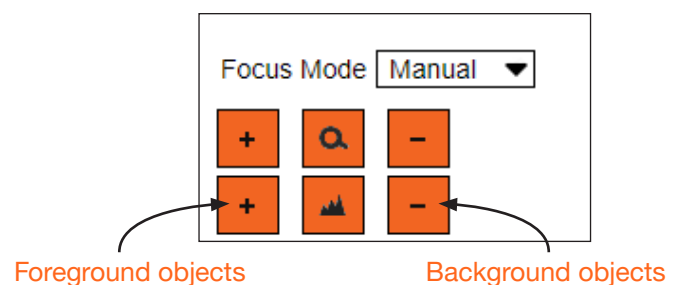


### Backlight Compensation (BLC)

BLC is a feature which automatically adjusts the exposure control of the camera. When enabled, BLC will attempt to increase the ambient foreground light and “darken” any background light. For example, a subject standing in front of a window in the daytime, will produce a sillhouetted effect. Enabling BLC will compensate for the difference in lighting.

#### IR Remote Control


1. Point the IR Remote Control at the front of the AT-HDVS-CAM-HDBT.
2. Press and release the **BLC ON/OFF** button to toggle BLC on or off.

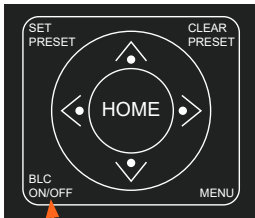

BLC on/off button

#### webGUI

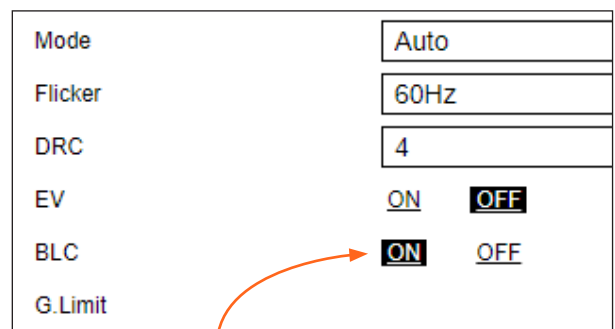

1. Click **Exposure** in the side menu bar.
2. Click ON to enable BLC. Click OFF to disable BLC.




BLC ON


### Standby Mode

Placing the AT-HDVS-CAM-HDBT in standby mode will power-down the camera. Placing the camera in standby mode is managed using the IR Remote Control.

1. Point the IR Remote Control at the front of the AT-HDVS-CAM-HDBT.
2. Press and hold the  button for three seconds.
3. The camera will rotate 90 degrees and the camera lens assembly will tilt approximately 45 degrees. The camera is now in standby mode.
4. Press and hold the  button for three seconds to wake the camera. After the camera is awake, it will return to the home position.

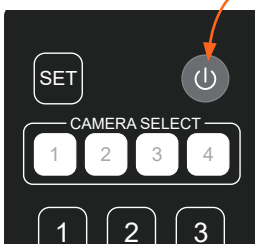

Power button

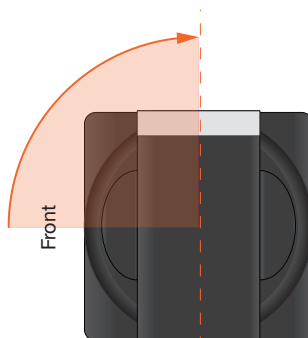


**NOTE:** The camera will always be set to the home position after this sequence is performed. To return the camera to the last position, either position it manually or recall the saved preset.

### Managing Presets

Camera positions can be stored to local memory and recalled at a later time. Presets are stored and recalled using the included IR Remote Control. Up to 10 presets can be saved.

#### Saving Presets

1. Set the camera in the desired position.
2. Point the IR Remote Control at the front of the AT-HDVS-CAM-HDBT.
3. Press the **SET PRESET** button.
4. Press the desired number on the IR Remote Control keypad to assign the position of the camera to the preset.

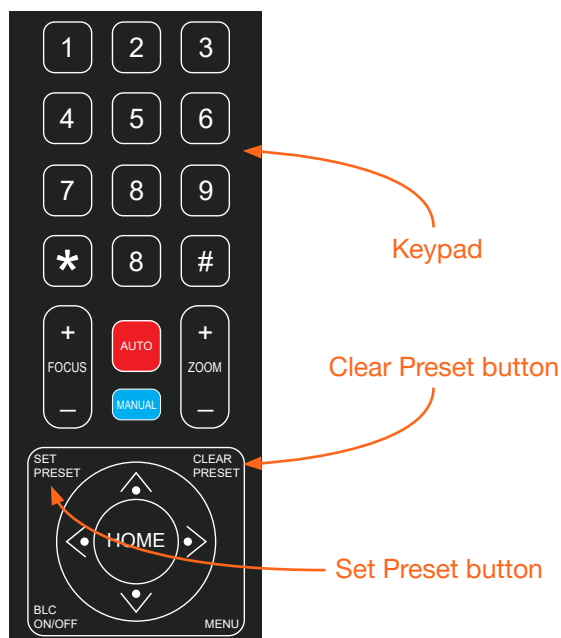

#### Clearing a Preset

Presets can be erased. It is not necessary to clear a preset, before saving a new camera position in the same preset. If a preset is saved to an existing preset, it will be overwritten.

1. Press the **CLEAR PRESET** button.
2. Press the desired number on the IR Remote Control keypad to clear the preset.

**NOTE:** To clear all presets, press and release the [#] key on the keypad, three times.

#### Recalling Presets

1. Point the IR Remote Control at the front of the AT-HDVS-CAM-HDBT.
2. Press the number of the desired preset from the IR Remote Control keypad.
3. The camera will be set to the position defined by the preset.

### Function List

The included IR Remote Control provides a set of functions which can be used to change the behavior of the AT-HDVS-CAM-HDBT. Each function is invoked by sequentially pressing the following series of keys on the keypad.

Function	Keystrokes
Clear all presets	[#] + [#] + [#]
Flip video horizontally and vertically	[*] + [#] + [9]
Reset username, password, and IP address	[*] + [#] + [MANUAL]
Switch video format to 1080p60	[#] + [#] + [0]
Switch video format to 1080p50	[#] + [#] + [1]
Switch video format to 1080i60	[#] + [#] + [2]
Switch video format to 1080i50	[#] + [#] + [3]
Switch video format to 720p60	[#] + [#] + [4]
Switch video format to 720p50	[#] + [#] + [5]
Switch video format to 1080p30	[#] + [#] + [6]
Switch video format to 1080p25	[#] + [#] + [7]
Switch video format to 720p30	[#] + [#] + [8]
Switch video format to 720p25	[#] + [#] + [9]


## WebGUI

The AT-HDVS-CAM-HDBT includes a built-in webGUI, which allows easy management and control of all features. Follow the instructions below to access the webGUI.


1. Use an IP scanner to determine the IP address of the AT-HDVS-CAM-HDBT.
2. Launch a web browser.
3. In the address bar, type the IP address of the AT-HDVS-CAM-HDBT.
4. Enter the following information on the Login page.

Login: admin  
 Password: Atlona

5. Click the **Login** button. If using a secure connection, click the **Toggle HTTP/HTTPS** button.




6. After logging in for the first time, the webGUI will prompt to change the password. Follow the on-screen instructions to change the password.
7. The status page will display, giving all the general information of the AT-HDVS-CAM-HDBT.

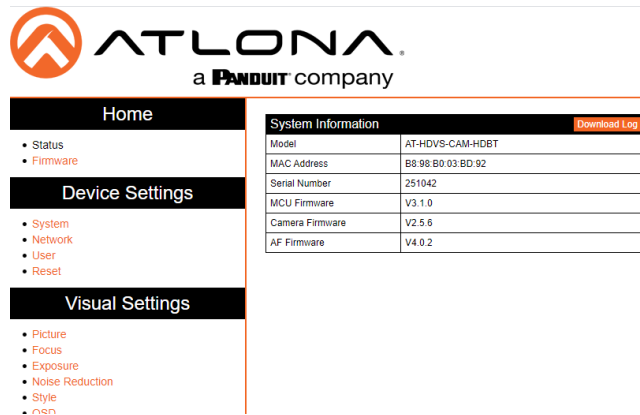

System Information	
Model	AT-HDVS-CAM-HDBT
MAC Address	B8 98 B0 03 BD 92
Serial Number	251042
MCU Firmware	V3.1.0
Camera Firmware	V2.5.6
AF Firmware	V4.0.2

8. Select firmware from the side menu.

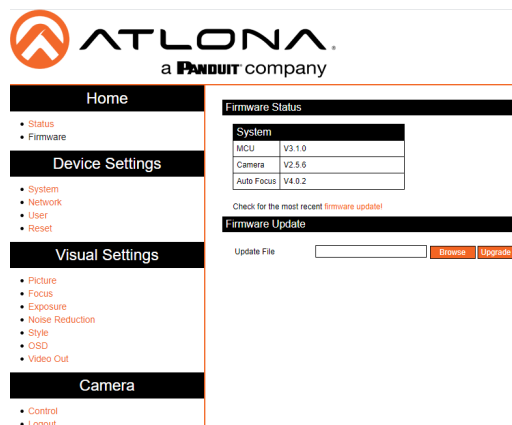

Firmware Status	
System	
MCU	V3.1.0
Camera	V2.5.6
Auto Focus	V4.0.2

Check for the most recent firmware update!

**Firmware Update**

Update File:  **Browse** **Upgrade**

## Firmware Status

MCU - Displays the current OSD software.

Camera - Displays the current unit software.


Auto Focus - Displays the software for auto focus.

## Firmware Update

Browse - Select browse and search the local computer for the firmware.

Update - Load the selected file to the unit.

9. Select System from the side menu.

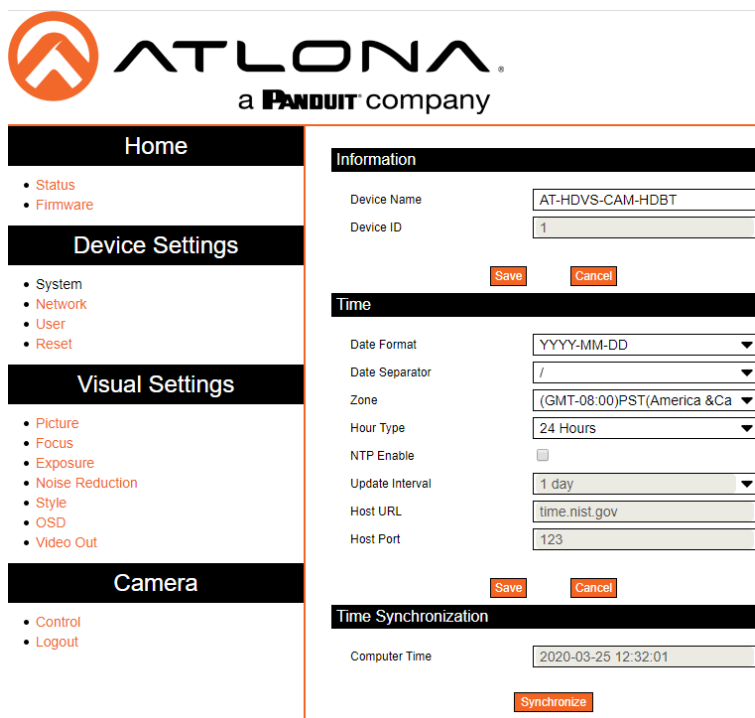

The screenshot shows the ATLONA WebGUI interface. On the left is a side navigation bar with the following sections:

- Home**
  - Status
  - Firmware
- Device Settings**
  - System
  - Network
  - User
  - Reset
- Visual Settings**
  - Picture
  - Focus
  - Exposure
  - Noise Reduction
  - Style
  - OSD
  - Video Out
- Camera**
  - Control
  - Logout

The main content area is titled 'ATLONA a PANDUIT company' and contains the following sections:

- Information**
  - Device Name: AT-HDVS-CAM-HDBT
  - Device ID: 1
  - Buttons: Save, Cancel
- Time**
  - Date Format: YYYY-MM-DD
  - Date Separator: /
  - Zone: (GMT-08:00)PST(America & Ca)
  - Hour Type: 24 Hours
  - NTP Enable: ☐
  - Update Interval: 1 day
  - Host URL: time.nist.gov
  - Host Port: 123
  - Buttons: Save, Cancel
- Time Synchronization**
  - Computer Time: 2020-03-25 12:32:01
  - Button: Synchronize

## Information

Device Name - Displays the SKU of the unit.

Device ID - Displays the ID of the AT-HDVS-CAM-HDBT. This ID is used for VISCA ID assignment.

## Time

Date Format - Select how the date will display on video and saved files.

Date Separator - Select the symbol to display between date format.

Zone - Select the time zone for the camera.

Hour Type - Select the way the time displays through the day.

NTP Enable - Enable or disable time synchronization.

Update Interval - Decide the amount of time between synchronizations.

Host URL - The unit will synchronize to the time of the url typed in this field.


Host Port - Type the port to ensure communication between the camera and the host URL.

## Time Synchronization

Sync Type - Decide the device the camera will sync to.

Computer Time - Displays the current time of the selected synchronization type.

10. Select Network from the side menu.

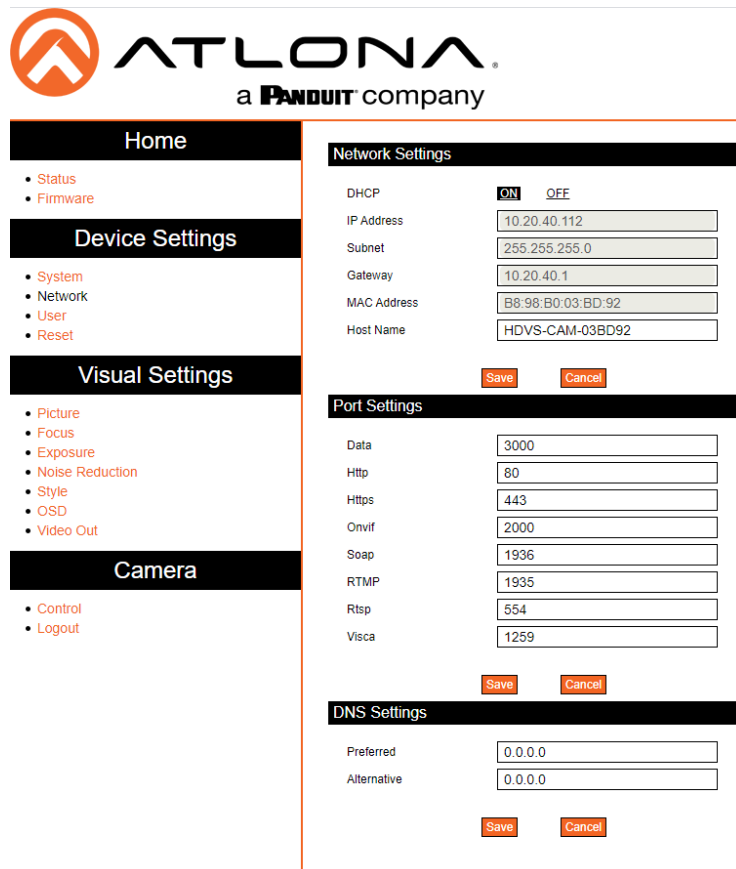

**ATLONA**  
a **PANDUIT** company

**Home**

- Status
- Firmware

**Device Settings**

- System
- Network
- User
- Reset

**Visual Settings**

- Picture
- Focus
- Exposure
- Noise Reduction
- Style
- OSD
- Video Out

**Camera**

- Control
- Logout

**Network Settings**

DHCP ☒ ON ☐ OFF

IP Address

Subnet

Gateway

MAC Address

Host Name

**Port Settings**

Data

Http

Https

Onvif

Soap

RTMP

Rtsp

Visca

**DNS Settings**

Preferred

Alternative

## Network Settings

DHCP - Switch between DHCP (ON) and static (OFF).

IP Address, Subnet, Gateway - This will display the current IP settings on DHCP. When set to static, fill in the IP address, netmask, and gateway.

MAC Address - Displays the MAC Address of the AT-HDVS-CAM-HDBT.

## Port Settings

Data port - Set to a value between 0 and 65535. Default is 3000.

Web Port - Set to a value between 0 and 65535. Default is 80.

Onvif Port - Set to a value between 0 and 65535. Default is 2000.

Soap Port - Set to a value between 0 and 65535. Default is 1936.

RTMP Port - Set to a value between 0 and 65535. Default is 1935.

RTSP Port - Set to a value between 0 and 65535. Default is 554.

Visca Port - Set to a value between 0 and 65535. Default is 1259.


**i NOTE:** The AT-HDVS-CAM-HDBT will restart automatically after the save button is pressed.

## DNS Settings

Preferred - Set the preferred DNS server. Default is 0.0.0.0.

Alternative - Set the alternate DNS server. Default is 0.0.0.0.

11. Select User from the side menu.

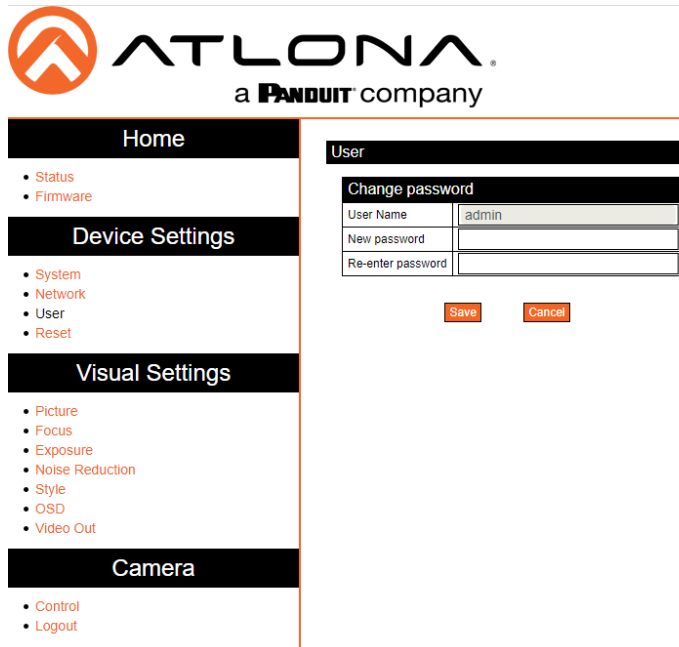

**ATLONA**  
a **PANDUIT** company

**Home**

- Status
- Firmware

**Device Settings**

- System
- Network
- **User**
- Reset

**Visual Settings**

- Picture
- Focus
- Exposure
- Noise Reduction
- Style
- OSD
- Video Out

**Camera**

- Control
- Logout

**User**

**Change password**


User Name	admin
New password	
Re-enter password	

**Save** **Cancel**

### User

Update the username and password of the AT-HDVS-CAM-HDBT webGUI.

12. Select Reset from the side menu.

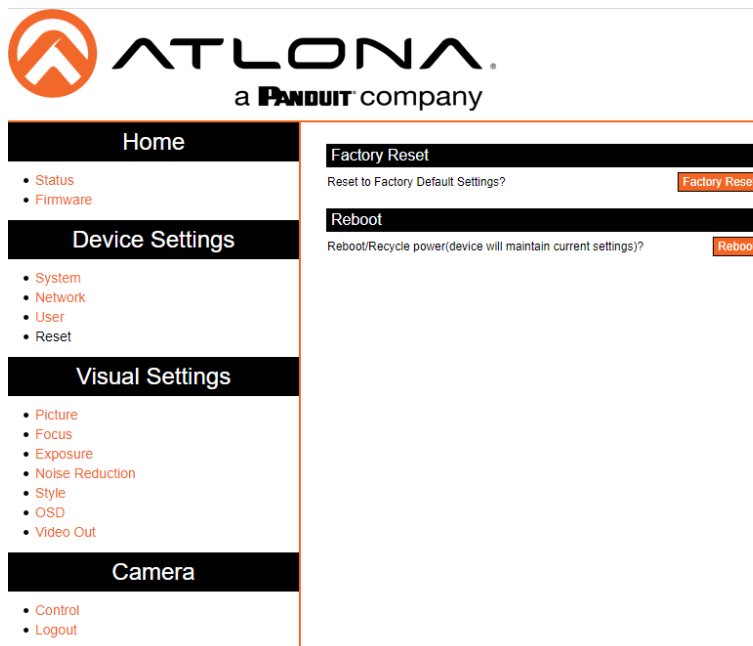

**ATLONA**  
a **PANDUIT** company

**Home**

- Status
- Firmware

**Device Settings**

- System
- Network
- User
- **Reset**

**Visual Settings**

- Picture
- Focus
- Exposure
- Noise Reduction
- Style
- OSD
- Video Out

**Camera**

- Control
- Logout

**Factory Reset**

Reset to Factory Default Settings? **Factory Reset**

**Reboot**

Reboot/Recycle power(device will maintain current settings)? **Reboot**


### Factory Reset

Factory Reset - Sets the device back to the original factory settings.

### Reboot

Reboot - Reboots the AT-HDVS-CAM-HDBT.

13. Select Picture from the side menu.

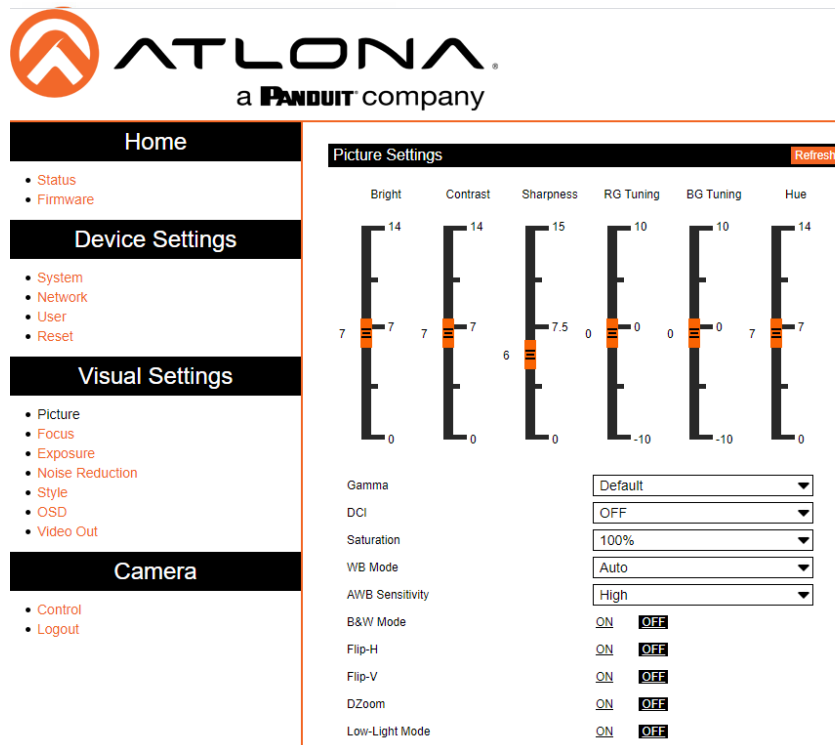

## Picture Settings

Brightness - Set to a value between 0 and 14. Default is 6.

Contrast - Set to a value between 0 and 14. Default is 8.

Sharpness - Set to a value between 0 and 15. Default is 7.

Gamma - Set the gamma value of the camera. Values are default, 0.45, 0.50, 0.52, and 0.55.

DCI (Dynamic Contrast Improvement) - Set to a value between 1 and 8 or OFF.

Saturation - Set to a value between 60% and 200%. Default is 80%.

WB Mode - Select between Auto, 3000K, 3500K, 4000K, 4500K, 5000K, 5500K, 6000K, 6500K, 7000K, Manual, and OnePush.

AWB Sensitivity - Select between low, middle, and high.

B & W Mode - Toggle color between black and white (ON) and color (OFF). Default is off.


Flip-H - Flip the picture horizontally. Default is off.

Flip-V - Flip the picture vertically. Default is off.

DZoom - Dynamic Zoom. Toggle between ON and OFF. Default is off.

Low-Light Mode - Toggle between ON and OFF. Default is off.

14. Select Focus from the side menu.

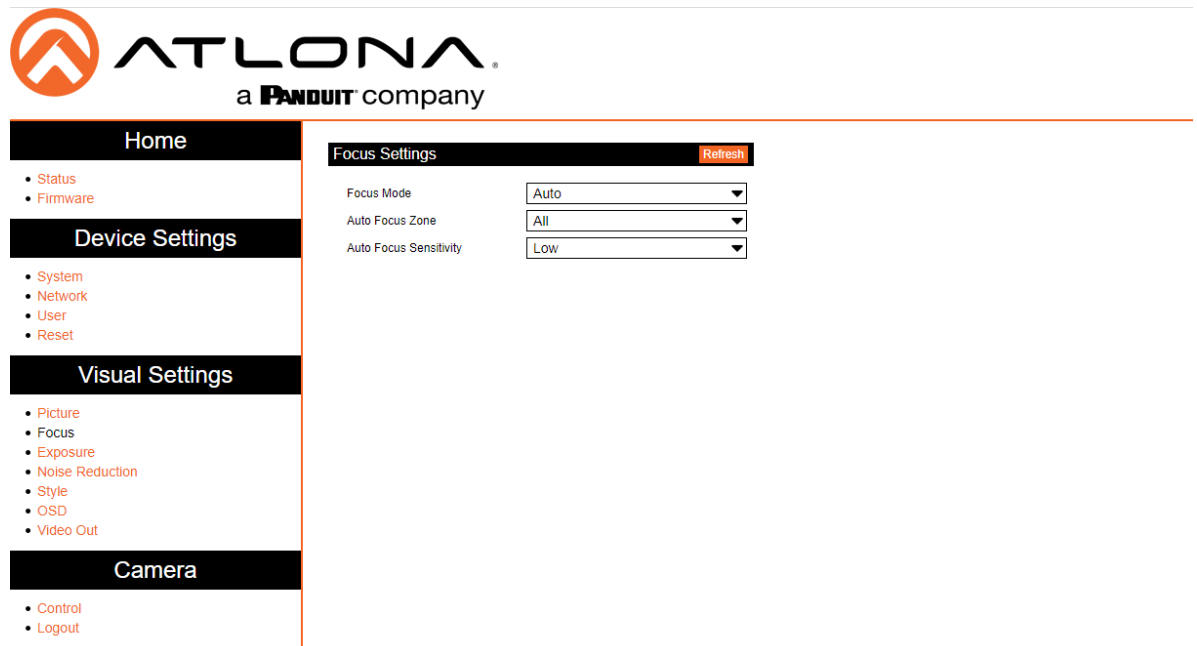


### Focus Settings

Focus Mode - Switch between Auto, Manual, or OnePush.

Auto Focus Zone - Switch the zone between Top, Center, Bottom, and All.

Auto Focus Sensitivity - Switch between High, Middle, and Low.

15. Select Exposure from the side menu.

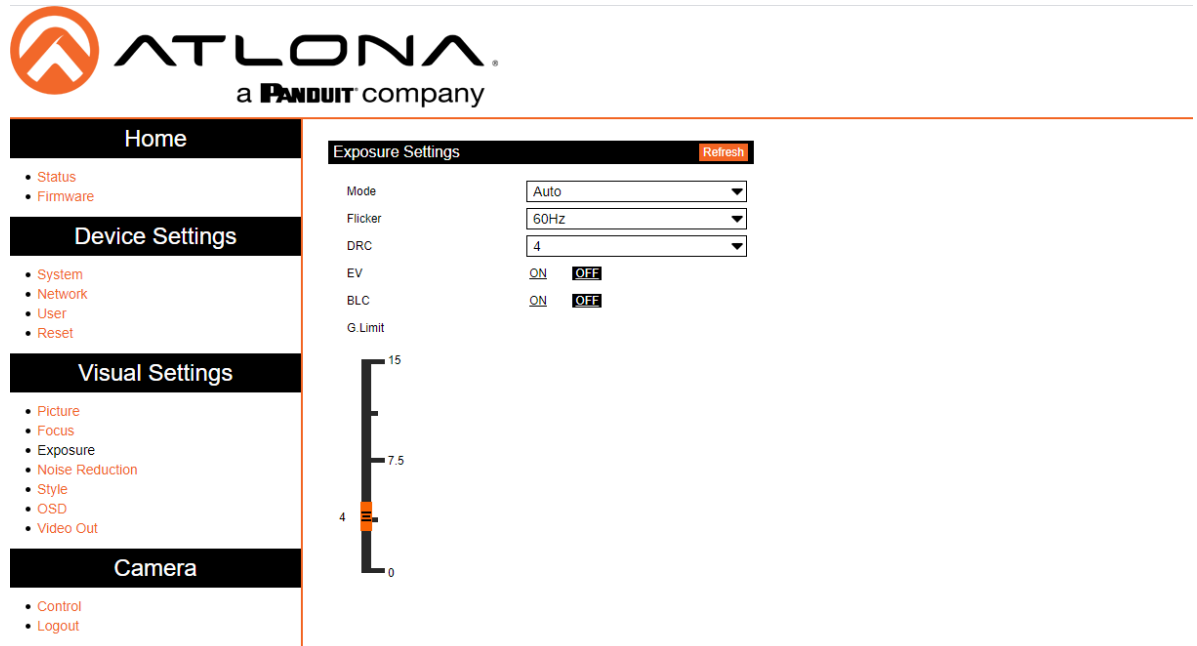

### Exposure Settings

Mode - Switch between Auto, Manual, SAE, AAE, and Bright.

Flicker - Switch between OFF, 50Hz, and 60Hz.


DRC (Dynamic Range) - Set to a value between 1 and 8, or OFF.

EV (Exposure Compensation) - Toggle EV on and off.

BLC (Backlight Compensation) - Toggle backlight compensation on and off.

G.Limit (Gain Limit) - Set to a value between 0 and 15. Default is 3.

16. Select Noise Reduction from the side menu.

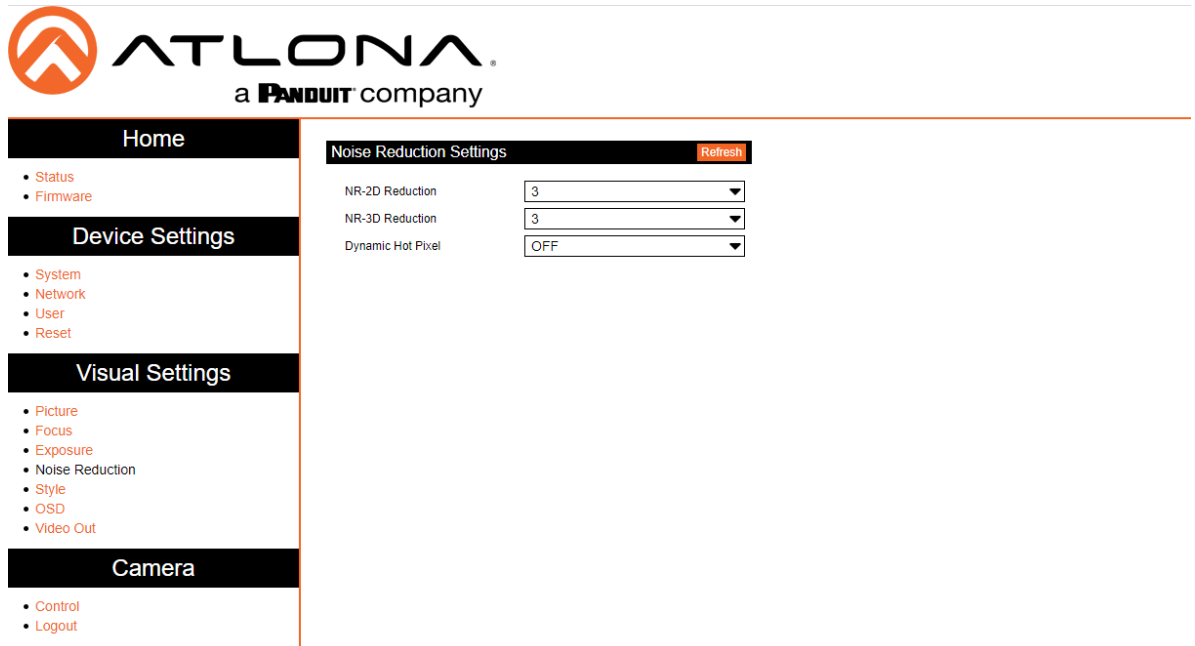

The screenshot shows the ATLONA webGUI interface. The top header features the ATLONA logo and the text "a PANDUIT company". Below the header is a navigation sidebar with four main sections: "Home", "Device Settings", "Visual Settings", and "Camera". The "Visual Settings" section is currently selected, and within it, "Noise Reduction" is highlighted. The main content area displays the "Noise Reduction Settings" page, which includes a "Refresh" button and three settings: "NR-2D Reduction" set to 3, "NR-3D Reduction" set to 3, and "Dynamic Hot Pixel" set to OFF.

Noise Reduction Settings		Refresh
NR-2D Reduction	3	▼
NR-3D Reduction	3	▼
Dynamic Hot Pixel	OFF	▼


### Noise Reduction Settings

NR-2D Reduction - Set to a value between OFF, 1 and 7, or Auto.

NR-3D Reduction - Set to a value between OFF, 1 and 8.

Dynamic Hot Pixel - Set to a value between 1 and 5, or OFF.


17. Select Style from the side menu.

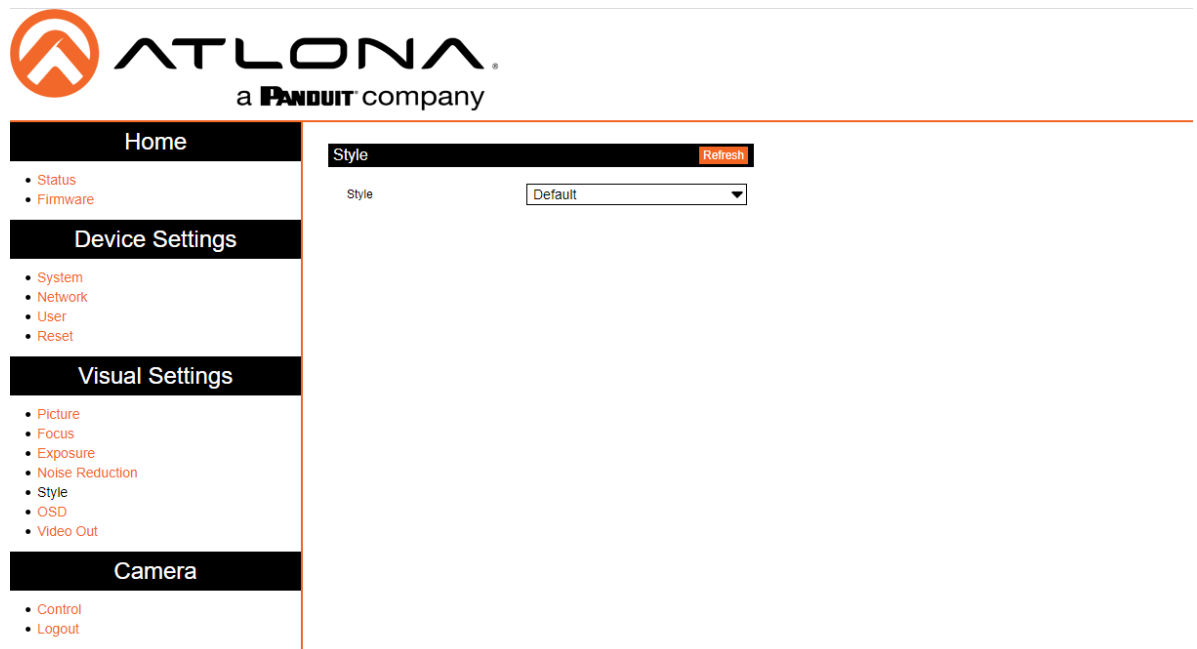

### Style

Style - Set to a value between default, normal, clarity, bright, and soft.

18. Select OSD from the side menu.

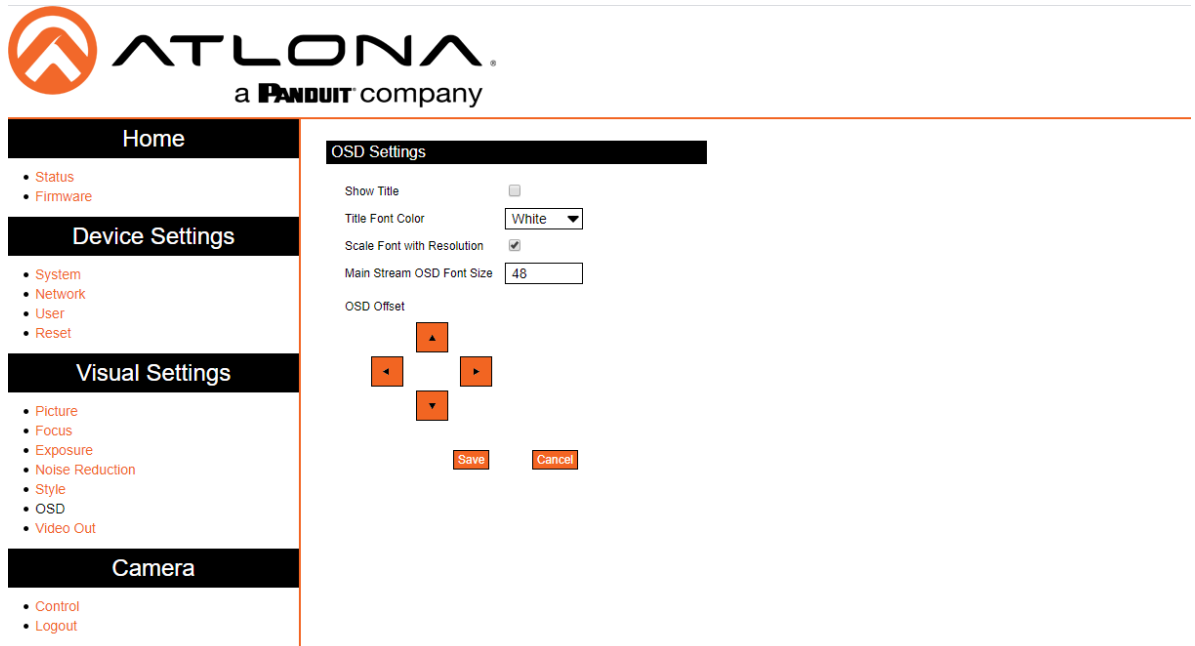

## OSD Settings

Show Title - Toggle the title on and off on the on screen display.


Title Font Color - Set the time's font color. Values are White, Black, Yellow, Red, and Blue.

Scale Font with Resolution - Toggle the font scaling on and off.

Main Stream OSD Font Size - Set the font size between 8 and 200.

OSD Offset - Use the buttons to position the OSD information on the screen.

19. Select Video Out from the side menu.

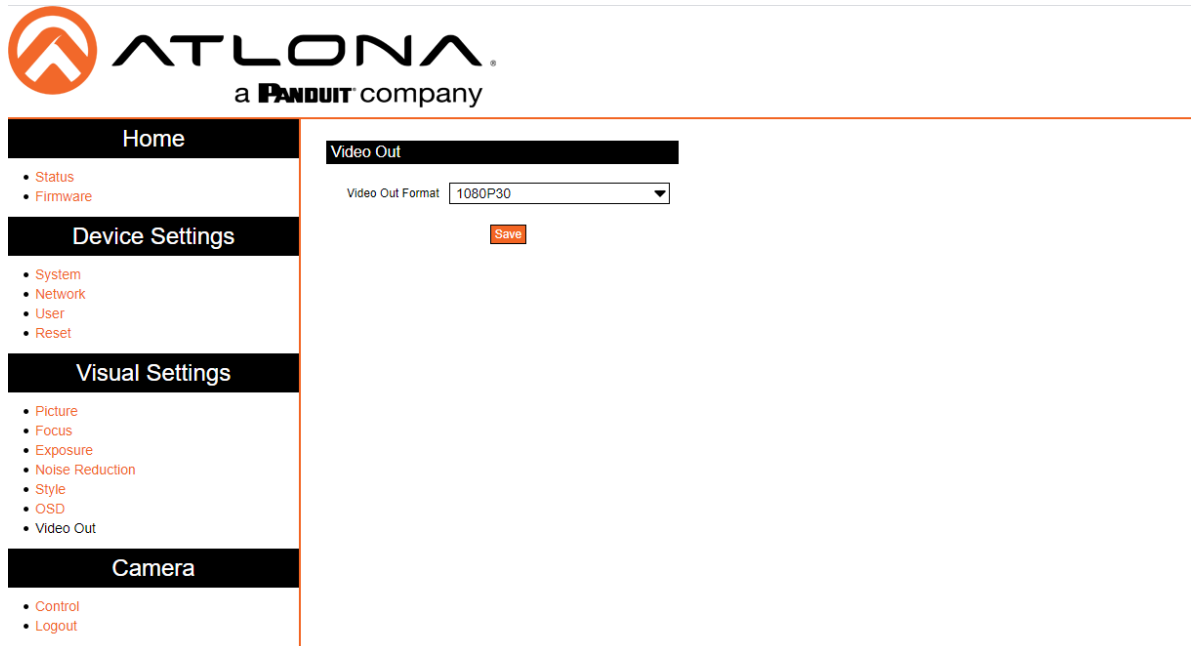


### Video Out

Video Out Format - Set the output format. Values are 1080p60, 1080p50, 1080p30, 1080p25, 1080i60, 1080i50, 720p60, 720p50, 1080p59.94, 1080i59.94, 720p59.94, and 1080p29.97.

Save - Click to save changes.

20. Select Control from the side menu.

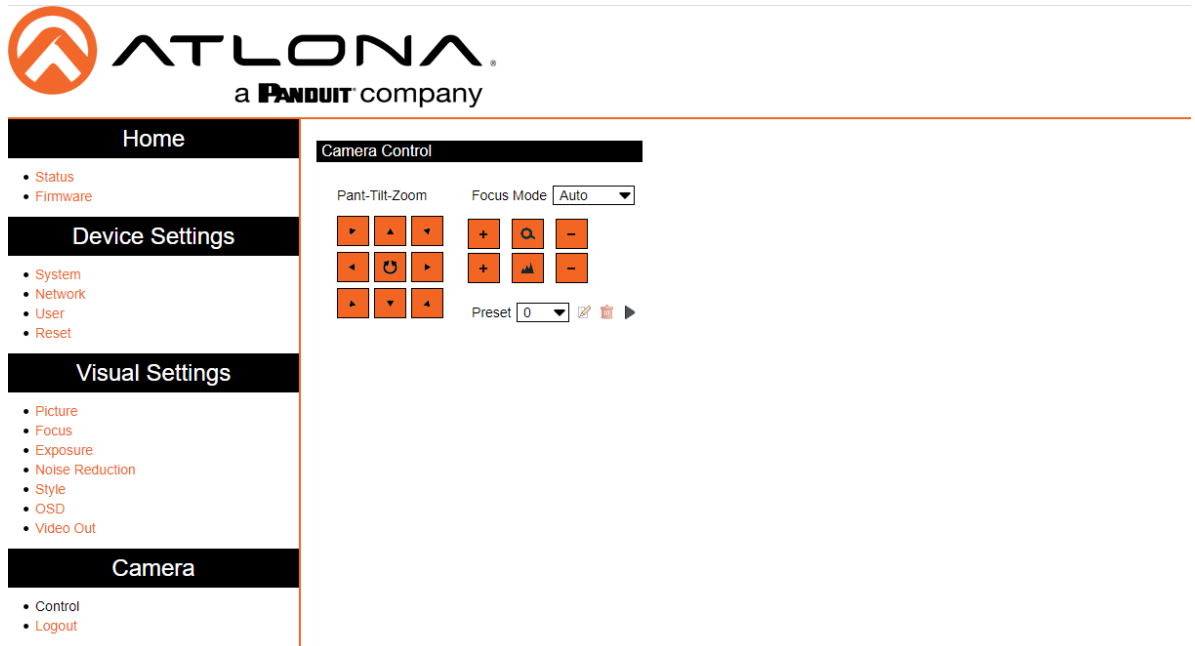

### Camera Control

Pan-Tilt-Zoom - Use the buttons to adjust the camera's view and position.

Focus Mode - Switch between Auto, Manual, and OnePush. Use the buttons to adjust the focus.

Preset - Set the current position settings to a preset and save.

Video buttons - Adjust video settings with these buttons.

## IR Remote and OSD

### IR Remote Control

The AT-HDVS-CAM-HDBT comes with an IR remote control for full control of the camera and use of the OSD menu.



#### IR Remote

**Power** - Toggle the camera on and off with the power button. Press and hold for 3 seconds to place the camera into standby mode.

**Number Buttons** - Use in the selection or creation of camera presets.

**Focus** - Adjust the focus of the camera using the + and - buttons.

**Auto** - Switch the camera focus mode to auto.

**Manual** - Switch the camera focus mode to manual.

**Zoom** - Zoom in (+) or out (-) using these buttons.

**Set Preset** - Set the camera into position then press the Set Preset button followed by a number key (0-9) to set that position to a preset.

**Clear Preset** - Press clear preset followed by a number key to erase the preset set to that number.

**Arrow Buttons** - Use the arrow buttons to adjust the camera position or navigate within the OSD menu.

**Home Buttons** - Returns the camera to the middle position.

**BLC ON/OFF** - Toggle the back light on and off.

**Menu** - Use to pull up the OSD menu.

### OSD

The OSD will display after pressing the MENU button.

OSD						
Language	English Chinese					
Setup	Protocol	Auto	Visca	PELCO-D	PELCO-P	(Options)
	Visca Address	1	1			
	Visca Address	Off	Off			
	PELCO-P Address	1			1	
	PELCO-D Address	1		1		
	Baudrate	9600	9600	9600	9600	9600,

## IR Remote and OSD

### OSD Cont.

Camera	Exposure	Mode	Auto	Bright	AAE	SAE	Manual		
		Bright		7				0 to 23	
		IRIS			F1.8		F1.8	F1.8, F2.0, F2.4, F2.8, F3.4, F4.0, F4.8, F5.6, F6.8, F8.0, F9.6, F11, Close	
		Shutter				1/100	1/100	1/25, 1/30, 1/50, 1/60, 1/90, 1/100, 1/120, 1/180, 1/250, 1/325, 1/500, 1/1000, 1/2000, 1/3000, 1/4000, 1/6000, 1/10000	
		EV	ON					ON, OFF	
		EV Level	0					-7 to 7	
		BLC	OFF					ON, OFF	
		Flicker	50Hz	50Hz	50Hz			OFF, 50Hz, 60Hz	
		G. Limit	4	4	4			0 to 15	
		DRC	4	4	4	4		Close, 1 to 8	
		Color	WB Mode	Auto	Onepush	Manual	7000K	6500K	5500K, 5000K, 4500K, 4000K, 3500K, 3000K
	RG Tuning		0		RG145			-10 to 10	
	BG Tuning		0		BG56			-10 to 10	
	Saturation		100%	100%	100%	100%	100%	60, 100, 110, 120, 200	
	Hue		7	7	7	7	7	0 to 14	
	AWB Sens		High					High, Middle, Low	
	Image	Brightness	6		0 to 14				
		Contrast	8		0 to 14				
		Sharpness	6		0 to 15				
		Flip-H	OFF		OFF, ON				
		Flip-V	OFF		OFF, ON				
		B&W Mode	Color		Color, B&W				
		Gamma	0.45		Default, 0.45, 0.50, 0.55, 0.63				
		DCI	2		Close, 1 to 8				
		Image Quality	0		0 to 5				
	Focus	Focus Mode	Auto		Auto, Onepush, Manual				
		AF-Zone	Center		Center, Top, All, Bottom				
		AF-Sensitivity	Low		Low, High, Middle				
	Noise Reduction	NR-2D	2		OFF, Auto, 1 to 7				
		NR-3D	4		OFF, 1 to 8				
		Dynamic Hot Pixel	OFF		OFF, 1 to 5				
	Style	Clarity	Clarity, Normal, Default, Soft, Bright						

OSD Cont.			
P/T/Z	Speed By Zoom	ON	ON, OFF
	Zoom Speed	8	1 to 8
	Acc Curve	Slow	Slow, Fast
Version	MCU Version	X.X.X	20YY-MM-DD
	Camera Version	X.X.X	20YY-MM-DD
	AF Version	X.X.X	20YY-MM-DD
Ethernet	IP Address	XXX.XXX.XXX.XXX	e.g. 10.20.20.233
	Subnet Mask	XXX.XXX.XXX.XXX	e.g. 255.255.255.0
	Gateway	XXX.XXX.XXX.XXX	e.g. 10.20.20.1
Restore Default	Restore Default?	NO, YES - Restore Default Now...	

## Remote Functions

The included IR Remote Control provides a set of functions which can be used to change the behavior of the AT-HDVS-CAM-HDBT. Each function is invoked by sequentially pressing the following series of keys on the keypad.

Function	Keystrokes
Clear all presets	[#] + [#] + [#]
Flip video horizontally and vertically	[*] + [#] + [9]
Reset username, password, and IP address	[*] + [#] + [MANUAL]
Switch video format to 1080p60	[#] + [#] + [0]
Switch video format to 1080p50	[#] + [#] + [1]
Switch video format to 1080i60	[#] + [#] + [2]
Switch video format to 1080i50	[#] + [#] + [3]
Switch video format to 720p60	[#] + [#] + [4]
Switch video format to 720p50	[#] + [#] + [5]
Switch video format to 1080p30	[#] + [#] + [6]
Switch video format to 1080p25	[#] + [#] + [7]
Switch video format to 720p30	[#] + [#] + [8]
Switch video format to 720p25	[#] + [#] + [9]

## Appendix

### Specifications

Video		
HD/SD/VESA (all resolutions are @30/25/20/15/10/5Hz)	1080p, 720p, 1024x768, 1024x576, 960x540, 800x600, 640x360, 720x576, 640x480, 352x288, 320x240, 320x180, 176x144	
Viewing Angle	6.43° (telephoto), 60.9° (wide-angle)	
Effective Pixels	2.07 million	
Total Pixels	2.10 million	
Focus Settings	Auto / Manual	
F-Stop	f/1.6 - f/3.0	
Focal Length	4.7 mm - 47 mm	
Zoom Ratio	10:1	
Exposure Compensation	-7 ~ +7	
Minimum Illumination	0.5 lux @ f/1.8 with Automatic Gain Control ON	
Signal-to-Noise Ratio (SNR)	> 55 dB	
Control Protocol	VISCA/Pelco-D/Pelco-P	
Pan Rotation	+170° to -170°	
Tilt Rotation	-30° to +90°	
Pan Control Speed	0.1 - 180° / sec	
Tilt Control Speed	0.1 - 80° / sec	
Temperature		
Operating	Fahrenheit	Celsius
	14 to 122	-10 to 50
Storage	-14 to 140	-10 to 60
Operating Humidity (RH)	20% to 80%, non-condensing	
Storage Humidity (RH)	20% to 95%, non-condensing	
Power		
Consumption	12 W	
Supply	Input: 110 - 220 V AC, 50/60 Hz Output: 12 V DC, 1 A	
Dimensions		
H x W x D	Inches	Millimeters
	6.59 x 5.90 x 5.90	167.5 x 150 x 150
Weight		
	Pounds	Kilograms
Device	3.08	1.4
Certification		
Device	CE, FCC	

