

# Galanz

Model# GLOMJK12S2SWZ-10

## User Manual



Thank you for purchasing a Galanz product. Please read this manual carefully for correct usage and safety, and keep for future reference. For service, support and warranty information, call 1-800-562-0738.

年份改动见措施单

@2021 Galanz Americas Limited Company



# CONTENTS

|                                                                                |    |
|--------------------------------------------------------------------------------|----|
| <b>Important Safety Instructions</b> .....                                     | 1  |
| Precautions to Avoid Possible Exposure to Excessive Microwave Technology ..... | 1  |
| California Proposition 65 Warning .....                                        | 1  |
| Warning .....                                                                  | 1  |
| Grounding Instructions .....                                                   | 3  |
| Installation Guide .....                                                       | 4  |
| Cooking Utensils Guide .....                                                   | 5  |
| <b>Product Diagram</b> .....                                                   | 6  |
| Product Specifications .....                                                   | 6  |
| <b>Control Panel</b> .....                                                     | 7  |
| <b>Operation Instructions</b> .....                                            | 8  |
| Setting the Clock .....                                                        | 8  |
| Timer .....                                                                    | 8  |
| Microwave Cooking .....                                                        | 9  |
| Multi Stage Cooking .....                                                      | 10 |
| Weight Defrost .....                                                           | 11 |
| Time Defrost .....                                                             | 11 |
| Sensor Cook .....                                                              | 12 |
| Sensor Reheat .....                                                            | 13 |
| Steam .....                                                                    | 14 |
| Popcorn .....                                                                  | 15 |
| Soften/Melt .....                                                              | 15 |
| Quick Start Microwave .....                                                    | 16 |
| Light Control .....                                                            | 16 |
| Vent Fan Control .....                                                         | 17 |
| Turntable Control .....                                                        | 17 |
| Child Lock .....                                                               | 18 |
| <b>Troubleshooting</b> .....                                                   | 18 |
| <b>Cleaning and Care</b> .....                                                 | 19 |
| <b>Product Warranty</b> .....                                                  | 20 |
| <b>Warranty Registration</b> .....                                             | 21 |

# IMPORTANT SAFETY INSTRUCTIONS

## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE TECHNOLOGY

- Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave technology. It is important not to tamper with the safety interlocks.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is very important that the oven door closes properly and that there is no damage to the
  - a) Door (including any dents),
  - b) Hinges and latches (broken or loosened),
  - c) Door seals and sealing surfaces.The oven should not be adjusted or repaired by anyone except qualified service personnel.

## CALIFORNIA PROPOSITION 65 WARNING

### WARNING

Cancer and Reproductive Harm-[WWW.P65Warnings.ca.gov](http://WWW.P65Warnings.ca.gov).

### WARNING

To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave technology:

- Read all instructions before using the appliance.
- Read and follow the specific "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE TECHNOLOGY" on page 1.
- This appliance must be grounded. Connect only to properly grounded outlet. See "GROUNDING INSTRUCTIONS " on page 3.
- Do not operate the oven when empty.
- Install or locate this appliance only in accordance with the provided installation instructions.
- Some products such as whole eggs and sealed containers -for example, closed glass jars- are able to explode and should not be heated in this oven.
- Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
- As with any appliance, close supervision is necessary when used by children.
- To reduce the risk of fire in the oven cavity:
  - Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
  - Remove wire twist-ties from paper or plastic bags before placing bag in oven.
  - If materials inside the oven should ignite, keep oven door closed, turn oven off using the circuit breaker panel, and call

## SAVE THESE INSTRUCTIONS

# IMPORTANT SAFETY INSTRUCTIONS

emergency services.

- Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
- Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling due to surface tension of the liquid. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. This could result in very hot liquids suddenly boiling over when a spoon or other utensil is inserted into the liquid.
- To reduce the risk of injury to person:
  - Do not overheat the liquid.
  - Stir the liquid both before and halfway through heating it.
  - Do not use straight-sided containers with narrow necks.
  - After heating, allow the container to stand in the microwave oven for a short time before removing the container.
  - Use extreme care when inserting a spoon or other utensil into the container.
- Do not heat oil or fat for deep-frying. It is difficult to control the temperature of oil in microwave oven.
- Do not cover or block any openings on the appliance.
- Do not operate this appliance if it has a damaged cord or a plug, if it is not working properly or if it has been damaged or dropped.
- Do not immerse cord or plug in water. Keep cord away from heated surface. Do not let cord hang over edge of table or counter.
- This appliance should be serviced only by qualified service personnel, contact nearest authorized service facility for examination, repair, or adjustment.
- When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or

detergents applied with a sponge or soft cloth.

- Oversized food or oversized metal utensils should not be inserted in a microwave/toaster oven as they may create a fire or risk of electric shock.
  - Do not store or use this appliance outdoors. Do not use this product near water, for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
  - Do not clean with metal scouring pads. Pieces can burn off the pad and touch electrical parts involving a risk of electric shock.
  - Do not use paper products when appliance is operated in the toaster mode.
  - Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
  - Do not cover turntables, pans or any other part of the oven with metal foil. This will cause overheating of the oven.
  - This equipment has been tested and found to comply with Part 18 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular

## SAVE THESE INSTRUCTIONS

# IMPORTANT SAFETY INSTRUCTIONS


installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded, and if it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.

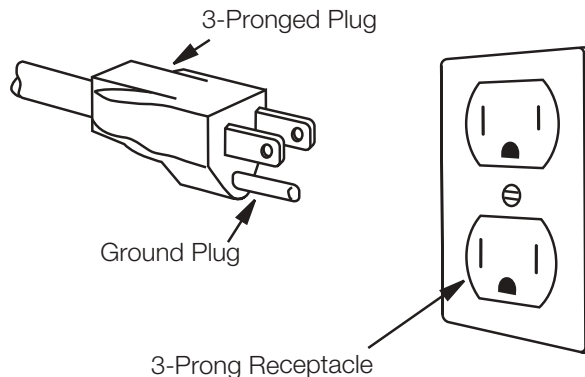

## SAVE THESE INSTRUCTIONS

# IMPORTANT SAFETY INSTRUCTIONS

## Electrical Requirements

The electrical requirements are a 120 volt 60 Hz, AC only, 20 amp. It is recommended that a separate circuit serving only the oven be provided. The oven is equipped with a 3-prong grounding plug. It must be plugged into a wall outlet properly installed and ground.

## Power Cord

- A short power supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- Longer cord sets or extension cords are available and may be used if care is exercised in their use.
- If long cord or extension cord is used:
  - a) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
  - b) The extension cord must be a grounding-type 3-wire cord, and The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

## INSTALLATION GUIDE

### BEFORE YOU BEGIN

**Read these instruction completely and carefully.**

### IMPORTANT 1

Save these instructions for local inspector's use.

### IMPORTANT 2

Observe all governing codes and ordinances.

### Note to Installer


Be sure to leave these Installations with the Consumer.

### Note to Consumer

Keep these instructions for future reference.

### Skill level

- Instruction of this appliance requires basic mechanical and electrical skills.
- Proper installation is the responsibility of the installer.
- Product failure due to improper installation is not covered under the Warranty.

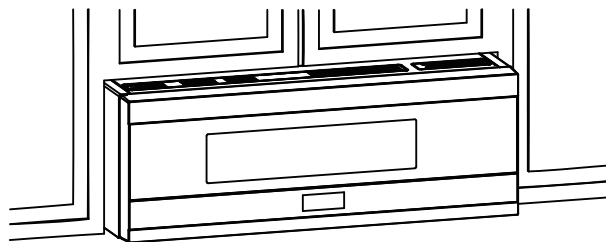

## SAVE THESE INSTRUCTIONS

# IMPORTANT SAFETY INSTRUCTIONS

## COOKING UTENSILS GUIDE



This section lists which utensils can be used in this microwave, which have limited use for short periods, and which should not be used in this microwave.

### RECOMMENDED

**Microwave browning dish** — Use to brown the exterior of small items such as steaks, chops, or pancakes. Follow the directions provided with your browning dish.

**Microwaveable plastic wrap** — Use to retain steam. Leave a small opening for some steam to escape and avoid placing it directly on the food.

**Paper towels and napkins** — Use for short-term heating and covering; these absorb excess moisture and prevent spattering. Do not use recycled paper towels, which may contain metal and could ignite.

**Glass and glass-ceramic bowls and dishes** — Use for heating or cooking.

**Paper plates and cups** — Use for short-term heating at low temperatures. Do not use recycled paper, which contain metal and could ignite.

**Wax paper** — Use as a cover to prevent spattering.

**Thermometers** — Use only those labeled "Microwave Safe" and follow all directions. Check the food in several places. Conventional thermometers may be used on microwave food once the food has been removed from the oven.

### LIMITED USE

**Aluminum foil** — Use narrow strips of foil to prevent overcooking of exposed areas. Using too much foil can damage your oven, so be careful. You should keep distance of 1 inch (2.54cm) between aluminum foil and cavity.

**Ceramic, porcelain, and stoneware** — Use these if they are labeled "Microwave Safe". If they are not labeled, test them to make sure they can be used safely.

**Plastic** — Use only if labeled "Microwave Safe". Other plastics can melt.

### NOT RECOMMENDED

**Glass jars and bottles** — Regular glass is too thin to be used in a microwave. It can shatter and cause damage and injury.

**Paper bags** — These are a fire hazard, except for popcorn bags due on food.

**Styrofoam plates and cups** — These can melt and leave an unhealthy residue on food.

**Plastic storage and food containers** — Containers such as margarine tubs can melt in the microwave.

**Metal utensils** — These can damage your oven. Remove all metal before cooking.


#### Note:

Should you wish to check if a dish is safe for microwaving, place the empty dish in the oven and microwave at high power level for 30 seconds. A dish which becomes very hot should not be used.

## SAVE THESE INSTRUCTIONS

# PRODUCT DIAGRAM

- 1. Door Safety Lock System
- 2. Oven Window
- 3. Door Handle
- 4. Control Panel
- 5. Plastic Shaft
- 6. Plastic Roller Ring
- 7. Glass Turntable
- 8. Steam Kit

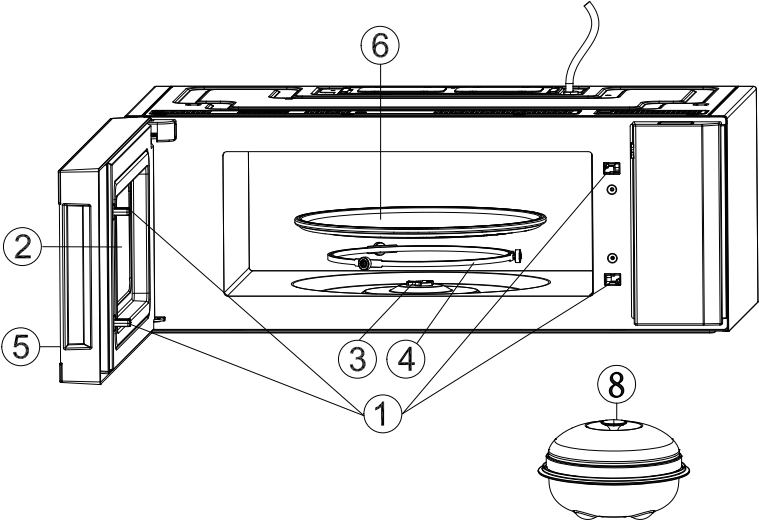

## Product Specifications

|                                    |                                                                                                         |
|------------------------------------|---------------------------------------------------------------------------------------------------------|
| Power supply                       | 120V/60Hz                                                                                               |
| Power Consumption (Microwave)      | 1500W                                                                                                   |
| Output Power                       | 1000W                                                                                                   |
| Operating Frequency                | 2450MHz                                                                                                 |
| Outside Dimensions (W x H x D )    | 29 <sup>7</sup> / <sub>8</sub> x 10 <sup>7</sup> / <sub>8</sub> x 18 <sup>13</sup> / <sub>16</sub> inch |
| Oven Cavity Dimensions (W x H x D) | 18 <sup>3</sup> / <sub>4</sub> x 7 <sup>3</sup> / <sub>16</sub> x 14 <sup>3</sup> / <sub>4</sub> inch   |
| Oven Capacity                      | 0.9 Cu.Ft.                                                                                              |

# CONTROL PANEL



## DISPLAY

Cooking time, power, indicators and clock time are displayed.

**SENSOR COOK** Use to cook sensor cook menus.

**SENSOR REHEAT** Use to cook sensor reheat menus.

**DEFROST/TIME/WEIGHT** Press to set defrost programs.

**MICRO** Press to set microwave cooking program.

**VENT 4 SPEED** Press this pad to change vent speed.

**TIMER** Press the pad to set timer function.

**STEAM** Use to cook steam menus.

**POPCORN** Press the pad to cook popcorn.

## SOFTEN MELT

Press this pad to soften and melt food.

## POWER LEVEL

Press to set microwave cooking power level.

## LIGHT HI/LO/OFF

Press this pad to adjust the light on or turn off the light.

## CLOCK

Press this pad to set clock time.

## NUMBER

Press number pads to enter cooking time, power level or food weight.

## LOCK TURNTABLE/OFF

Press this pad to turn on or off the oven turntable and set child lock.

## STOP/CANCEL

Press this pad once to temporarily stop cooking, or twice to cancel cooking altogether.

## + 30 SEC

Press to add cooking time.

## START

Press to start the oven; It is also used to start the oven quickly at full power.

# OPERATION INSTRUCTIONS

## Setting the Clock



You can set the clock in 12-hour or 24-hour by pressing **CLOCK** in standby mode.

**Example: How to set a 12-hour clock at 11:58.**

- 1** In standby mode, press **CLOCK** once, the display will show "12 HOUR-ENTER TIME OF DAY".  
(Press **CLOCK** again to select 24-hour clock.).

12 HOUR--

CLOCK

- 2** Press number pads **1,1,5,8**, the display will show "11:58". Press **START** to confirm.

11:58



### NOTE:

■ ":00" will display and two beeps will sound to remind user to resume load the time, if you enter time is beyond the scope of clock when you set the clock.

■ During cooking or pausing state, you can check the current clock time by pressing **CLOCK** button.

## Timer



**Example: How to set a timer of 12:34.**

- 1** In standby mode or during cooking, press **TIMER** once, the display shows "ENTER KITCHEN TIMER".

TIMER

ENTER KI

TIMER

- 2** Use the number pads **1,2,3,4**, (The longest time you can set is 99 minutes and 99 seconds)  
Press **START** to confirm.



12:34

TIMER

### NOTE:

■ When the countdown ends, the buzzer will beep to remind you.

■ Once you have set the timer function, you can check the countdown by pressing **TIMER**. You can press **STOP/CANCEL** to cancel the timer function when the display shows time time for 3 seconds.

# OPERATION INSTRUCTIONS

## Microwave Cooking



This feature allows you to choose the power level and cooking time of microwave function. The longest cooking time is 99 minutes and 99 seconds.

**Example: How to cook at 30% power level for 3 minutes and 30 seconds.**

- 1** In standby mode, press **MICRO** once, the display shows "ENTER COOK TIME".

ENTER CO  
COOK

MICRO

- 2** Use the number pads to enter "3" "3" "0", press **POWER LEVEL** once, the display shows "ENTER POWER LEVEL OR ENTER NEXT STAGE COOKING TIME".

ENTER PO  
COOK

POWER  
LEVEL

- 3** Press "3" to select 30% power level, the display shows "PL30 PRESS START OR ENTER NEXT STAGE COOKING TIME".

3

PL30 PRE

- 4** Press **START** to start cooking.



3:30

COOK

### Power Level Chart:

| Power Level | Display | Power Level | Display |
|-------------|---------|-------------|---------|
| 100%        | PL100   | 40%         | PL40    |
| 90%         | PL90    | 30%         | PL30    |
| 80%         | PL80    | 20%         | PL20    |
| 70%         | PL70    | 10%         | PL10    |
| 60%         | PL60    | 0%          | PL00    |
| 50%         | PL50    |             |         |

**NOTE:** During cooking, you can press **POWER LEVEL** to check the power level, and you can adjust the power level by touching number pads when the display shows the power level for 3 seconds.

# OPERATION INSTRUCTIONS

## Multi Stage Cooking



This feature allows you to set two stages of cooking with different power and different cooking time.

**Example: How to set 50% power level for 3 minutes and 30 seconds for first stage, and set 30% power level for 2 minutes and 30 seconds.**

|                                                                                         |  |
|-----------------------------------------------------------------------------------------|--|
| <b>1</b> In standby mode, press <b>MICRO</b> once, the display shows "ENTER COOK TIME". |  |
|                                                                                         |  |

|                                                                                                                          |  |
|--------------------------------------------------------------------------------------------------------------------------|--|
| <b>2</b> Use the number pads to enter "3" "3" "0", press <b>POWER LEVEL</b> once, the display shows "ENTER POWER LEVEL". |  |
|                                                                                                                          |  |

|                                                                                                                      |  |
|----------------------------------------------------------------------------------------------------------------------|--|
| <b>3</b> Press "5" to select 50% power level, the display shows "PL50 PRESS START OR ENTER NEXT STAGE COOKING TIME". |  |
|                                                                                                                      |  |

|                                                                             |  |
|-----------------------------------------------------------------------------|--|
| <b>4</b> Press <b>MICRO</b> once, use the number pads to enter "2" "5" "0". |  |
|                                                                             |  |

|                                                                                                                        |  |
|------------------------------------------------------------------------------------------------------------------------|--|
| <b>5</b> press <b>POWER LEVEL</b> once, then press "3" to select 30% power level. Press <b>START</b> to start cooking. |  |
|                                                                                                                        |  |

# OPERATION INSTRUCTIONS

## Weight Defrost



The defrosting time and power level are automatically set once the food category and the weight are selected.

**Example: How to defrost 32oz food.**

- 1 In standby mode, press **DEFROST TIME/WEIGHT** twice, the display shows "ENTER WEIGHT 4-64OZ".

DEFROST  
TIME/WEIGHT

x 2

ENTER WE  
DEF.

- 2 Use the number pads "3" "2" to enter the weight.

3

2

32 0Z  
DEF.

- 3 Press **START** to start cooking.



COOK DEF.  
19:12

## Time Defrost



The defrosting power is adjusted automatically once the cooking time is programmed. The longest time you can set is 99 minutes and 99 seconds.

**Example: How to defrost 3 minutes and 30 seconds.**

- 1 In standby mode, press **DEFROST TIME/WEIGHT** once, the display shows "ENTER TIME".

DEFROST  
TIME/WEIGHT

ENTER TI  
DEF.

- 2 Use the number pads to enter the time. Press **START** to start cooking.



COOK DEF.  
3:30

**NOTE:** During the defrosting program, the system will pause and alert the user to turn the food over when 1/3 of the defrosting time remains. After turning food over, close the door and press the **START** to resume the defrosting.

# OPERATION INSTRUCTIONS

## Sensor Cook



For sensor cook function, you can select the type of food you want to cook from the program listed on the cooking label located on the interior of the appliance.

**Example: How to set fish cooking program.**

**1** In standby mode, press **SENSOR COOK** once, the display shows "1- FRESH VEGETABLE 2- FROZEN VEGETABLE 3-OATMEAL 4-FISH 5-CORN ON THE COB 6-RICE".

**2** Use number pads (1 - 6) to choose food type. Press "**4**" to choose fish.

**3** Press **START** to start cooking. The display shows "SENSOR", after the system detects the humidity, it will display the cooking countdown.



COOK

**Sensor cook menus:**

| Press Number | Food Type        | Weight/Serving                        |
|--------------|------------------|---------------------------------------|
| 1            | Potato           | 6 oz ~ 24 oz<br>(6 oz ~ 8 oz/serving) |
| 2            | Fresh Vegetable  | 8 oz ~ 20 oz                          |
| 3            | Frozen Vegetable | 8 oz ~ 20 oz                          |
| 4            | Oatmeal          | 1 ~ 3                                 |
| 5            | Fish             | 8 oz ~ 20 oz                          |
| 6            | Corn on the Cob  | 1 ~ 4 root                            |
| 7            | Rice             | 8 oz ~ 20 oz                          |

**NOTE:**

- During the defrosting program, the system will pause and alert the user to turn the food over when 1/3 of the defrosting time remains.
- After turning food over, close the door and press **START** to resume the defrosting.

# OPERATION INSTRUCTIONS

## Sensor Reheat



For sensor reheat function, you can select the type of food you want to cook from the proram listed on the cooking label located on the interior panel of the appliance

### Example: How to reheat pizza.

- 1** In standby mode, press **SENSOR REHEAT** once. The display shows "1-BEVERAGE 2-FROZEN ENTREE 3-PIZZA 4-DINNER PLATE 5-SOUP AND SAUCE 6-SHILI 7-PASTA 8-MAC AND CHEESE 9-MASHED POTATOES 0-RICE".

SENSOR  
REHEAT

1-BEVERA

COOK

- 2** Use number pad (1 - 9) to choose food type. Press "**3**" to choose Pizza.

3

PIZZA

COOK

- 3** Press **START** to start cooking. The display shows "SENSOR".



SENSOR

COOK

### Sensor Reheat Menus

| Press Number | Food Type       | Weight/Serving           |
|--------------|-----------------|--------------------------|
| 1            | Beverage        | 1 cup                    |
|              |                 | 2 cups                   |
|              |                 | 3 cups                   |
| 2            | Frozen Entree   | 8 oz ~ 24 oz             |
| 3            | Pizza           | 1 ~ 3 slice(6 oz/ slice) |
| 4            | Dinner Plate    | 8 oz ~ 24 oz             |
| 5            | Soup/ Sauce     | 8 oz ~ 24 oz             |
| 6            | Chill           | 8 oz ~ 24 oz             |
| 7            | Pasta           | 8 oz ~ 24 oz             |
| 8            | Mac and Cheese  | 8 oz ~ 24 oz             |
| 9            | Mashed Potatoes | 8 oz ~ 24 oz             |
| 0            | Rice            | 8 oz ~ 24 oz             |

**NOTE:** If press number "1" to choose "BEVERAGE", then you need to touch number pad 1-3 to choose servings.

# OPERATION INSTRUCTIONS

## Steam



For steam function, you can select the type of food you want to cook from the programs listed on the cooking label located on the interior panel of the appliance.

### Example: How to cook carrots by steam.

**1** In standby mode, press **STEAM** once. The display shows "1-ASPARAGUS 2-BROCCOLI 3-BROWN RICE 4-BRUSSEL SPROUTS 5-CARROTS 6-CORN ON THE COB 7-DICED POTATOES 8-EGGS 9-PASTA OR RAVIOLI 0-WHITE RICE".

**2** Use number pad (0 - 9) to choose food type. Press "5" to choose CARROTS.

**3** Press **START** to start cooking.

### Steam Menus:

| Press Number | Food Type        | Weight/Serving                        | Time   |
|--------------|------------------|---------------------------------------|--------|
| 1            | Asparagus        | 4 ~ 10 oz                             | 10: 00 |
| 2            | Broccoli         | 4 ~ 8 oz                              | 10: 00 |
| 3            | Brown Rice       | 1 ~ 1.5 oz                            | 50: 00 |
| 4            | Brussel Sprouts  | 4 ~ 10 oz                             | 10: 00 |
| 5            | Carrots          | 4 ~ 10 oz                             | 15: 00 |
| 6            | Corn on the Cob  | 1 ~ 2 maize<br>(Total weight ≤ 24 oz) | 20: 00 |
| 7            | Diced Potatoes   | 4 ~ 10 oz                             | 10: 00 |
| 8            | Eggs             | 1 ~ 8                                 | 15: 00 |
| 9            | Pasta or Ravioli | 4 ~ 10 oz                             | 20: 00 |
| 0            | White Rice       | 1 ~ 1.5 cups                          | 30: 00 |

**NOTE:** Please always use the steam kit with water.

# OPERATION INSTRUCTIONS

## Popcorn



**Example: How to cook popcorn.**

**1** In standby mode, press **POPCORN** once, the oven will start cooking automatically.

POPCORN

COOK

2:10

**NOTE:** The popcorn weight is 3.5 oz.

## Soften/Melt



**Example: How to cooking Soften cheese.**

**1** In standby mode, press **SOFTEN/MALT** once, the display shows "1-SOFTEN CHEESE 2-SOFTEN ICE CREAM 3-SOFTEN BUTTER 4-MELT BUTTER".

SOFTEN  
MELT

COOK

1-SOFTEN

**2** Press number pads(1-4) to choose food type. Press "1" to choose soften cheese, the display shows "1-4OZ 2-8OZ".

1

COOK

1-4 0Z

**3** Press "2" to choose 8 oz, the display shows "8 OZ".

2

COOK

8 0Z

**4** Press **START** to start cooking, the display shows "1:30".

START

COOK

1:30

**Soften/Melt menus:**

| Press Number | Food Type        | Number | Weight/ Serving | Time  |
|--------------|------------------|--------|-----------------|-------|
| 1            | Soften Cheese    | 1      | 4 oz            | 1: 00 |
|              |                  | 2      | 8 oz            | 1: 30 |
| 2            | Soften Ice Cream | 1      | 4 oz            | 0: 45 |
|              |                  | 2      | 8 oz            | 1: 00 |
| 3            | Soften Butter    | 1      | 1 Stick         | 1: 20 |
|              |                  | 2      | 2 Sticks        | 1: 40 |
| 4            | Melt Butter      | 1      | 1 Stick         | 1: 20 |
|              |                  | 2      | 2 Sticks        | 1: 40 |

 
# OPERATION INSTRUCTIONS

## Quick Start Microwave



This feature allows you to start the oven quickly at maximum microwave power. The longest cooking time is 99 minutes 99 seconds.

**Example: How to set the timer for 3 minutes and 30 seconds.**


|                                                                                                         |                                                                                   |
|---------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| <b>1</b> In standby mode press <b>START</b> once, the oven will start 30 seconds cooking automatically. |  |
|                        | COOK                                                                              |
| <b>2</b> Press <b>+ 30 SEC</b> six time, you can set 3:30 cooking time.                                 |  |
|  x 6                   | COOK                                                                              |

**NOTE:** Sensor cook, Popcorn and Defrost can not add time by pressing **+30 SEC**.

## Light Control



 **Example: How to turn on/off the light.**

|                                                                                                              |                                                                                     |
|--------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <b>1</b> When the light is closed, press <b>LIGHT ON/OFF</b> once, the display shows "HIGH" for 3 seconds.   |  |
|                            |                                                                                     |
| <b>2</b> When the light is High gear, press <b>LIGHT ON/OFF</b> once, the display shows "LOW" for 3 seconds. |  |
|                            |                                                                                     |
| <b>3</b> When the light is Low gear, press <b>LIGHT ON/OFF</b> once, the display shows "OFF" for 3 seconds.  |  |
|                            |                                                                                     |

# OPERATION INSTRUCTIONS

## Vent Fan Control



- 1** In standby mode, press **VENT 4 SPEED** continuously to select five gears. The display of the five gears shows "BOOST" "HIGH" "MEDIUM" "LOW" "OFF" for 3 seconds.

BOOST

VENT  
4 SPEED

**NOTE:** If you turns on the exhaust fan manually, you needs to turn off the exhaust fan manually.

## Turntable Control



**Auto Program:** During cooking, the turntable is working.

- 1** If you want turntable stop working, press **LOCK/TURNTABLE OFF** once, the display shows "TURNTABLE OFF".

LOCK  
TURNTABLE OFF

ABLE OFF

- 2** If you want turntable start working, press **LOCK/TURNTABLE OFF** again, the display shows "TURNTABLE ON".

LOCK  
TURNTABLE OFF

TABLE ON

# TROUBLESHOOTING

## Child Lock



The child proof lock prevents unsupervised operation by children.

### Example: How to set/cancel the child lock.

|                                                                                                                                                                                           |  |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| <b>1</b> In standby mode, Press and hold the <b>LOCK/TURNTABLE OFF</b> for 3 seconds, then 'LOCK ON' appears.                                                                             |  |
| <div data-bbox="108 516 263 580" style="border: 1px solid black; padding: 2px; display: inline-block;">             LOCK<br/>TURNTABLE OFF           </div> Press and hold for 3 seconds. |  |

|                                                                                                                                                                                           |  |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| <b>2</b> Press and hold the <b>LOCK/TURNTABLE OFF</b> for 3 seconds, then "LOCK OFF" disappears.                                                                                          |  |
| <div data-bbox="108 761 263 825" style="border: 1px solid black; padding: 2px; display: inline-block;">             LOCK<br/>TURNTABLE OFF           </div> Press and hold for 3 seconds. |  |

## Automatic Protection Mechanism




During the Sensor Cook and Sensor Reheat, it will automatically detect whether there is any error in the system. like short-circuited or open-circuited, it will automatically stop working, the display will show "E-1", and a sound will be emitted every 2 seconds, you can press **STOP/CANCEL** to back to standby mode.

|                                                                                                                                                                          |  |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| <b>1</b> When the display shows "E-1", press <b>STOP/CANCEL</b> to back to standby mode.                                                                                 |  |
| <div data-bbox="914 555 986 624" style="border: 1px solid black; border-radius: 50%; padding: 5px; display: inline-block;">             STOP<br/>CANCEL           </div> |  |

# CLEANING AND CARE


- Turn off the oven and unplug the power cord from the wall when cleaning.

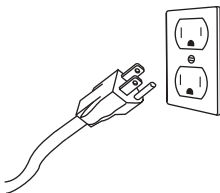


- Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergents may be used if the oven gets very dirty. Avoid using spray or other harsh cleaners. They may stain, streak or dull the door surface.



- The outside of the oven should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
- Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
- Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.

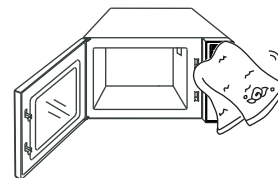

- If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
- It is occasionally necessary to remove the non-stick turntable, silicone mat and air fry kit for cleaning. Wash them in warm sudsy water.

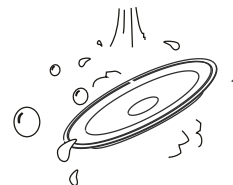

- If the light bulb burns out, please contact customer service to have it replaced.
- The oven should be cleaned regularly and any food deposits should be removed. Failure to maintain the oven in a clean condition could lead to deterioration of surface that could adversely affect the life of the unit and could possibly result in a hazardous situation.
- Please do not dispose of this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.

# PRODUCT WARRANTY

This warranty applies to products sold by Galanz Americas in the U.S. This warranty is in lieu of any other warranty and expressly applies to the individual product only.

Galanz product is warrantied for one year following purchase for defects in material and workmanship. **Please save your receipt as proof of purchase is required to make a warranty claim.** During this period, we will provide the purchase cost of this product, a replacement or the equivalent, or repair per our discretion.

The warranty cannot be transferred through resale, including the resale through a 3rd party unauthorized retailer and is only bestowed up on the original consumer purchaser upon purchase from an authorized retailer.

■ **This warranty does not cover and excludes damage or defects caused by:**

- Consumer misuse
- Abuse
- Neglect including the failure to clean and/or provide adequate regular maintenance as outlined in the user manual
- Commercial use
- Subjecting the product to any voltage outside the specified range
- Loss of parts
- The affixing of any attachments not provided with the product
- Accident
- Use in a manner not intended and outlined in the user manual.

■ Any subsequent damages caused by the above listed exclusions will not be covered and any claims determined to meet the above exclusions will be denied. All liability is limited to the purchase price and does not include any:

- Retail offered extended warranties
- Tax
- Other charges(including postage to send required materials)
- Incidental and/or consequential damages associated with the product in question.

Every implied warranty, including any statutory warranty of merchantability or fitness for a particular purpose is disclaimed except to the extent prohibited by law, in which case such warranty is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states do not allow limitations on implied warranties or special, incidental, or consequential damaged, so the above limitations may not apply to you.

If you have a claim under this warranty, please call our Customer Service number: 1-800-562-0738.

For faster service, please have the model number, serial number, and receipt ready for the operator to assist you.

# WARRANTY REGISTRATION

Please mail this warranty card to the address below within 30 days of purchase.  
Or you can register your product online by going to [www.galanz.com/us](http://www.galanz.com/us).

**Galanz Americas, 55 Challenger Road, Suite 503, Ridgefield Park, NJ 07660.**  
**PLEASE PRINT CLEARLY.**

Name \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_ ZIP \_\_\_\_\_

Phone \_\_\_\_\_ Email \_\_\_\_\_

Model Number \_\_\_\_\_ Serial Number \_\_\_\_\_

Purchase Location \_\_\_\_\_

**You must attach a copy of your purchase receipt to validate your registration.**

# Galanz

年份改动见措施单

©2021 Galanz Americas Limited Company