

---

# CONVECTION SPEED OVEN INSTALLATION GUIDE

---

|                                       |    |
|---------------------------------------|----|
| Components required                   | 3  |
| Accessing your product specifications | 4  |
| Unpack product                        | 6  |
| Remove shelves                        | 7  |
| Connect power                         | 8  |
| Position in cavity                    | 10 |
| Align to surroundings                 | 11 |
| secure to cavity                      | 12 |
| Refit shelves                         | 13 |
| Checklist                             | 14 |

**FISHER & PAYKEL**

US CA

**MINIMAL**

OM24NMUNB5, OM24NMUNG5, OM24NMUB5, OM24NMUG5, OM24NMTB5

**CONTEMPORARY**

OM24NCUDX5, OM24NCTDX5

## COMPONENTS REQUIRED

---

### TOOLS

#### Not supplied

- ☐ Powered driver
- ☐ Cross-head screwdriver

---

### PARTS



#### Supplied

- ☐ Screw SD #7X13 PAN PH ZP (2)

# ACCESSING YOUR PRODUCT SPECIFICATIONS



For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit [fisherpaykel.com/specify](https://fisherpaykel.com/specify). Search by appliance type, product name or model code.

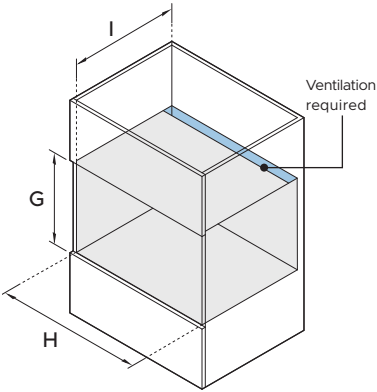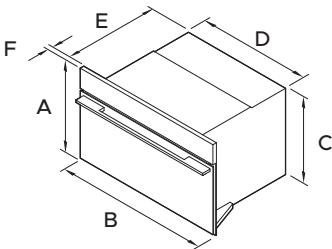

| PRODUCT DIMENSIONS          | inch    | mm  |
|-----------------------------|---------|-----|
| A Overall height            | 18      | 458 |
| B Overall width             | 23 7/16 | 596 |
| C Chassis height            | 17 1/8  | 435 |
| D Chassis width             | 21 7/8  | 556 |
| E Chassis depth             | 21 7/16 | 545 |
| F Control panel thickness   | 13/16   | 20  |
| Depth with door fully open* | 12 3/4  | 324 |

\*Measured from front of control panel.

| CAVITY DIMENSIONS                 | inch      | mm    |
|-----------------------------------|-----------|-------|
| G Minimum inside height of cavity | 17 5/16   | 440   |
| H Minimum inside width of cavity  | 22 1/16   | 560   |
| I Minimum inside depth of cavity* | 21 7/16** | 545** |
| Recommended cabinet height        | 18 1/8    | 460   |
| Recommended cabinet width         | 23 5/8    | 600   |

\*Excluding control panel thickness.

\*\*Requires ventilation at the rear of the cavity.


## PRIOR TO INSTALLATION




[fisherpaykel.com/specify](https://fisherpaykel.com/specify)

1. Refer to the Planning Guide for cabinetry, cavity, panel and service specifications.

For dark cabinetry, ensure clashing has been considered and installed.

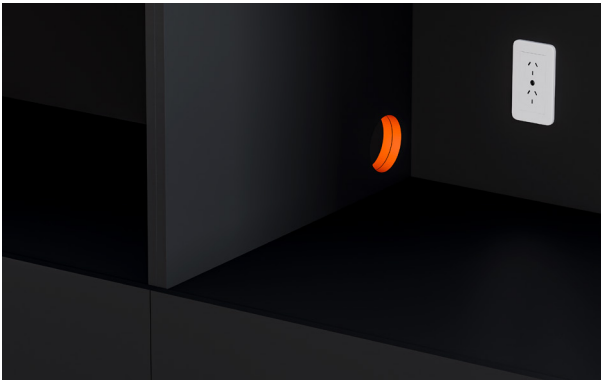

2. Ensure the cabinet meets the minimum cavity specifications required.

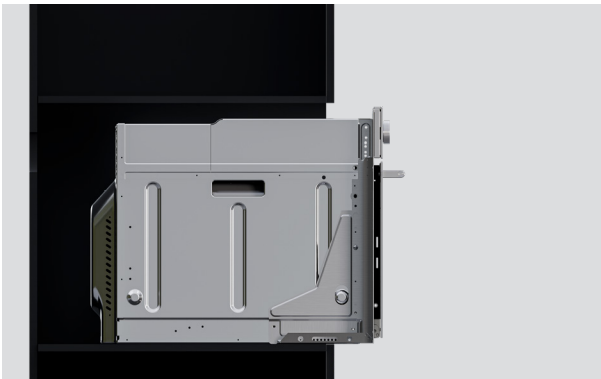

3. Ensure ventilation has been set up correctly.

## UNPACK PRODUCT

- Do not lift or move the product using the door handle.
  - Keep all packing materials until the unit has been inspected.
  - Inspect the product to ensure there is no shipping damage. If any damage is detected contact the dealer or retailer you bought the product from to report the damage.
  - Fisher & Paykel is not responsible for shipping damage.
- 



1. Cut all straps and remove the carton top cap.



2. Lift the carton sleeve and remove any transit packaging. Set aside any accessories.

Dispose of packaging responsibly.

## REMOVE SHELVES




1. Open the door and remove all cable ties and packaging holding the oven shelves in place.




2. Grip the shelves at the front. Lift upwards and pull out from the microwave.

## CONNECT POWER


### FOUR WIRE CONNECTION

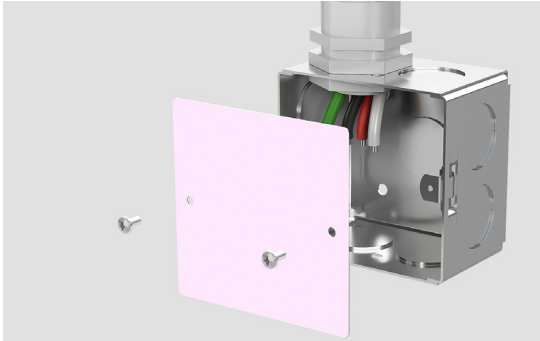

1. Disconnect the power supply and remove the junction box cover.

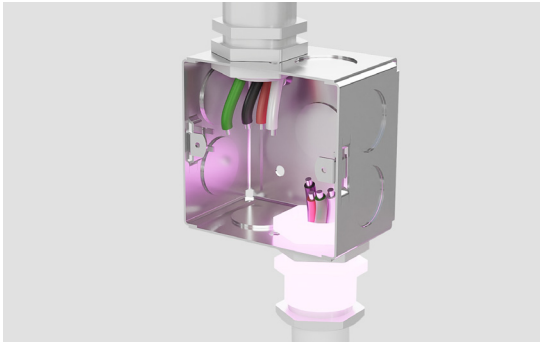

2. Connect the oven cable to the junction box through the U.L - listed conduit connector.

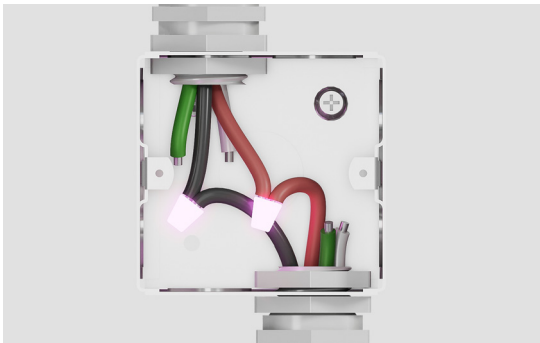

3. Connect the two black wires together with twist-on connectors and the two red wires together with twist-on connectors.

Connect electrical connection according to local codes and ordinances.


### ELECTRICAL SPECIFICATIONS

208/240 V, 60 Hz (AC only); rated power 3300/3900 W.


Microwave output 900 W; frequency 2450 MHz.

## CONNECT POWER


### FOUR WIRE CONNECTION

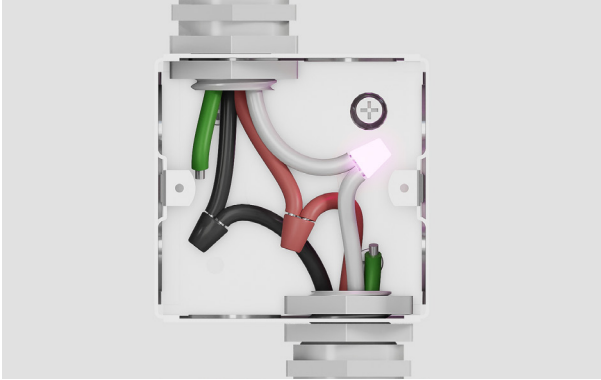

4. Separate the green and white oven cable wires. Connect the white oven cable wire to the neutral (white) wire in junction box.

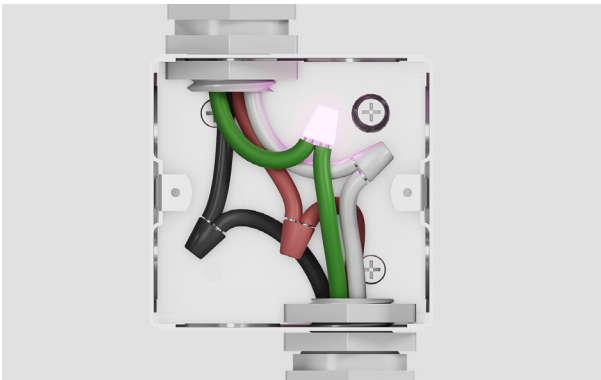


5. Connect the green grounding oven cable wire to the (green) grounding wire in the junction box. Do not connect the green grounding wire to the neutral (white) wire in junction box.

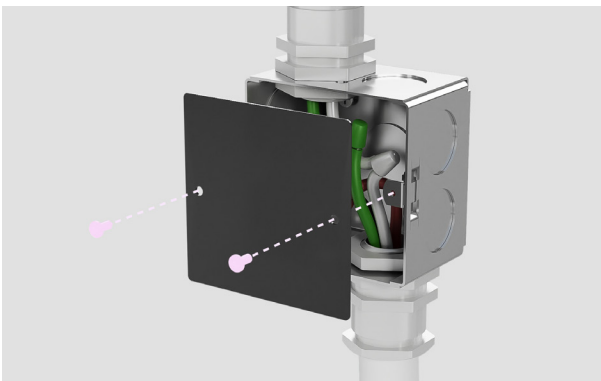

6. Replace the junction box cover.

## POSITION IN CAVITY

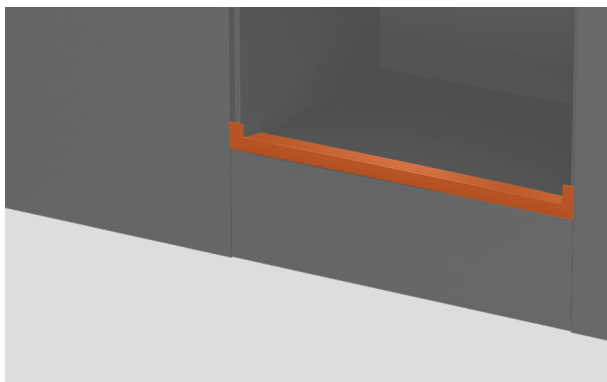

1. For light cabinetry, the supplied trim can improve the overall finish. To install, peel off the adhesive backing and press the trim firmly into place on the cavity\*.



2. Lift product into cavity.

\*To purchase cabinetry trim as an optional accessory, visit [fisherpaykel.com](http://fisherpaykel.com)

## ALIGN TO SURROUNDINGS




1. Align microwave with surrounding cabinetry and appliances.




2. Ensure the vertical gaps are even before making any horizontal adjustments.

## SECURE TO CAVITY

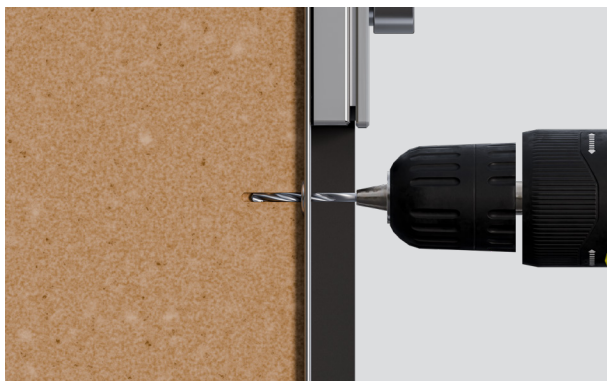

1. Using the product as a guide, pre-drill 2 x 1/8" (3mm) pilot holes.

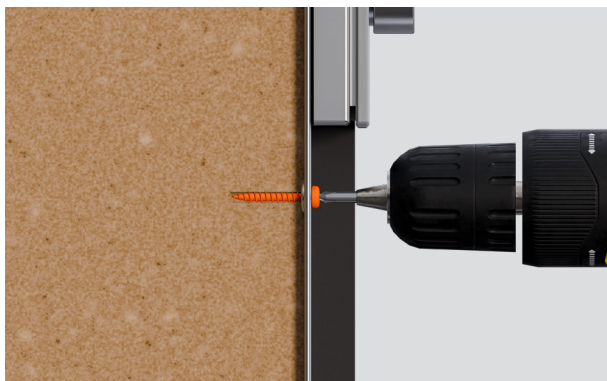

2. Secure oven to cavity using the 2 x screws provided.

## REFIT SHELVES



1. Reposition shelves in the oven at the desired level.

Ensure shelves are level and correctly positioned with the guard rail at the back.

# CHECKLIST

## Installation checks

- ☐ All clearances are correct.
- ☐ The product is level and securely fitted in the cabinetry.
- ☐ Ensure all ventilation has been set up correctly.
- ☐ All internal packaging is removed.
- ☐ The isolating switch can be easily reached.

## Test operation

- ☐ Turn product on at the power supply.
- ☐ Follow the on-screen guidance to connect the product to WiFi and set the clock.

Complete and keep for safe reference:

|                       |       |
|-----------------------|-------|
| Model                 | _____ |
| Serial no.            | _____ |
| Purchase date         | _____ |
| Purchaser             | _____ |
| Dealer address        | _____ |
| Installer's name      | _____ |
| Installer's signature | _____ |
| Installation company  | _____ |
| Installation date     | _____ |

