


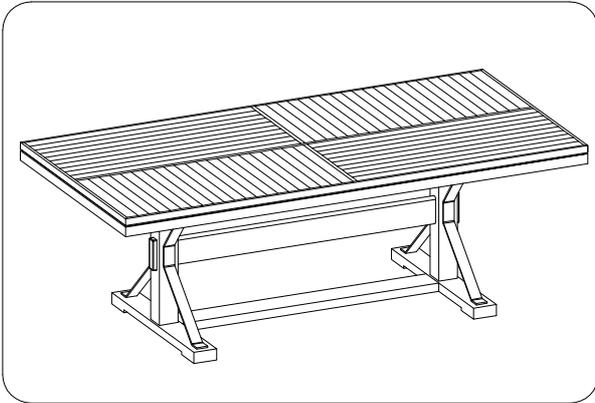

ITEM NO: I644-6030 Trestle Dining Table

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER


HARDWARE LIST:

No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 2"		16 PCS
B	Lock Washer Ø5/16"		16 PCS
C	Flat Washer Ø5/16" x 3/4"		16 PCS
D	Allen Wrench 4mm		1 PC

COMPONENTS LIST:

No.	Description	Sketch	Quantity
1	Table Top		1 PC
2	Pedestal		2 PCS
3	Top Stretcher		1 PC
4	Bottom Stretcher		1 PC
5	Wood Covering		2 PCS

FUNCTIONALITY INSTRUCTION

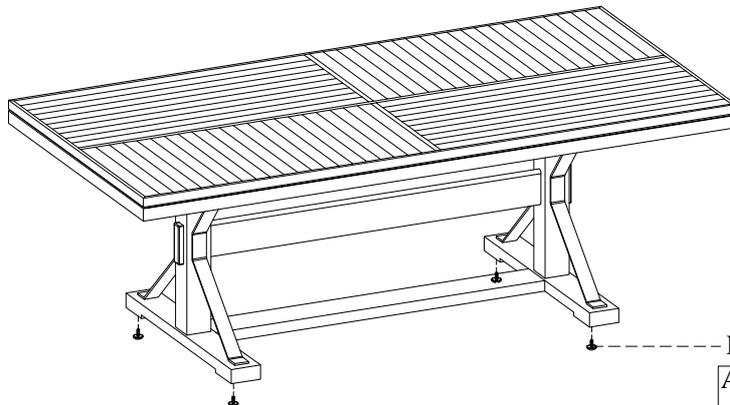

Leveler on Bases

Adjust the leveler when necessary

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.


FOR INDOOR USE ONLY



ITEM NO: I644-6030 Trestle Dining Table


STEP 1: Put the pedestal upside down on a soft surface.

STEP 2: Attach the top stretcher and bottom stretcher to the pedestals by using 4 bolts (A), lock washers (B) and flat washers (C) as shown below. Use the allen wrench (D) to tighten all bolts.

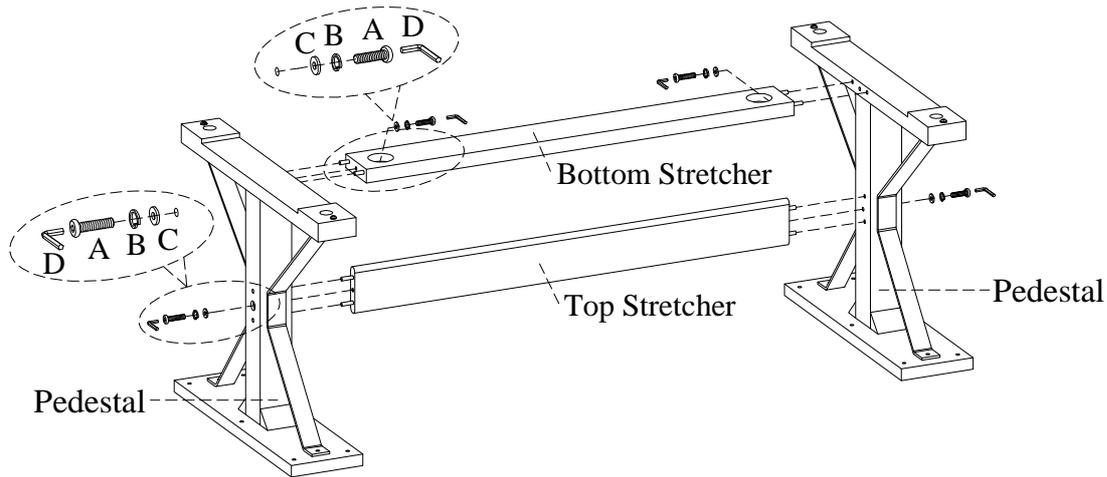

STEP 3: Put the table top upside down on a soft surface, and attach the pedestal assembly to the table top by using 12 bolts (A), lock washers (B) and flat washers (C) as shown below. Use the allen wrench (D) to tighten all bolts.


STEP 4: Attach the wood coverings to the pedestal assembly as shown below. Turn the assembled table to the upright position.

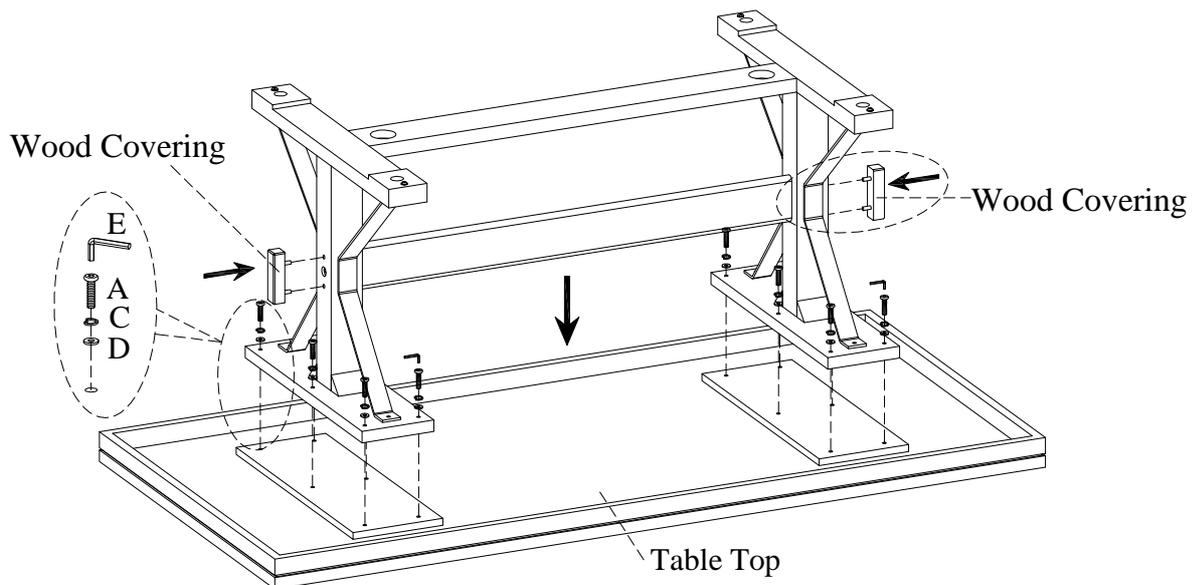



ITEM NO: I644-6640S Dining Side Chair w/ Wood Seat (2/Ctn)

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

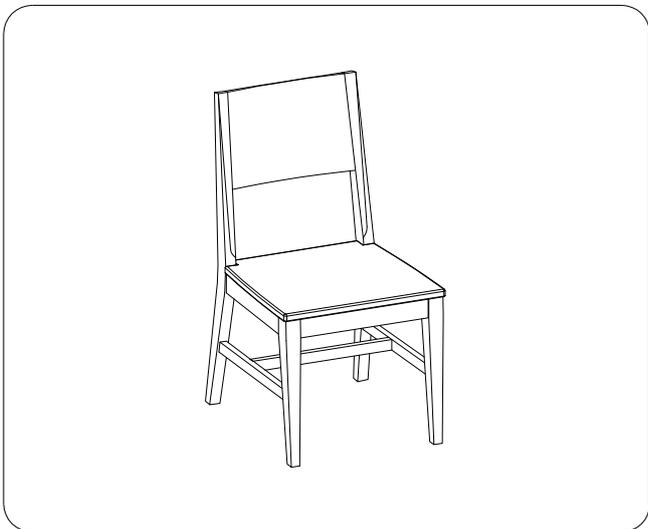

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER 


HARDWARE LIST:

No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 3-1/4"		4 PCS
B	Bolt Ø5/16" x 2"		4 PCS
C	Bolt Ø5/16" x 1-3/4"		2 PCS
D	Lock Washer Ø5/16"		10 PCS
E	Flat Washer Ø5/16" x 3/4"		10 PCS
F	Allen Wrench 4mm		1 PC
G	Wood Screw #4 x 1-1/2"		4 PCS

COMPONENTS LIST:

No.	Description	Sketch	Quantity
1	Chair Back		1 PC
2	Chair Seat		1 PC
3	Left Front Leg		1 PC
4	Right Front Leg		1 PC
5	"H" Stretcher		1 PC

FUNCTIONALITY INSTRUCTION

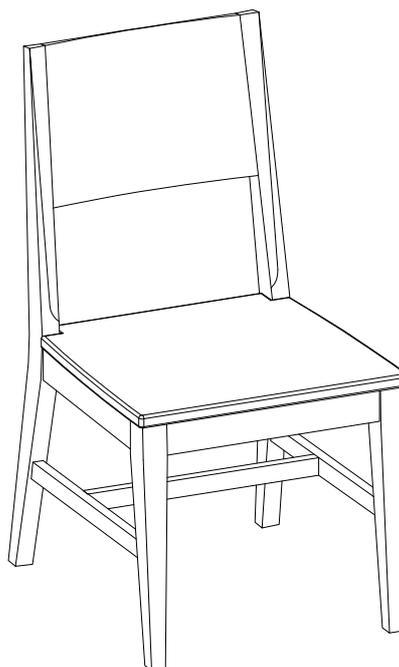

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.


Save these instructions for future reference.

FOR INDOOR USE ONLY





ITEM NO: I644-6640S Dining Side Chair w/ Wood Seat (2/Ctn)


STEP 1: Attach the left front leg and right front leg to chair seat by using 4 bolts (B), lock washers (D) and flat washers (E), Do not completely tighten bolts.

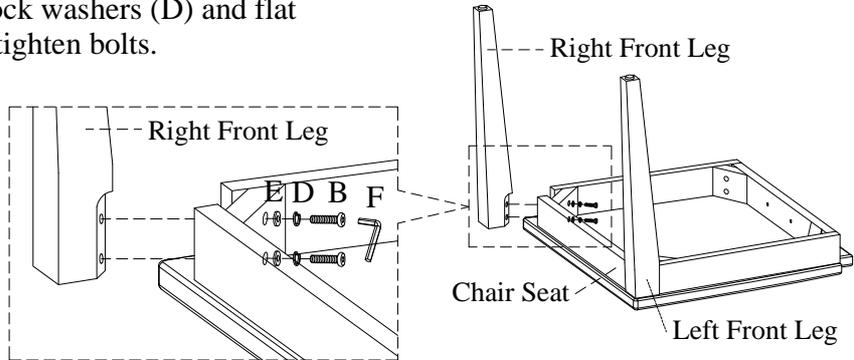

STEP 2: Attach the chair seat to chair back by using 4 bolts (A), 2 bolts (C), 6 lock washers (D), 6 flat washers (E). Do not completely tighten bolts.

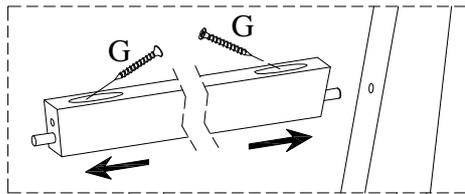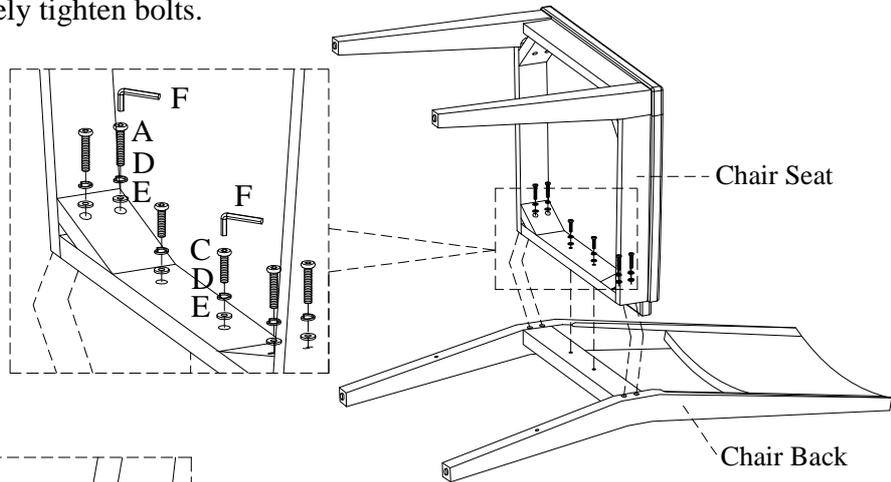


STEP 3: Attach the "H" stretcher to the front legs and chair back with wood screws (G). Completely tighten all wood screws and bolts. Turn the assembled chair to the upright position.

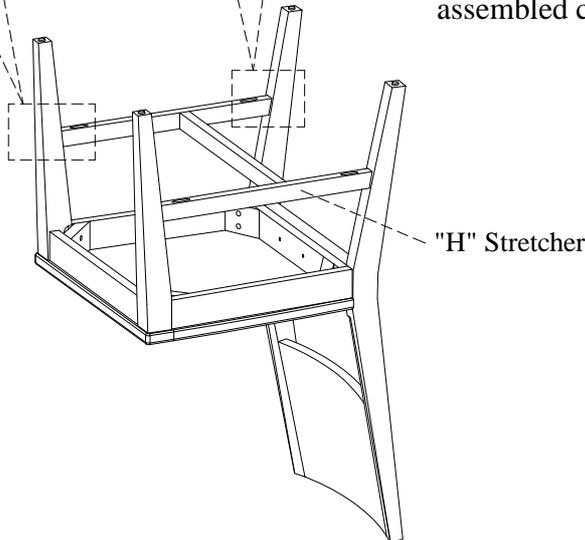



ITEM NO: I644-6660S Counter Side Chair w/ Uph Seat (2/Ctn)

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

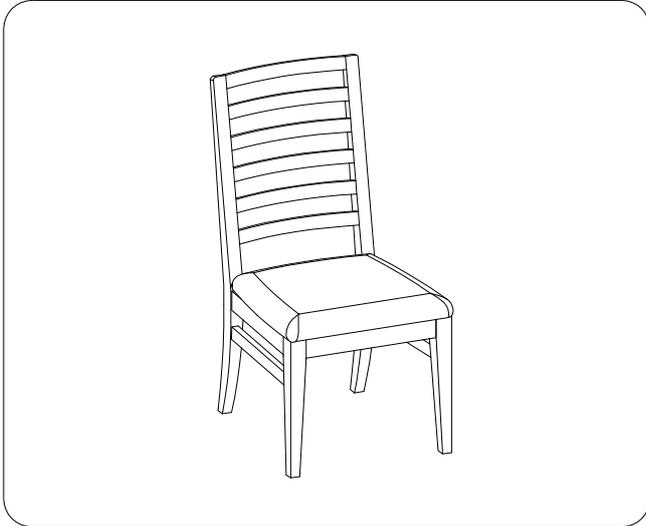

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER 


HARDWARE LIST:

No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 3-1/4"		4 PCS
B	Bolt Ø5/16" x 2"		4 PCS
C	Bolt Ø5/16" x 1-3/4"		2 PCS
D	Lock Washer Ø5/16"		10 PCS
E	Flat Washer Ø5/16" x 3/4"		10 PCS
F	Allen Wrench 4mm		1 PC
G	Wood Screw #4 x 1-1/2"		4 PCS

COMPONENTS LIST:

No.	Description	Sketch	Quantity
1	Chair Back		1 PC
2	Chair Seat		1 PC
3	Left Front Leg		1 PC
4	Right Front Leg		1 PC
5	Left Side Stretcher		1 PC
6	Right Side Stretcher		1 PC

FUNCTIONALITY INSTRUCTION

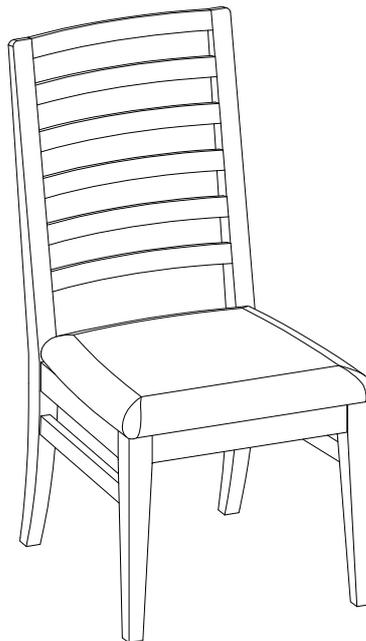

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.


Save these instructions for future reference.

FOR INDOOR USE ONLY





ITEM NO: I644-6660S Counter Side Chair w/ Uph Seat (2/Ctn)

STEP 1: Attach the left front leg and right front leg to chair seat by using 4 bolts (B), lock washers (D) and flat washers (E), Do not completely tighten bolts.

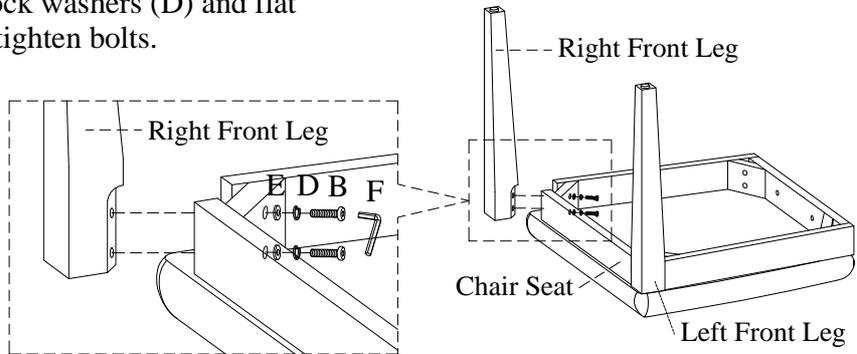

STEP 2: Attach the chair seat to chair back by using 4 bolts (A), 2 bolts (C), 6 lock washers (D), 6 flat washers (E). Do not completely tighten bolts.

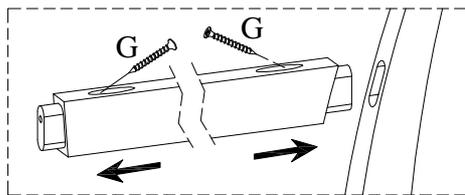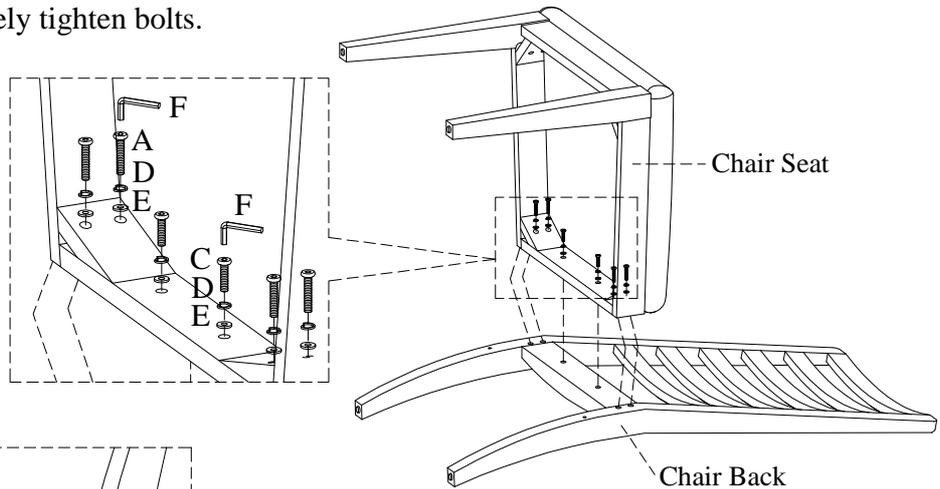

STEP 3: Attach the left side stretcher and right side stretcher to the front legs and chair back with wood screws (G). Completely tighten all wood screws and bolts. Turn the assembled chair to the upright position.

