

Assembly Instruction For Dining Side Chair D-1850-8-SC

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PARTS LIST


NO.	PART DESC	CODE	Q'TY
A	 CHAIR BACK	PD-1850-8-SCBFR	1
B	 WOODEN SEAT	PD-1850-8-SCSEC	1
C	 Right leg Frame	PD-1850-8-SCLEG1	1
D	 Left Leg Frame	PD-1850-8-SCLEG2	1
E	 Stretcher	PD-1850-8-SCSTR	1

HARDWARE LIST


NO.	HARDWARE DESC	CODE	Q'TY
F	 ALLEN BOTL Ø1/4"*15mm	PD-1850-8-SCHW	10
G	 ALLEN BOTL Ø1/4"*45mm		4
H	 SPRING WASHER Ø11*1.5mm		14
L	 FLAT WASHER Ø13*1.5mm		14
K	 ALLEN KEY M4		1

 Only tighten all bolts when all bolts aligned with bolt inserts

STEP 1

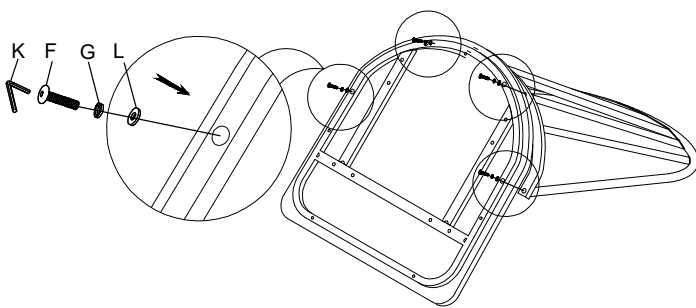

COMPLETED

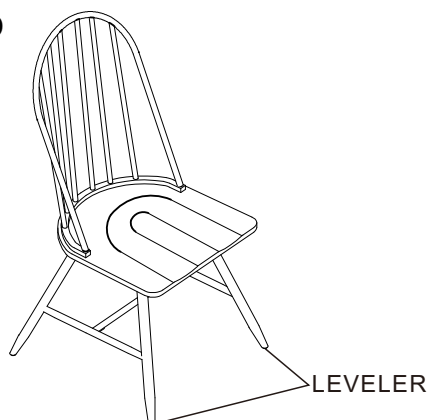

STEP 2

