

Whirlpool Corporation Confidential

KITCHENAID PANEL READY UC REFRIGERATOR CUSTOM PANEL DIMENSIONS UPDATES

OLD DISCO MODEL

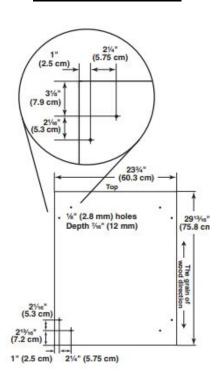

NEW TRANSITION MODEL

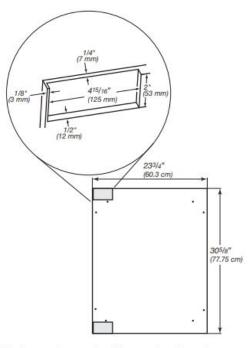

Solid door overlay panel and hinge routing dimensions

UPDATES

Old Disco Dimensions

- Height = 29 13/16"
- Width = 23 ¾"

New Transition Dimensions

- Height = 30 %"
- Width = 23 ¾"

Dimension Changes

- Height = + 13/16"
- Width = 0"




KITCHENAID PANEL READY UC REFRIGERATOR CUSTOM PANEL INSTALLATION UPDATES

OLD DISCO MODEL

Instructions found on Pg. 7 of Use & Care Guide

Attach the Overlay Panel

1. Gently pull back the gasket from all four corners. Pull back far enough that two screws are visible in each comer (eight total screws). Remove all eight screws.

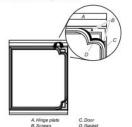


2. Position the overlay panel so that the holes in the panel align with the holes in the door liner.

NOTE: C-clamps are recommended to keep the overlay panel and door liner aligned and to limit movement of the pieces.

3. Once all holes are aligned, fasten the custom panel to the door using the screws provided as shown.

NOTE: The screws for this step are in a small plastic bag, located in the interior of the refrigerator.

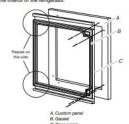


IMPORTANT: To ensure proper operation, be sure to grease the top hinge, top spacer and washer with petroleum jelly

- 1. Using petroleum jelly, grease the bottom spacer hole and the bottom hinge pin. Align the washer with the bottom spacer.
- 2. Install the door by inserting the bottom hinge pin into the bottom space hole. Be sure the washer stays in place. Slowly lower the door straight down and evenly onto the bottom
- 3. Close the door and check that it is properly aligned to the

NOTE: Provide additional support for the door when moving the hinges. Do not depend on the door magnets to hold the door in place while you are working.

 4. Using masking tape, secure the door to the cabinet before installing the spacer, as shown.



B. Masking tape

5. Place the washer on the top spacer and align the holes. Grease the top hinge pin, top spacer and washer with petroleum jelly. Insert the top hinge pin into the washer and

NEW TRANSITION MODEL

Instructions found on Pg. 6 of Owner's Manual

- Dispose of and/or recycle all packaging materials.
- . After all packaging materials have been removed, clean the inside of your refrigerator. Refer the cleaning instructions in "Cleaning" section.

Important information to know about glass shelves and covers: Do not clean plays shelves or covers with warm water when

they are cold. Shelves and covers may break if exposed to sudden temperature changes or impact, such as bumping. Tempered glass is designed to shatter into many small, pelblesize pieces. This is normal. Glass shelves and covers are heavy Use both hands when removing them to avoid dropping.

NOTE: For standard stainless steel or class door models, skip

Custom Overlay Panel Installation

- . Create custom overlay panel according to the specifications in the "Custom Querlay Panel" section.
- # Elebendiel is not responsible for the semoval or addition of molding or decorative penels that would not allow access to
- 1. Open the door completely to 90°



gently until the two screw holes in each corner of the door



the door. Be sure that the top and bottom hinges fit accurately into the routing on back of the custom wood



werlay door panel has been installed on the refrigerato

4. Faster the custom panel to the door using two wood



A. M4 x 30 flathead screws (provided in installation kit)

5. Press the gasket firmly back into it's original position.





Models Represented: KURL114KPA KURR114KPA