


# Alaterre Furniture

## Shaker Cottage 36" TV Stand

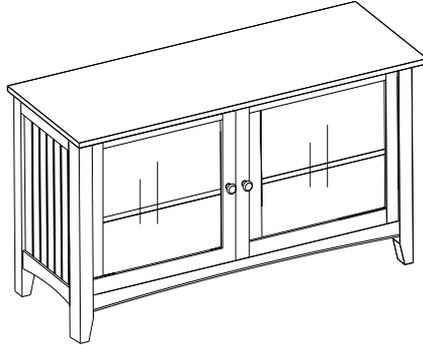

Thank you for purchasing our Shaker Cottage 36" TV Stand. We have found it helpful to have a second person present in at least one step of the assembly.

### 36" TV Stand Assembly Instructions

Lay out all parts on a "non-abrasive" surface to avoid scratching furniture.

NO.	DRAWING	DESCRIPTION	QTY	NO.	DRAWING	DESCRIPTION	QTY
A		TOP PANEL	1	E		BOTTOM PANEL	1
B		LEFT SIDE ASSEMBLY	1	F		RIGHT DOOR	1
C		RIGHT SIDE ASSEMBLY	1	G		LEFT DOOR	1
D		SHELF	1	H		BACK PANEL	1

NO.	DRAWING	DESCRIPTION	QTY	NO.	DRAWING	DESCRIPTION	QTY
I		HEXAGONAL BOLT M6*30	8	M		SCREW	2
J		HEXAGONAL BOLT M6*60	2	N		KNOB	2
K		SHELF CLIPS	4	O		KNOB SCREW M4*25	2
L		ALLEN WRENCH	1	P		HEX WRENCH	1

### PARTS

#### Step 1

Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when first assembling this product.

#### Step 2

Remove all parts and hardware from packing material. Wooden pieces should be placed on a non-abrasive surface (like the carton or carpet) to prevent damage to the finish.

### Step 3, 4 and 5


Note: It will help to have a second person at this time to assist in assembly.

Lay Top Panel (A) upside down. Attach Right Side (C) to Top Panel (A) with 2 Hex Bolts M6 x 30mm (I).

Slide Back Panel (H) into groove in Top Panel (A) and Right Side (C).

Attach Left Side (B) to Top Panel (A) with 2 Hex Bolts M6 x 30mm (I).

Note: bench is upside-down  
right panel is on left-hand side.

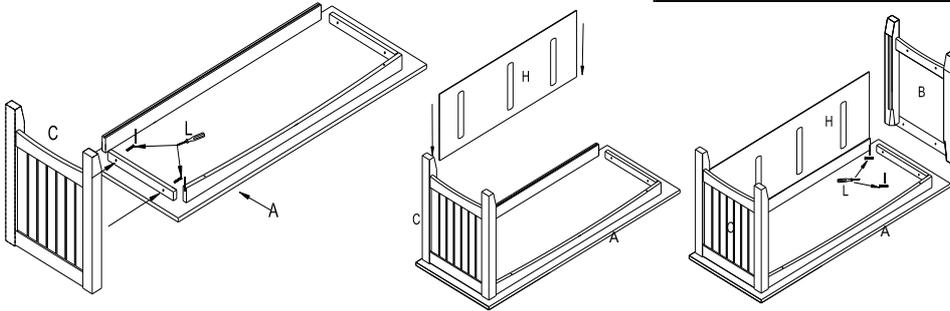

### Step 6, 7, 8 and 9

Note: It will help to have a second person at this time to assist in assembly.


Attach knobs (N) to doors (F) and (G) with knob screw (O).

Insert Screw (M) into threaded inserts in front rail of Top Panel (A).

Set doors (F) and (G) in place on top of Screws (M).


Attach Bottom Panel (E) with 4 Hex Bolts 6 x 30mm (I).

Attach doors with 2 Hex Bolts 6 x 60mm (J) through bottom panel (E) into doors (F) and (G).

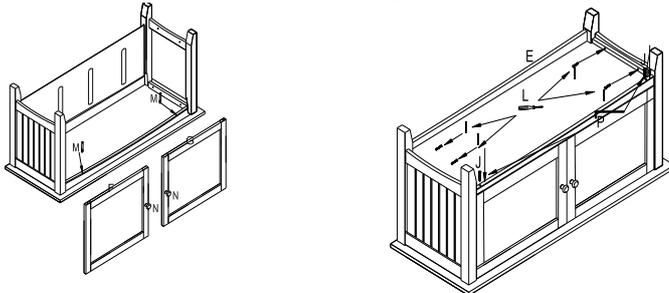

### Step 10

Insert shelf clips (K) into holes at appropriate height and set shelf (D) on shelf clips (K).

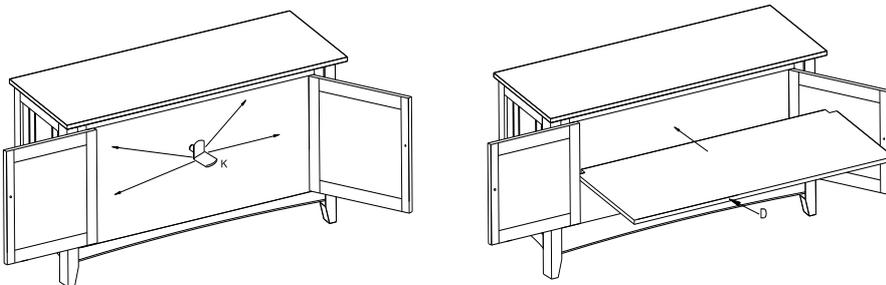

### CARE

Clean with mild soap and wipe dry.

### REPLACEMENT PARTS:

For best service, to order replacement parts go to [www.alaterrefurniture.com](http://www.alaterrefurniture.com). Use the order form on the web site to order your replacement parts. **Thank You!**