ASSEMBLY INSTRUCTION FOR

ACCENT ARM CHAIR

U-2760-8540-100/U-2760-8542-100/U-2760-8543-100/ U-2760-8330-100/U-2760-8333-100/U-2760-8332-100

CAUTION: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

- 1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage the product or injury to persons during assembly.
- 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
- 3. Please do not over tighten screws or bolts.
- 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

 HARDWARE LIST

PART LIST								
NO.	PART DESC	CODE	Q'TY					
Α	SEAT		1					
В	BACKREST		1					
С	LEG	PU - 2760 - LEG	4					
A								

1	NO.	HARDWARE DESC		CODE	Q I Y
+	1	() mmm	BQLT Ø5/16"x 20mm		8
4	2	0	LOCK WASHER Ø9 ר14		8
4	3	0	FLAT WASHER Ø5/16" x Ø19	PU - 2760 - HW	8
4	4		ALLEN KEY M5		1
	5	Own	SCREWS Ø4 x 25mm		16

⚠ Only tighten all bolts when all bolts aligned with bolt inserts







