

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**950421**  
**SHOE CABINET**

ITEM: **950421**



## ASSEMBLY INSTRUCTIONS

 
### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 

 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

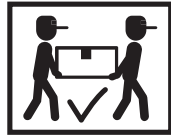

ASSEMBLY TIME

60 MINUTES

 

 


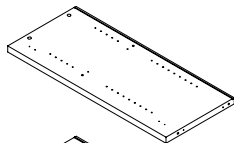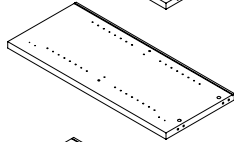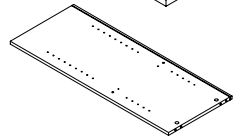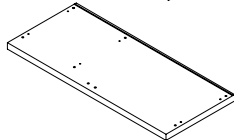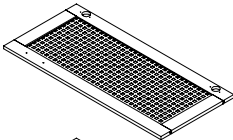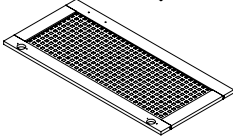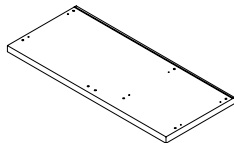
 
 
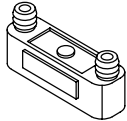 
 



## PARTS IDENTIFICATION

A	LEFT SIDE PANEL		1 PC	J	LEFT UPPER BACK PANEL		1 PC
B	RIGHT SIDE PANEL		1 PC	K	LEFT LOWER BACK PANEL		1 PC
C	MIDDLE DIVIDER PANEL		1 PC	L	RIGHT BACK PANEL		4 PCS
D	BOTTOM PANEL		1 PC	M	LEFT DOOR		1 PC
E	LEFT CROSS PANEL		1 PC	N	RIGHT DOOR		1 PC
F	RIGHT CROSS PANEL		1 PC	O	LEG FRAME		2 PCS
G	TOP PANEL		1 PC	P	CROSSBAR		1 PC
H	SMALL ADJUSTABLE SHELF		3 PCS	Q	BACK VERTICAL BAR		2 PCS
I	LARGE ADJUSTABLE SHELF		4 PCS				

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

 ITEM: **950421****HARDWARE IDENTIFICATION****Z**

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	10	HINGE Ø35mm SR		4 PCS
2	WOODEN DOWEL Ø8x30mm		20 PCS	11	HINGE SCREW Ø4x15mm SR		16 PCS
3	CAM BOLT Ø7x35.5mm SR		14 PCS	12	BOLT M6x58mm BLK		2 PCS
4	CAM LOCK Ø15x12mm SR		14 PCS	13	BOLT Ø7x50mm BLK		6 PCS
5	BOLT Ø9.5x55mm SR		6 PCS	14	FLOOR PROTECTOR 30x30mm		4 PCS
6	PIN FOR ADJUSTABLE SHELF Ø4.9x15mm SR		28 PCS	15	ALLEN WRENCH 4mm SR		1 PC
7	DOOR CATCH		2 PCS	16	BACK PANEL SUPPORT		6 PCS
8	HANDLE L=120mm BLK		2 PCS	17	BACK PANEL SUPPORT SCREW Ø3x19mm SR		6 PCS
9	HANDLE BOLT BLK		4 PCS	18	STICKER Ø20mm		3 PCS


**Z8,Z9,Z10 not included in blister packaging.****NOTE:**

 Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **950421**

## STEP 1

**COASTER**  
FINE FURNITURE

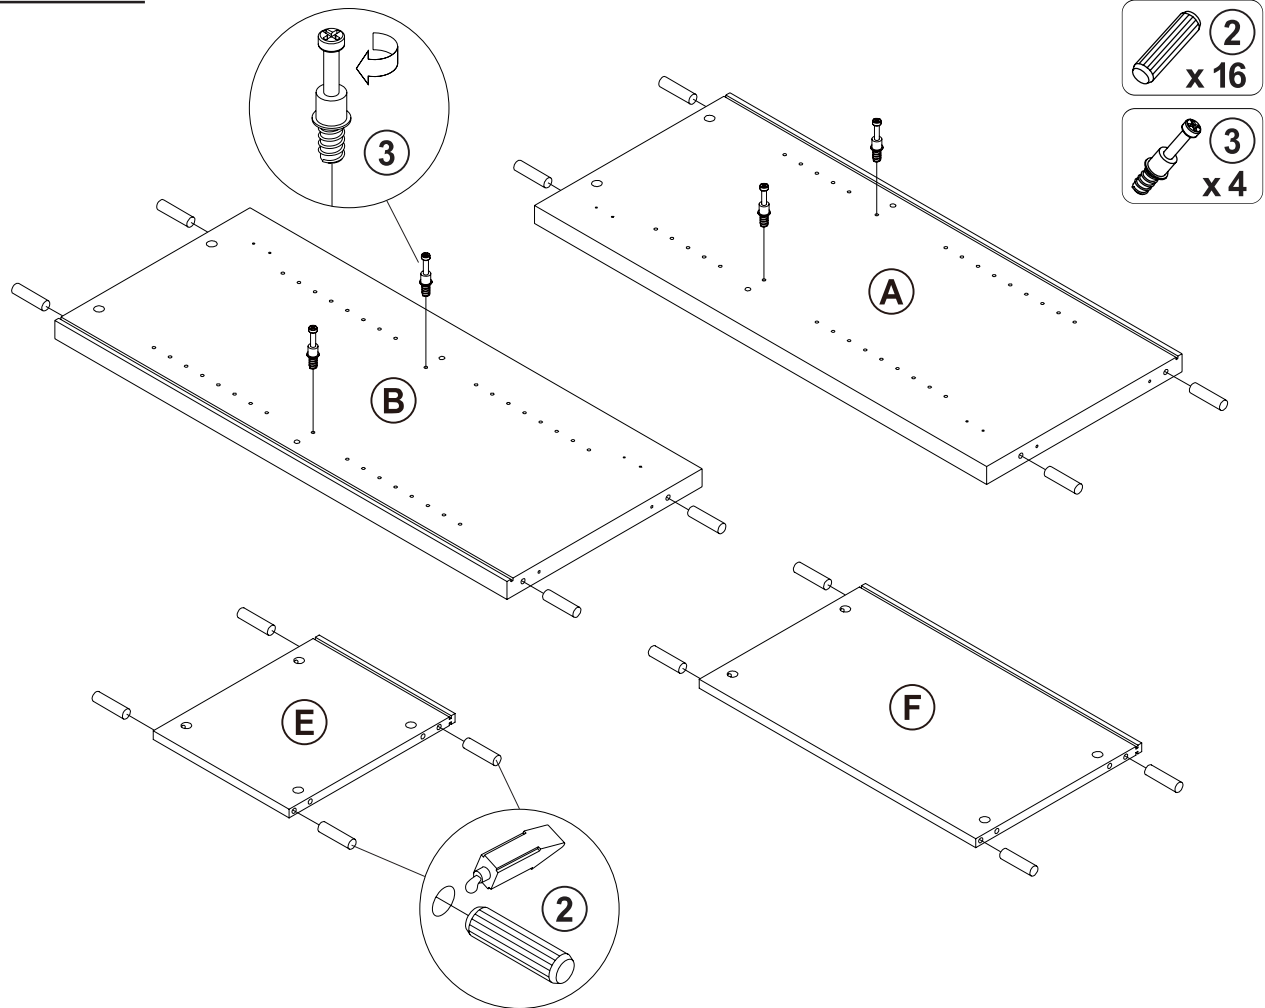


## STEP 2

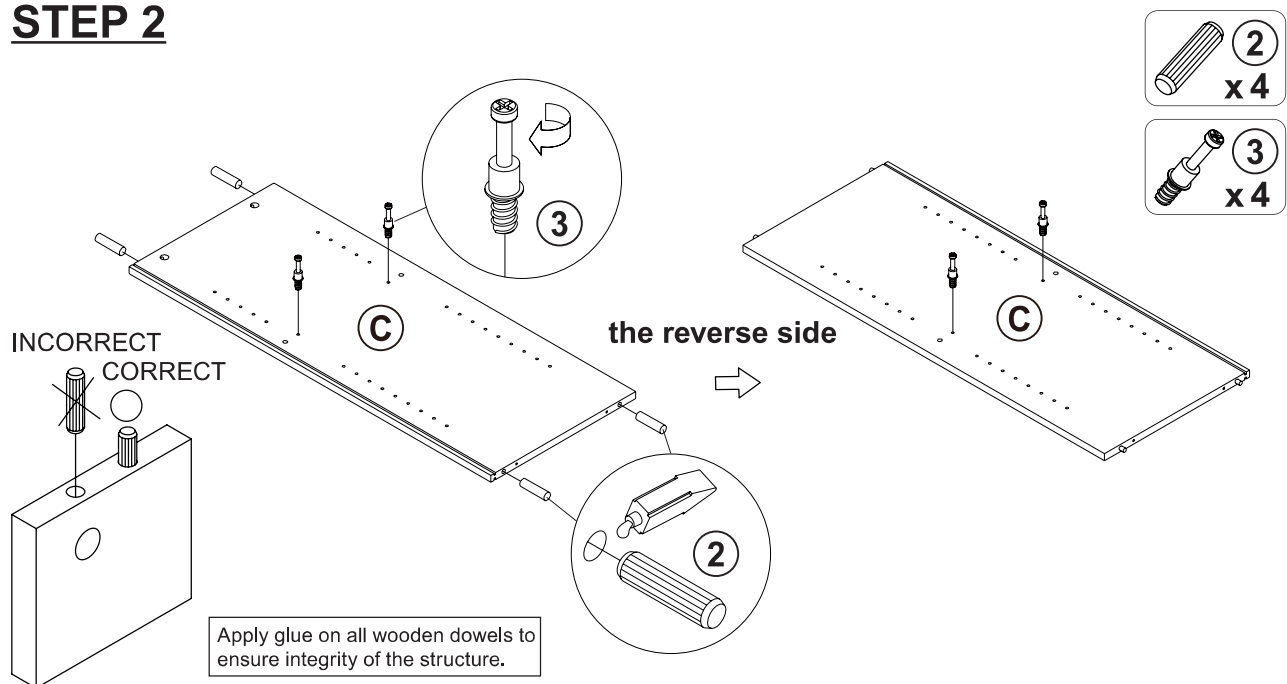 



ITEM: **950421**

## **STEP 3**

 **COASTER**  
FINE FURNITURE

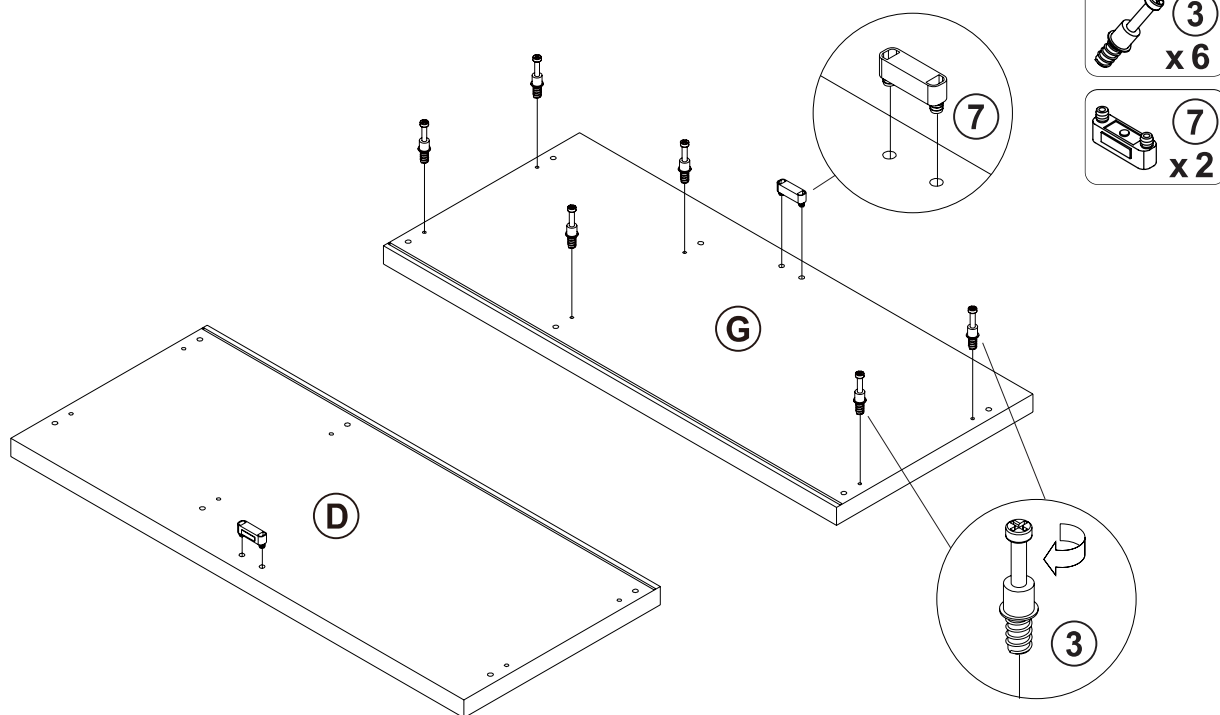


## **STEP 4**


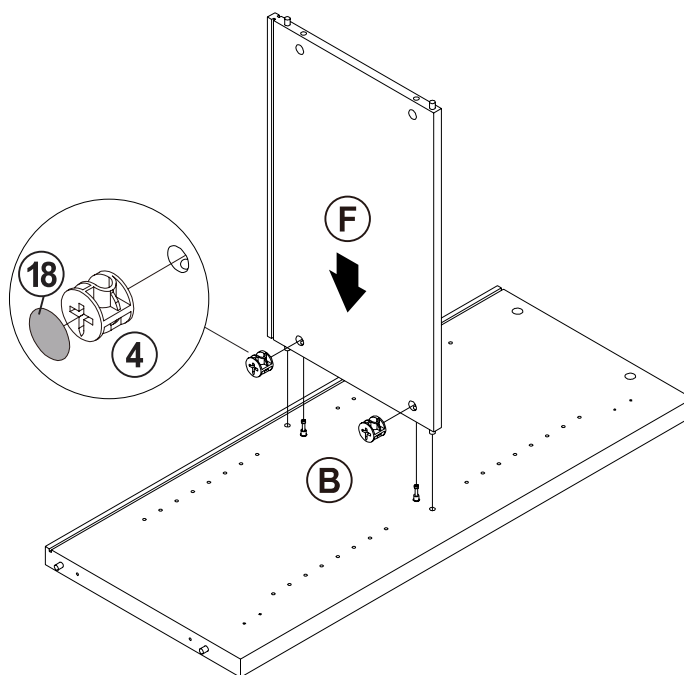 
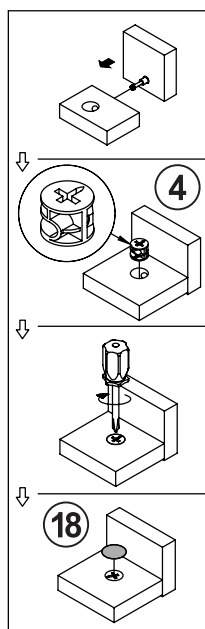 


ITEM: **950421**

**STEP 5**

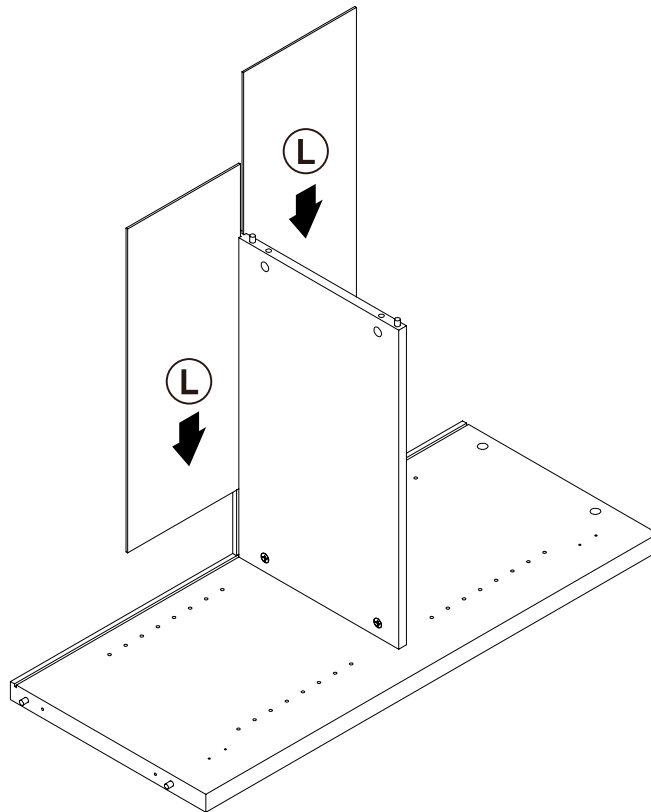 


**STEP 6**

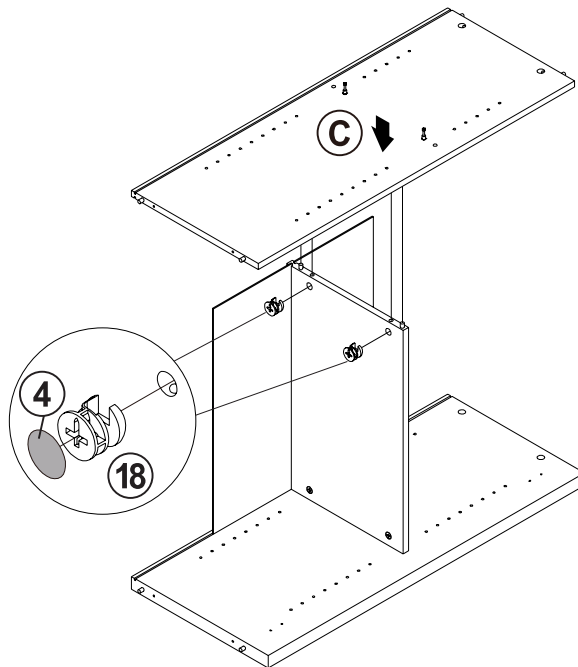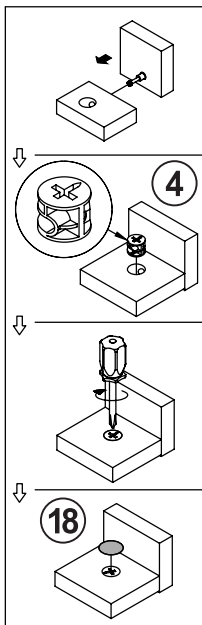   




ITEM: **950421**

**STEP 7**

 **COASTER**  
FINE FURNITURE

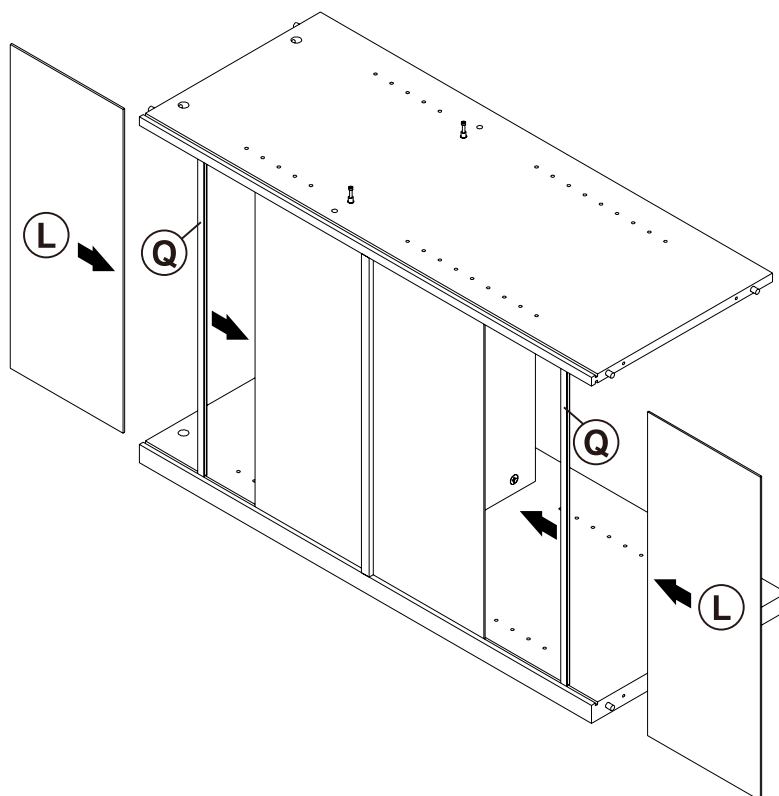


**STEP 8**

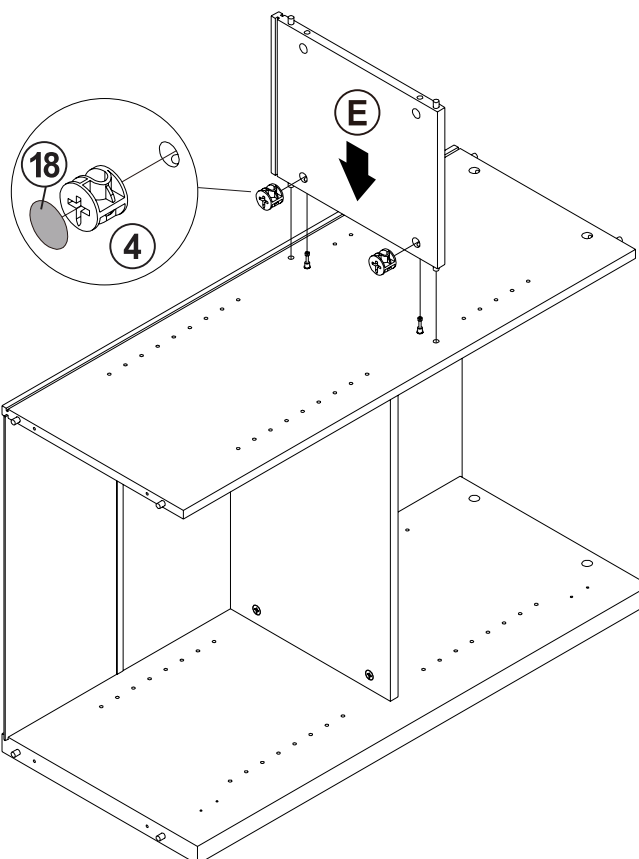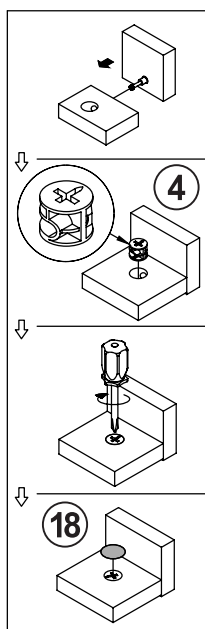   




ITEM: **950421**

**STEP 9**

 **COASTER**  
FINE FURNITURE

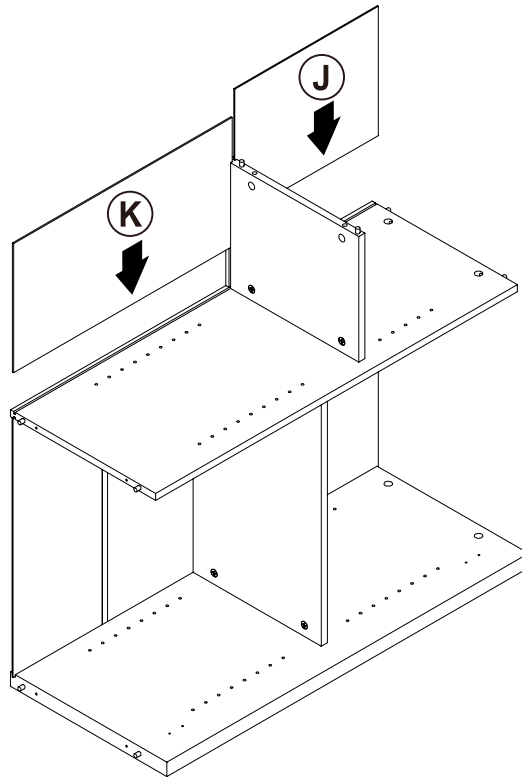


**STEP 10**

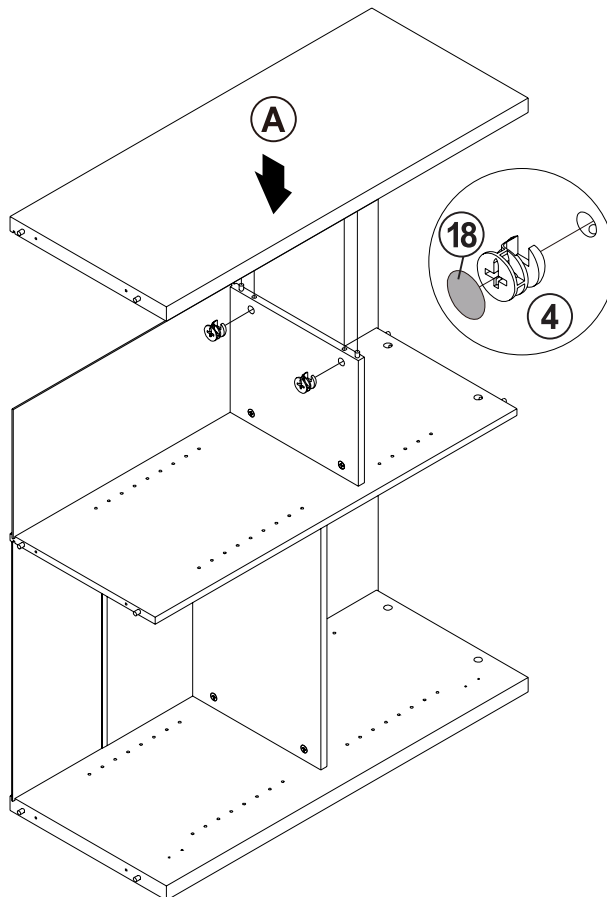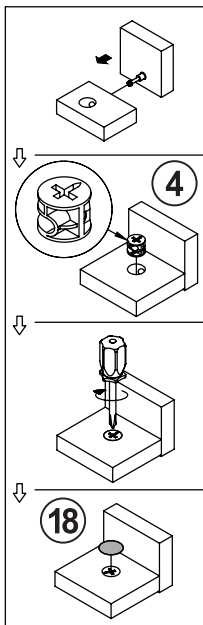   




ITEM:950421

## STEP 11

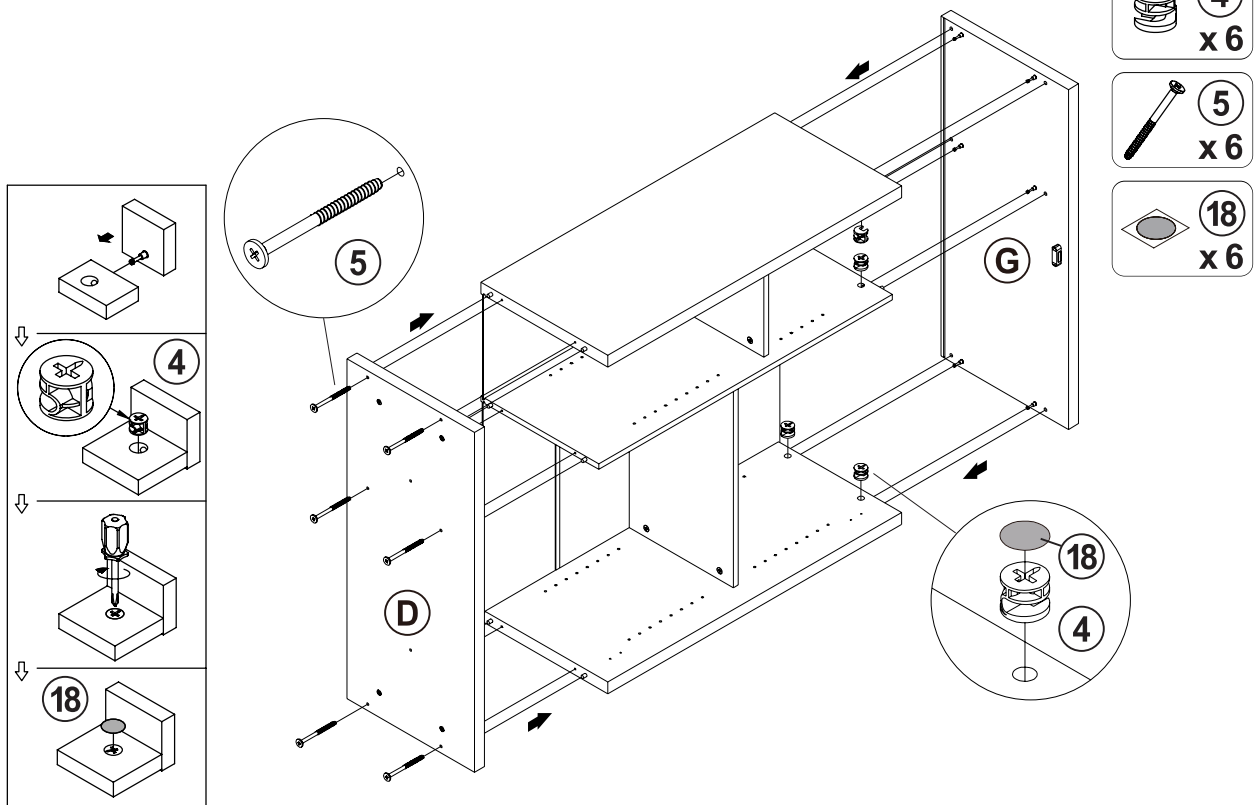 



## STEP 12

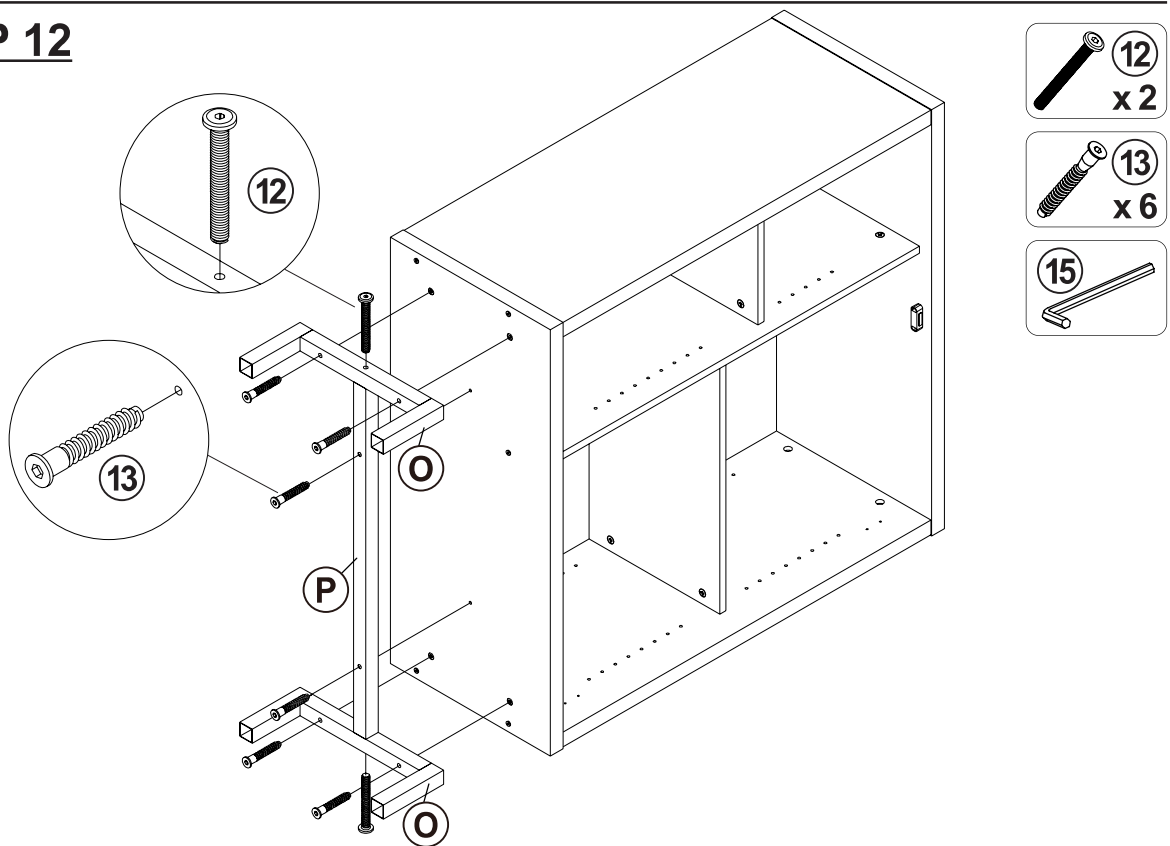 



ITEM: **950421**

**STEP 13**

  **COASTER**  
FINE FURNITURE

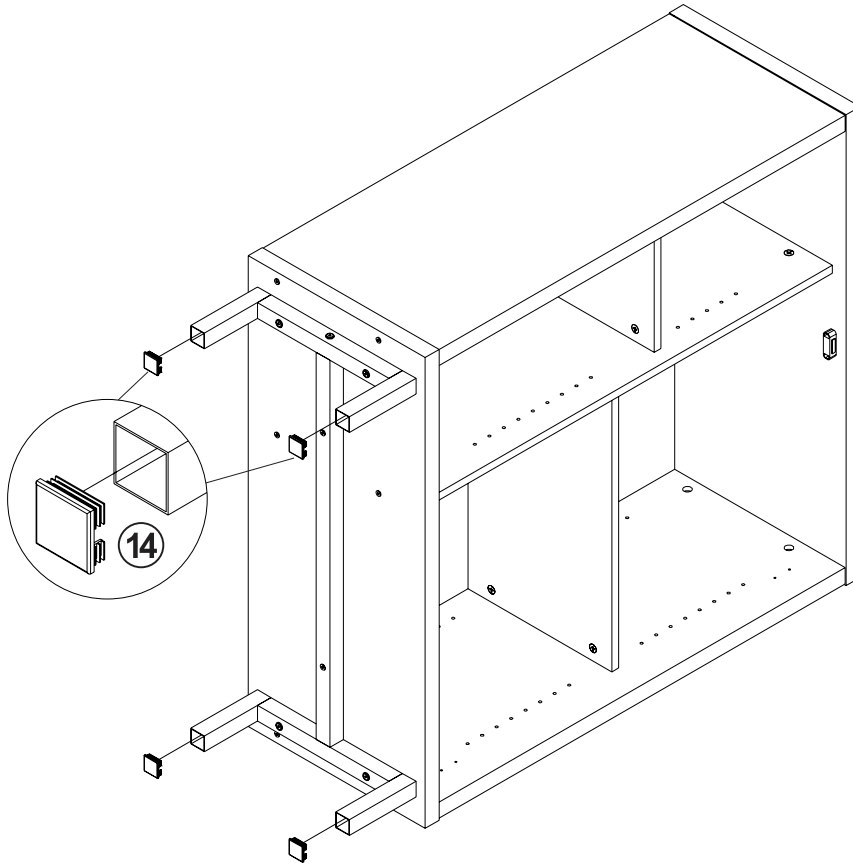


**STEP 14**

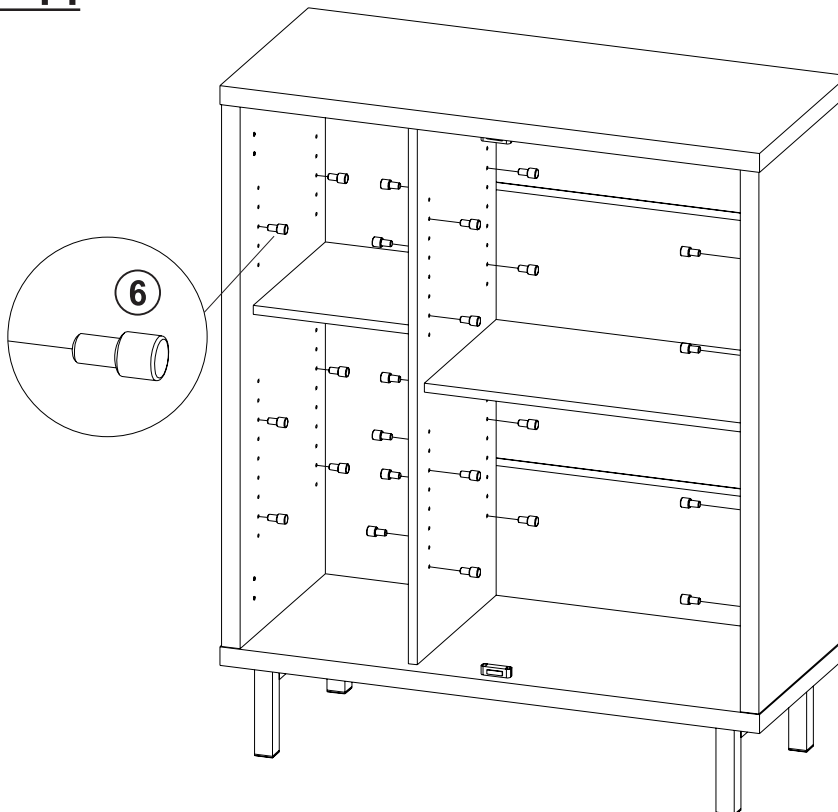  


ITEM: **950421**

**STEP 15**

 **COASTER**  
FINE FURNITURE

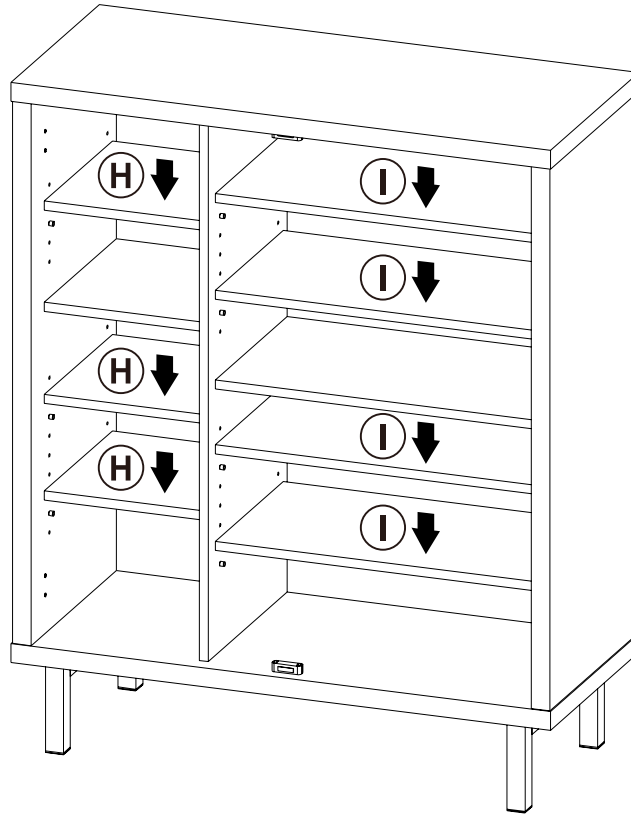



**STEP 16**

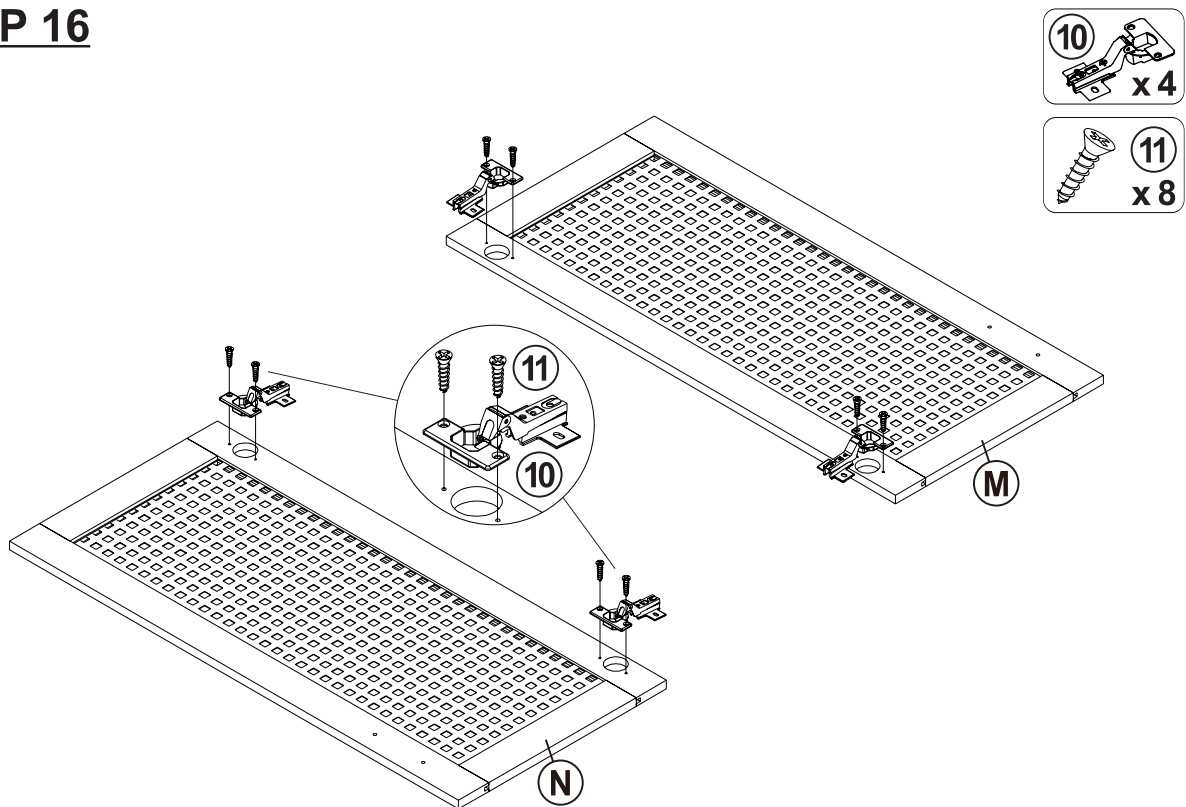 


ITEM: **950421**

## **STEP 17**

  
**COASTER**  
FINE FURNITURE

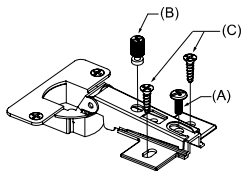




HORIZONTAL BY  
SCREW A ADJUSTMENT

 





LATERAL BY  
SCREW B ADJUSTMENT

 

VERTICAL BY  
SCREW C ADJUSTMENT

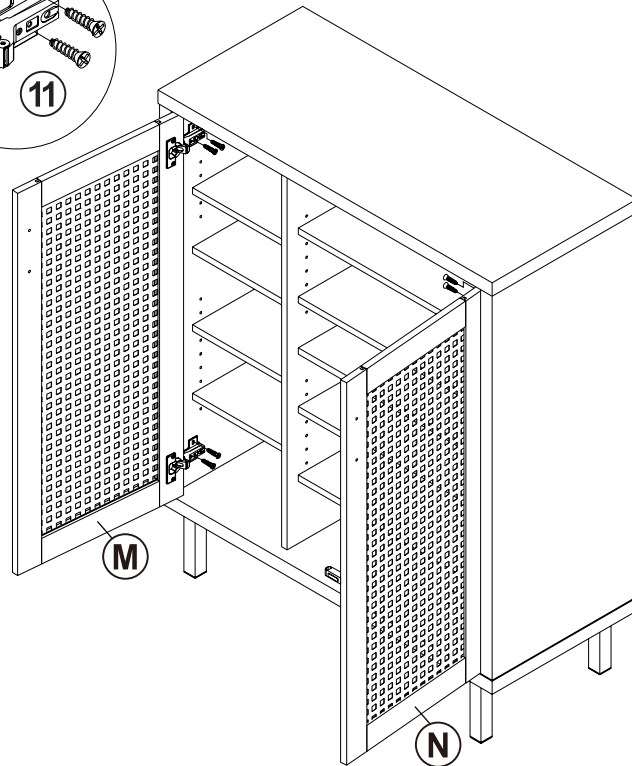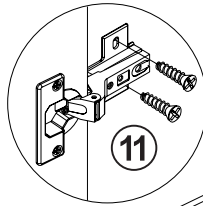   




## **STEP 18**

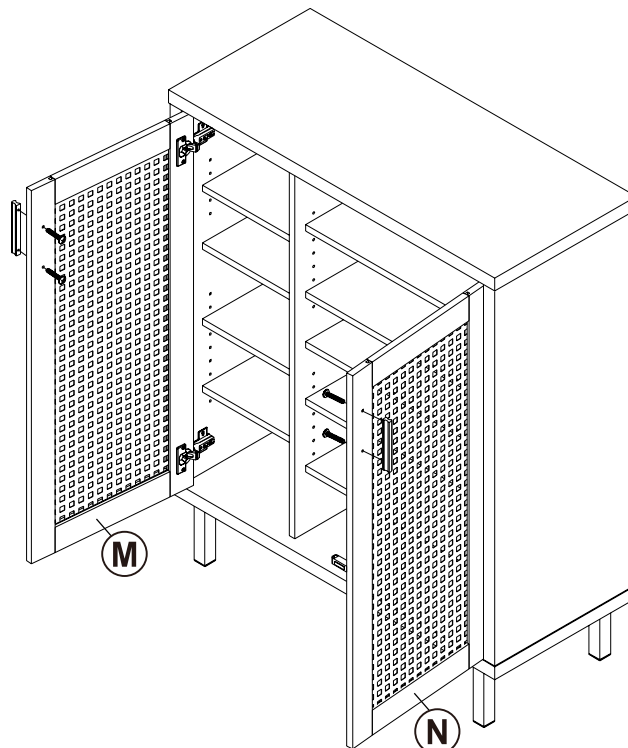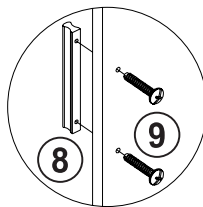    

ITEM: **950421**



**STEP 17**

   **COASTER**  
FINE FURNITURE

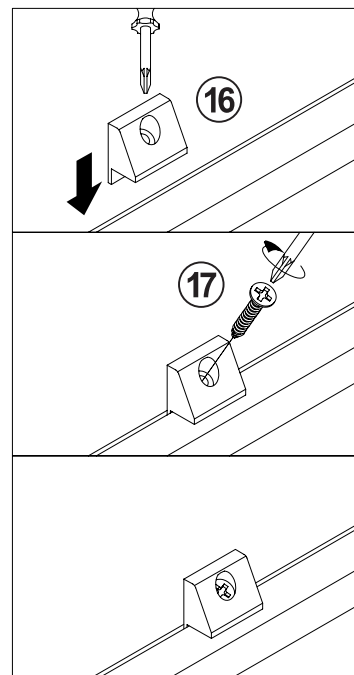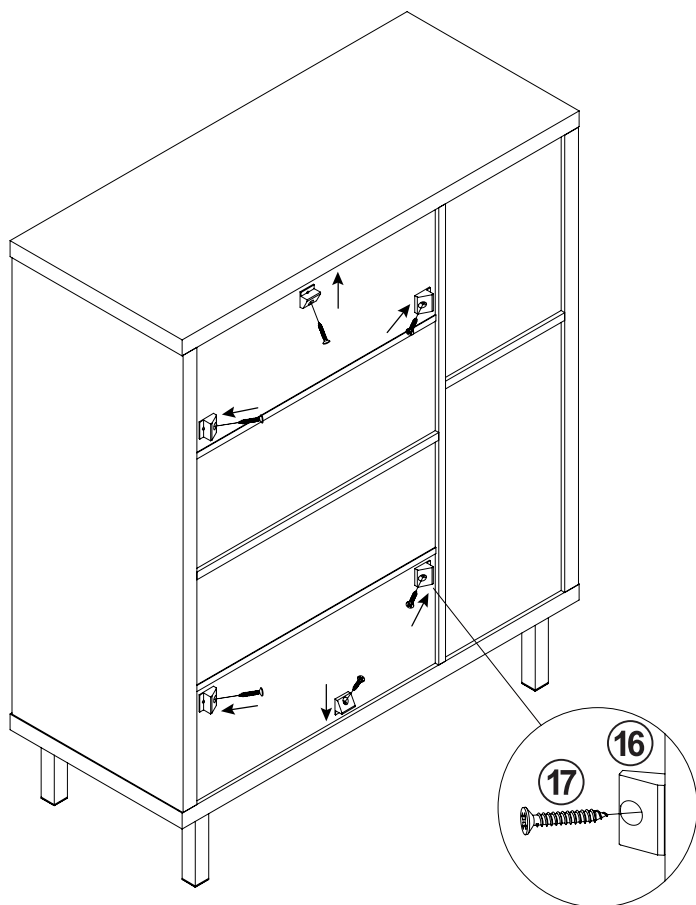



**STEP 13**

  **COMPLETE**

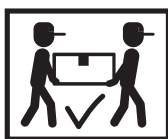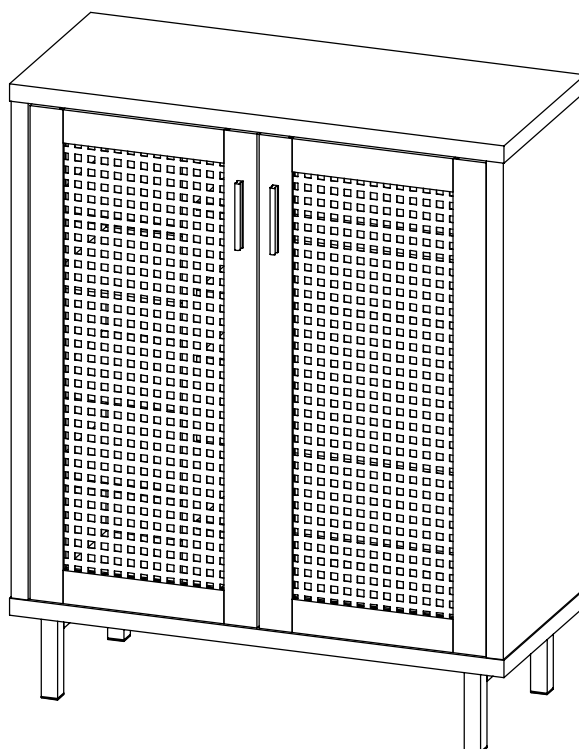

ITEM: **950421**

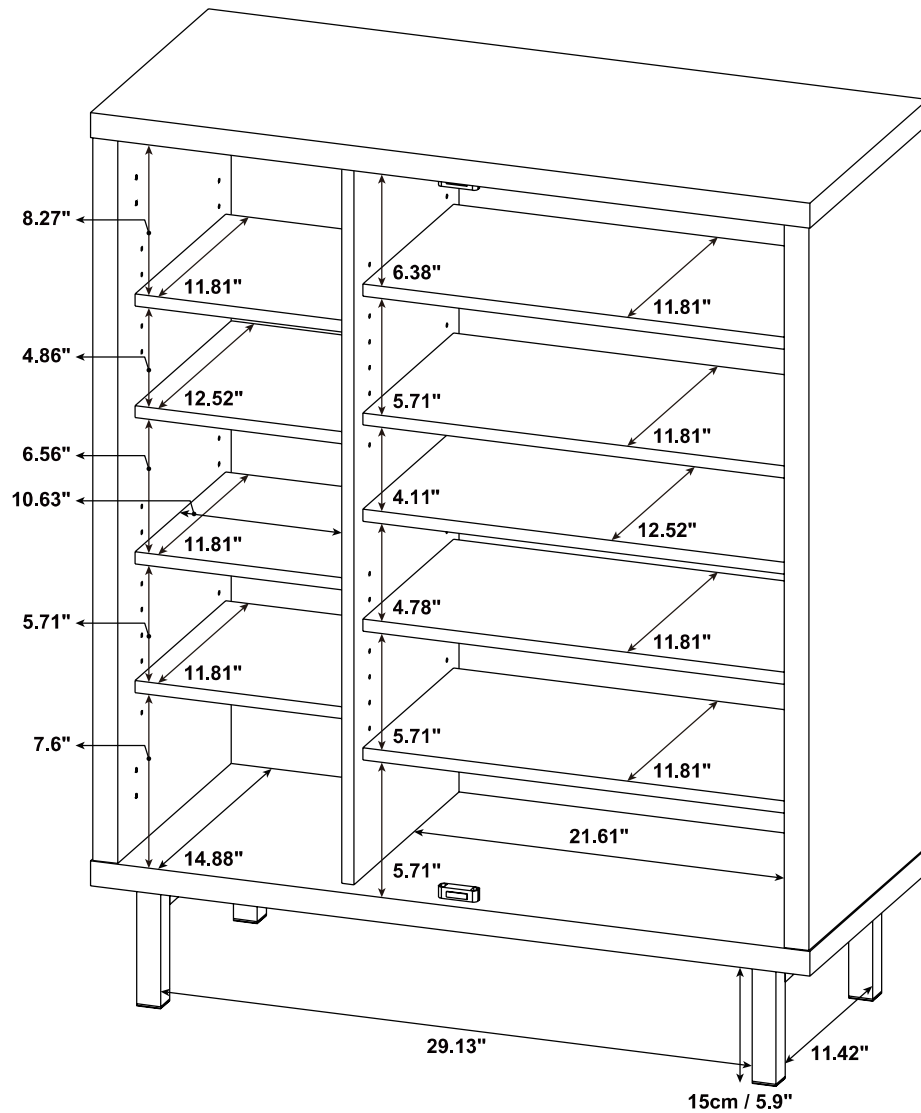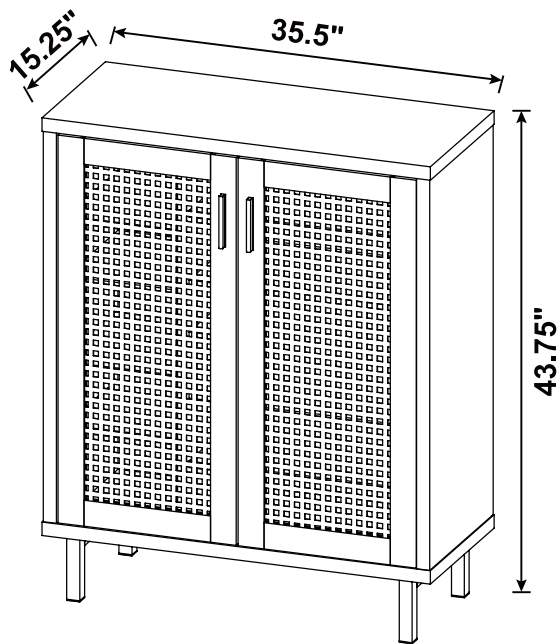  

**Note :** Dimension tolerance  $\pm 5\%$


**ANTI-TIPPING INSTALLMENT INSTRUCTIONS**  
**FURNITURE TIPPING RESTRAINT****WARNING**

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture may result in injury and damage.


This restraint must be screwed to a wood stud on the wall, using the long screw provided.

**STEP 1**

 Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

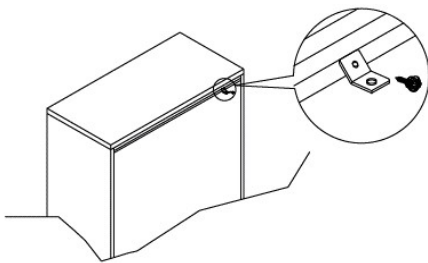**STEP 2**

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

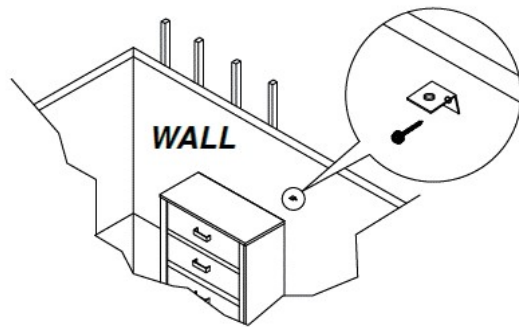**STEP 3**

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

