

# CLA-418-282 CHITTER CHATTER

## CARACOLE CLASSIC




### ASSEMBLY INSTRUCTIONS


 
 



**PLEASE UNPACK ALL PARTS AND CHECK QUANTITY AGAINST PARTS LIST BEFORE DISCARDING PACKING CARTON!**


- 1) Assemble the chair back(1) and the chair seat(2) together with the wrench(F), the flat washer(D), the spring washer(E) and the screw(A).
- 2) Assemble the rear leg of the chair back (1) and the chair seat(2) with the wrench(F), the flat washers(D), the spring washers(E) and screws(B).
- 3) Secure the front legs(3) and the chair seat(2) with the wrench(F), the flat washers(D), the spring washers(E) and screws(C).
- 4) Tighten the assembly and put it upright.


\*\*\* NOTE KEEP THIS SHEET \*\*\*

In the unlikely event that you would need a replacement part for your furniture, please contact your local authorized Schnadig International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

 
CLA-418-282				
CHITTER CHATTER				
Part List				
NO.	Hardware List		Part Number	QTY
①		Chair Back	CLA-418-282-062	1
②		Chair Seat	CLA-418-282-061	1
③		Front Leg	CLA-418-282-019	2

RTA Hardware				
Hardware List				QTY
A		Screw	5/16"x1-3/4"	1
B		Screw	5/16"x2-1/2"	4
C		Screw	1/4"x2-1/4"	4
D		Flat Washer	5/16"	9
E		Spring Washer	5/16"	9
F		Wrench	5/16"	1

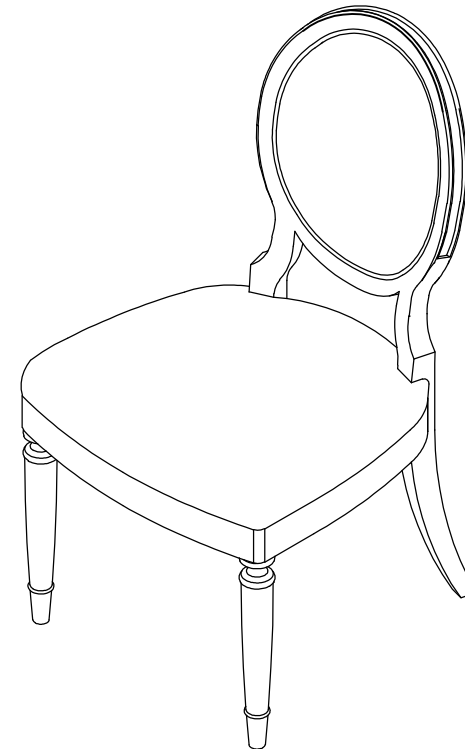

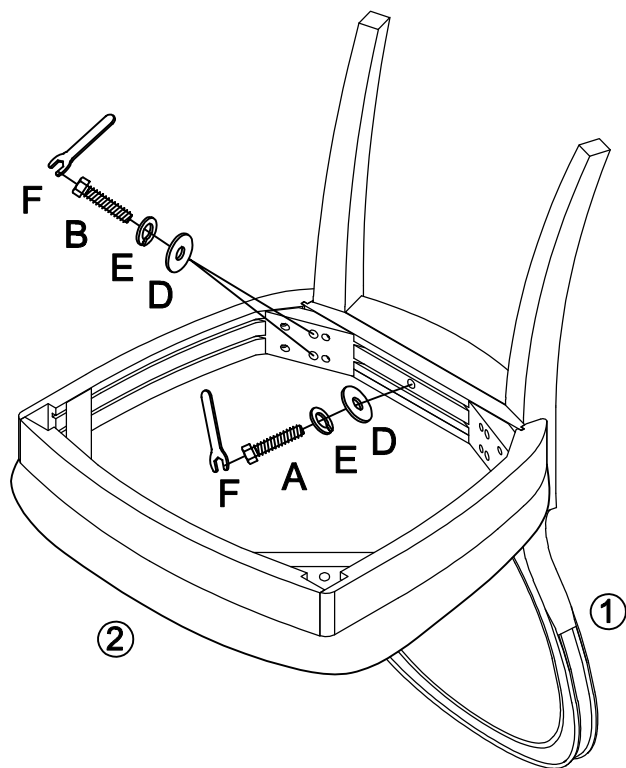

**STEP 1**

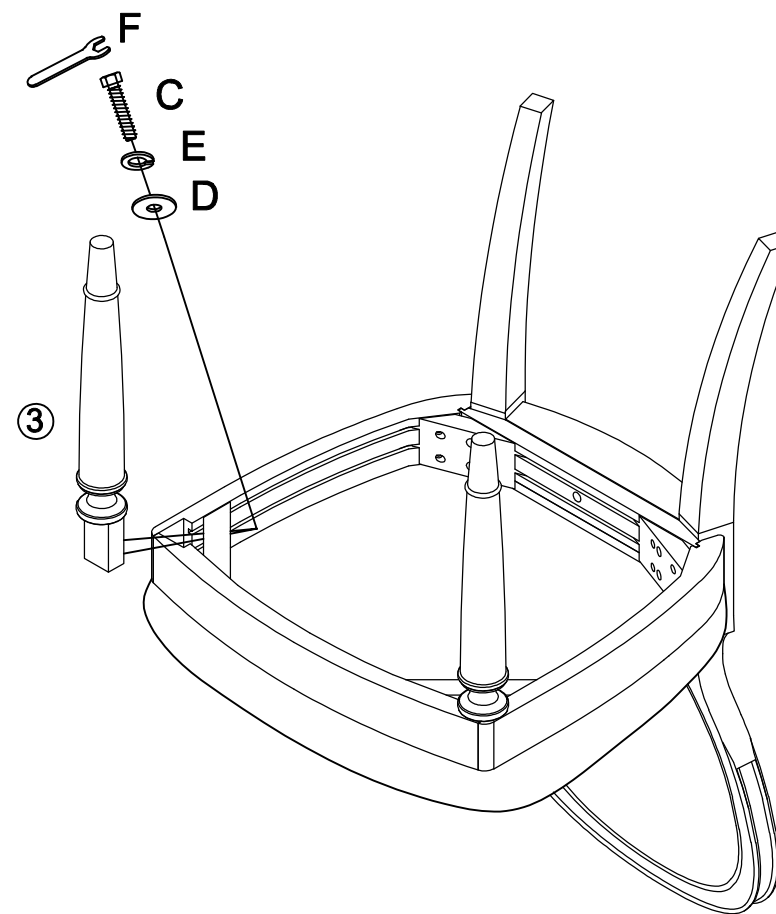

**STEP 2**