





Appearance may vary depending on model.




Quick Start Guide Using Your High Efficiency Dryer










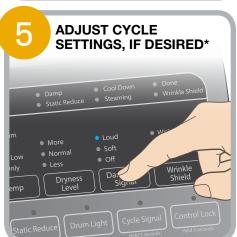



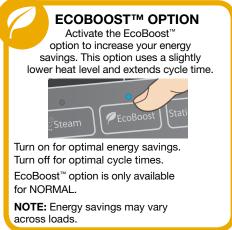



^{*} NOTE: See "Cycle Guide" in the Use and Care Guide for more information about cycles, settings, and options. Not all cycles, settings, and options are available with all models. Read your Use and Care Guide before using your dryer.








L'aspect peut varier



Guide de démarrage rapide

Comment utiliser votre sécheuse haute efficacité



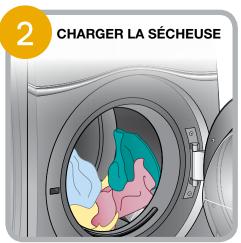






selon le modèle.





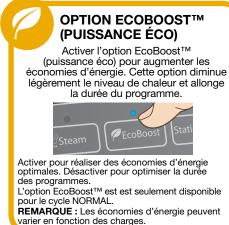



^{*}REMARQUE: Voir le "Guide des programmes" du Guide d'utilisation et d'entretien pour plus d'informations sur les programmes, les réglages et les options. Certains programmes, réglages et options ne sont pas disponibles sur certains modèles. Lire le Guide d'utilisation et d'entretien avant d'utiliser la sécheuse.