



UTTERMOST

Carefully unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.

2. Be sure the power to the installation point is power off

3.Fasten the Crossbar to the outlet box . Locate the Nipple and thread into the center of the Crossbar.

4.Locate the Fixture Chain
Ceiling Canopy
Canopy Chain Loop
And Canopy Lock ring. Pass the

Fixture Supply Wire and Ground Wires through in the following order: 1)Alternate Fixture Loops in

the Fixture Chain; 2)Canopy Lock ring; 3)Canopy Chain Loop; 4)Ceiling Canopy.

Finally, proceed to pass the wires through the Nipple attached to the Crossbar.

5. Thread the BT58 Edison Bulb (Included) onto the Socket. Hand tighten until snug



PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151 www.uttermost.com