

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

223274
Mirror

ITEM: **223274**



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

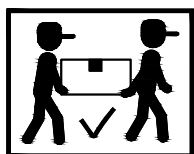


ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A


**DRESSER
FROM BOX
ITEM 223273**

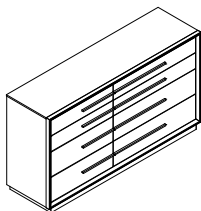

1PC

C


**MIRROR SUPPORT
(PACKED WITH
DRESSER)**

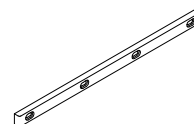

2PCS

B

MIRROR

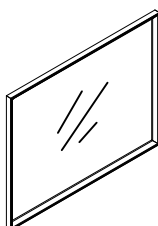

1PC

HARDWARE IDENTIFICATION

1

**BOLT
(1/4" x 32mm - BLK)**



6PCS

3

**FLAT WASHER
(1/4" x 19 x 1.5mm - BLK)**



6PCS

2

**LOCK WASHER
(1/4" - BLK)**



6PCS

4

**ALLEN WRENCH
(74 x 30 x 4mm - BLK)**




1PC

ITEM: **223274**



ASSEMBLY INSTRUCTIONS

STEP 1

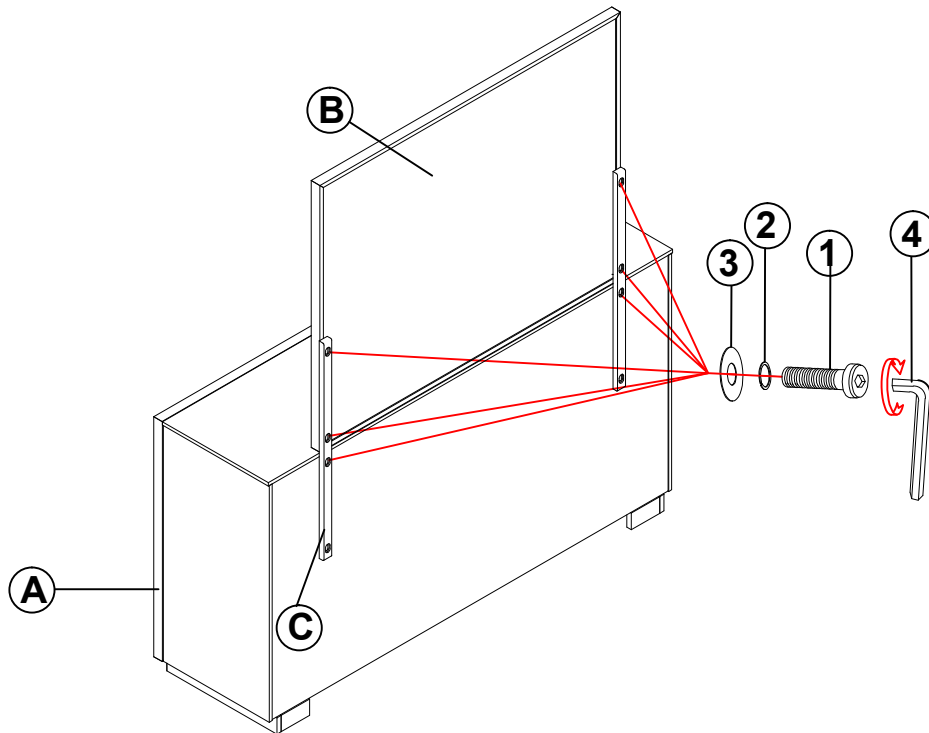


Back View

STEP 2 **COMPLETE**

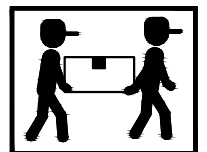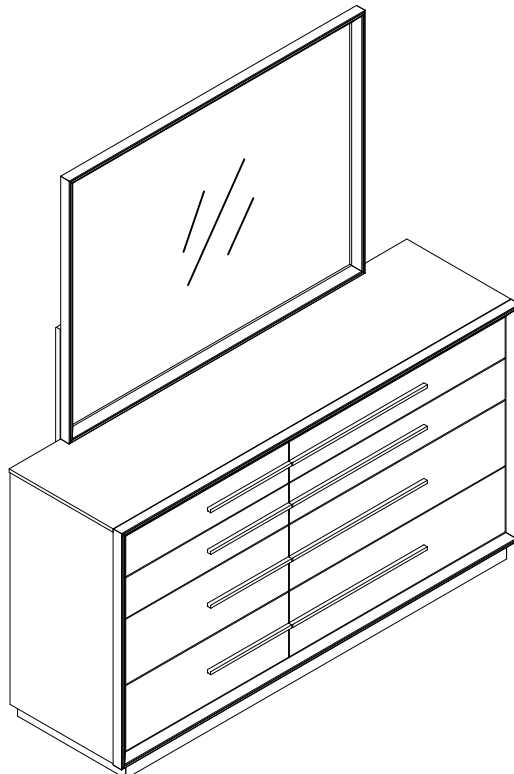

ITEM: **223274**

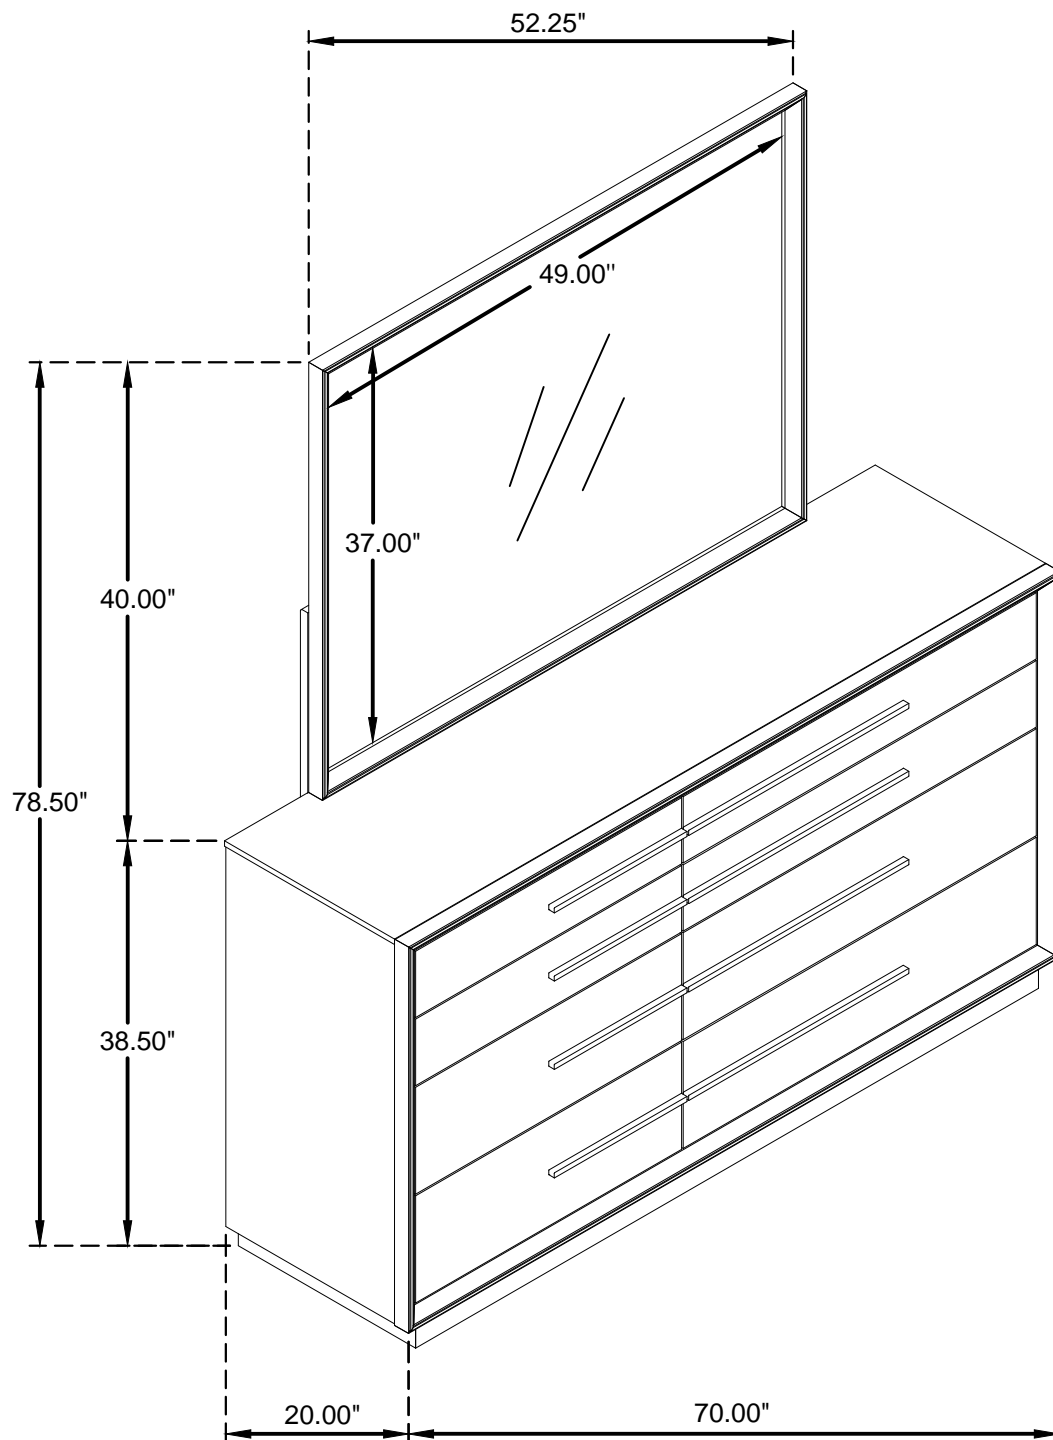

Note : Dimension tolerance $\pm 5\%$