


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

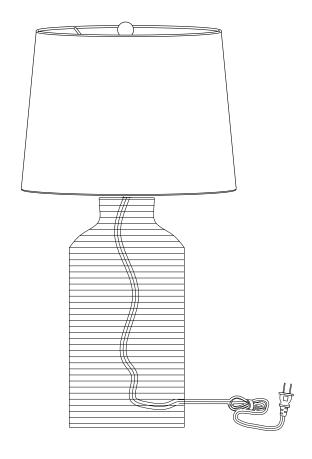

Fine Furniture for every stage of life

REVISION 0:12/20/2024

920013 TABLE LAMP

ITEM:920013

ASSEMBLY INSTRUCTIONS

COASTER° FINE FURNITURE

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!



- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately
- 2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME | |

5 MINUTES

PARTS IDENTIFICATION

A BASE

1PC

B SHADE

C HARP



1PC

D LIGHT BULB





1PC

ITEM:920013

COASTER®

ASSEMBLY INSTRUCTIONS

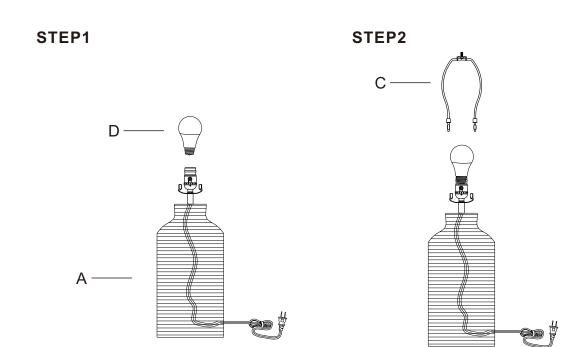


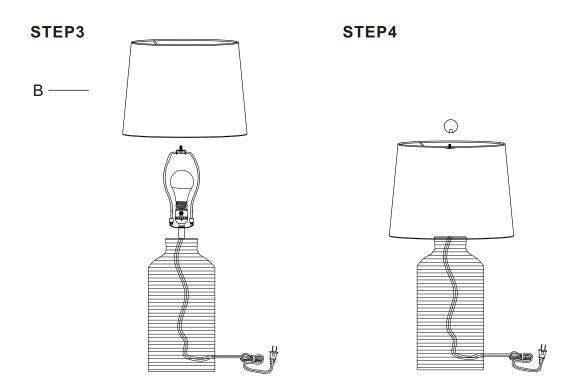

As a safety feature, and to reduce the risk of electric shock, this portable lamp includes a polarized plug (one blade is wider than the other). The plug will fit into a polarized outlet in a single direction only. If the plug does not fit fully in the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. DO NOT use with an extension cord unless, can be fully inserted. DO NOT alter the plug

TABLE LAMP: TYPE A LED BULB 9W



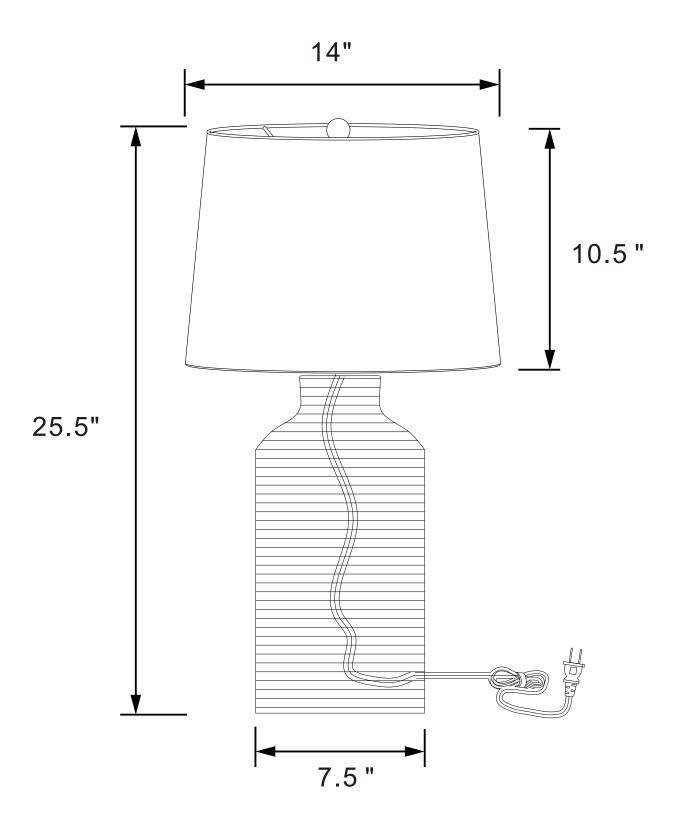

Note: Dimension tolerance ±5%