




Swipe left or right using the intuitive 7" LCD touchscreen to quickly find your favorite cycles and customize settings—it also shows remaining cycle time after pressing Start.

## Elegantly simple operation

Streamlined panel simplifies laundry and perfectly complements the modern design.

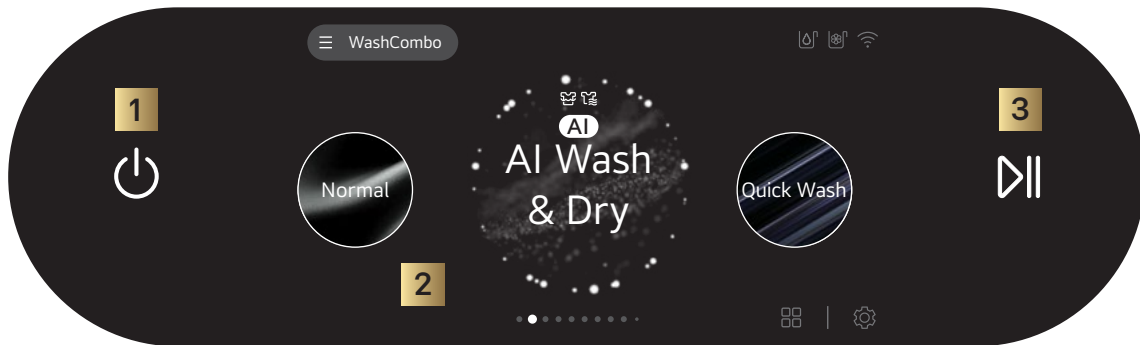

1

### Power It On

Touch Power to turn on your LG SIGNATURE WashCombo™—you'll be greeted with a tune and friendly "Hello."

2

### Swipe/Touch

Swipe across the screen to choose from pre-loaded cycles or touch the Settings icon to edit, remove or add cycles.

3

### Press Start

Touch and hold Start to begin the selected cycle. After sensing the load, the display will show remaining cycle time.

## Completely customize your cycle

Modify any cycle and change settings like temperature, spin speed or dry level to your liking. You can also add available options or select extra functions.

### Modify any cycle

Press pads such as Temp., Spin or Dry Level to make adjustments to the selected cycle before you hit Start.



### Add other options

Tap the Settings icon to edit cycles, turn on the drum light, adjust ezDispense® automatic dispenser settings and more.

