





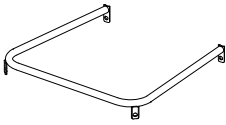
CROSLEY

FURNITURE


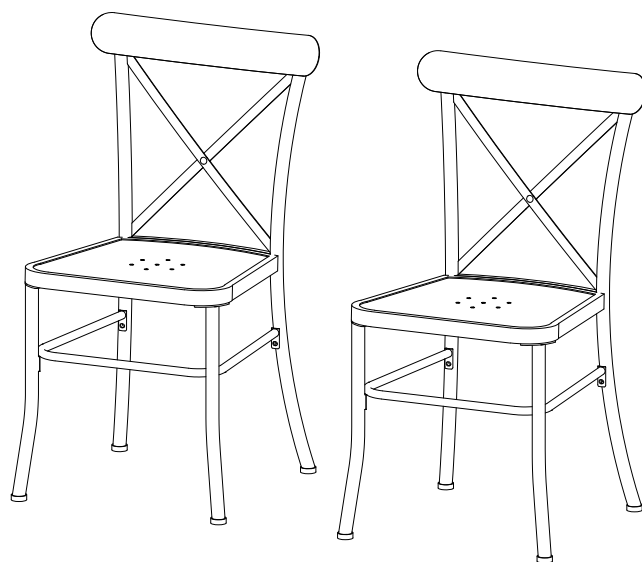



Outdoor Dinning Chair Set
CO6270



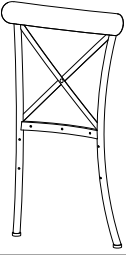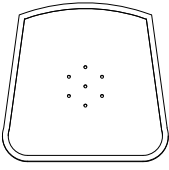PART LIST


<div data-bbox="97 219 153 271">#A</div> 	<div data-bbox="371 219 427 271">#B</div> 	<div data-bbox="647 219 703 271">#C</div> 	<div data-bbox="924 219 979 271">#D</div> 
Back Panel 2 PCS	Seat Panel 2 PCS	Leg 4 PCS	Bottom Frame 2 PCS

  HARDWARE LIST

<div data-bbox="97 801 153 853">#1</div> 	<div data-bbox="371 801 427 853">#2</div> 	<div data-bbox="647 801 703 853">#3</div> 	<div data-bbox="924 801 979 853">#4</div> 	<div data-bbox="1200 801 1256 853">#5</div> 
<div data-bbox="180 1043 288 1070">1/4' x 1"L</div> Long Bolt 6 PCS (Extra 1)	<div data-bbox="448 1043 576 1070">1/4' x 1/2"L</div> Bolt 20 PCS (Extra 1)	Washer 20 PCS (Extra 1)	Plastic Washer 6 PCS (Extra 1)	Allen Wrench 1 PC


Step 1. Lay back panel (part A) on a soft flat surface, such as carpet, as shown below. Attach seat panel (part B) to back panel (part A) using long bolts (part #1), bolts (part #2), washers (part #3), plastic washers (part #4) and allen wrench (part #5).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

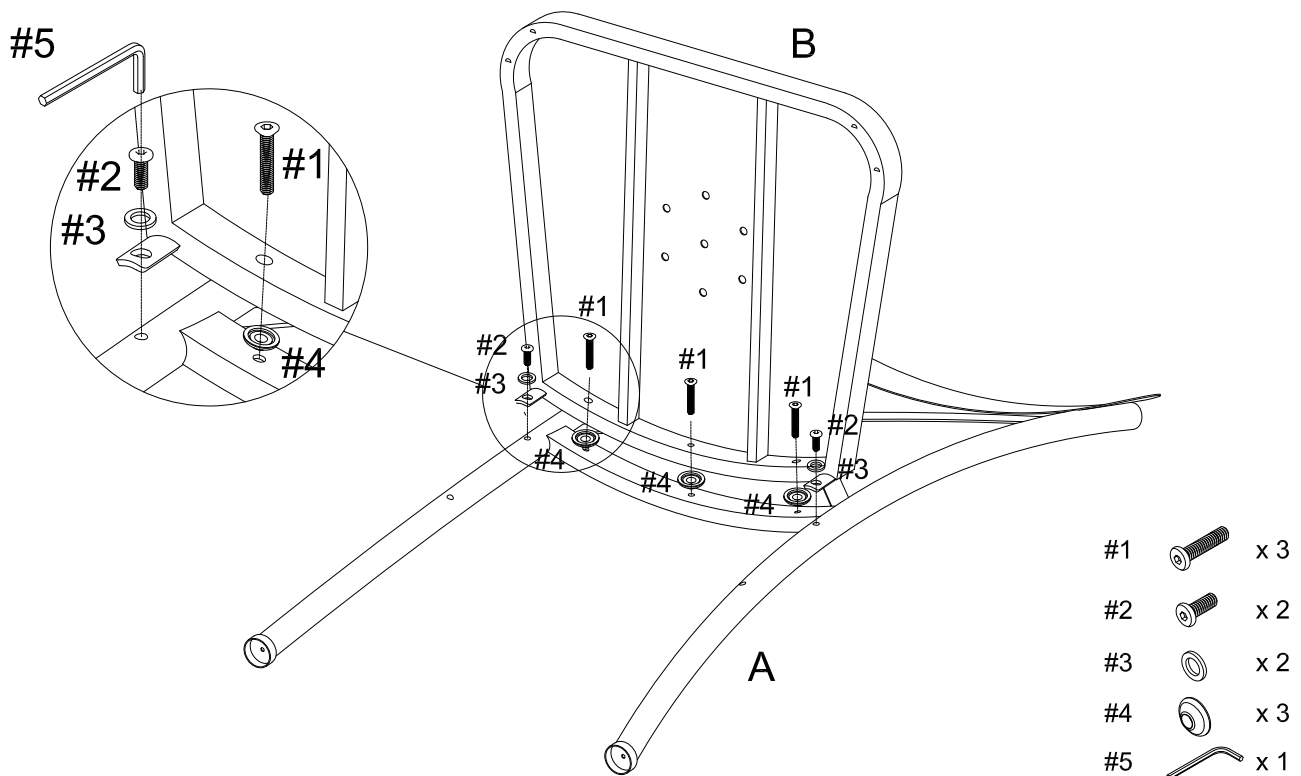


Step 2. Attach legs (part C) to seat panel (part B) using bolts (part #2), washers (part #3) and allen wrench (part #5).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

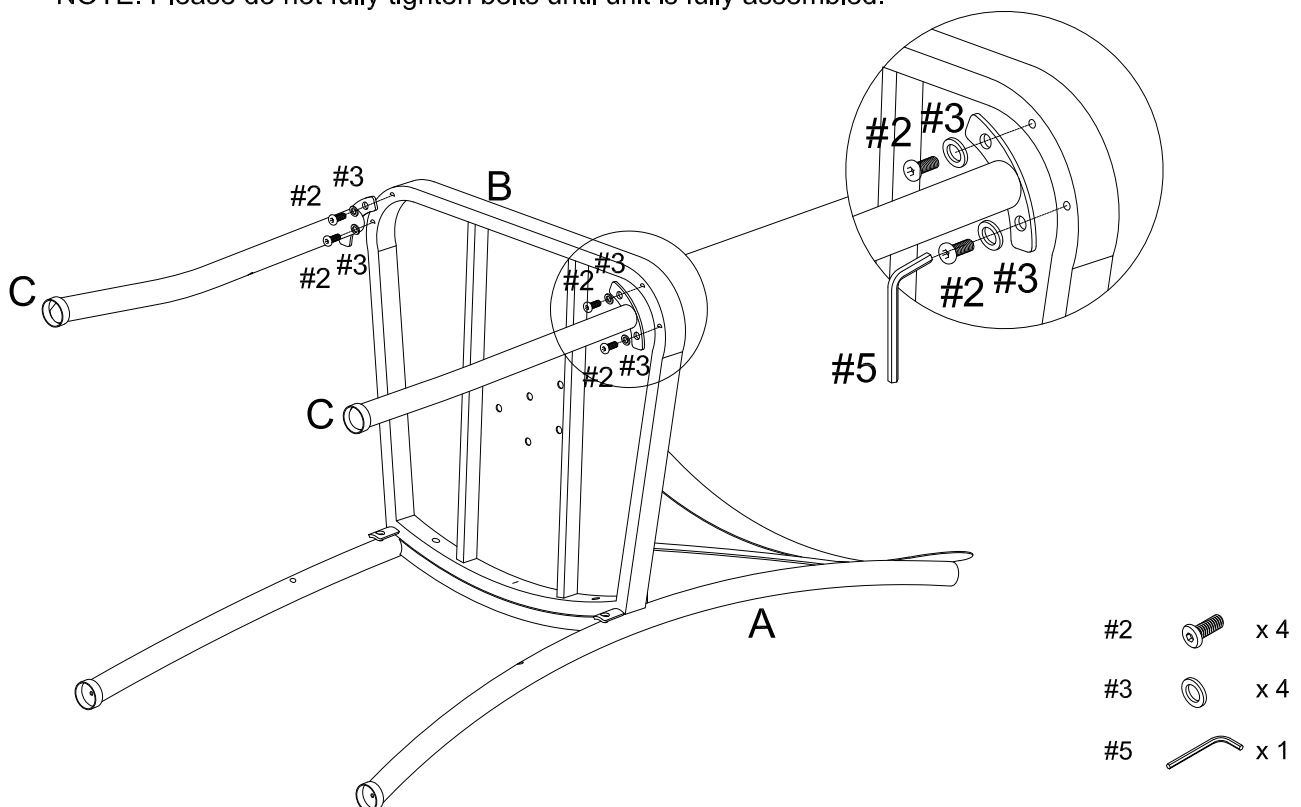

Step 3. Attach bottom frame (part D) to back panel (part A) and legs (part C) using bolts (part #2), washers (part #3) and allen wrench (part #5). Repeat steps 1-3 to assemble remaining chair.

NOTE: Please fully tighten all bolts at this time.

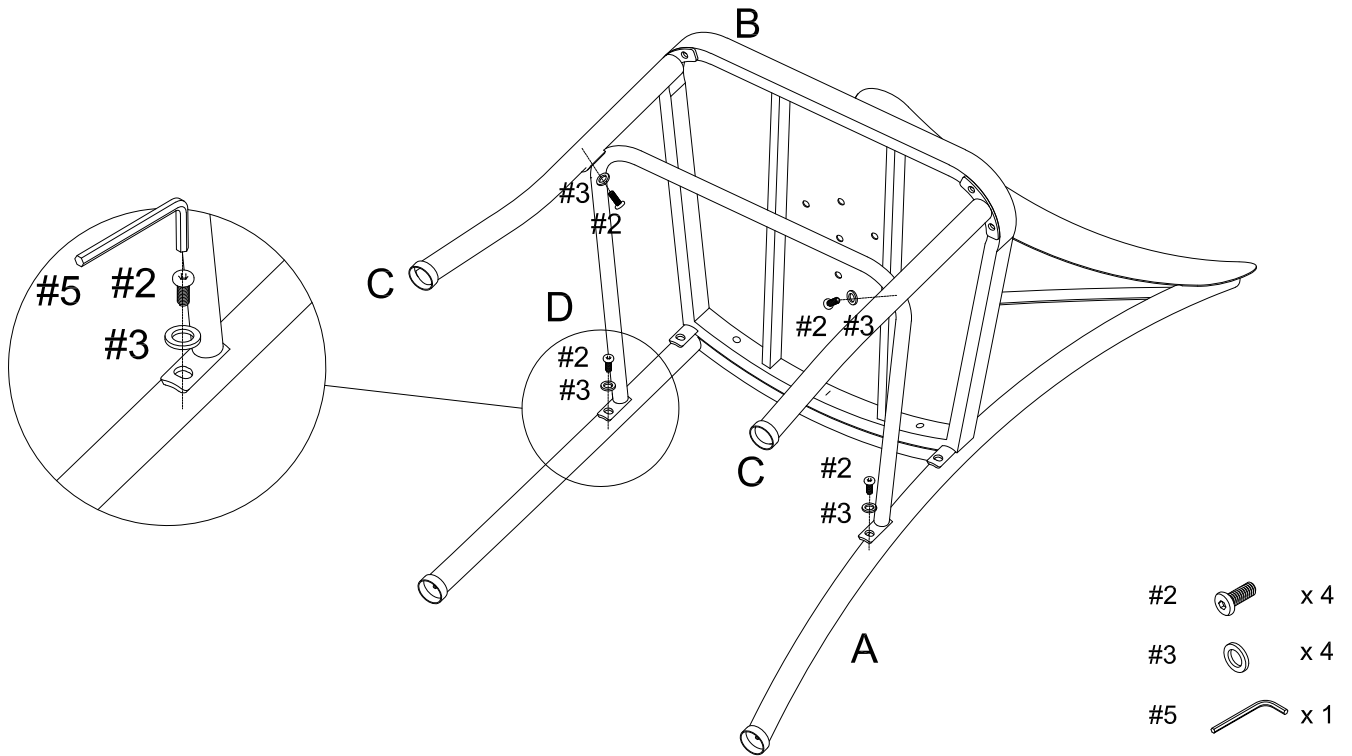

Step 4. Carefully turn units upright.

