

ASSEMBLY INSTRUCTION FOR SOFA WITH WOOD FRONT

U-15000-8210-300, U-15000-8200-300

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage the product or injury to person during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PARTS LIST

NO.	PART DESC	QTY	CODE
A	SEAT BASE	1	
B	LEGS	4	PU-15000-LEG1
C	MIDDLE LEG	1	PU-15000-LEG2


HARDWARE LIST

NO.	HARDWARE DESC	QTY	HARDWARE CODE
1	BOLT Ø5/16" X30mm	8	
2	LOCK WASHER Ø10 x Ø12	8	
3	PLAT WASHER Ø5/16"x Ø21	8	PU-15000-HW
4	ALLEN KEY	1	
5	SCREWS Ø4X25mm	16	





Only tighten all bolts when all bolts aligned with bolt inserts.

Step 1

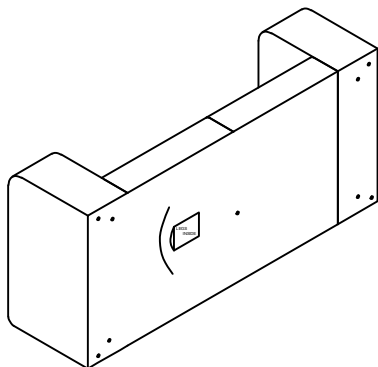

Step 2

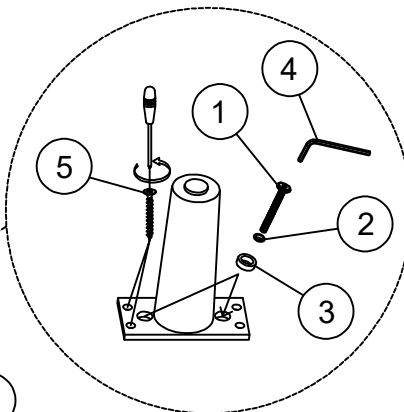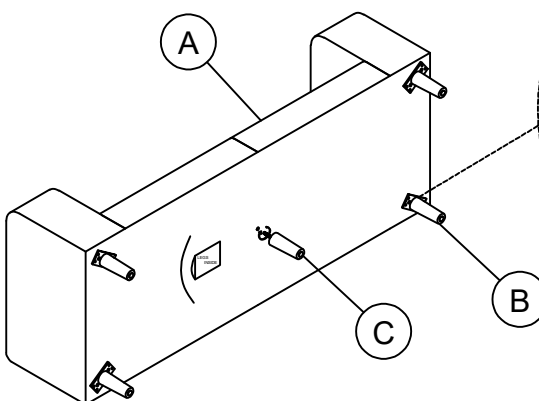

ASSEMBLY INSTRUCTION FOR
SOFA WITH WOOD FRONT
U-15000-8210-300, U-15000-8200-300

COMPLETED

