

# **CROSLEY**

## FURNITURE

## USE & CARE INSTRUCTIONS

Please read use & care instructions in its entirety prior to assembling and utilizing your Crosley Furniture.

---

## TIPS TO PROTECT & CARE FOR YOUR FURNITURE

1. Assemble all furniture as instructed in manual with all parts included, including safety strap kits.
  2. If relocating, lift furniture and move to new location. Do not drag or pull.
  3. Prior to applying cleaning solution to the entire furniture piece, perform a spot test in an inconspicuous area.
  4. Avoid placing your furniture in direct sunlight or directly under windows, as sunlight causes fading.
  5. Avoid extreme changes in temperature by arranging furniture away from radiators, heat & air vents, & air conditioning units.
  6. Lift & place objects rather than dragging them across the furniture surface.
  7. Avoid placing plastic or rubber materials (lamp bases, notebooks, placemats, etc.) on your furniture, as certain plastics contain ingredients that may damage the finish.
  8. Periodically rotate accessories on furniture so they do not sit in the same spot all the time.
  9. Use pads, cloth or felt to protect the furniture surface when writing or from plastic, rubber, hot dishes beverages, bookends, flowerpots, & vases.
  10. Clean up spills immediately, using a blotting rather than wiping action, as water left over a long period of time will cause white spots in the finish. Abrasive liquids can cause severe finish damage.
  11. Use cutting boards and trivets for food preparation in order to avoid damaging the top for the unit.
- 

## WOOD FURNITURE CARE

We recommend dusting frequently with a clean, soft, dry, lint-free cloth. Wipe spills immediately with a clean cloth. Clean the surface by rubbing in the direction of the grain and wipe dry. We recommend polishing your furniture approximately every six months with Guardsman Furniture Polish © or any furniture polish. We do not recommend the use of aerosol-powered cleaners, polishes that contain silicone, waxes, abrasives, or are oil based.

## LEATHER FURNITURE CARE

To prevent cracks and surface damage we recommend keeping away from high humidity and low temperature rooms. Do not place by fire, stoves or heaters. Wipe spills immediately with clean non-abrasive cloth or sponge. For spots or stains, clean with mild detergent and warm water. Wring out excess water so cloth is damp before use. Rinse cloth in clear water and wring out, then wipe again to remove detergent residue. To prevent damage use a dry cloth to wipe excess moisture. Also, do not use chemical cleaners that contain bleach.

## GRANITE CARE

We recommend cleaning spills promptly. For daily cleaning, use warm water and a soft clean cloth. Granite cleaners can also be used for deep cleaning. Wipe dry. We do not recommend using abrasive cleaners, chemical solvents, strong detergents, cleaners with bleach and vinegar. Be sure to use trivets, coasters, placemats, and felt pads to help prevent scratches.

## MARBLE CARE

Our marble is polished. We recommend cleaning spills promptly. For daily cleaning, use warm water and a soft clean cloth. Wipe dry. We do not recommend using abrasive cleaners, chemical solvents, strong detergents, cleaners with bleach and vinegar. Be sure to use trivets, coasters, placemats, and adhesive felt pads to help prevent scratches.

## FAUX WOOD/MARBLE CARE

We recommend dusting frequently with a clean, soft, dry, lint-free cloth. Wipe spills immediately with a clean cloth. We do not recommend the use of aerosol-powered cleaners, polishes that contain silicone, waxes, abrasives, or are oil-based. To avoid damaging the surface of the furniture, always use a cutting board when cutting food or other items on the surface. Do not place hot items directly on the surface, always use pads or trivets to prevent damage.

## WOOD/BUTCHER BLOCK CARE

For best results, clean top surfaces with damp cloth and mild detergent. Towel it off to remove excess moisture. Do not use abrasives or powder cleansers. Do not allow moisture to stand on the surface for prolonged periods of time.

## STAINLESS STEEL CARE

Stainless Steel should always arrive unblemished. To clean, use warm water or over-the-counter stainless steel cleaner with a soft cloth. Spray your top lightly and rub in the direction of the grain of the metal finish until clean. Wipe dry. We do not recommend the use of abrasives, oven cleaners or products containing chloride. To avoid damaging the surface of the furniture, always use a cutting board when cutting food or other items on the stainless steel surface. We also recommend the use of trivets or insulated heat pads under hot pans to avoid scorching.

## RESIN WICKER FURNITURE CARE

Regular cleaning is recommended for wicker, as it generally cannot endure harsh or abrasive treatments. This also minimizes mildew buildup. To remove dirt and debris, vacuum with a dust-brush attachment or use a dry paintbrush. Clean with a mild soap solution, scrub with a sponge, rinse with cold water and dry completely. Avoid sitting on the wicker when still damp, which can cause wicker to sag. If wicker furniture is caught during a sudden rain storm, please make sure to drain any water that may have accumulated inside the frame and dry completely. **Please always cover the furniture when not in use, and store properly during inclement weather and the winter/rainy seasons.**

## TEAK WOOD CARE

Teak wood will naturally weather to a beautiful silvery gray; to help preserve the golden color of the wood apply teak oil periodically or use a teak sealant. To clean teak furniture, use a brush and mild dish soap to scrub with the grain of the wood. Allow to dry completely before use.

## METAL FURNITURE CARE

Because most metals, except aluminum, are subject to rust, metal furniture is usually finished with layers of clear varnish, paint, or a durable powder coating. To clean, use a mild soap solution, scrub, rinse and dry. On outdoor furniture, make sure to drain any water that may accumulate inside the frames after rinsing. After cleaning, apply a coat of quality liquid or paste wax with a lint-free cloth. Use a silicone spray to lubricate swivels and glides on chairs. If metal outdoor furniture is caught during a sudden rain storm, please make sure to drain any water that may have accumulated inside the frame and dry completely. **Please always cover the furniture when not in use, and store properly during inclement weather and the winter/rainy seasons.** On indoor furniture, do not use abrasives or products such as Brasso © as this may lead to the accidental removal of antique finishes and also to staining or damage to surrounding areas of fabric (IE Bed Buttons).

## OUTDOOR POLY ROPE CARE

To remove dirt and debris, vacuum with a dust- brush attachment or use soft bristle brush. Clean with a mild soap solution, scrub with a sponge or soft bristle brush, rinse with cold water and dry completely. Avoid sitting on the rope when still damp, which can cause the rope to sag or stretch. If rope furniture is caught during a sudden rainstorm, please make sure to drain any water that may have accumulated inside the frame and dry completely. Please always cover the furniture when not in use, and store properly during inclement weather and the winter/rainy seasons.

## FABRIC MATERIALS CARE

Prevent stains by removing crumbs, dust, dirt, and debris. To remove dirt and debris, vacuum with a dust-brush attachment. Clean spills immediately! For Linen – If the linen item is removable, place the item in a clean sink or tub with cool water and a mild detergent. Gently agitate the linen items, then remove from the soapy water. Rinse with cool water and hang dry. If not removable, then spot clean by dabbing with solution of cool water and a mild detergent on a soft non-abrasive cloth. For Microfiber – If the microfiber item is removable, machine wash in cold water with mild detergent. No fabric softeners as they will clog the open spaces in the microfiber, making the fabric useless. Avoid washing with cotton items because the microfiber will grab on to the lint. If not removable, then spray the area lightly with a water-based solution; using a soft cloth and a blotting motion to remove the stain. Fully air dry.

## OUTDOOR CUSHION CARE

Our cushions are made from a high density polyester foam, and the covers are made from a moisture resistant polyester blend. This does not mean they are waterproof! We do not recommend leaving cushions out in inclement weather, and if cushions become wet, please dry them immediately by removing the cushion from the cover so they can dry separately. Wring out any excess moisture before drying. Air dry only! Cushion covers are machine washable (gentlest cycle with like colors and cold water), and we recommend separating the cushion cover from the core for any cleaning purposes. Cushions should be stored and covered when not in use to protect them from rain, sunlight, and other staining agents.

## OUTDOOR FURNITURE STORAGE

We highly recommend storing any outdoor furniture during the winter/rainy seasons. Before storing your furniture, please ensure all moisture collected in the frame tubes has been drained and wipe dry. When outdoor furniture is not in use, we recommend covering all the furniture to protect it against the elements. If outdoor furniture is caught during a sudden rain storm, please make sure to drain any water that may have accumulated inside the frame and wipe dry.

## OUTDOOR COVER CARE

Our covers are made from heavy gauge and reinforced vinyl making them waterproof. We recommend hand washing in lukewarm water and allowing to fully air dry before reusing or storing. We do not recommend using a washing machine or soaps and detergents as it may destroy the protective coatings. Remove the covers periodically to check for moisture build-up.


## COASTAL CUSTOMERS

Due to the corrosive nature of salt, extra care must be taken due to the higher salinity in the air as well as the possibility of direct contact from sea spray. Keep outdoor metal/wicker furniture covered when not in use, and rinse with fresh water on a regular basis to prevent salt accumulation. **Make sure to drain any water that may accumulate inside the frames after rinsing.**

## FIRE PIT/TABLE CARE

Crosley wood burning fire pits are only rated for a 'decorative' or 'recreational' burn from 350 to 500°F. Anything higher/larger than that may require additional protection from a third party paint application such as Krylon © 'Max Heat' which is rated for 1200° F. Crosley does NOT support the use of our fire pit/ table(s) outside of these temperature and usage recommendations due to obvious safety reasons. It is recommended to cover the fire pit with a tarp (or provided cover depending on model) when not in use.

---

 **PROPOSITION 65 WARNING:** Burning fireplace or wood stove fuels such as natural firewood results in emission of carbon monoxide, soot, and other combustion by-products which are known by the State of California to cause cancer, birth defects, or reproductive harm.

**For more information, go to:** [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

**As products are improved upon and new products are released, our Use and Care Instructions are regularly updated at:** [useandcare.crosleyfurniture.com](http://useandcare.crosleyfurniture.com)